



PHOTOFLEX®

FirstStudio® BackDrop Support Kit Instructions • Item# 870277 (DP-FSBGSPKT)

FirstStudio BackDrop Support Kit

Contains:

- 2 x LiteStand — 870292 (DP-LS933)
- 1 x BackDrop Pole — 870274 (DP-412)
- 1 x Carry Bag — 870325 (DP-SHDBSSBAG)

Instructions for Set Up

For use with a backdrop designed to slide over the pole, like a muslin or paper roll.*

1. Extend pole to the length desired (note that it does not lock in place at any length).
2. Slide the backdrop over the pole or push pole through the core of the backdrop sleeve. One of the T-knobs at the ends of the pole may need to be temporarily removed by unscrewing it, to allow the pole to fit in the sleeve of your backdrop.**
3. The pole should extend a few inches on each side of the backdrop.
4. Open each LiteStand base such that the braces are parallel to the floor. **Figure 1**
5. The center column of the LiteStand has a T-knob at the very bottom of the pole where these braces connect. For normal use with a muslin or drape style backdrop, this is best left tightened at the very bottom of the pole so it does not touch the ground. For added stability, the center post can be lowered to touch the ground. **Figure 2**
6. Attach BackDrop Pole to the top of each LiteStand. Back out the T-Knob at each end of the BackDrop Pole sufficiently to allow pole to fit over the top brass stud of the LiteStand. **Figure 3**
7. Raise each LiteStand equally to the height desired.

* Skip step 2 for applications not requiring the background pole to be inserted into the backdrop.

** Alternately for fabrics with out a sleeve, "A" style clamps can be used to secure draped fabric to the backdrop pole. You can find them at most any hardware store. **Figure 4**



Figure 3



Figure 1. Leg braces should be parallel to floor



Figure 2



Figure 4

PHOTOFLEX® WARRANTY

- Warranties only cover manufacturer's defects and workmanship.
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be pre-approved with Return Manufacturers Authorization obtained from Photoflex/PromarkBRANDS.
- A receipt showing date of purchase will be required for all returns.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.

Customer Support (831) 786-1370

E-mail: sales@photoflex.com

Photoflex is a division of PromarkBRANDS, Bartlett, IL USA.

©2016 ALL RIGHTS RESERVED. FirstStudio®, Photoflex® and the Photoflex logo are trademarks or registered trademarks of Photoflex and/or its affiliates in the U.S. and other countries.