LED Exterior Wall Sconce



START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- · Wear gloves at all times during this installation
- · Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Technical Support: 1-855-855-8926

Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage


- Remove fixture from its original package
- 2. Separate fixture body (2a) from mounting plate (1c) by removing set screws with allen key (2f)
- **3.** Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package
- **4.** Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts **(1b)** provided in hardware package
- **5.** Attach fixture body **(2a)** to mounting plate **(1c)** with set screws and allen key **(2f)**

1a.

1b.


1c.

6. To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up.

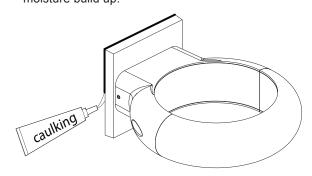

2f.

Illustration 1

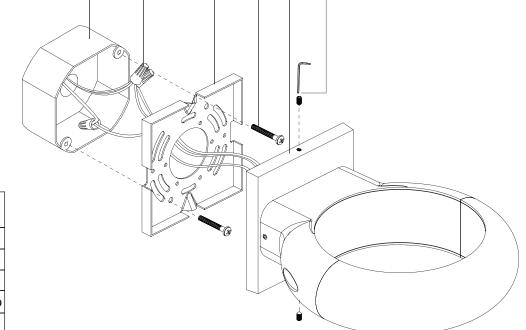

1e. 2a.

PRODUCT ID	PART
1c.	XHBSS412-GV
1e.	XHPP832-8
2f.	XHSSM4-8
LED Driver	XDR-HEP-LSC9-350-UNV-ND
Allen Key	XHAK-M4

