

Safety and Compliance Information

Use Responsibly. Read all instructions and safety information before use.

!

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

!

BATTERY SAFETY

Batteries:

This product contains alkaline batteries. Your Echo Wall Clock requires batteries for use. Only use 1.5V alkaline or 1.2 NiMH rechargeable AA-sized batteries. Never mix old and new batteries. Keep all of the batteries out of the reach of children. Do not open, disassemble, puncture, cut, bend, shred or heat the batteries and do not allow metal objects to touch the battery terminals on your Echo Wall Clock as they can become hot and cause burns. Remove all batteries if they are worn out or before storing your Echo Wall Clock for an extended period of time. Dispose of all batteries in accordance with applicable laws and regulations and do not dispose of batteries by throwing them into a fire. If any batteries begin to leak, take steps to prevent the fluid from coming into direct contact with skin or clothes as the fluid could be corrosive and may be toxic. Remove the batteries and clean the battery compartment in accordance with the battery manufacturer’s recommendations.

Other Safety Considerations:

Small parts contained in your device and its accessories may present a choking hazard to small children. Keep out of reach of children.

Recycling Echo Wall Clock:

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of or recycle the Products in accordance with your local laws and regulations. For information about recycling, go to [www.amazon.com/devicesupport](#).

Radio Frequency Exposure:

The output of the radio technology used in the Echo Wall Clock is below the radio frequency exposure limits set by the Federal Communications Commission of the United States (FCC). Nevertheless, it is advised to use the device in such a manner that minimizes the potential for human contact during normal operation. This device should be installed and operated with at least 20 cm between the radiator and your body. Information on your device is on file with the FCC and can be found by inputting your device’s FCC ID, which can be found on the base of the device, into the FCC ID Search form available at [www.fcc.gov/oet/ea/fccid](#).

Radio Frequency Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must

accept any interference received, including any interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

(i) Re-orient or relocate the receiving antenna.

(ii) Increase the separation between the equipment and receiver.

(iii) Connect the equipment into an electrical outlet on a circuit different from that to which the receiver is connected.

(iv) Consult the dealer or an experienced radio/TV technician for help. Changes or modifications to a product by the user that are not expressly approved by the party responsible for compliance could make the product no longer comply with the FCC Rules.

Servicing Your Device:

If your device needs service, please contact Amazon Customer Service at [www.amazon.com/devicesupport](#).

Product Specifications:

Model Number: C8G55Z

Electrical Rating: 1.5VDC

Power: 4x 1.5V AA batteries

Connectivity: BT BR, BLE 4.2

Operating temperature: 0°C to 35°C

Storage temperature: 10°C to 45°C

Maximum Radio Frequency Power:

BT BR (2402-2480 MHz: 12dBm Max)

BLE 4.2 (2402-2480 MHz: 9dBm Max)

Amazon Terms & Policies

Echo Wall Clock is an Alexa-compatible accessory. By using this device, you agree to be bound by the Amazon Privacy Notice, the Amazon Device Terms of Use, the Amazon Conditions of Use, and other terms and policies available at [www.amazon.com/devicesupport](#). Echo Wall Clock is covered by a 90-day Limited Warranty, detailed at [www.amazon.com/devicesupport](#).

21

PAP


©2018 Amazon.com, Inc. or its affiliates. All rights reserved. Amazon, Echo, Alexa, and all related logos and motion marks are trademarks of Amazon.com, Inc. or its affiliates.

echo wall clock

QUICK START GUIDE

amazon

! CAUTION

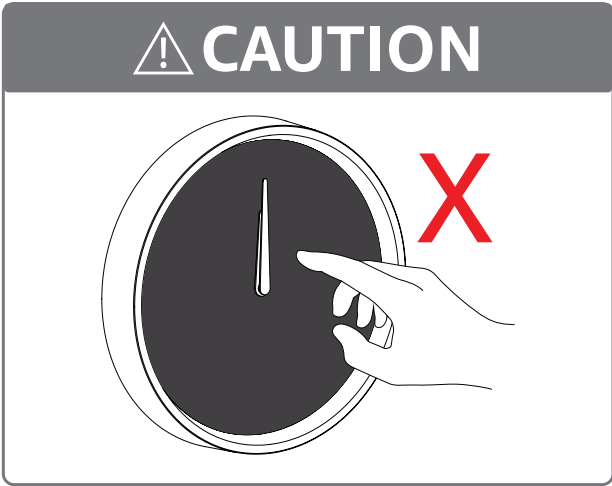

To avoid damage, please do not touch, push, or move clock hands by force.

What’s in the box


Echo Wall Clock

Four AA batteries (included)

Drywall screw


Drywall anchor

Status Light

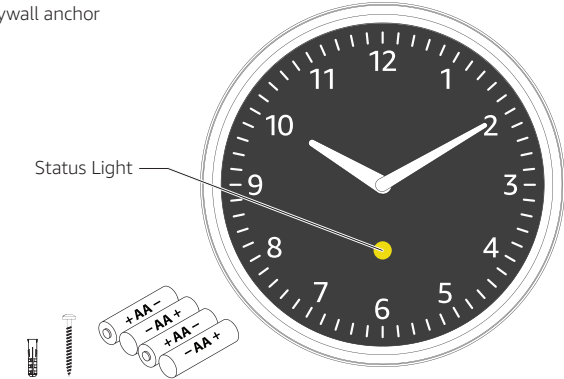

Batteries installation

Gently push plastic tab to release battery door. Insert four new AA alkaline batteries (included) in the correct position, as shown in the diagram. Replace the battery door.

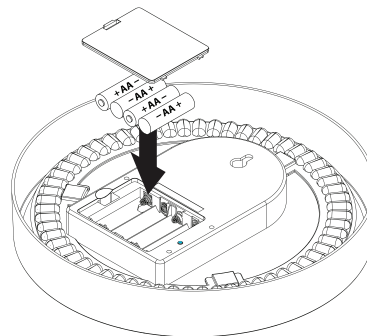


!

WARNING: CHOKING HAZARD — Small parts Not suitable for children under 3 years of age

Set up your Echo Wall Clock

Prior to mounting, place your Echo Wall Clock within 30 feet (9.1 metres) of your compatible Echo device.

Then say, *“Alexa, set up my Echo Wall Clock”* and follow the instructions.

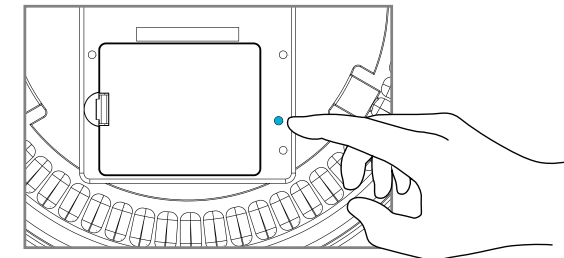

Wall Mounting Instructions


Use a 7/32-inch (5.5mm) drill bit (not included) for best wall mounting result. Follow steps and diagram below for mounting instructions.

Step 1: Drill hole into wall

Step 2: Push drywall mount into drilled hole

Step 3. Screw on drywall screw

Step 4. Hang Echo Wall Clock

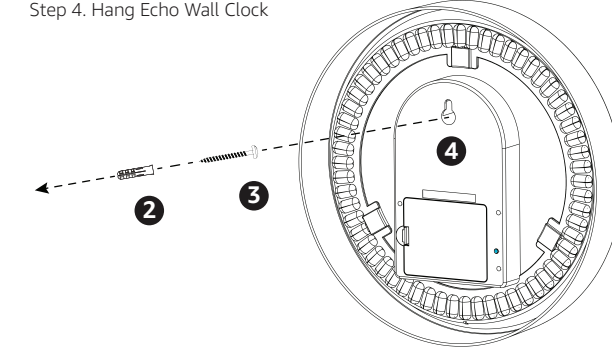

Troubleshooting

Visit [amazon.com/help/echowallclock](#) to troubleshoot your Echo Wall Clock

STATUS COLOR	DESCRIPTION	
	Pulsing orange	In pairing mode
	Solid blue	Paired
	Pulsing blue	Time syncing or software updating
	Pulsing yellow	Notification received
	Single blink red	Battery is low
	Three blinks red	An error occurred

Maintaining your Echo Wall Clock

Do not drop, throw, disassemble, crush, bend, puncture or paint your Echo Wall Clock. If your Echo Wall Clock gets wet, use rubber gloves to remove the batteries and wait for your Echo Wall Clock to dry completely before installing new batteries. Do not attempt to dry your Echo Wall Clock with an external heat source, such as a microwave oven or hair dryer. Clean your Echo Wall Clock with a soft cloth and avoid using liquids or harsh chemicals that may damage your Echo Wall Clock; be careful not to wipe your Echo Wall Clock with anything abrasive.

Please retain the packaging information for future reference.