

 
**amazon fire tvstick**

## **Contents**


English ..... 1

Português/Brasil..... 4


## What's in the box

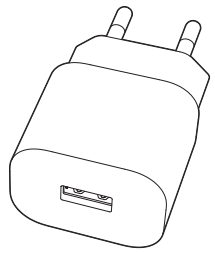

Power adapter

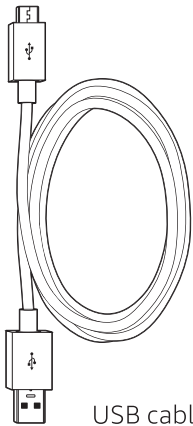

USB cable  
(for power)

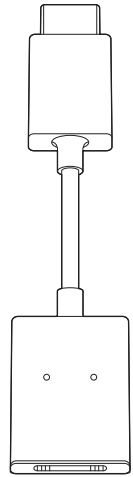


HDMI  
extender cable



Micro-USB  
(for power only)

Fire TV Stick

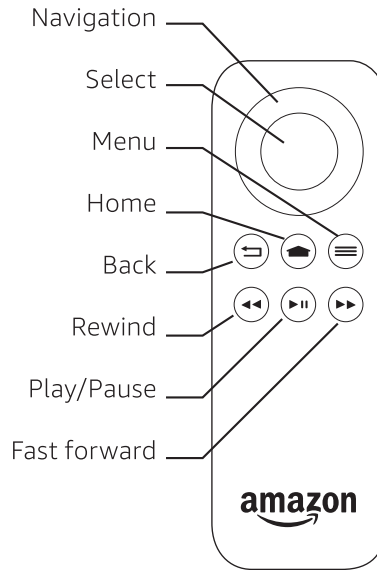


Fire TV Remote  
Control




AAA batteries

## 1. Connect your Amazon Fire TV Stick

Connect one end of the USB cable into your Amazon Fire TV Stick and the other end into the power adapter. Plug your Fire TV Stick into the HDMI port on your TV, then plug the power adapter into a nearby outlet. Turn on your TV, then select the appropriate HDMI input.

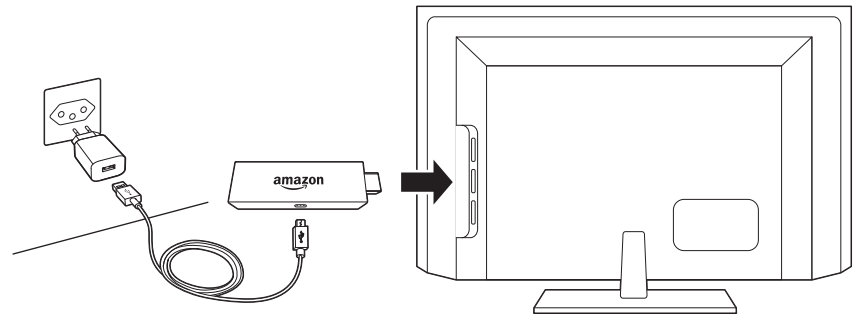


Use the included HDMI extender to improve Wi-Fi and remote performance, or if you have trouble fitting your Fire TV Stick into an HDMI port on your TV.

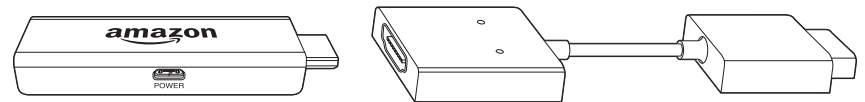

## 2. Power up your remote

Open the back of the remote, as shown, and insert the included batteries.

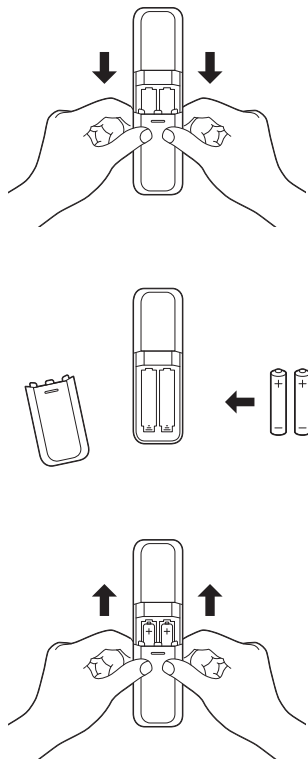

## 3. Complete the on-screen setup

Using your Amazon Fire TV Remote, follow the on-screen instructions.

- Choose a language from the list.
- Select your Wi-Fi network from the networks displayed on the screen.


**Note:** If your Wi-Fi network is password protected, have your Wi-Fi network password handy to connect your Fire TV Stick to the Internet. If your network is hidden, select the “Join Other Network” tile from the list. If required, enter your network password using the on-screen keyboard.

## Tips and Troubleshooting

### Wi-Fi


- If you see a lock icon, your Wi-Fi network requires your password, so make sure you have it available. The password is not your Amazon account password.
- If you need help finding your Wi-Fi password, go to [www.amazon.com/wifi](http://www.amazon.com/wifi).
- Ensure your Internet is working properly. Restarting your router and modem will solve most Wi-Fi network issues.
- Do not place your wireless router or Amazon Fire TV Stick in a cabinet, as it may impact Wi-Fi signal strength.
- Some Wi-Fi issues may be improved by connecting the included HDMI extender.

### Remote pairing


Having trouble with your remote? First, remove and reinsert the batteries in your remote. The remote should automatically pair with your device. If your remote isn't discovered, press the Home  button for at least 5-10 seconds.

For more troubleshooting and information, go to [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport).


## Conteúdo da caixa

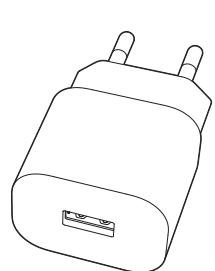


Adaptador de tomada

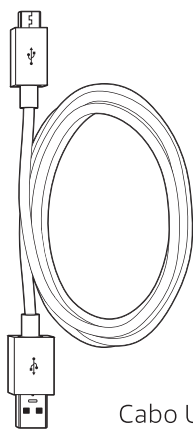

Cabo USB  
(para carregamento)

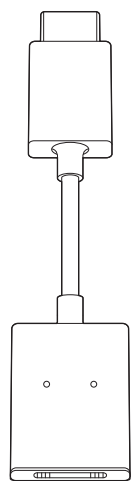


Cabo de extensão HDMI

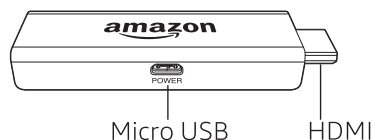

Micro USB  
(para carregamento) HDMI

Fire TV Stick

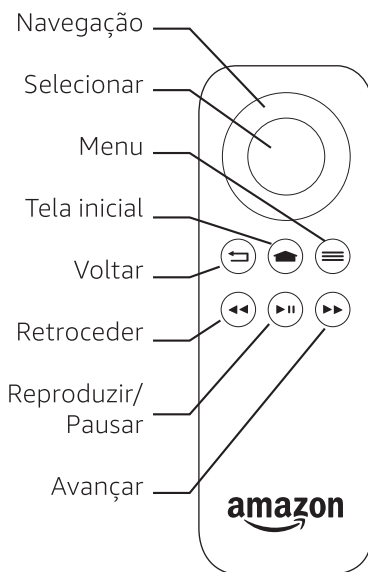


Controle remoto  
Fire TV




Pilhas AAA

## 1. Conecte o Fire TV Stick

Conecte uma extremidade do cabo USB ao Fire TV Stick e a extremidade oposta ao adaptador de tomada. Conecte o adaptador de tomada a uma tomada próxima e conecte o Fire TV Stick à porta HDMI da TV. Ligue a TV e selecione a entrada HDMI adequada.



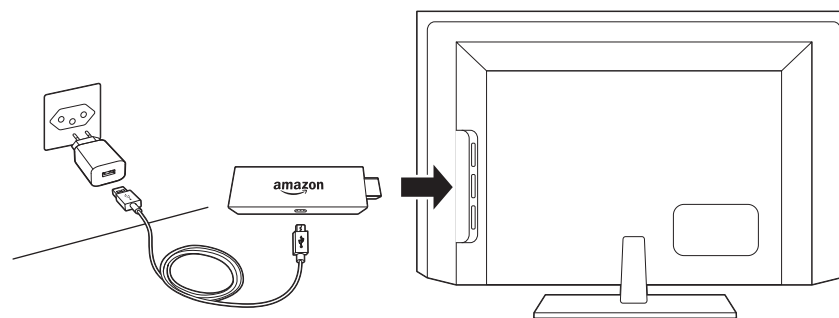


Use a extensão HDMI inclusa para melhorar o desempenho do Wi-Fi/controlador remoto ou se tiver problemas ao encaixar o Fire TV Stick na porta HDMI da sua TV.

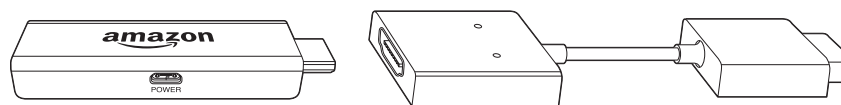

## 2. Insira as pilhas no controle remoto

Abra a parte de trás do controle remoto, conforme o desenho abaixo, e insira as pilhas inclusas.

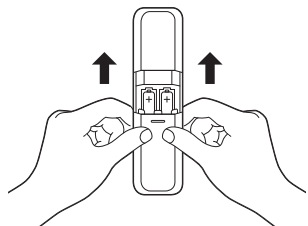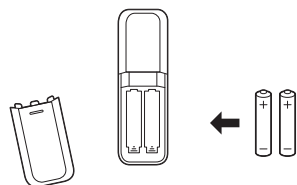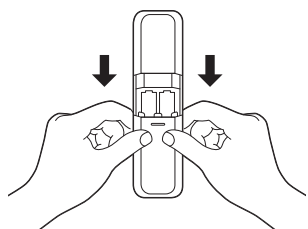

## 3. Complete a configuração na tela

Ao usar o controle remoto Fire TV, siga as instruções na tela.

- Escolha um idioma na lista.
- Selecione sua rede Wi-Fi dentre as redes exibidas na tela.


**Observação:** se a rede Wi-Fi for protegida por senha, procure mantê-la à mão para conectar seu Fire TV Stick à internet. Se a rede estiver oculta, selecione “Entrar em outra rede” na lista. Se necessário, insira a senha da rede com o teclado virtual.

## Dicas e resolução de problemas

### Wi-Fi

- Se vir um ícone de cadeado, a rede Wi-Fi necessita de senha: mantenha-a em mãos. A senha do Wi-Fi não é a mesma senha da sua conta da Amazon.
- Se precisar de ajuda para encontrar a senha do Wi-Fi, acesse [www.amazon.com/wifi](http://www.amazon.com/wifi).
- Verifique se a internet está funcionando adequadamente. Reiniciar o roteador e o modem soluciona a maioria dos problemas de rede Wi-Fi.
- Não coloque o roteador sem fio ou o Fire TV Stick em um armário, pois isso pode piorar a intensidade do sinal do Wi-Fi.
- Alguns problemas com o Wi-Fi podem melhorar ao conectar a extensão HDMI inclusa.

### Emparelhamento com o controle remoto

Está tendo problemas com o controle remoto? Primeiro, remova as pilhas e reinsira-as no controle, que irá emparelhar com o dispositivo automaticamente. Se o controle remoto não for descoberto, pressione o botão  Tela inicial por pelo menos 5-10 segundos.

Para obter mais informações, acesse [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport).