


ASPEN FABRIC FRAME

CEILING HOOK


GENERAL SETUP INSTRUCTIONS

DISCLAIMER: The following instructions are solely intended to affix the ceiling hooks to an Aspen fabric frame. Any type of hanging/ceiling installation should only be performed by a licensed professional.

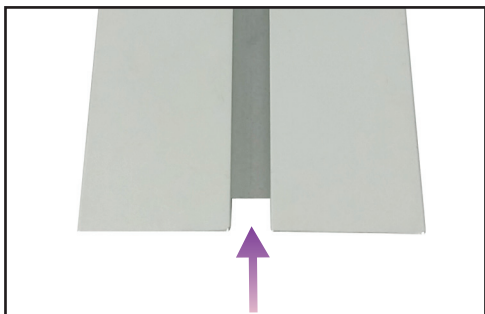


STEP 1

Choose an extrusion which will essentially be the top piece of your frame and will hang from the ceiling. Locate an opening on either end of the extrusions outer canal. Be aware you can only install the ceiling hook(s) when the frame is completely disassembled.

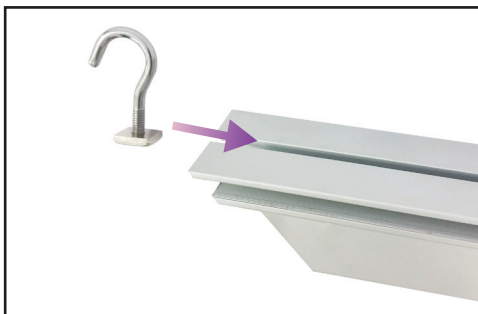

STEP 2

Insert and then slide in your ceiling hook. Be sure the nut is retracted to the last few threads of the bolt so that there is ample clearance available.

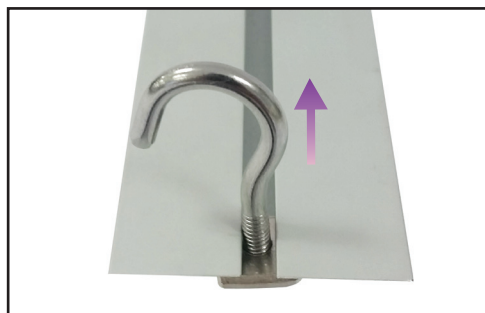

STEP 3

Slide the ceiling hook(s) to the desired position.



STEP 4

Rotate the ceiling hook clockwise until you can no longer turn. Be cautious of over-tightening.



STEP 5

The setup is complete. Continue to add as many more ceiling hooks needed for your display.