

ECONO ROLL RETRACTABLE BANNER STAND

RETRACTABLE BANNER STANDS

PRODUCT CODE: ER24SLV, ER31.5SLV, ER33.5SLV, ER33.5BLK, ER36SLV

SET UP INSTRUCTIONS


Step 1

Twist the feet.




Step 2

Assemble telescopic pole.

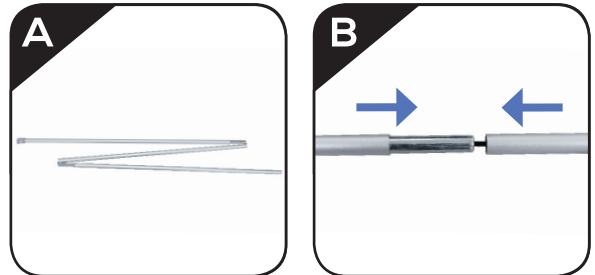

Step 3

Insert telescopic pole into hole.

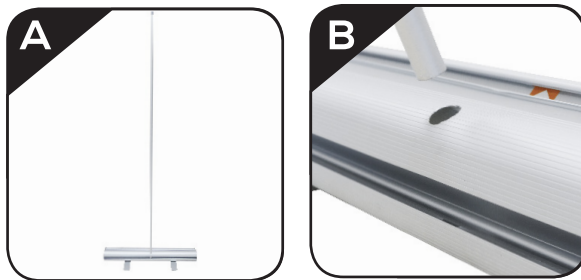


Step 4

Pull banner out of the base.



Step 5

Attach telescopic pole to the clamp bar.

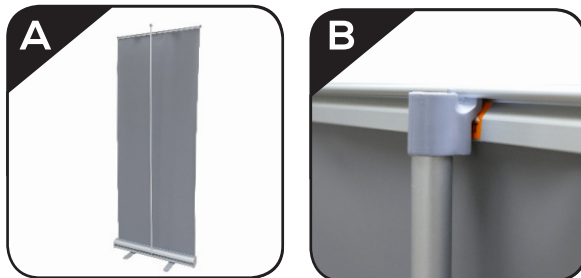

Step 6

Complete stand.

