




BRETFORD

35CPUHRN

35CPUMTC

Wide or Narrow CPU Holder with Harness

Assembly Instructions

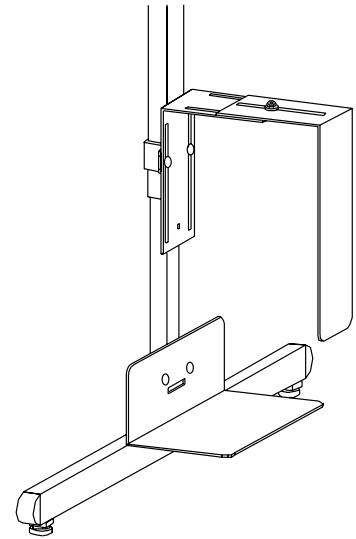


PARTS LIST

Qty	Part#	Description
1	010-3026	CPU Holder Bottom (35CPUHRN)
1	010-4977	CPU Holder Bottom (35CPUMTC)
1	010-3027	Bottom Bracket
1	010-3028	Top Bracket
1	010-3030	Upper Outer Bracket (35CPUHRN)
1	010-4979	Upper Outer Bracket (35CPUMTC)
1	010-3031	Upper Inner Bracket (35CPUHRN)
1	010-4978	Upper Inner Bracket (35CPUMTC)


HARDWARE LIST

Qty	Part#	Description
5	030-0272	1/4-20 x 1/2" Carriage Bolts
5	030-0207	1/4-20 Flange Nuts
1	031-1822	Velcro Hooks
1	031-1823	Velcro Loops

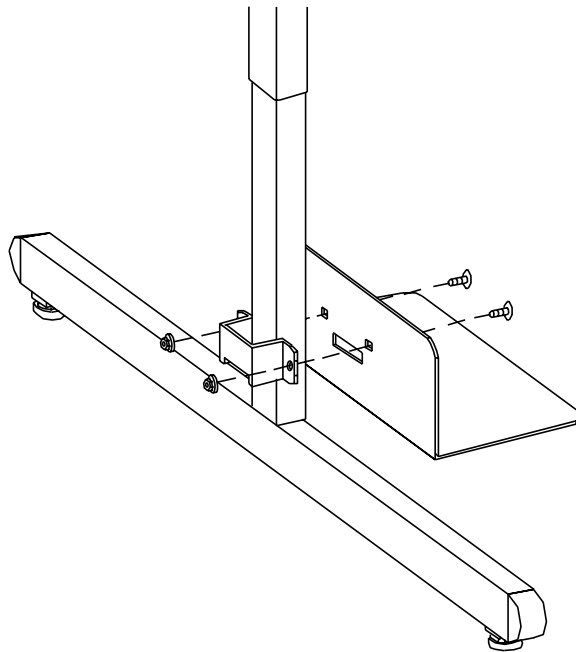


STEP 1


Position the bottom bracket (with notch) and the lower inner bracket to the bottom half of your pedestal leg as shown. **LOOSELY** attach the brackets around the pedestal with bolts (AA) and nuts (BB).

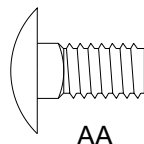

AA

 

BB

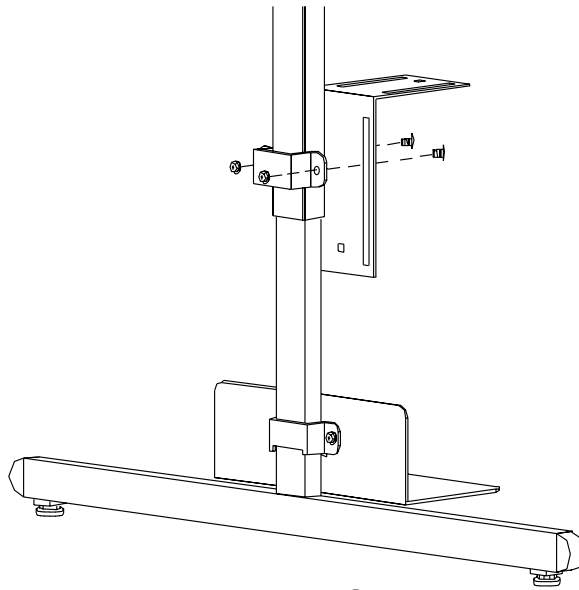

STEP 2

Position the top bracket and the upper inner bracket around the upper half of your pedestal as shown. **LOOSELY** attach together with bolts (AA) and nuts (BB). **NOTE:** These brackets can be mounted above or below the set screws depending on the adjustment needed. Also the inner bracket can be mounted with the long or short side facing the pedestal.


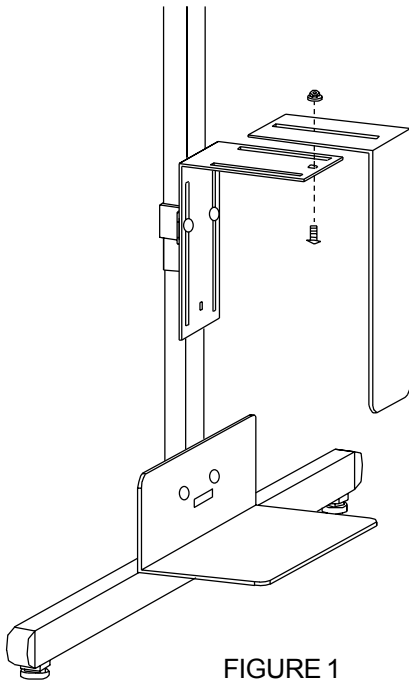


FIGURE 1

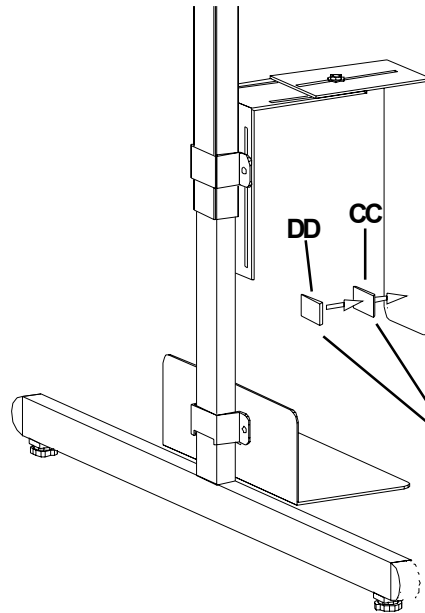

ATTACH VELCRO PIECES TO INSIDE OF UPPER OUTER BRACKET

FIGURE 2

STEP 3

Position the upper outer bracket over the upper inner bracket as shown in **FIGURE 1**. **LOOSELY** attach the brackets together with bolts (AA) and nuts (BB). Determine the correct height distance needed for your CPU and **TIGHTEN THE TOP AND BOTTOM BRACKETS IN PLACE**. Place (1) Velcro piece (CC) on the outer bracket as shown in **FIGURE 2** and also place (1) Velcro piece on your CPU (DD). Then position the CPU into the holder and slide the outer brackets in place. **TIGHTEN OUTER BRACKETS IN PLACE.**

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
Technology House
7 Lake End Court, Taplow
Bucks SL6 0JQ England
TEL: 01628 603558
FAX: 01628 604923

www.bretford.com

Part# 031-2952
Rev. 02.22.08 CZ