


Sears Model No. 28680

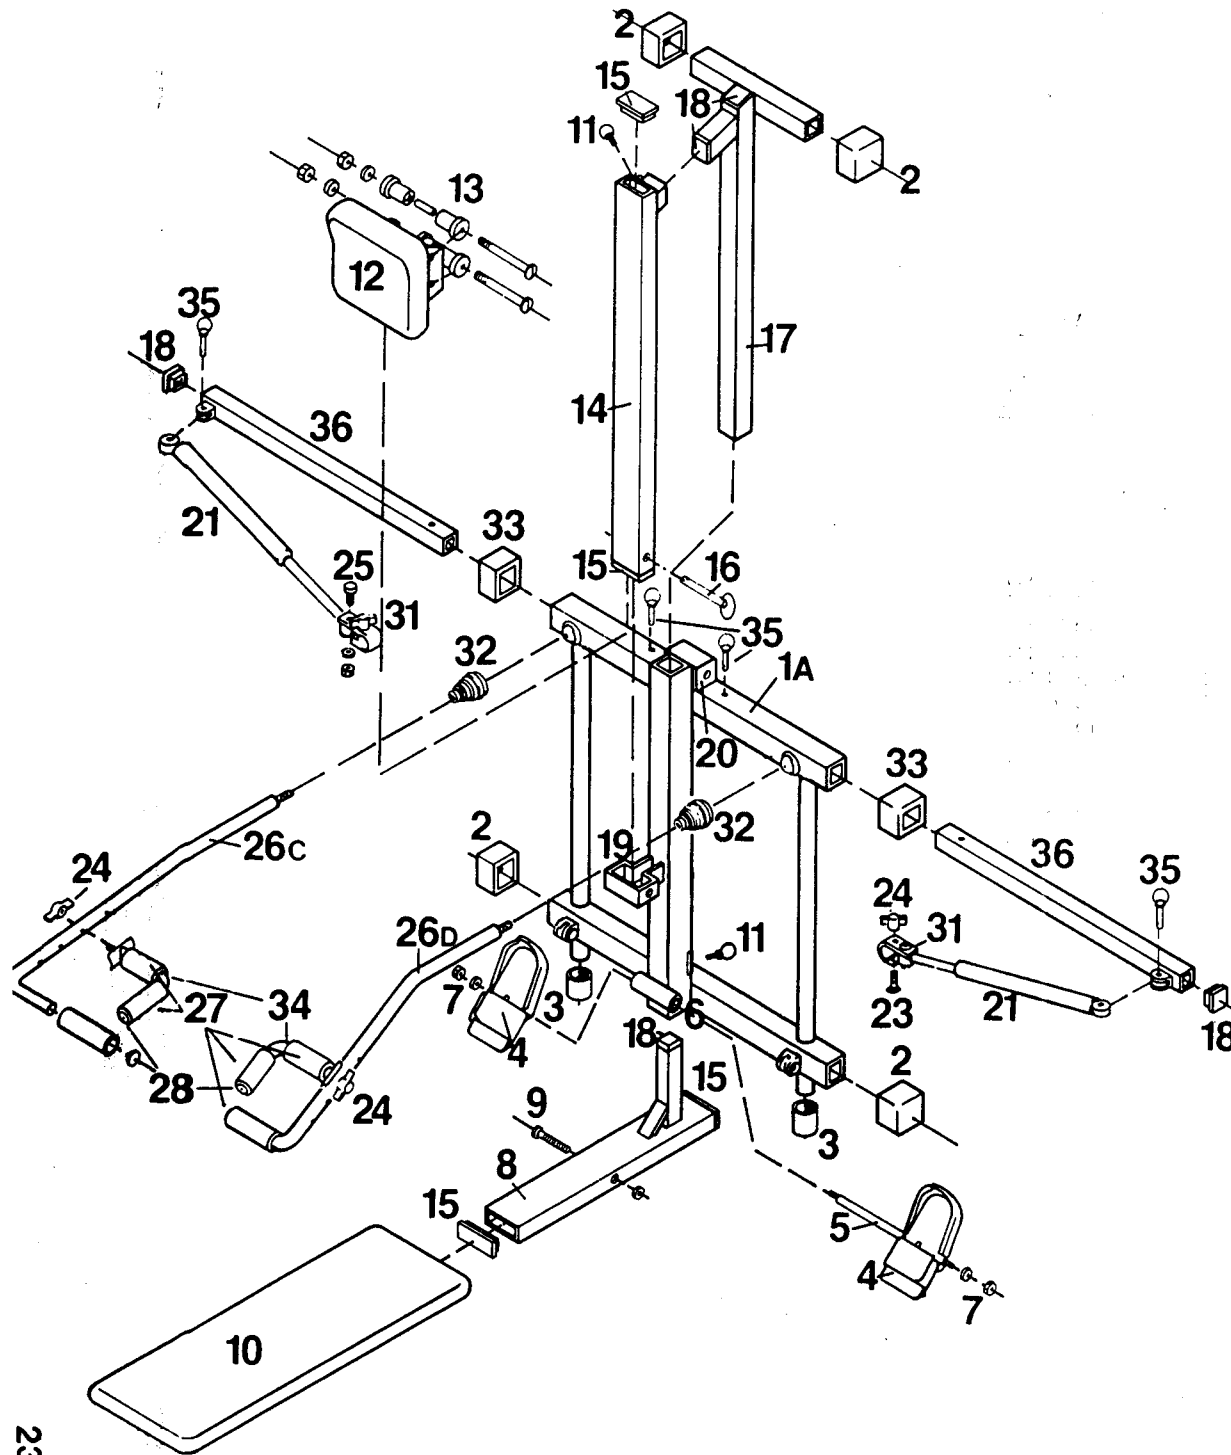

PARTS LIST Lifestyler 1000

NO.	DESCRIPTION	QUANTITY	REORDER NO.
1A	Lifestyler Ball Joint Frame	1	004009
2	Square Rubber Cap	4	040019
3	Round Rubber Cap	2	040016
4	Foot Rest	2	039001
5	Foot Rest Shaft	1	049008
6	Plastic Tube Insert	1	019017
7	Washer & Locknut	2 sets	070014
8	Bench L-Bar	1	006011
9	Long Bolt & Nut	1	070013
10	Bench	1	042006
11	Thumb Screw	2	017011
12	Rowing Seat	1	042007
13	Wheel Assembly	2 sets	070011
14	Chrome Rowing Bar	1	006013
15	Rectangle Bar Cap	4	040014
16	Hitch Pin	1	015004
17	T-Frame Support Bar	1	006014
18	Square Tube Cap	5	040021
19	Chrome Bar Bracket	(On Frame)	-----
20	Upright Bench Bracket	(On Frame)	-----
21	Hydraulic Shock	2	043003
23	Carriage Bolt	2	013015
24	"T" Wingnut	4	017001
25	Bolt, Washer & Locknut Set	2	070015
26C	Rowing Arm, Threaded Right	1	002006
26D	Rowing Arm, Threaded Left	1	002007
27	Hand Grip	6	041004
28	End Cap	4	040004
31	Black "H" Clamp	2	016016
32	Ball Joint Cap	2	010021
33	Open-Ended Rubber Cap	2	040018
34	"L" Oar Return Handle	2	002005
35	Short Hitch Pin	2	015002
35A	Arm Hitch Pin	2	015001
36	Extension Arm	2	006012