

PART LIST—Model No. 831.287630



R994A

Key No.	Part No.	Qty.	Description	Key No.	Part No.	Qty.	Description
1	119809	1	Console	31	100335	1	Reed Switch/Sensor Wire
2	119539	1	Right Handlebar	32	101494	2	9/16" Washer
3	014073	2	5/16" Flat Washer	33	013484	6	5/16" x 1/2" Screw
4	013576	6	1/2" Phillips Screw	34	119808	1	Right Side Shield
5	105022	1	Seat	35	113792	1	Tension Bracket
6	116605	1	Seat Post	36	107428	6	3/4" Tec Screw
7	012096	4	1/4" Seat Nut	37	119810	1	Neck Shield
8	116675	1	Seat Pin	38	112702	2	Pedal Shaft
9	119511	1	Left Handlebar	39	113781	1	Small Spring
10	112701	2	Pedal	40	014041	2	5/16" Washer
11	NSP	1	Frame	41	100076	1	Large Spring
12	105590	2	Flat Endcap	42	104536	1	Eye Bolt
13	116606	1	Stabilizer	43	012082	2	5/16" Flange Nut
14	013469	4	5/16" x 1 1/4" Bolt	44	013423	1	#8 x 1/2" Screw
15	013294	12	#8 x 1" Screw	45	104787	1	Seat Post Glide
16	119777	1	Left Side Shield	46	100904	2	1/2" Nylock Nut
17	012108	1	3/8" x 16 Nylock Nut	47	110465	1	Crank Hardware
18	012090	1	3/8" Flange Nut	48	119811	1	Resistance Knob
19	113788	1	Small Spacer	49	012146	2	5/16" Pedal Nut
20	113834	2	Bearing	50	112704	2	Pedal Cap
21	113789	1	Large Spacer	51	100498	1	Magnet
22	119198	1	Resistance Disk	52	104925	1	Tension Bracket Bolt
23	113791	1	Flywheel Axle	53	119521	2	Handlebar Bracket
24	013300	1	3/4" Self-Tapping Screw	54	109416	2	Round Endcap
25	119227	1	Flywheel	#	101324	1	Screwdriver/Wrench
26	109346	1	Lock Ring	#	045028	1	Socket Tool
27	101115	1	Crank	#	045010	1	Allen Wrench
28	119199	1	Tension Belt	#	016055	4	M-Clip
29	113782	1	Tension Pulley	#	119648	1	Owner's Manual
30	104786	1	Seat Post Collar				

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. 831.287630

R994A

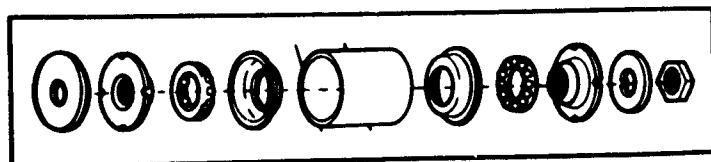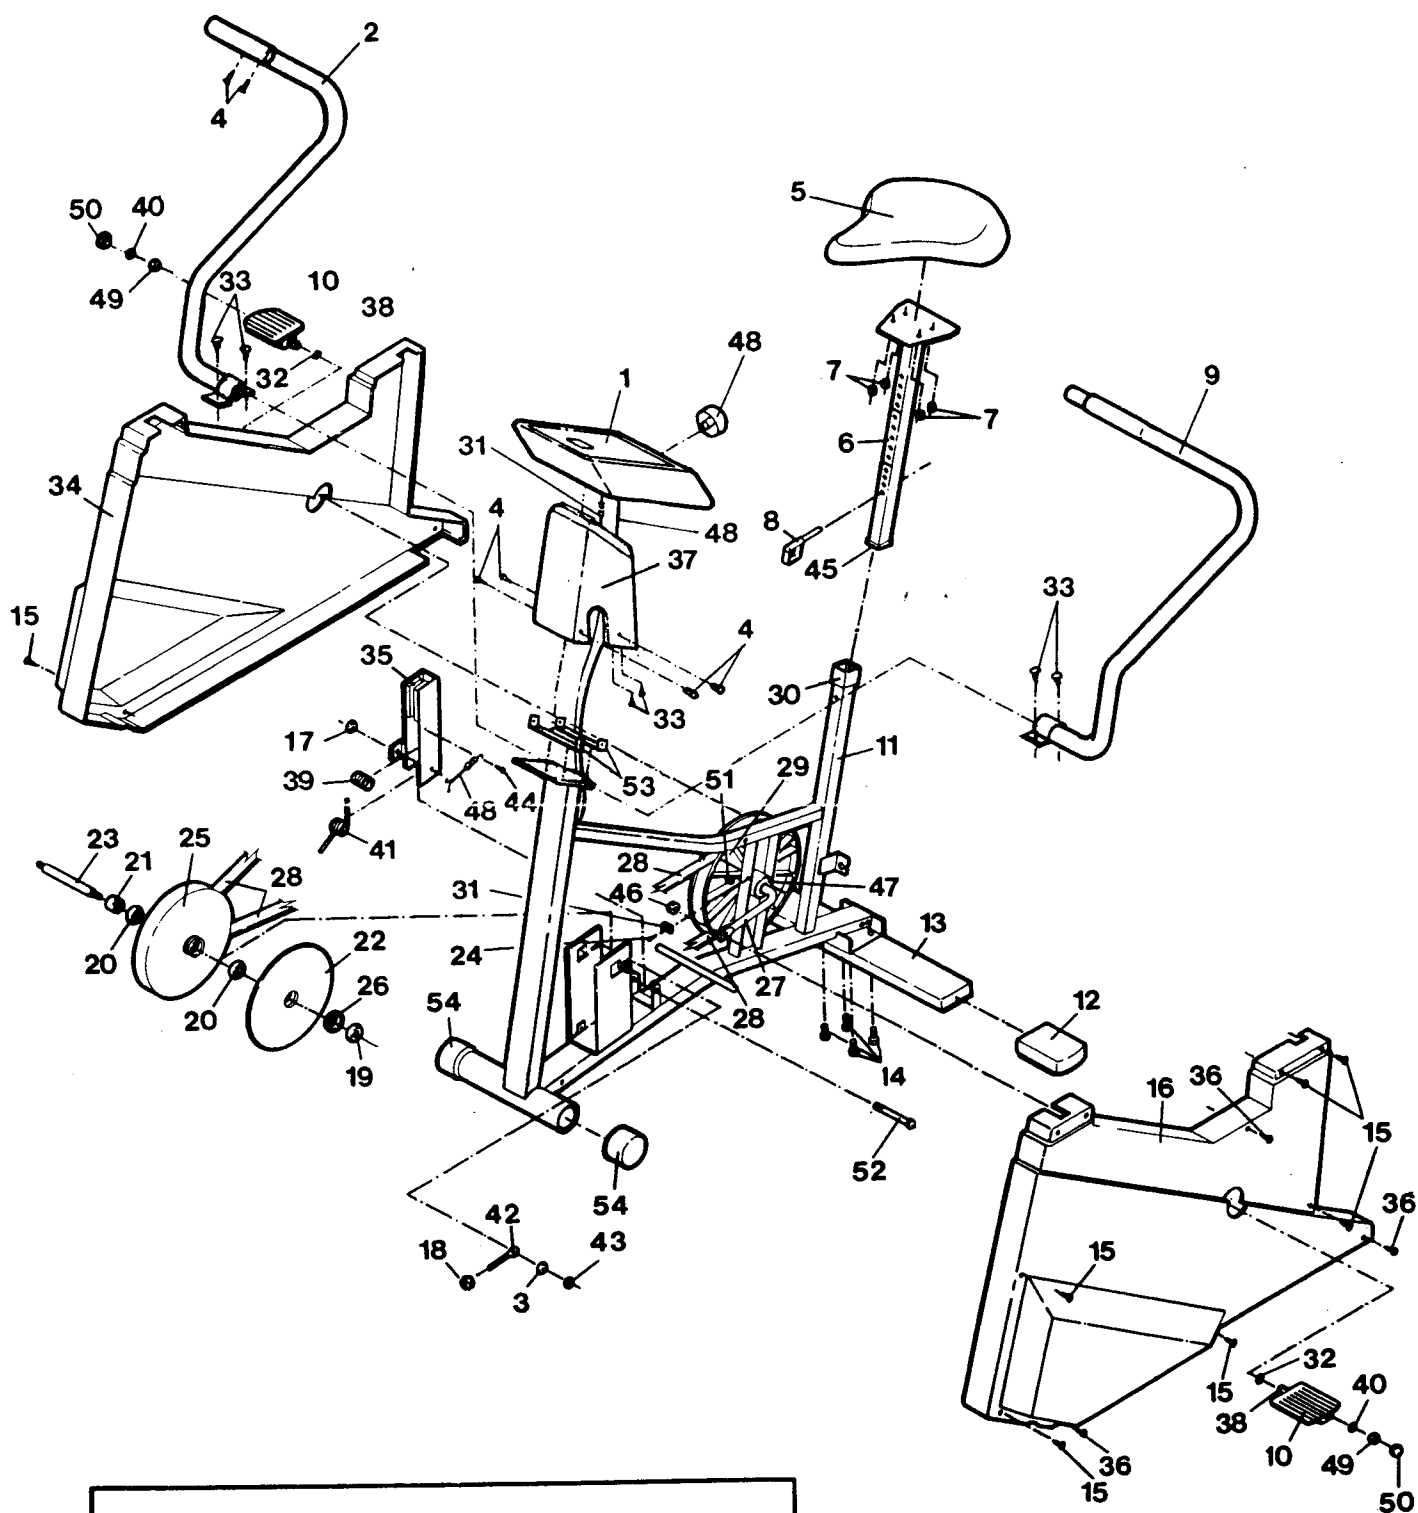

CRANK HARDWARE (47)