



5. Slide the Hub Covers (28) over the Axles (9) as shown, and attach them with the Hub Cover Washers (27) and Screws (29).

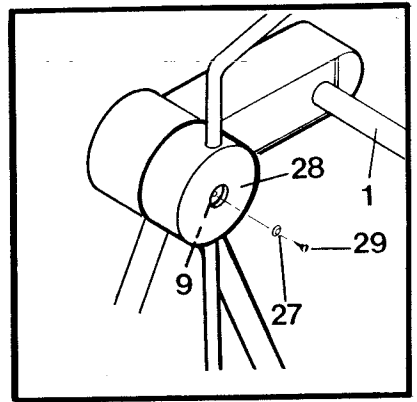


6. Plug the Reed Switch Wire (37) into the jack on the underside of the Electronic Console (34). Press the Console onto the bracket on the handlebar of the Frame (1). Make sure that all parts are tightened securely before using the AIR WALKER.

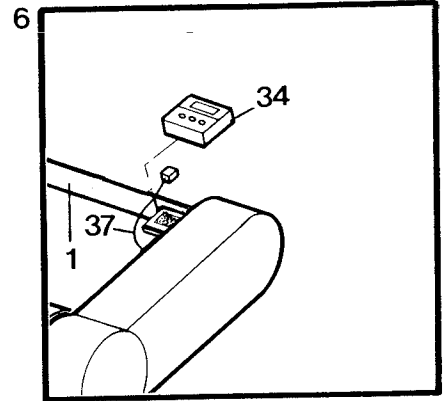

PART LIST - Model No. 831.288401

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	23	2	Walking Arm
2	2	Male Leg Section	24	2	Pedestal Pad
3	2	Female Leg Section	25	2	Walking Arm Foam Grip
4	10	Allen Bolt	26	2	Walking Arm End Cap
5	8	Leg/Arm Mounting Washer	27	1	Hub Cover Washer
6	1	Loop Adhesive Strip	28	2	Hub Cover
7	4	Leg Pad	29	2	Hub Cover Screw
8	4	Pad Mounting Screw	30	1	Left Side Cover
9	2	Axle	31	1	Right Side Cover
10	4	Bushing	32	6	Ball Fastner
11	2	Axle Pulley	33	6	Receptacle
12	4	Pulley Mounting Screw	34	1	Electronic Console
13	1	Mechanism Cable	35	1	Switch Wire Assembly
14	4	Small Pulley	36	2	Switch Mounting Screw
15	4	Pulley Mounting Bolt	37	2	Switch Spacer
16	4	Pulley Mounting Nut	38	8	Walking Arm/Leg Mounting Bolt
17	2	Pulley Mounting Bracket	39	1	Hook Adhesive Strip
18	2	Adjustment Pressure Plate	40	4	Pulley Mounting Nut
19	2	Cable Adjustment Bolt	41	8	Pulley Mounting Washer
20	2	Adjustment Washer		1	Owner's Manual
21	2	Frame End Cover		1	Electronic Console Guide
22	2	Walking Leg w/Foot Pedestal			

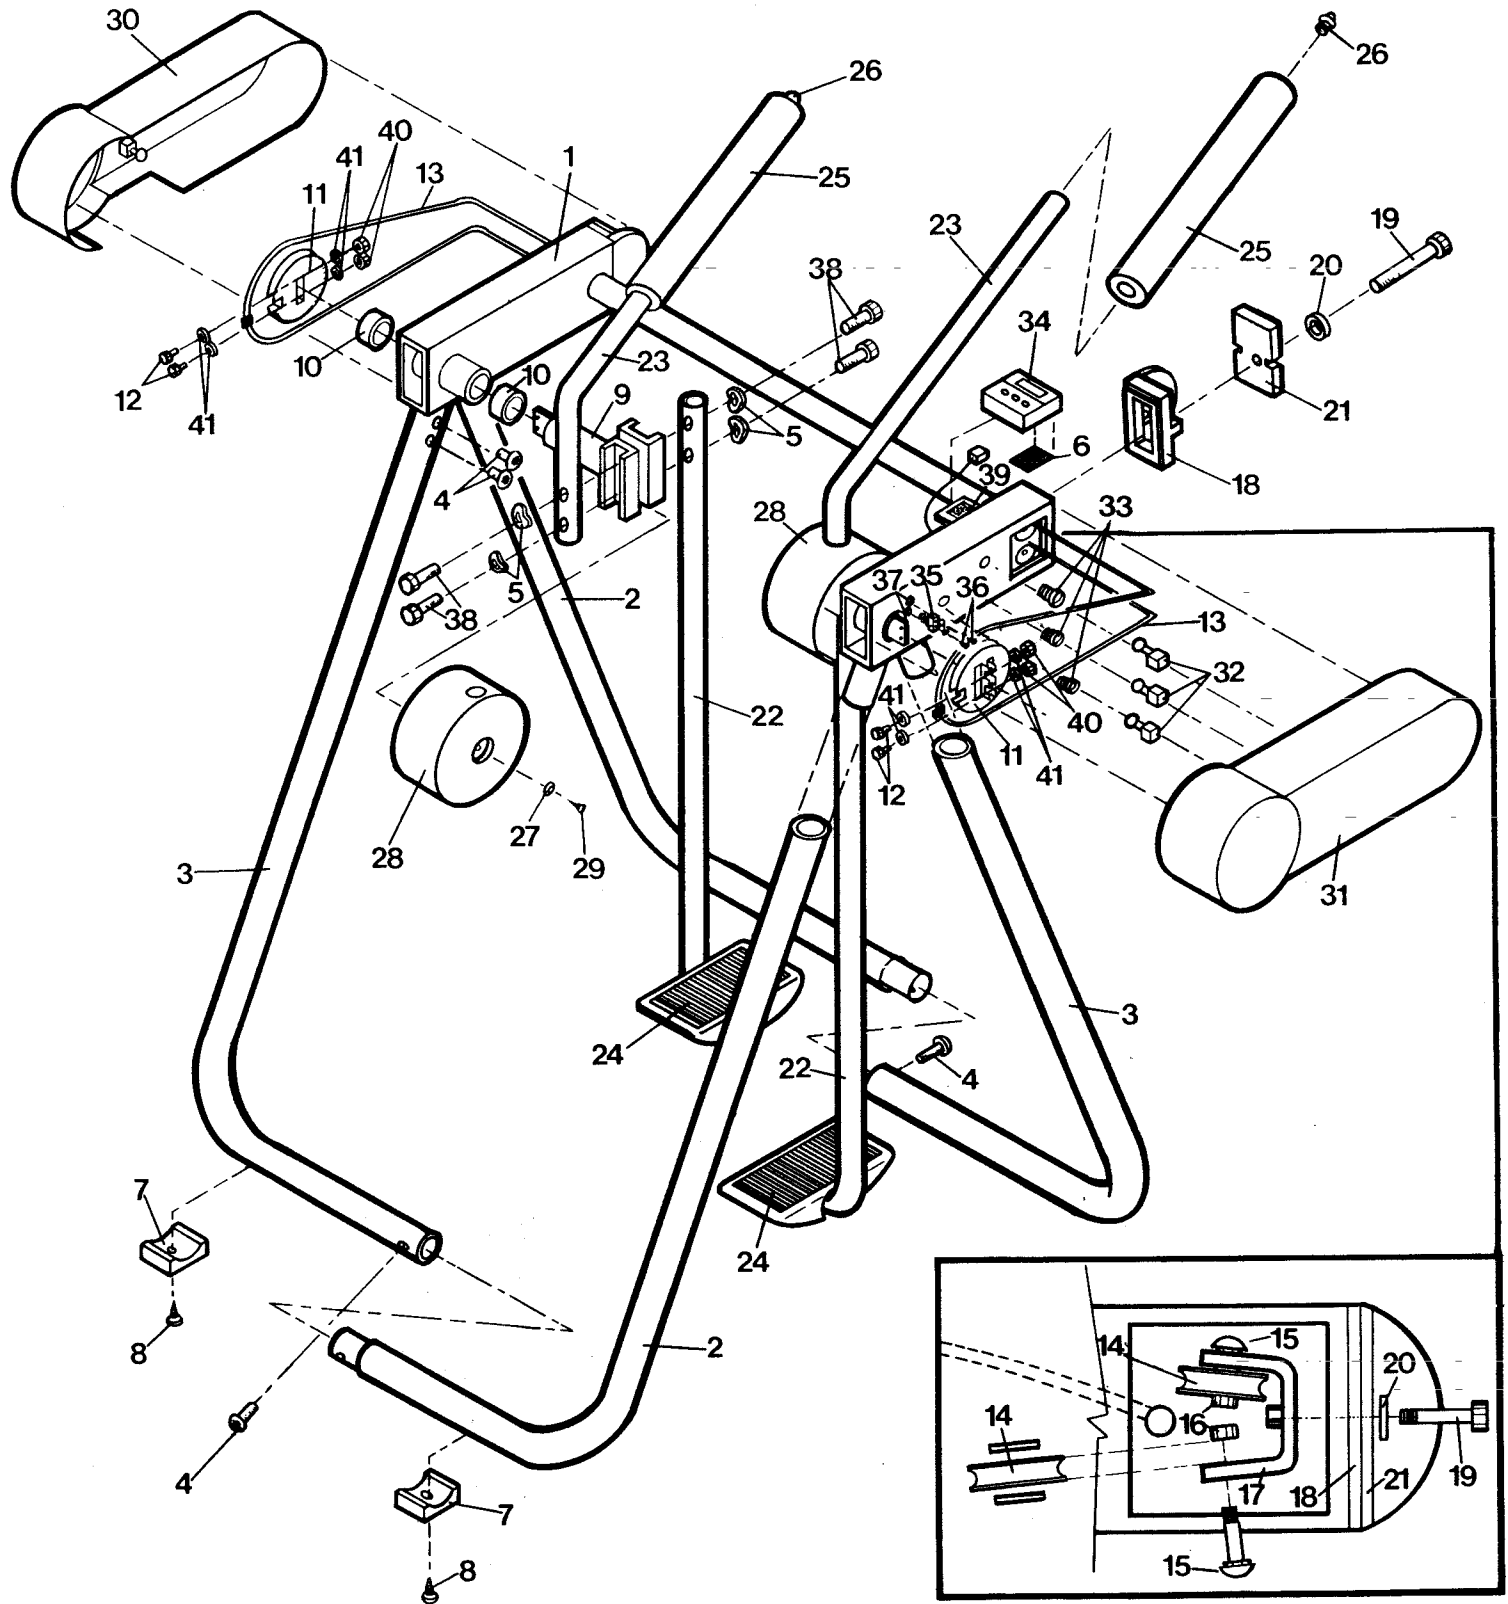EXPLODED DRAWING - Model No. 831.288401

Replacement parts may be ordered by calling customer service toll-free at **1-800-999-3756** (in Canada **1-800-824-8949**) during regular business hours: 8 a.m. - 5 p.m., Mon.-Fri., Mountain Standard Time. When ordering parts please use the product name, model number, serial number, part description and key number.