

PART LIST—Model No. 831.290502

Rev. 10/92

Key No.	Reorder No.	Qty.	Description	Key No.	Reorder No.	Qty.	Description
1	111670	2	Rail	20	111261	1	Left Arm Mount
2	111232	4	Rail Endcap	21	111240	2	Ski Pedal Bumper
3	111233	1	Rear Rail Support	22	111241	1	Strap
4	111234	1	Front Rail Support	23	111242	2	Pulley
5	111258	1	Center Rail Support	24	111248	2	Ski Pole Foam Grip
6	111236	12	Rail Support Bolt	25	111243	2	Strap Knob
7	005040	6	Rubber Foot	26	111244	2	Ski Pedal
8	013129	12	Rubber Foot Screw	27	100801	2	Ski Pedal Pad
9	111237	4	Rail Support Endcap	28	012002	12	Nylock Nut
10	111259	2	Resistance Pad	29	111245	8	Ski Pedal Wheel
11	111260	1	Right Arm Mount	30	013111	8	Ski Pedal Bolt
12	111270	2	Nylon Washer	31	042029	1	Seat
13	111263	2	Arm Mount Cover	32	111246	2	Ski Pole
14	108105	2	Resistance Knob	33	111247	2	Rower Arm
15	111264	2	Carriage Bolt	34	015063	2	Pull Pin
16	111229	2	Foot Rest Shaft	35	041004	2	Rower Arm Foam Grip
17	111239	2	Foot Rest	36	040010	4	Endcap
18	035034	2	Foot Rest Strap	#	111662	1	Owner's Manual
19	014041	14	Washer				

Note: "*" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover for information about ordering replacements parts.

EXPLODED DRAWING—Model No. 831.290502

Rev. 10/92

