


PART LIST - Model No. 831.290520

Rev. 7/89

Key No.	Reorder No.	Qty.	Description	Key No.	Reorder No.	Qty.	Description
1	009130	1	Pulley Cover	31	NSP	1	Frame
2	020052	6	Pulley	32	059018	4	Pedal Bumper
3	013533	4	Pulley Screw	33	015068	2	Bumper Pin
4	006152	1	Frame Arm	34	033001	1	Magnet
5	019295	2	Metal Bushing	35	038047	1	Left Ski Pedal
6	014030	3	Washer	36	038044	2	Pedal Plate
7	013265	2	Long Hex Bolt	37	041069	2	Grip Pad
8	012042	4	Locknut	38	013538	13	Phillips Screw
9	017104	2	Locking Knob	39	022057	8	Pedal Wheel
10	019297	1	Knob Spacer	40	013539	8	Hex Bolt
11	007092	1	Frame Upright	41	012162	8	Nylon Locknut
12	041070	2	Handgrip	42	019299	2	Notched Bushing
13	006155	1	Right Ski Pole	43	049096	1	Pivot Shaft
14	026027	2	Cord	44	006154	1	Left Ski Pole
15	013535	2	Button Head Bolt	45	032091	1	Electronic Monitor
16	040174	2	End Cap	46	013541	2	Small Screw
17	040176	6	Bushing	47	009131	1	Console w/Pad
18	013326	1	Hollow Bolt Assembly	48	013534	2	Console Screw
19	008241	1	Tension Bracket	49	033171	1	Sensor Wire/ Switch
20	014162	1	Bracket Washer	50	072044	1	Resis. Control Cable
21	058029	1	Spring	51	038048	1	Right Ski Pedal
22	014030	2	End Cap Washer	52	008243	2	Strap Bracket
23	019296	1	Metal Spacer	53	014163	4	Flat Washer
24	013536	1	Phillips Bolt	54	017105	1	Resis. Control Knob
25	051022	4	Molded Foot	55	012023	1	Acorn Nut
26	035046	1	Resistance Strap	56	062002	1	Fastener Strip
27	013537	2	Strap Bolt	#	046272	1	Owner's Manual
28	019298	2	End Cap Spacer	#	089042	1	Monitor Oper. Guide
29	050004	1	Strap Buckle				
30	040173	2	Frame End Cap				

Note: “#” indicates a non-illustrated part.

See the back cover of this manual for part reordering instructions.

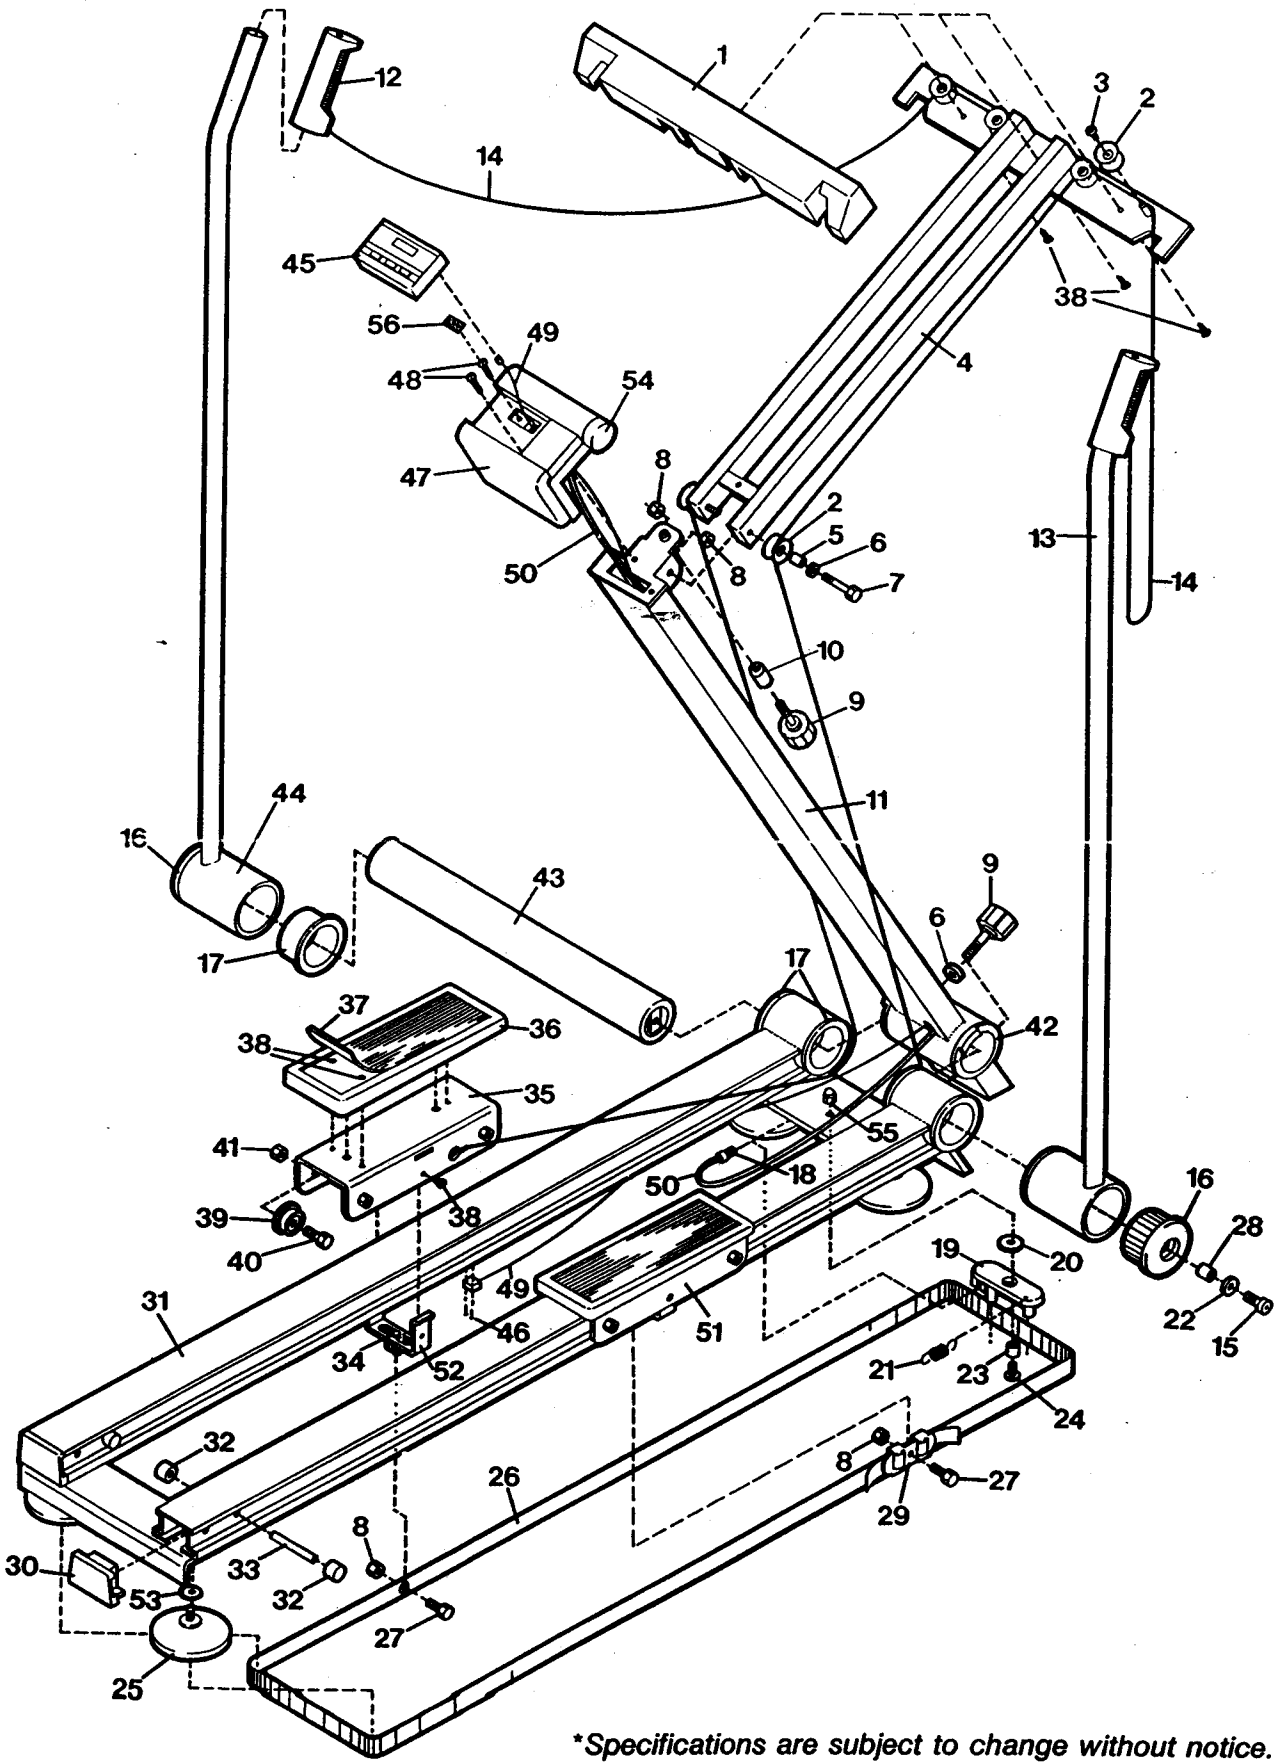

**Specifications are subject to change without notice.*