

SAFETY PRECAUTIONS


1. Always position the treadmill on a flat, level surface.
2. Keep the treadmill away from water.
3. Keep small children away from the treadmill while in operation.
4. Keep walking surface and shoes clean and dry.
5. Wear proper clothing and shoes.

Clothing that allows free movement (exercise suits or shorts and t-shirts) are recommended. Avoid wearing robes, gowns, or oversized clothing that may get tangled. Athletic shoes (tennis, running, or aerobic) are also suggested.

6. Do not start the treadmill while you are standing on the walking belt.

PART LIST – Model 831.29625

No.	Description	Qty.	Reorder No.	No.	Description	Qty.	Reorder No.
1	Frame	1	004055	37	Handlebar Bracket	1	010071
2	Low Friction Platform	1	053013	37a	Handlebar Bracket Screws	4	013162
3	Walking Belt	1	025020	38	Washer	2	014050
4	Belt Adjustment Bracket-L	1	008050	38a	Locknut	2	012037
5	Belt Adjustment Bolt	2	013206	39	Bolt	1	013208
5a	Adjustmnt. Bracket Washer	2	014063	39a	Spacer	2	019091
6	Rear Roller	1	022012	39b	Nut	1	012037
7	Rear Axle Bushing	2	019089	40	Motor Pulley	1	020014
8	Belt Adjustment Bracket-R	1	008058	41	V-Belt	1	025019
8a	Rear Bracket Screw	6	013162	42	Roller Pulley	1	020010
9	Rubber Cap	2	040020	43	Front Roller	1	022013
10	Grip Tape	2	041018	43a	Right Roller Bushing	1	019089
11	Axle	1	049035	43b	Left Roller Bushing	1	019110
12	Acorn Nut	2	012063	43c	Front Roller Bolt	1	013068
13	Wheel	2	052005	44	Motor	1	030006
14	Front Chrome Leg	2	005011	45	Motor Mount Bolt	4	013056
15	Shock	2	043012	45a	Washer	4	012002
16	Locknut	2	012037	45b	Locknut	4	014001
17	Hood Mount Screw	2	013234	46	Controller	1	031045
18	Carriage Bolt	2	013207	47	Controller Cord & Plug	1	070083
19	Aluminum Clamp	2	016011	48	Circuit Breaker	1	031019
20	Spacer	2	019045	49	Pulley Guard	1	013020
21	Triangular Leg	2	017027	50	Pulley Guard Screw	2	013162
22	Electric Cord and Plug	1	031033	50a	Pulley Guard Washer	2	014012
23	Triangular Post Knob	2	017028	51	Magnet	1	033001
24	Right Handrail Post	1	007027	52	Sensor Magnet Screws	2	013069
25	Handrail	1	003031	53	Reed Switch & Wire	1	033006
26	Handrail Bolt	4	013210	54	Power Cord	1	031034
27	Electronic Console	1	032017	55	Connection Box	1	031080
28	Pulse Monitor	1	033009	55a	Screws	2	013162
29	Console Hood	1	009030	56	Roller Lock	1	016027
29a	Console Screws	4	013162	57	Short bolt	2	013238
30	Speed Control Switch	1	031018	58	Allen Wrench	1	045010
31	On/Off Switch	1	031035	59	Washer	2	014063
32	Left Handrail Post	1	007028	60	Safety Cover	1	040076
33	Handrail Foam	1	041016	60a	Safety Cover Screws	7	013162
34	Flywheel	1	021014	61	Platform Support Block	6	053016
35	Fan	1	031027	62	Platform Support Bolt	6	013270
36	Motor Hood	1	009026	62a	Washer	6	014062

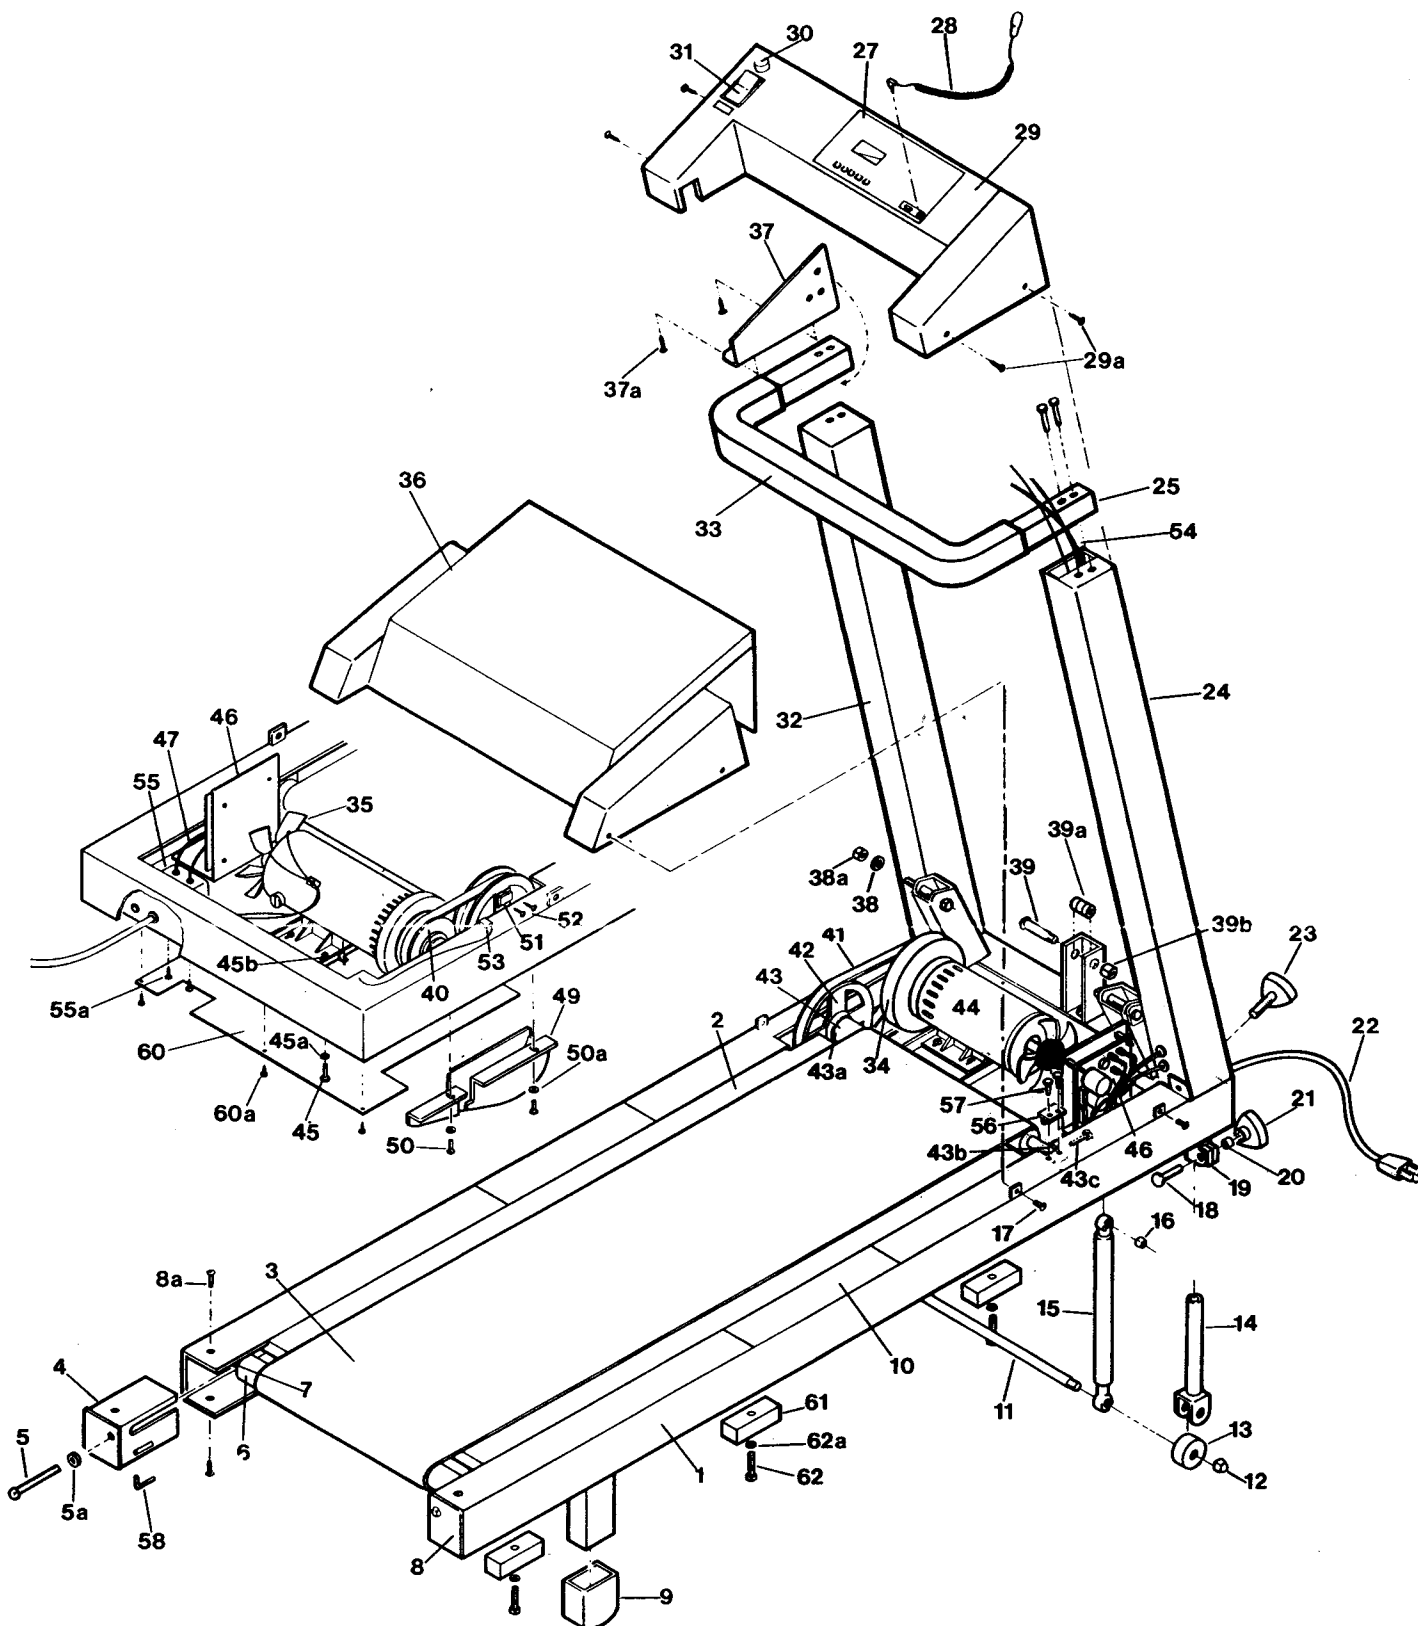

Replacement parts may be ordered by calling customer service toll-free at 1-800-824-3109 (In Canada, 1-800-824-8949) during regular business hours: 8 a.m. -5 p.m., Mon.-Fri., Mountain Standard Time.