

PART LIST—Model No. NEL90951

R1107A

Key No.	Qty.	Description	Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	45	1	Small Pulley	87	2	M8 x 16mm Washer
2	1	Rear Stabilizer	46	1	Idler Pulley	88	6	M8 x 23mm Flat Head Screw
3	1	Right Upright	47	1	Resistance Motor			
4	1	Left Upright	48	1	Power Board Cover	89	1	M8 x 57mm Screw
5	1	Incline Ramp	49	1	Power Board	90	1	M6 x 38mm Bolt
6	1	Console Frame	50	1	Power Board	91	1	Magnet Bracket Bolt
7	1	Lower Ramp Cap			Bracket	92	36	M4 x 16mm Screw
8	1	Power Cord	51	1	Idler Pulley Bracket	93	1	M6 x 8mm Button Screw
9	1	Right Handlebar	52	1	Reed Switch Clamp			
10	1	Left Handlebar	53	1	Reed Switch	94	8	M8 Washer
11	1	Right Pedal Arm	54	2	Pillow Block Set	95	2	M8 x 25mm Washer
12	1	Left Pedal Arm	55	2	Bearing Block Set	96	3	M8 x 9.5mm Screw
13	1	Right Pedal	56	4	Crank Arm Bushing	97	5	M5 x 16mm Bolt
14	1	Left Pedal	57	4	Pulley Spacer	98	2	M8 x 23mm Washer
15	2	Pivot Shaft	58	1	Crank Spacer	99	4	M8 x 28mm Washer
16	4	M4 Star Washer	59	4	Ramp Bushing	100	2	Wave Washer
17	1	Console	60	4	Incline Motor Spacer	101	12	M8 Split Washer
18	1	Hand Grip Pulse Sensor	61	4	Pedal Wheel Bushing	102	13	M8 Nylon Locknut
19	1	Rear Base Plate	62	4	Pivot Bushing	103	2	Large Snap Ring
20	1	Front Base Plate	63	2	Inner Upright Cover	104	2	Handlebar Endcap
21	1	Right Rear Side Shield	64	2	Pivot Arm Cover	105	8	M4 x 25mm Screw
22	1	Left Rear Side Shield	65	1	Magnet	106	8	M4 x 16mm Round Head Screw
23	1	Right Front Side Shield	66	1	Wedge	107	2	Bolt Set
24	1	Left Front Side Shield	67	1	Incline Reed Switch	108	4	M8 x 56mm Button Screw
25	1	Front Cover	68	1	Power Receptical			
26	1	Right Foot Rail	69	1	Belt	109	1	Reed Switch Plate
27	1	Left Foot Rail	70	1	Grommet	110	8	M8 x 68mm Button Screw
28	1	Upper Ramp Cap	71	2	Hairpin			
29	4	Pivot Shaft Sleeve	72	2	Snap Ring	111	8	M4 x 12mm Screw
30	4	Handlebar Cover	73	1	Flywheel Spacer	112	4	M8 x 76mm Button Bolt
31	4	Frame Endcap	74	2	Outer Upright Cover			
32	2	Frame Cushion	75	1	Upper Wire Harness	113	2	M8 x 20mm Button Screw
33	4	Leveling Foot	76	1	Extension Wire Harness	114	2	M6 Nut
34	2	Wheel	77	1	Lower Wire Harness	115	4	M6 x 10mm Button Screw
35	2	Pedal Wheel	78	4	M4 x 14mm Screw			
36	1	Flywheel	79	4	M5 Nylon Locknut	116	5	M4 x 19mm Screw
37	1	Pulley	80	2	M8 x 45mm Button Screw	117	2	M4 x 30mm Screw
38	1	Right Crank Arm	81	4	M8 x 25mm Button Screw	118	1	Short Clevis Pin
39	1	Left Crank Arm	82	4	M5 Washer	119	1	Long Clevis Pin
40	1	Incline Axle	83	2	Flange Screw	120	2	Foam Grip
41	1	Pulley Axle	84	2	M8 x 52mm Button Screw	121	1	Left Pedal Insert
42	1	Lift Motor	85	2	M8 x 41mm Button Screw	122	1	Right Pedal Insert
43	1	"C" Magnet			Screw	#	2	Hex Key
44	1	Spring	86	2	Large Wave Washer	#	1	Grease
						#	1	Teflon® Lubricant
						#	1	User's Manual

Note: # indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. NEL90951

R1107A

