

PART LIST—Model No. NETL82905.0

R0805A

To locate the parts listed below, see the EXPLODED DRAWING attached in the centre of this manual.

Key No.	Qty.	Description	Key No.	Qty.	Description
1	2	Foot Rail Insert	51	1	Front Right Endcap
2	1	Left Foot Rail	52	1	Walking Platform
3	2	2" Belly Pan Screw	53	2	Front Platform Screw
4	1	Front Left Endcap	54	2	Rear Platform Screw
5	2	Frame Pivot Bolt	55	2	Spring Pad
6	2	Frame Pivot Spacer	56	2	Spring
7	1	Magnet	57	1	Idler Ground Wire
8	1	Front Roller/Pulley	58	1	Rear Endcap, Right
9	5	Nut	59	2	Rear Roller Adj. Bolt
10	1	Reed Switch/Sensor Wire	60	1	Warning Decal
11	1	Upright Ground Wire	61	1	Allen Wrench
12	1	Reed Switch Clip	62	1	Rear Roller
13	1	Lift Frame	63	1	Audio Wire
14	1	Walking Belt	64	1	Chest Pulse Sensor
15	14	Foot Rail Screw/Endcap Screw	65	1	Pulse Bar
16	1	Motor	66	1	Pulse Wire
17	1	Receptical	67	2	Spring Pad Screw
18	2	Motor Bolt	68	1	5/16 Allen Wrench
19	1	Front Roller Bushing	69	1	Uprights
20	2	Frame Pivot Nut	70	1	Latch Knob Sleeve
21	1	Top Incline Bolt	71	1	Chest Strap
22	1	Motor Belt	72	1	Roller Star Washer
23	1	Hood	73	1	Filter
24	1	Incline Motor Bolt	74	1	Adapter
25	2	Motor Bushing	75	1	Filter Wire
26	1	Splitter	76	2	Control Knob
27	19	Electronics Screw	77	8	Star Washer
28	2	Foam Pad	78	2	Console Bolt
29	1	Controller	79	2	Upright Endcap
30	1	Left Outside Housing	80	1	Access Door
31	1	Motor Controller Wire	81	1	Console Base
32	1	Front Roller Adj. Bolt	82	1	Console
33	4	Pulse Bar Bolt	83	2	Upright Cap
34	6	Roller Washer/Spring Washer	84	1	Key/Clip
35	1	Left Roller Guard	85	1	iFIT.com Wire
36	1	Incline Motor	86	1	Jack
37	1	Incline Motor Stop	87	1	Console Insert
38	1	Motor Belly Pan	88	1	Console Back
39	1	Audio Wire Nut	89	1	Releaseable Tie
40	1	Static Decal	90	14	Console Screw
41	1	On/Off Switch	91	2	Cable Tie Clamp
42	1	Power Cord	92	5	8" Cable Tie
43	1	Right Roller Guard	93	2	Lift Pivot Bolt
44	4	Spring Bolt	94	2	Wheel Bolt
45	4	Belt Guide Screw	95	2	Wheel
46	2	Belt Guide	96	1	Rear Endcap, Left
47	2	Isolator	97	1	Grommet
48	1	Pulley Nut	98	1	Upright Wire Harness
49	1	Ground Screw	99	6	Base Pad
50	4	Spring Nut	100	12	3/4" Screw

Key No.	Qty.	Description	Key No.	Qty.	Description
101	2	Wheel Endcap	135	2	Idler Arm Nylon Washer
102	2	Extension Leg	136	1	Bracket Nut
103	2	Extension Leg Endcap	137	1	Idler Pulley Washer
104	2	Incline Warning Decal	138	1	Idler Pulley
105	1	Idler Arm Bolt	139	1	Idler Arm Spacer
106	2	Short Console Bolt	140	1	Left Rear Foot
107	2	Fan	141	1	Right Rear Foot
108	1	Book Holder	142	1	Shock
109	1	Ferrite Box	143	1	Transformer
110	1	Frame	144	2	Isolator Screw
111	1	Latch Assembly	145	1	Right Foot Rail
112	1	Console Ground Wire	146	2	Walking Platform Nut
113	2	Spring Plate	147	2	Front Incline Pivot Nut
114	1	Ground Nut	148	6	1" Screw
115	1	Left Tray	149	2	Shock Clip
116	1	Right Tray	150	1	Lift Frame Ground Wire
117	1	Left Inside Housing	151	4	Fan Screw
118	1	Right Inside Housing	152	1	Bracket Bolt
119	1	Right Outside Housing	153	1	Knob Cap
120	2	Cushion Adj. Pin	154	1	Belly Pan Screw
121	2	Cushion Adj. Gear	155	3	3/4" Belly Pan Screw
122	2	Cushion Adj. Wheel	156	2	1" Belly Pan Screw
123	2	Cushion Adj. Rod	#	1	8" Green Wire, F/Ring
124	1	Cushion Adj. Knob	#	1	8" Green Wire, 2 Ring
125	1	Cushion Knob Screw	#	1	4" Green Wire, F/Ring
126	1	Pulse Receiver	#	1	16" Blue Wire, 2F
127	1	Electronic Bracket	#	1	6" Blue Wire, 2F
128	2	Spring Plate Spacer	#	1	16" White Wire, 2F
129	2	Gear Rack	#	1	12" Black Wire, 2 Ring
130	4	Extension Leg Bolt	#	1	User's Manual
131	1	Circuit Breaker			
132	1	Motor Isolator			
133	1	Idler Arm			
134	1	Idler Spring			


#These parts are not illustrated

Specifications are subject to change without notice.

EXPLODED DRAWING—Model No. NETL82905.0

R0805A

To identify the parts shown on this exploded drawing, see the
PART LIST on pages 34 and 35 of the USER'S MANUAL.

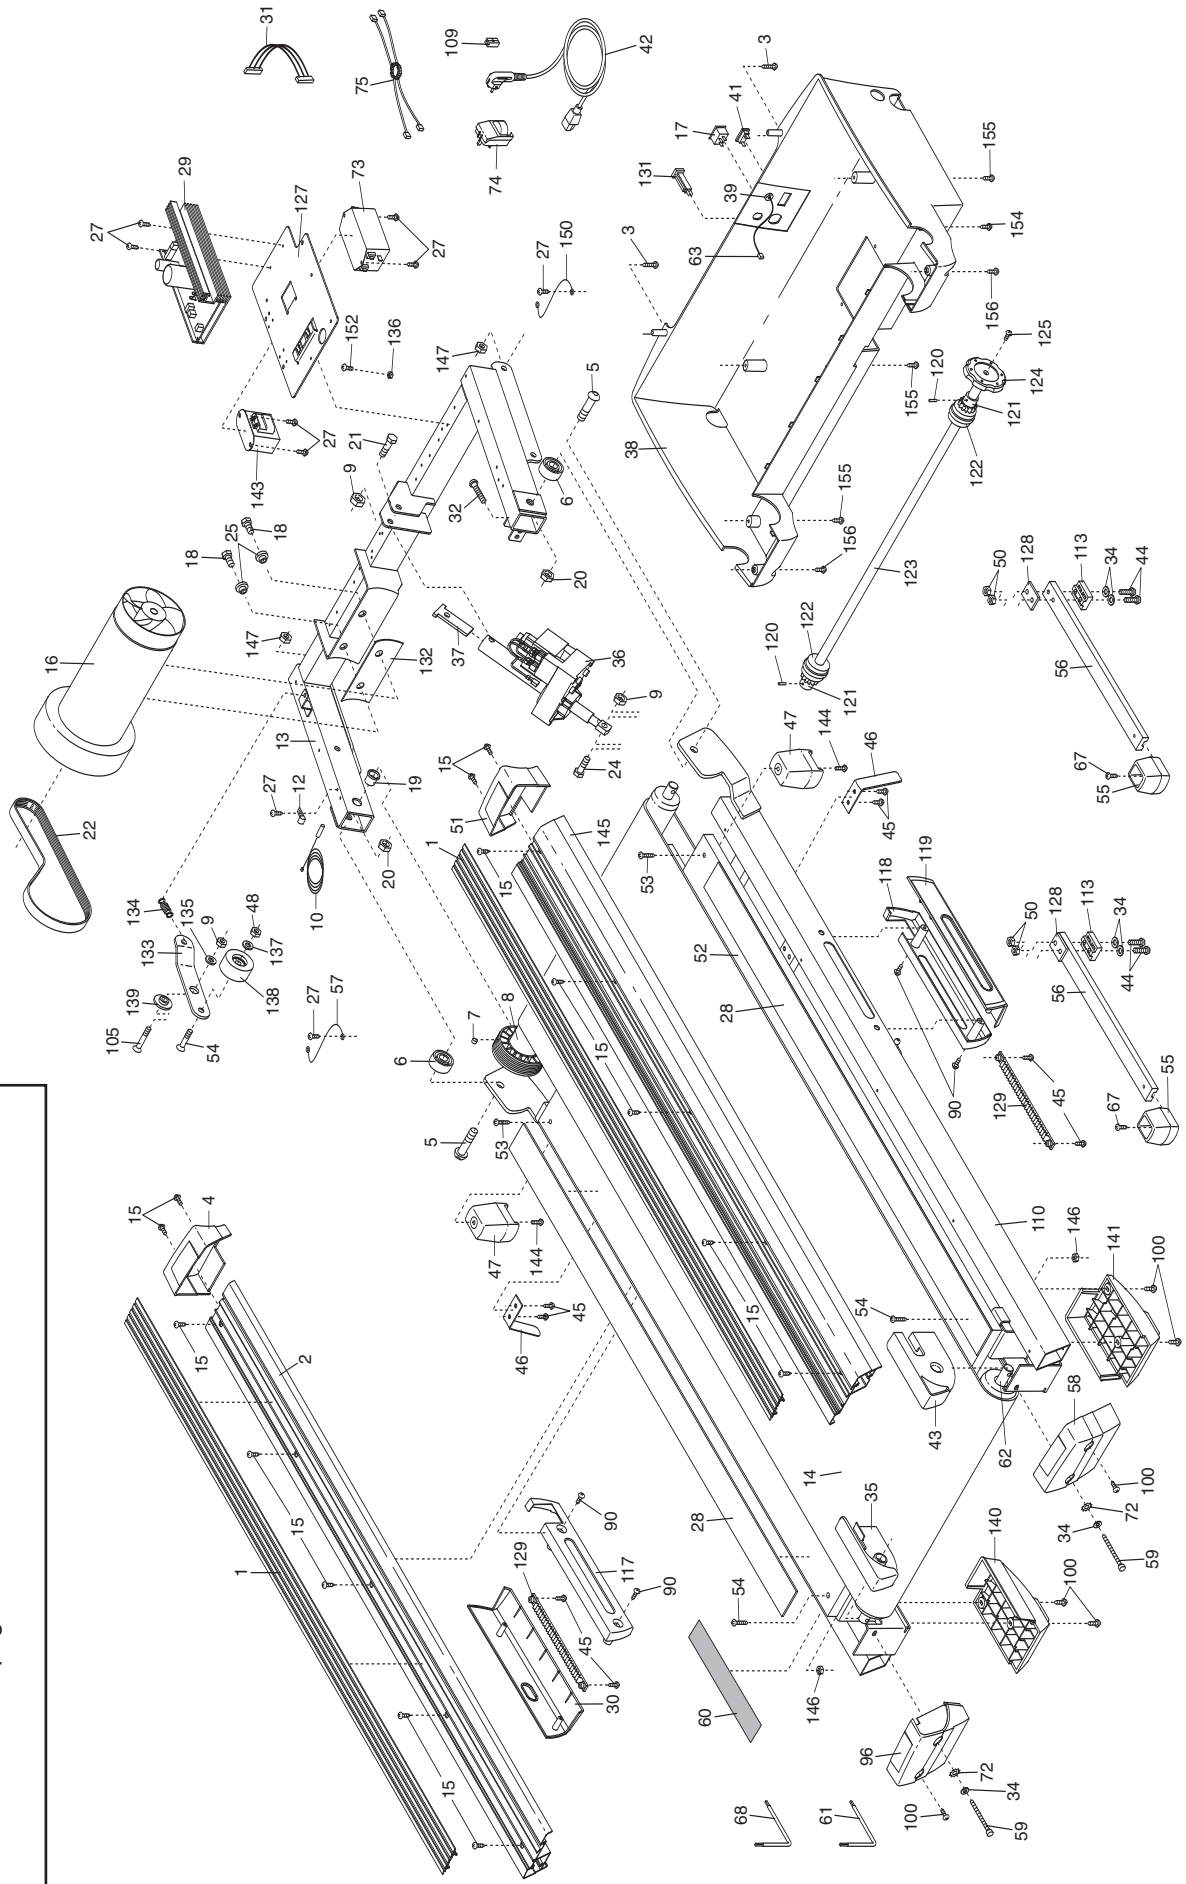

R0805A

