


R0903A

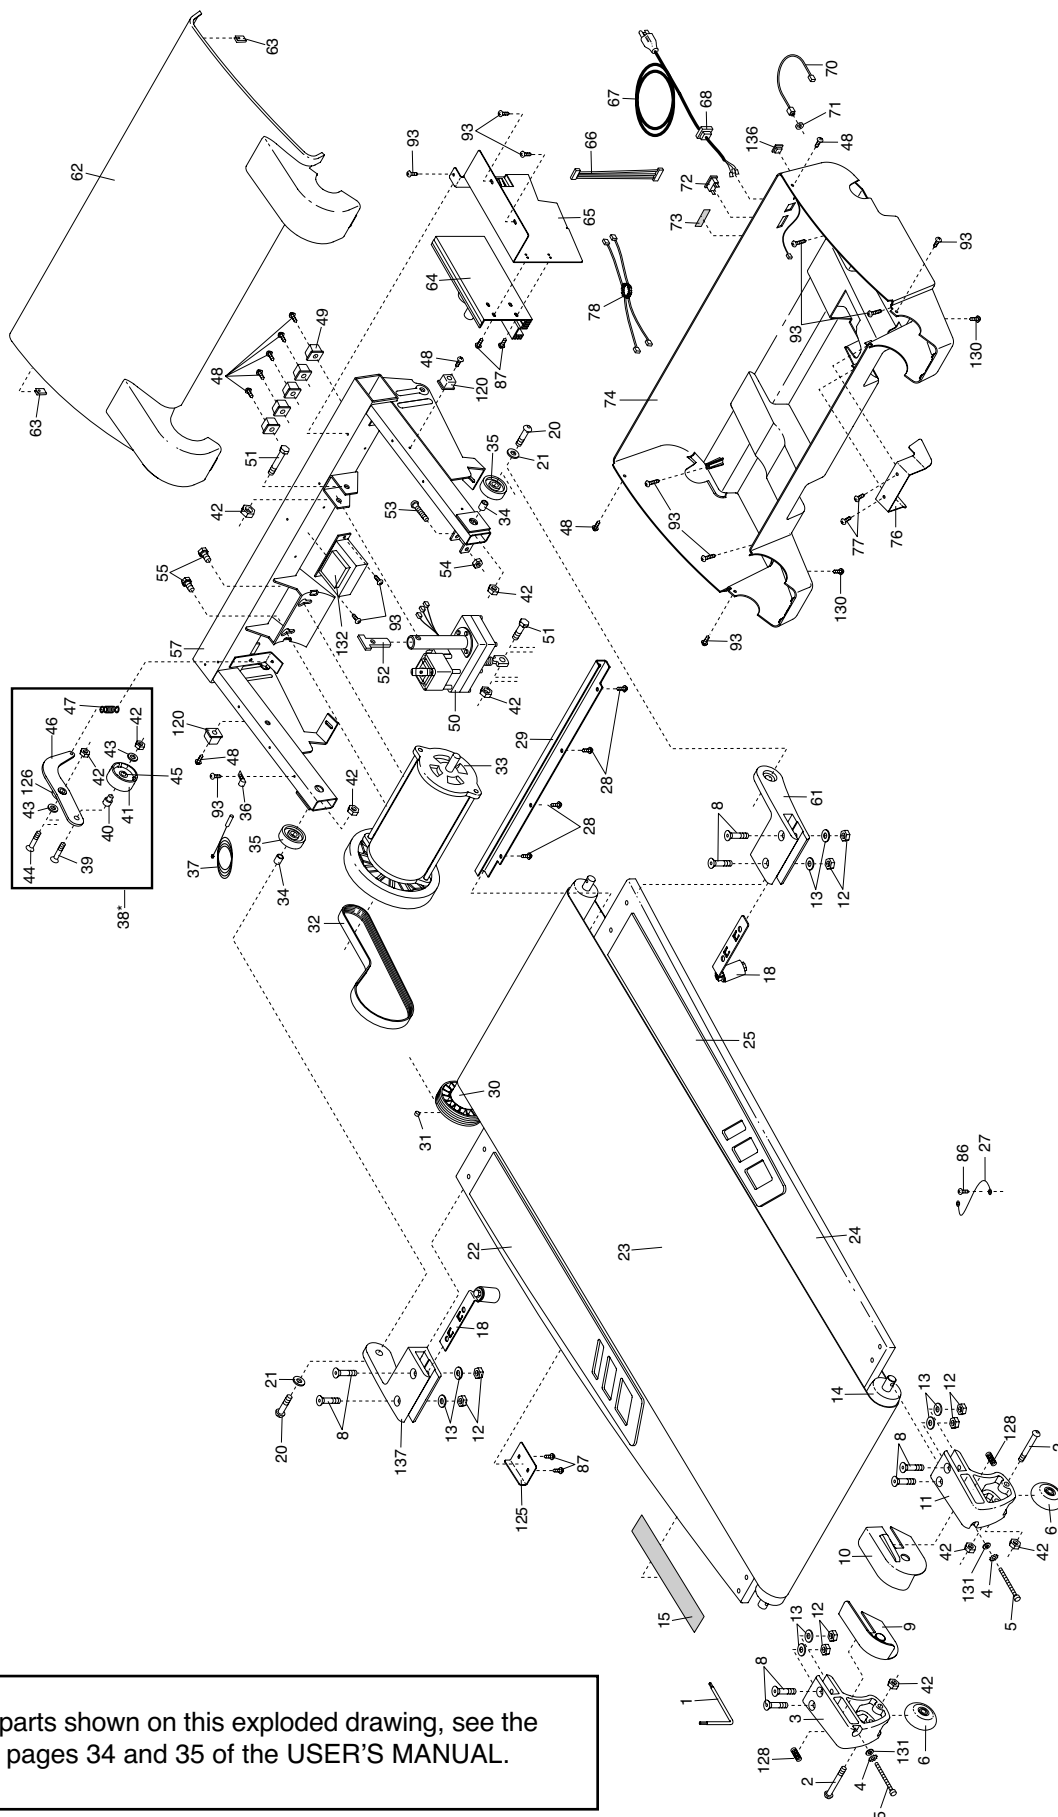

To identify the parts shown on this exploded drawing, see the **PART LIST** on pages 34 and 35 of the **USER'S MANUAL**.

R0903A

