


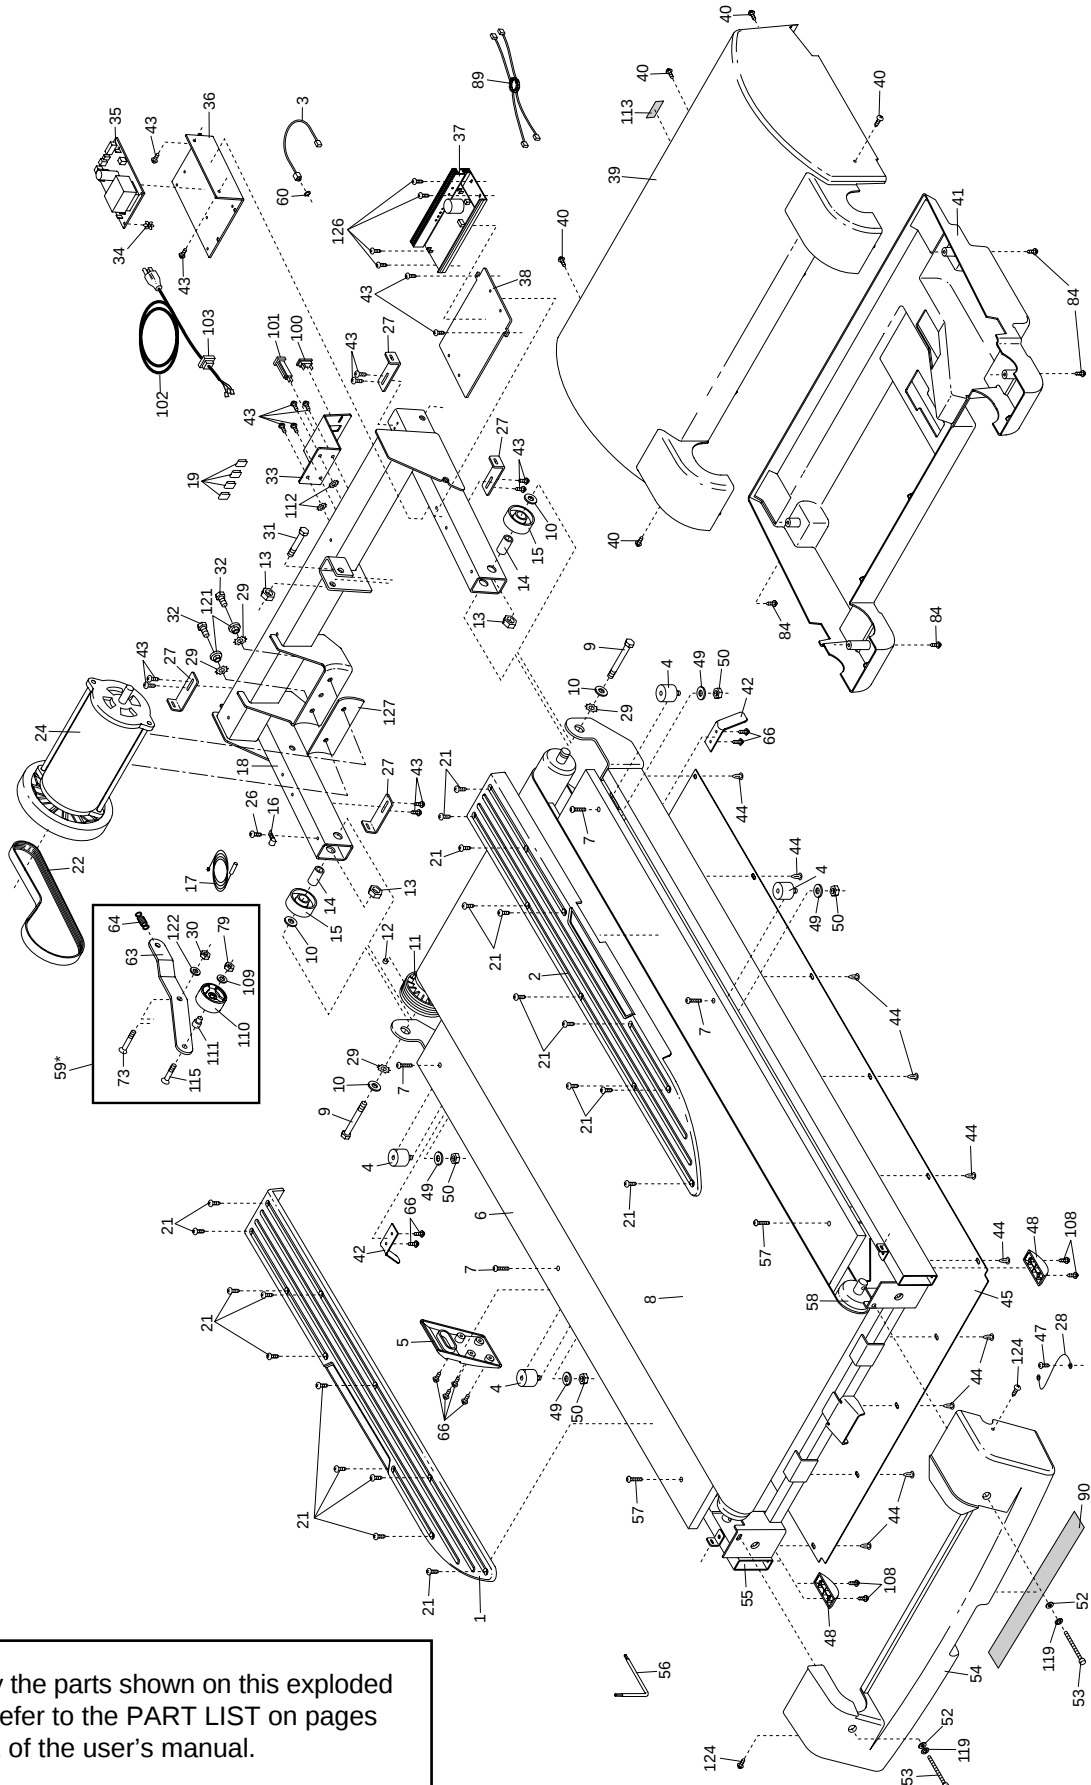

To identify the parts shown on this exploded drawing, refer to the PART LIST on pages 30 and 31 of the user's manual.

R0502A

