


ADJUSTMENT

ATTACHING THE POWER PAK

Set the Threaded Spacer (8) into the groove on the Power Pak Frame (D). Insert the Pin (10) through the Side Mech Cover (A), the Top Endcaps (3, 4), and the Mech Frame (E). Fully tighten the Pin.

Attaching the MAX PACK to your resistance system will increase your minimum and maximum resistance levels. The resistance system can be used at a lower resistance level again by removing the MAX PACK.

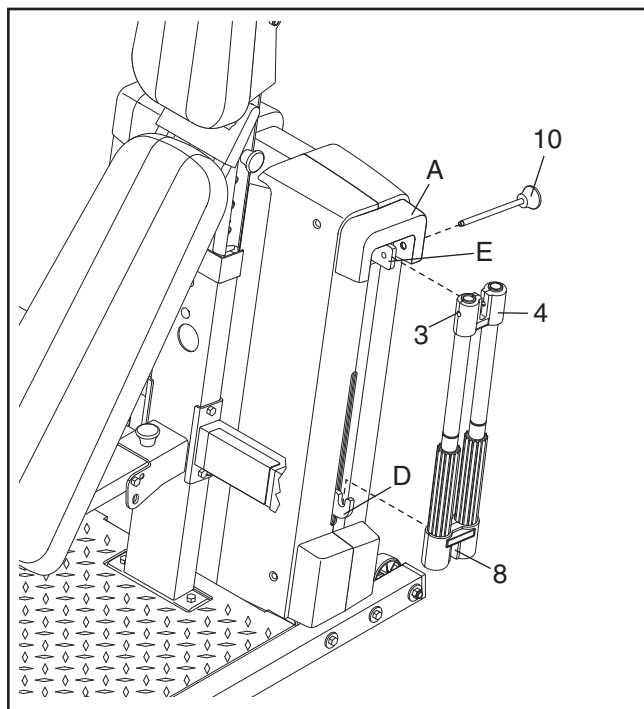

PART LIST/EXPLODED DRAWING—Model No. WEMC0674.0

R1005A

Key No.	Qty.	Description
1	2	Gas Spring
2	2	Shank
3	1	Rear Top Endcap
4	1	Front Top Endcap
5	1	Front Bottom Endcap
6	1	Rear Bottom Endcap
7	4	Gas Spring End
8	1	Threaded Spacer
9	2	Button Bolt
10	1	Pin
11	1	Sensor Plate
12	2	Oil Pad
#	1	User's Manual

Note: “#” indicates a non-illustrated part.
Specifications are subject to change without notice.

