


# ADJUSTMENT

## ATTACHING THE POWER PAK

Set the Threaded Spacer (8) onto the Power Pack Frame (D). Insert the Pin (10) through the Side Mech Cover (A), the Top Endcaps (3, 4), and the Mech Frame (E).

Attaching the POWER PAK to your resistance system will increase your minimum and maximum resistance levels. The resistance system can be used at a lower resistance level again by removing the POWER PAK.

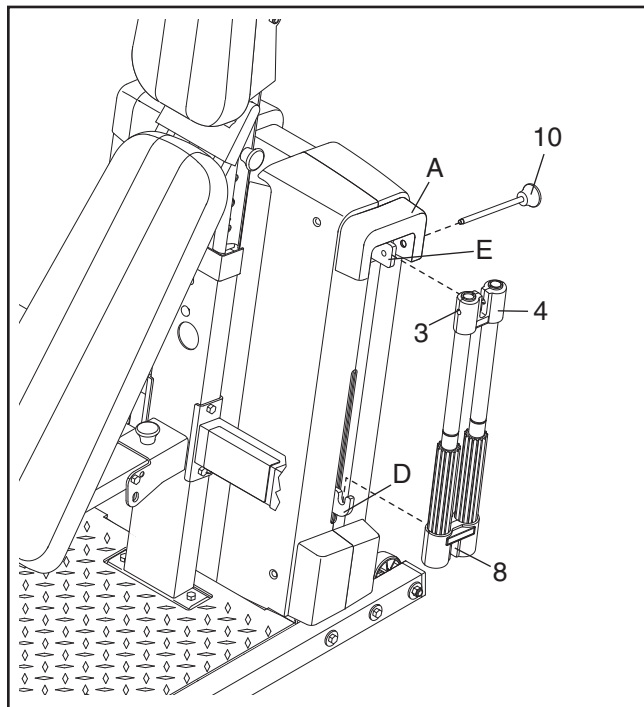

## PART LIST/EXPLODED DRAWING—Model No. WEMC06740

R1204A

| Key No. | Qty. | Description         |
|---------|------|---------------------|
| 1       | 2    | Gas Spring          |
| 2       | 2    | Shank               |
| 3       | 1    | Rear Top Endcap     |
| 4       | 1    | Front Top Endcap    |
| 5       | 1    | Front Bottom Endcap |
| 6       | 1    | Rear Bottom Endcap  |
| 7       | 4    | Gas Spring End      |
| 8       | 1    | Threaded Spacer     |
| 9       | 2    | Button Bolt         |
| 10      | 1    | Pin                 |
| 11      | 1    | Sensor Plate        |
| #       | 1    | User's Manual       |

Note: “#” indicates a non-illustrated part.  
Specifications are subject to change without notice.

