

Ordering Replacement Parts

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information:

1. The MODEL NUMBER of the product (WEST40780).
2. The NAME of the product (WEIDER 28ST).
3. The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and EXPLODED DRAWING below).

Part List

Exploded Drawing

Key No.	Qty.	Description
1	1	Base
2	4	Stabilizer Cap
3	1	Pulley Bushing
4	1	5/16" x 2 3/16" Button
5	4	Head Screw
6	6	5/16" x 1 9/16" Bolt
7	1	5/16" Nylon Locknut
8	1	Electronic Monitor
9	1	Reed Switch
10	2	Shock
11	8	Shock Bushing
12	2	Reed Switch Screw
13	1	Right Pedal Arm
14	1	Left Pedal Arm
15	2	Pedal
16	2	Arm Cap
17	2	Bumper
18	1	Square Cap
19	4	Pedal Screw
20	1	Axle Screw
21	2	Small Axle Washer
22	1	Knob Screw
23	1	Cable
24	1	Pulley
25	1	"U" Bracket
26	1	Spring Knob

