

**PART LIST—Model No. WL318020**

Rev. 9/92

<b>Key No.</b>	<b>Qty.</b>	<b>Description</b>	<b>Key No.</b>	<b>Qty.</b>	<b>Description</b>
1	1	Left Handrail w/Foam Grip	35	1	Choke
2	2	Foam Grip	36	4	Hood Anchor
3	1	Clothes Clip	37	1	Frame
4	1	Pulse Earclip	38	1	Walking Platform
5	1	Console	39	1	Safety Cover
6	18	Screw	40	3	Roller Adjustment Washer
7	2	Short Handrail Bolt	41	1	Front Roller Adjustment Bolt
8	1	Speed Control Knob	42	1	J-Bolt
9	1	Upright Post	43	1	Tension Washer
10	1	Safety Key/Clip	44	1	Tension Spring
11	1	Motor	45	1	Front Roller
12	4	Motor Mount Washer	46	1	Walking Belt
13	9	Motor Mount Nut/Cushion Nut	47	6	Platform Screw
14	1	Pulley/Flywheel/Fan	48	1	Belt
15	1	Incline Leg	49	4	Cushion Spring Bolt
16	2	Clamp	50	1	Magnet
17	4	Motor Mount Bolt	51	1	Reed Switch/Sensor Wire
18	1	Motor Mount Swivel Shaft	52	2	Cushion Spring/Foot
19	1	Right Incline Leg	53	2	Cushion Cover
20	1	Pivot Nut	54	1	Right Roller Bracket
21	4	Flat Washer	55	2	Rear Roller Adjustment Bolt
22	1	Lock Knob Washer	56	1	Allen Wrench
23	1	Lock Knob	57	1	Wrench Clip
24	1	Pivot Bolt	58	1	Rear Roller
25	1	Power Cord	59	2	Roller Guard
26	1	Grommet	60	2	Roller Guard Screw
27	1	Circuit Breaker	61	1	Left Roller Bracket
28	3	Wire Clip	62	2	Long Handrail Bolt
29	1	Ground Washer	63	2	Handrail Nut
30	12	Plastic Fastener	64	1	Right Handrail w/Foam Grip
31	2	Swivel Shaft Bolt	65	1	Motor Hood w/Decal
32	2	Hitch Pin	66	1	Left Foot Rail
33	1	Right Foot Rail	#	1	Owner's Manual
34	1	Controller			

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover for information about ordering replacement parts.

# EXPLODED DRAWING—Model No. WL318020

Rev. 9/92

