

PART LIST—Model No. WL402021

Rev. 1/93

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Side Rail w/Foam Grip	45	2	Incline Leg Bolt
2	1	Side Rail Foam Grip	46	2	U-Nut
3	21	Screw	47	1	Right Foot Rail
4	1	Console Assembly	48	2	Swivel Shaft Bolt
5	1	Speed Control Knob	49	2	Endcap Screw
6	1	Clothes Clip	50	3	Adjustment Washer
7	1	Pulse Earclip	51	1	Front Roller Adjustment Bolt
8	1	Safety Key/Clip	52	4	Hood Anchor
9	1	Incline Switch	53	1	Safety Cover
10	1	Handrail Bolt	54	1	Front Roller/Pulley
11	1	Upright Post	55	1	Walking Belt
12	1	Choke	56	1	Walking Platform
13	1	Controller	57	1	Frame
14	1	Handrail w/Foam Grip	58	1	Cushion Knob
15	4	Hood Screw	59	1	Incline Board
16	1	Incline Motor	60	1	Incline Board Plate
17	1	Handrail Foam Grip	61	4	Plastic Stand-Off
18	1	Rod Cap	62	4	Wire Clip
19	1	Retainer Ring	63	6	Platform Screw
20	2	Cushion Knob Washer	64	1	Adjustment Rod
21	1	Motor Ground Strap	65	2	Cushion Cover
22	9	Flange Nut	66	2	Cushion Spring/Foot
23	1	Motor	67	1	Right Endcap
24	1	Pulley/Flywheel/Fan	68	1	Allen Wrench
25	4	Motor Isolator	69	1	Wrench Clip
26	1	Motor Mount Swivel Shaft	70	1	Rear Roller
27	1	J-Bolt	71	2	Rear Roller Adjustment Bolt
28	1	Tension Washer	72	2	Roller Spacer
29	1	Tension Spring	73	2	Roller Guard
30	5	Nut	74	2	Guard Screw
31	4	Locknut	75	1	Left Endcap
32	1	Incline Motor Spacer	76	1	Left Foot Rail
33	1	Upright Washer	77	1	Motor Hood w/Decal
34	1	Upright Knob	78	1	Side Rail Bolt
35	1	Pivot Bolt	79	1	Magnet
36	2	Flat Washer	80	1	Front Roller Insert
37	1	Ground Washer	81	1	Reed Switch/Sensor Wire
38	1	Power Cord	82	1	Belt
39	1	Grommet	83	1	Incline Motor Pin
40	1	Circuit Breaker	84	1	Cotter Pin
41	12	Plastic Fastener	85	4	Cushion Spring Bolt
42	2	Front Wheel	86	1	Incline Switch Bezel
43	3	Wheel Bolt/Incline Motor Bolt	#	1	Owner's Manual
44	1	Incline Leg			

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover for information about ordering replacement parts.

EXPLODED DRAWING—Model No. WL402021

Rev. 1/93

