

PART LIST—Model No. WL460021

Rev. 12/92

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Left Handrail	44	1	Walking Belt
2	2	Long Handrail Bolt	45	2	Foot Rail
3	1	Safety Key/Clip	46	1	Frame
4	1	Clothes Clip	47	8	Motor Mount Nut
5	1	Pulse Earclip	48	1	Motor Mount Plate
6	31	Small Screw	49	1	Motor Pivot Bolt
7	1	Console Plate	50	4	Motor Isolator
8	1	Console	51	1	Ground Strap
9	2	Short Wire Harness	52	1	Motor
10	1	Handrail Wire Harness	53	4	Hood Anchor Screw
11	2	Switch Bolt	54	1	Power Supply Board
12	2	Optic Switch	55	1	Mounting Plate
13	1	Incline Switch Bracket	56	4	Plastic Stand-Off
14	2	Switch Nut	57	1	Pulley/Flywheel/Fan
15	1	Incline Bracket Screw	58	1	Cushion Knob
16	1	Incline Optic Disk	59	4	Cushion Spring Bolt
17	6	Lock Nut	60	1	Cotter Pin
18	1	Incline Motor	61	1	Incline Motor Pin
19	3	Leg Bolt/Motor Bolt	62	2	Cushion Spring/Foot
20	1	Choke	63	1	Adjustment Rod
21	1	Controller	64	2	Cushion Cover
22	1	Right Handrail	65	1	Right Endcap
23	4	Hood Anchor	66	4	Endcap Screw
24	2	Ground Washer	67	1	Allen Wrench
25	1	Grommet	68	1	Wrench Clip
26	1	Power Cord	69	1	Rear Roller
27	1	Circuit Breaker	70	2	Rear Roller Spacer
28	2	Frame Endcap	71	1	Left Endcap
29	10	Belly Pan Pin	72	6	Platform Screw
30	1	Front Roller Adjustment Bolt	73	8	Foot Rail Washer
31	3	Roller Adjustment Washer	74	2	Rod Washer
32	2	Front Wheel	75	2	Retainer
33	2	Wheel Bolt	76	1	Rod Endcap
34	1	Incline Leg	77	6	Hood Screw/Foot Rail Screw
35	2	Belt Guide	78	1	Motor Hood w/Decal
36	4	Handrail Washer	79	4	Short Handrail Bolt
37	1	Belly Pan	80	1	Speed Optic Disk
38	1	Carriage Bolt	81	1	Belt
39	2	Flat Washer	82	2	Rear Roller Adjustment Bolt
40	1	Tension Spring	83	1	Speed Switch Bracket
41	5	Nut	84	1	Incline Control
42	1	Front Roller/Pulley	85	1	Bezel
43	1	Walking Platform	#	1	Owner's Manual

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover for information about ordering replacement parts.

Original Band is waxed.
EXPLODED DRAWING—Model No. WL460021

Rev. 12/92

