

PART LIST—Model No. WL505020

Rev. 9/92

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Left Handrail	43	1	Walking Platform
2	2	Long Handrail Bolt	44	1	Walking Belt
3	1	Safety Key/Clip	45	2	Foot Rail
4	1	Clothes Clip	46	1	Frame
5	1	Pulse Earclip	47	8	Motor Mount Nut
6	35	Small Screw	48	1	Motor Mount Plate
7	1	Console Plate	49	1	Motor Pivot Bolt
8	1	Console	50	4	Motor Isolator
9	2	Short Wire Harness	51	1	Ground Strap
10	1	Handrail Wire Harness	52	1	Motor
11	2	Switch Bolt	53	1	Power Supply Board
12	2	Optic Switch	54	1	Interface Board
13	1	Incline Switch Bracket	55	1	Mounting Plate
14	2	Switch Nut	56	4	Plastic Stand-Off
15	1	Incline Bracket Screw	57	1	Pulley/Flywheel/Fan
16	1	Incline Optic Disk	58	1	Cushion Knob
17	6	Lock Nut	59	4	Cushion Spring Bolt
18	1	Incline Motor	60	1	Cotter Pin
19	7	Short Handrail Bolt/Leg Bolt/Motor Bolt	61	1	Incline Motor Pin
20	2	Choke	62	2	Cushion Spring/Foot
21	1	Controller	63	1	Adjustment Rod
22	1	Right Handrail	64	2	Cushion Cover
23	4	Hood Anchor	65	1	Right Endcap
24	2	Ground Washer	66	4	Endcap Screw
25	1	Grommet	67	1	Allen Wrench
26	1	Power Cord	68	1	Wrench Clip
27	1	Circuit Breaker	69	1	Rear Roller
28	2	Frame Endcap	70	2	Rear Roller Spacer
29	10	Belly Pan Pin	71	1	Left Endcap
30	1	Front Roller Adjustment Bolt	72	6	Platform Screw
31	3	Roller Adjustment Washer	73	8	Foot Rail Washer
32	2	Front Wheel	74	2	Rod Washer
33	2	Wheel Bolt	75	2	Retainer
34	1	Incline Leg	76	1	Rod Endcap
35	2	Belt Guide	77	4	Hood Screw
36	4	Handrail Washer	78	1	Motor Hood w/Decal
37	1	Belly Pan	79	2	Foot Rail Screw
38	1	J-Bolt	80	1	Speed Optic Disk
39	1	J-Bolt Washer	81	1	Belt
40	1	Tension Spring	82	2	Rear Roller Adjustment Bolt
41	5	Nut	83	1	Speed Switch Bracket
42	1	Front Roller/Pulley	#	1	Owner's Manual

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover for information about ordering replacement parts.

111794 DWB.

EXPLODED DRAWING—Model No. WL505020

Rev. 9/92

