


Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Pulley Cover	31	1	Frame
2	6	Pulley	32	4	Pedal Bumper
3	4	Pulley Screw	33	2	Bumper Pin
4	1	Frame Arm	34	1	Magnet
5	2	Metal Bushing	35	1	Left Ski Pedal
6	3	Washer	36	2	Pedal Plate
7	2	Long Hex Bolt	37	2	Grip Pad
8	4	Locknut	38	13	Phillips Screw
9	2	Locking Knob	39	8	Pedal Wheel
10	1	Knob Spacer	40	8	Hex Bolt
11	1	Frame Upright	41	8	Nylon Locknut
12	2	Handgrip	42	2	Notched Bushing
13	1	Right Ski Pole	43	1	Pivot Shaft
14	2	Cord	44	1	Left Ski Pole
15	2	Button Head Bolt	45	1	Electronic Monitor
16	2	End Cap	46	2	Small Screw
17	6	Bushing	47	1	Console w/Pad
18	1	Hollow Bolt Assembly	48	2	Console Screw
19	1	Tension Bracket	49	1	Sensor Wire/Switch
20	1	Bracket Washer	50	1	Resistance Control Cable
21	1	Spring	51	1	Right Ski Pedal
22	2	End Cap Washer	52	2	Strap Bracket
23	1	Metal Spacer	53	4	Flat Washer
24	1	Phillips Bolt	54	1	Resistance Control Knob
25	4	Molded Foot	55	1	Acorn Nut
26	1	Resistance Strap	56	2	Fastener Strip
27	2	Strap Bolt	#	1	Owner's Manual
28	2	End Cap Spacer	#	1	Monitor Operation Guide
29	1	Strap Buckle			
30	2	Frame End Cap			

Note: “#” indicates a non-illustrated part.

See the back cover of this manual for part reordering instructions.

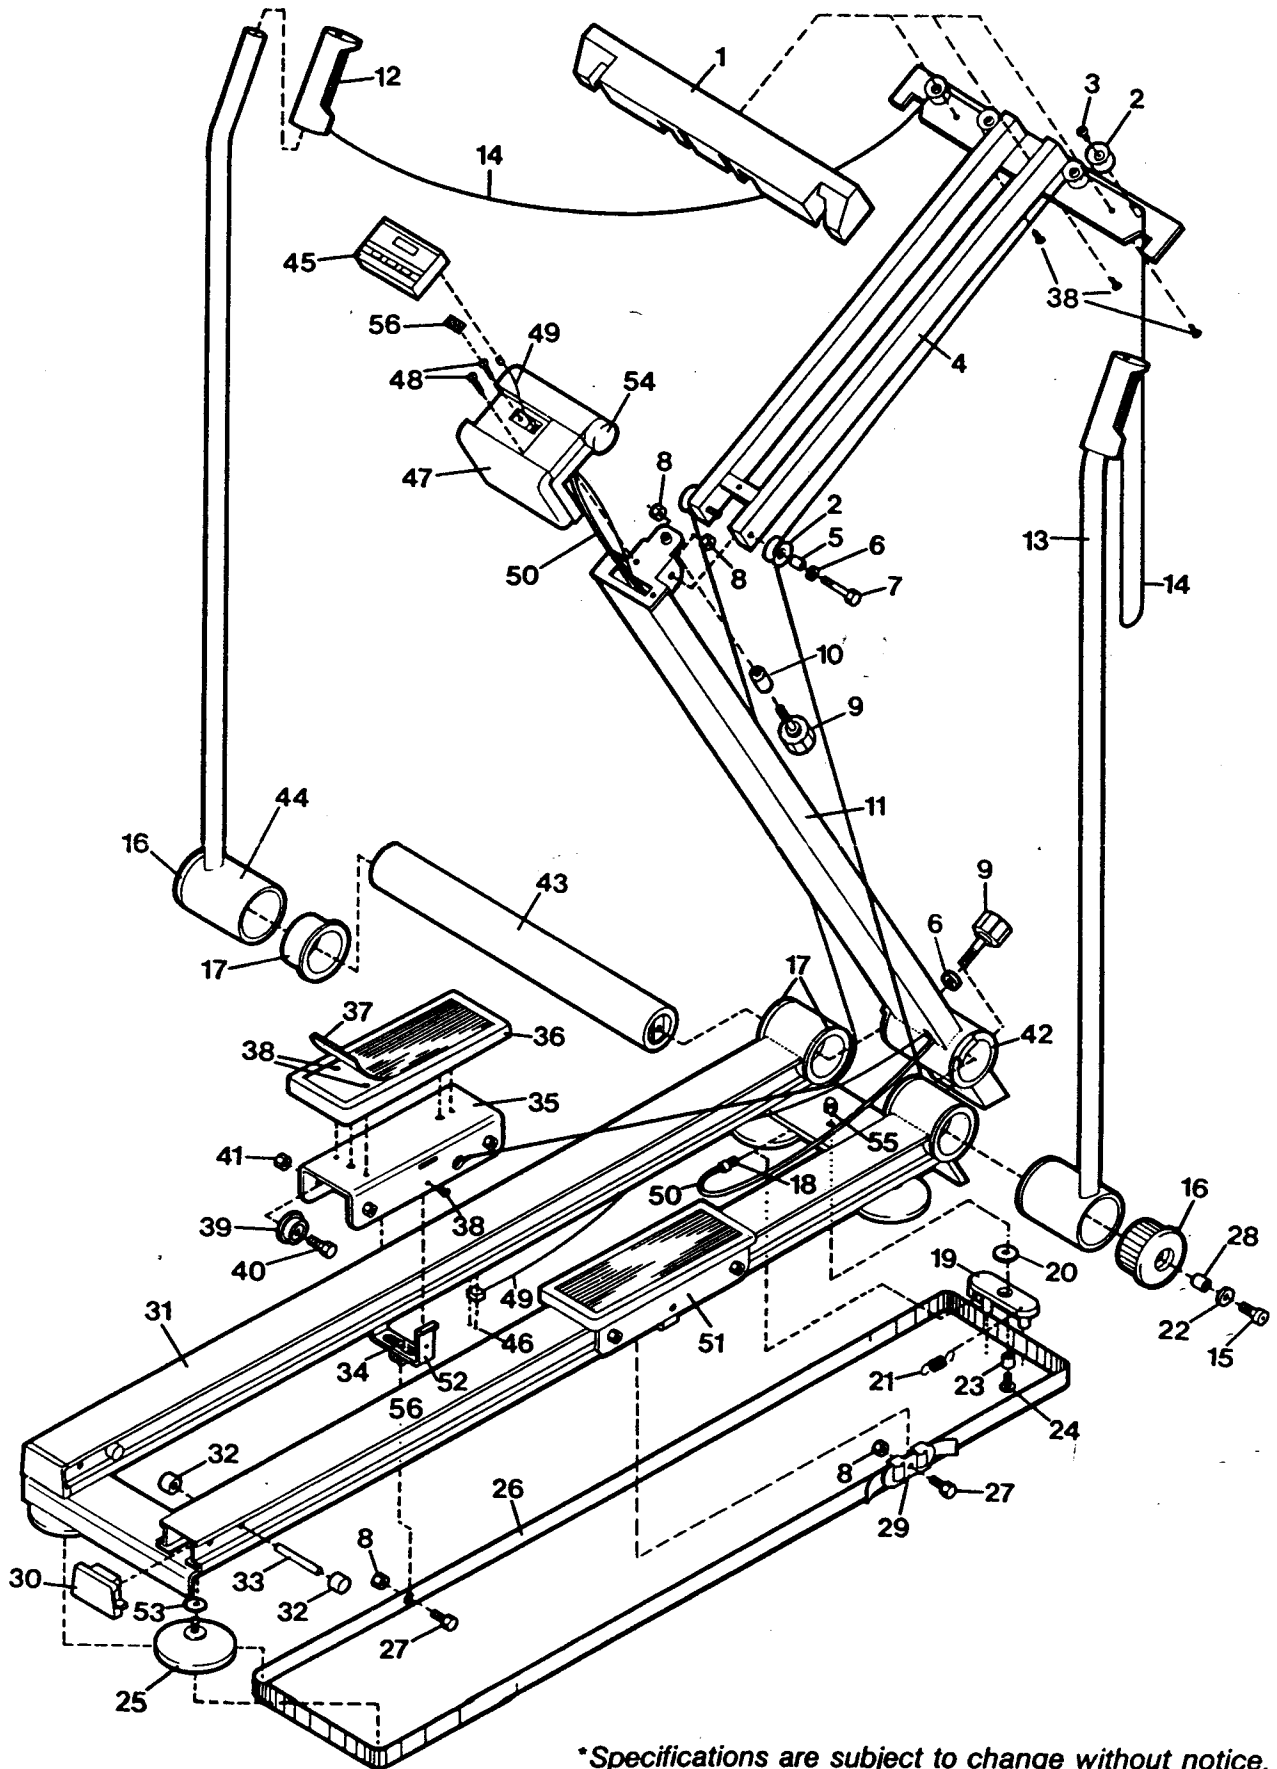

*Specifications are subject to change without notice.