

# PART LIST—Model No. WL611520


Rev. 9/92

Key No.	Qty.	Description	Key No.	Qty.	Description
1	2	Ski Rail	26	1	Upright
2	1	Rear Stabilizer	27	1	Console
3	4	Stabilizer Endcap	28	2	Foam Grip
4	1	Left Ski Pedal	29	1	Left Ski Pole Housing
5	2	Pulley	30	8	Resistance Pad
6	1	Ski Pedal Strap	31	1	Reed Switch Screw
7	2	Pulley Bolt	32	2	Adhesive Strip
8	12	Nut	33	2	Ski Pedal Cover
9	6	Screw	34	3	Pulley Washer
10	8	Stabilizer Screw	35	1	Reed Switch Wire
11	2	Ski Pole Endcap	36	8	Console Screw
12	2	Magnet Screw	37	2	Handlebar Foam Grip
13	2	Pulley Nut	38	2	Incline Leg
14	1	Magnet	39	4	Incline Leg Endcap
15	1	Console Wire	40	1	Upright Bracket
16	1	Strap Knob	41	1	Bracket Bolt
17	1	Front Stabilizer	42	1	Spring
18	2	Nylon Washer	43	2	Handlebar Endcap
19	1	Resistance Dial	44	1	Console Plate
20	1	Housing Cap	45	8	Ski Pedal Spacer
21	1	Long Bolt	46	1	Right Ski Pedal
22	8	Roller Bolt	47	2	Wire Clip
23	8	Ski Pedal Roller	48	1	Right Ski Pole Housing
24	1	Right Ski Pole	#	1	Owner's Manual
25	1	Left Ski Pole			

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover for information about ordering replacements parts.

# EXPLODED DRAWING—Model No. PF601520

Rev. 7/92

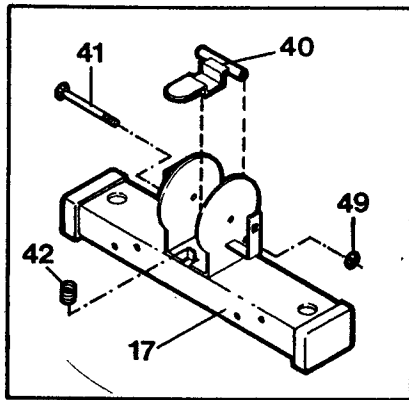

STABILIZER (17) FRONT VIEW

