

# PART LIST—Model No. WL730030

Rev. 10/93

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Console	24	2	Pedal Arm Axle
2	4	Screw	25	2	Link Arm Axle
3	1	Sensor Wire/Reed Switch	26	4	Link Arm Bushing
4	1	Reed Switch Screw	27	4	Link Arm Spacer
5	1	Right Handrail	28	6	Push Cap
6	1	Upright	29	6	Axle Cap
7	6	Nylock Nut	30	2	Bumper
8	1	Base	31	4	Handrail Screw
9	4	Endcap	32	1	Accessory Tray
10	2	Pedal Arm Spacer	33	2	"V" Bar Bolt
11	8	Pedal Arm Bushing	34	1	Left Handrail Base
12	2	Handrail Bushing	35	1	Right Handrail Base
13	4	Axle Screw	36	6	Washer
14	1	Magnet	37	4	Curved Washer
15	1	Right Pedal Arm	38	1	Stabilizer
16	1	Left Pedal Arm	39	2	Stabilizer Bolt
17	2	Pedal	40	2	Pedal Foot Pad
18	4	Resistance Cylinder Bushing	41	1	Magnet Retainer
19	2	Cylinder Spacer	42	1	"V" Bar
20	2	Resistance Cylinder	43	1	"V" Bar Foam Grip
21	2	Link Arm	44	2	Pulse Sensor
22	1	Left Handrail	45	1	Pulse Wire
23	2	Handrail Foam Grip	#	1	Owner's Manual

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

# EXPLODED DRAWING—Model No. WL730030

Rev. 10/93

116368

