



# GOLD'S GYM®


## XR 5.9

[www.workoutwarehouse.com](http://www.workoutwarehouse.com)

Model No. GGBE4869.3

Serial No. \_\_\_\_\_

Write the serial number in the space above for reference.

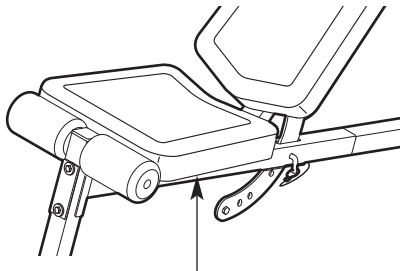

Serial Number Decal (under seat)

## QUESTIONS?

If you have questions, or if parts are damaged or missing, **DO NOT CONTACT THE STORE**; please contact Customer Care.

**IMPORTANT:** Please register this product (see the limited warranty on the back cover of this manual) before contacting Customer Care.

CALL TOLL-FREE:

**1-877-776-4777**


Mon.–Fri. 6 a.m.–6 p.m. MT

Sat. 8 a.m.–4 p.m. MT

ON THE WEB:

[www.workoutwarehouse.com](http://www.workoutwarehouse.com)

## USER'S MANUAL

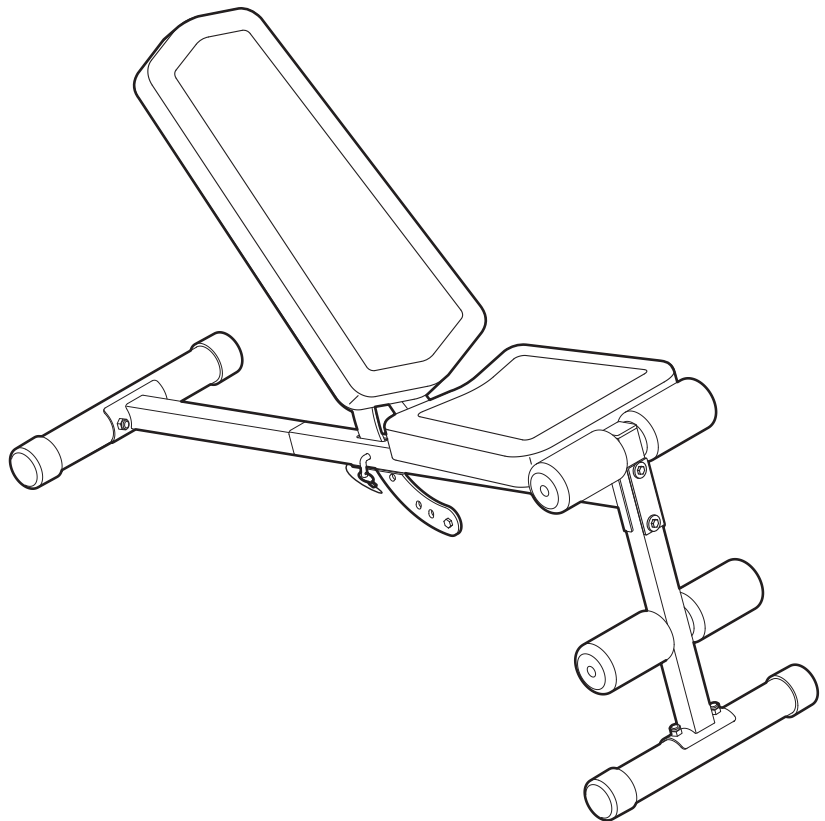

## ⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.




# TABLE OF CONTENTS

|                                      |            |
|--------------------------------------|------------|
| WARNING DECAL PLACEMENT .....        | 2          |
| IMPORTANT PRECAUTIONS .....          | 3          |
| BEFORE YOU BEGIN .....               | 4          |
| PART IDENTIFICATION CHART .....      | 5          |
| ASSEMBLY .....                       | 6          |
| ADJUSTMENT .....                     | 9          |
| EXERCISE GUIDELINES .....            | 10         |
| PART LIST AND EXPLODED DRAWING ..... | 11         |
| ORDERING REPLACEMENT PARTS .....     | Back Cover |
| LIMITED WARRANTY .....               | Back Cover |

## WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). **If a decal is missing or illegible, see the front cover of this manual and request a free replacement decal. Apply the decal in the location shown.** Note: The decal(s) may not be shown at actual size.

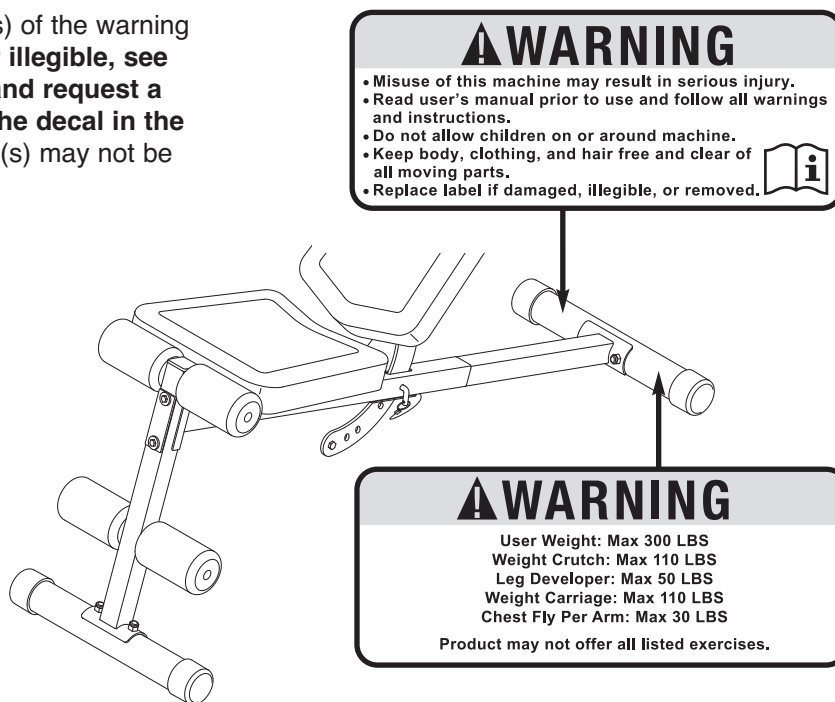

GOLD'S GYM is a registered trademark of Gold's Gym International, Inc. This product is manufactured and distributed under license from Gold's Gym International, Inc.

---

# IMPORTANT PRECAUTIONS

**⚠ WARNING:** To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your weight bench before using your weight bench. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
2. Read all instructions in this manual and all warnings on the weight bench before using the weight bench.
3. It is the responsibility of the owner to ensure that all users of the weight bench are adequately informed of all precautions.
4. The weight bench is intended for home use only. Do not use the weight bench in any commercial, rental, or institutional setting.
5. Keep the weight bench indoors, away from moisture and dust. Place the weight bench on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is enough clearance around the weight bench to mount, dismount, and use the weight bench.
6. Inspect and properly tighten all parts regularly. Replace any worn parts immediately.
7. Keep children under age 12 and pets away from the weight bench at all times.
8. The weight bench is designed to support a maximum user weight of 300 lbs. (136 kg) and a maximum total weight of 410 lbs. (186 kg). Do not use more than 110 lbs. (50 kg) of weight with the weight bench. Note: The weight bench does not include weights.
9. Always wear athletic shoes for foot protection while using the weight bench.
10. Always make sure that the locking pin is fully inserted into the frame and into the pivot bracket before you use the weight bench.
11. Over exercising may result in serious injury or death. If you feel faint or if you experience pain while exercising, stop immediately and cool down.


# BEFORE YOU BEGIN

Thank you for selecting the versatile GOLD'S GYM® XR 5.9 weight bench. The XR 5.9 weight bench is designed to help develop the major muscle groups of the upper body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the weight bench will help you to achieve the specific results you want.

**For your benefit, read this manual carefully before using the weight bench.** If you have questions after


reading this manual, please see the front cover of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please look at the drawing below and familiarize yourself with the parts that are labeled.

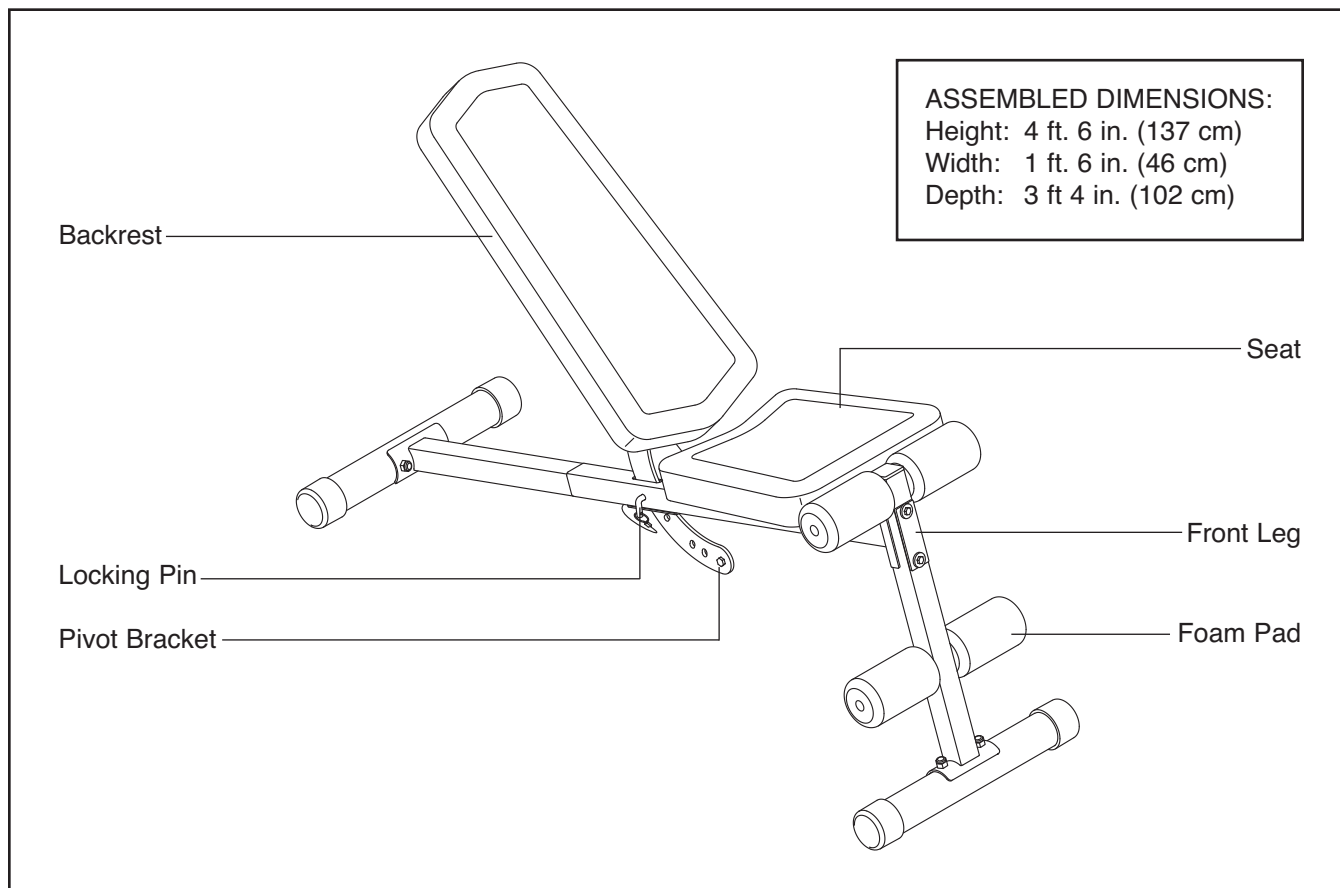

# PART IDENTIFICATION CHART

Refer to the drawings below to identify small parts used in assembly. The number in parentheses by each drawing is the key number of the part, from the PART LIST near the end of this manual. **IMPORTANT: If you cannot find a part in the hardware kit, check to see if it has been preassembled.**

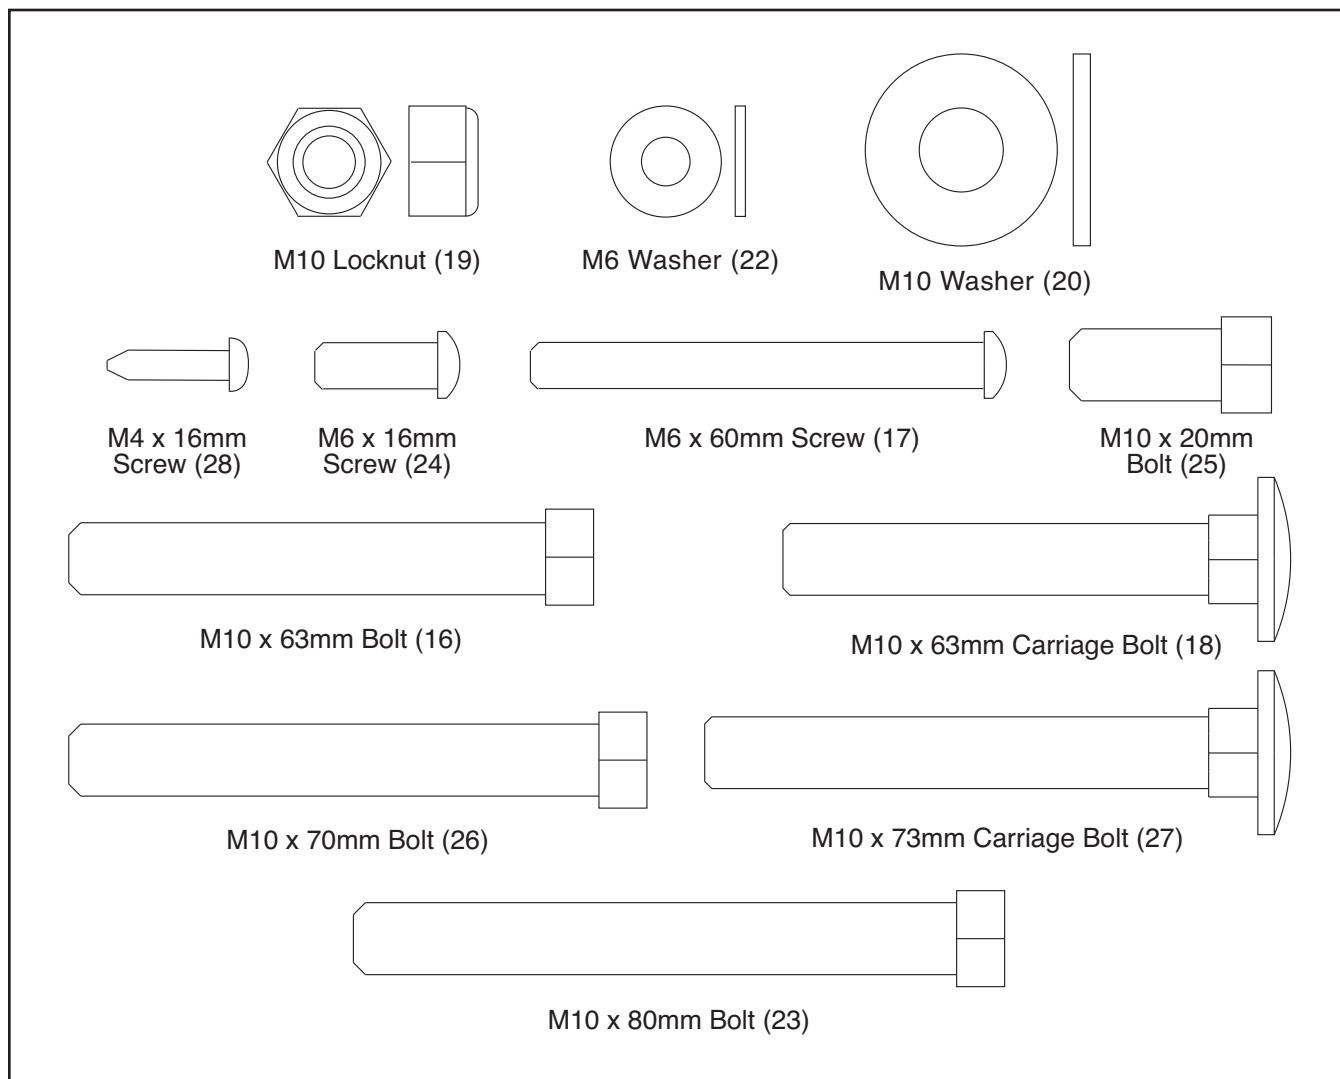


# ASSEMBLY


- To hire an authorized service technician to assemble the weight bench in your home, call 1-800-445-2480.
- Assembly requires two persons.
- Because of its size and weight, assemble the weight bench in the location where it will be used. Make sure that there is enough clearance to walk around the weight bench as you assemble it.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until you complete all assembly steps.

- To identify small parts, see page 5.
- The following tools (not included) may be required for assembly:

two adjustable wrenches 

 one rubber mallet 

one standard screwdriver 

 
one Phillips screwdriver 

Assembly will be more convenient if you have a socket set, a set of open-end or closed-end wrenches, or a set of ratchet wrenches.


1. To make assembly easier, read the assembly tips in the box above.

Identify the Front Stabilizer (29), which is larger than the Rear Stabilizer (not shown).

Attach the Front Stabilizer (29) to the Front Leg (2) with two M10 x 73mm Carriage Bolts (27) and two M10 Locknuts (19). **Do not tighten the Locknuts yet.**

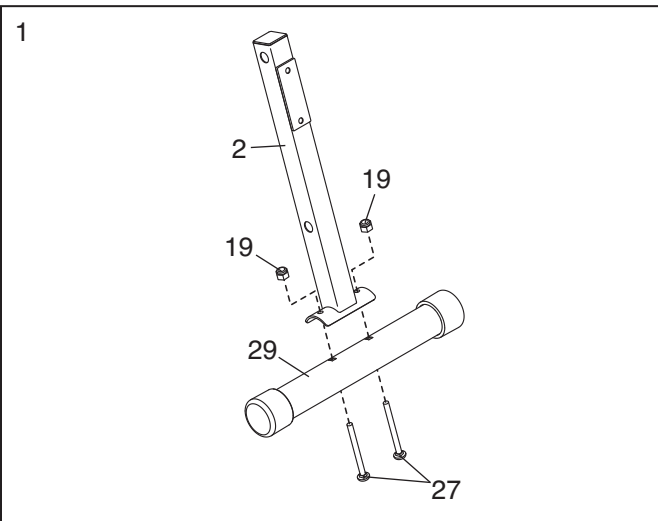


2. Attach the Front Leg (2) to the Frame (1) with two M10 x 63mm Bolts (16) and two M10 Locknuts (19). **Do not tighten the Locknuts yet.**

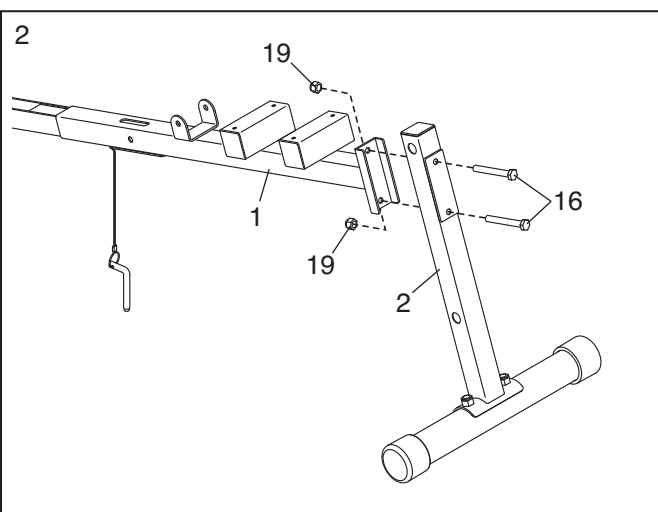


3. Orient the Rear Stabilizer (4) so that the warning decals face upward. Then, orient the Rear Leg (3) so that the indicated holes face downward.

Attach the Rear Stabilizer (4) to the Rear Leg (3) with two M10 x 63mm Carriage Bolts (18) and two M10 Locknuts (19). **Do not tighten the Locknuts yet.**

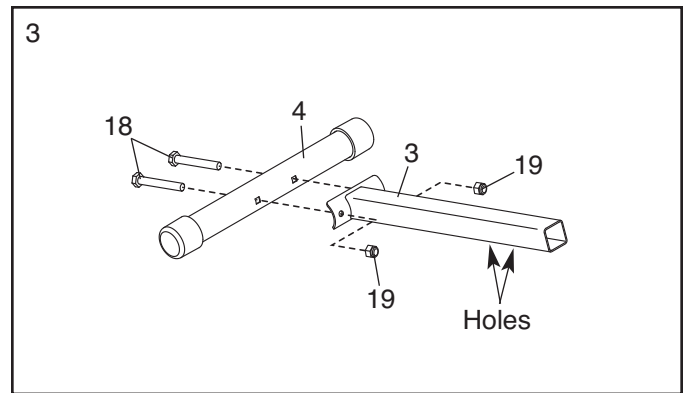

4. Attach the Rear Leg (3) to the Frame (1) with two M10 x 20mm Bolts (25) and two M10 Washers (20).


**See steps 1–3. Tighten the M10 Locknuts (19).**

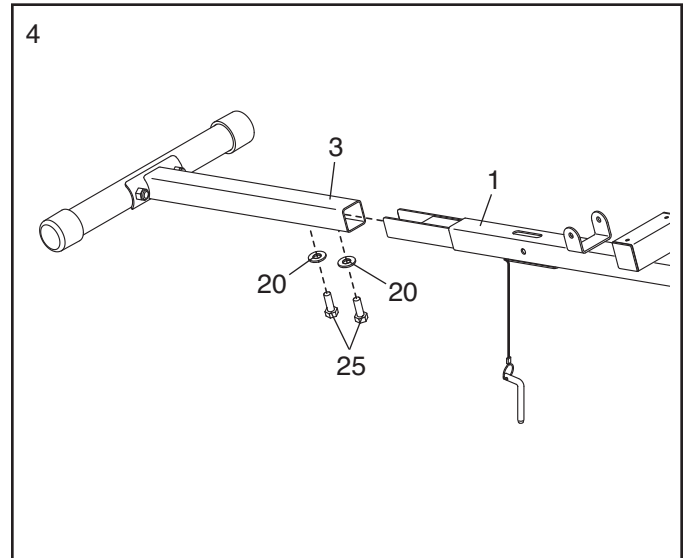


5. Insert the two Pad Tubes (10) into the Front Leg (2).

Wet the ends of the Pad Tubes (10) with soapy water, and slide two Foam Pads (9) onto each Pad Tube.

Then, press two Pad Caps (11) into each Pad Tube (10).

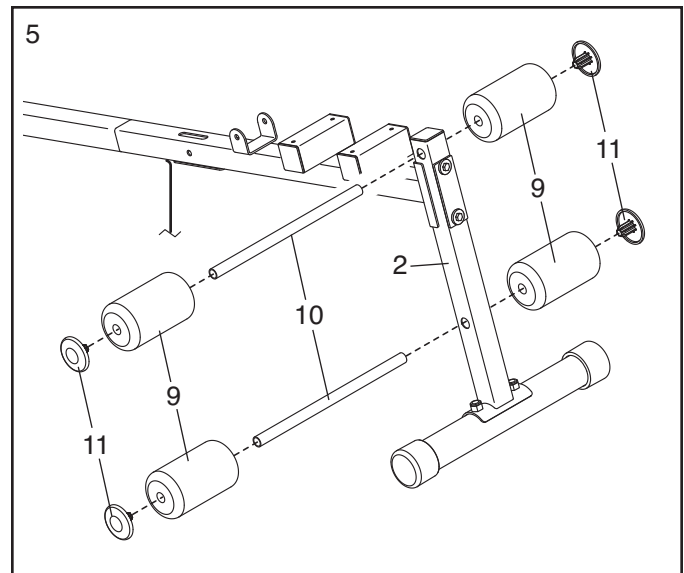

6. Attach the Pivot Bracket (6) to the Backrest Frame (5) with two M10 x 70mm Bolts (26) and two M10 Locknuts (19). **Do not tighten the Locknuts yet.**

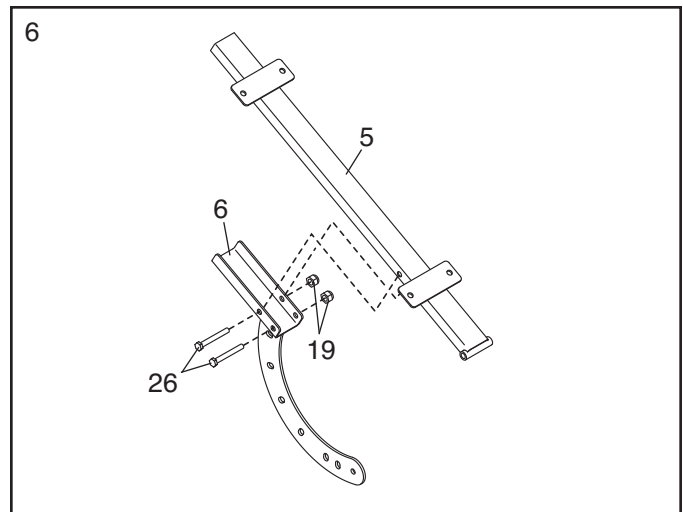


7. Apply some of the included grease to an M10 x 80mm Bolt (23).

Insert the Pivot Bracket (6) into the slot in the Frame (1). Attach the Backrest Frame (5) to the Frame with the M10 x 80mm Bolt (23) and an M10 Locknut (19). **Do not overtighten the Locknut; the Backrest Frame must pivot easily.**


Then, attach an M10 x 20mm Bolt (25) and an M10 Locknut (19) to the hole in the end of the Pivot Bracket (6).

**See step 6. Tighten the M10 Locknuts (19).**

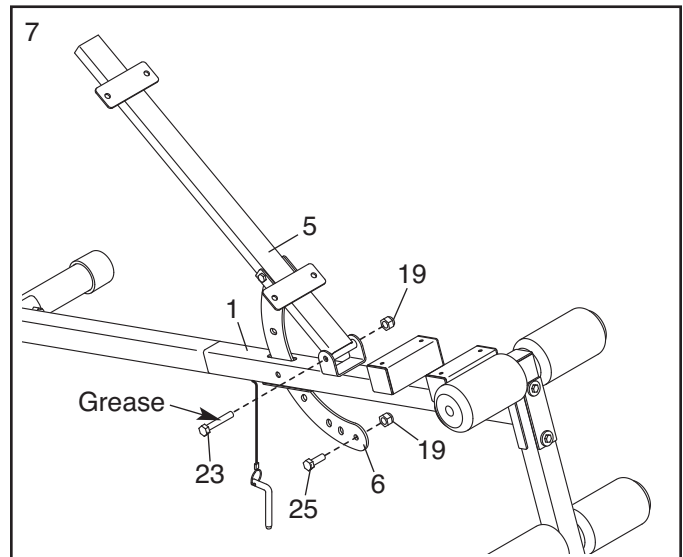


8. Orient the Backrest (7) as shown. Attach the Backrest to the Backrest Frame (5) with four M6 Washers (22) and four M6 x 16mm Screws (24).

**See the inset drawing.** Insert the Locking Pin (21) into the Frame (1) and into an adjustment hole in the Pivot Bracket (6).

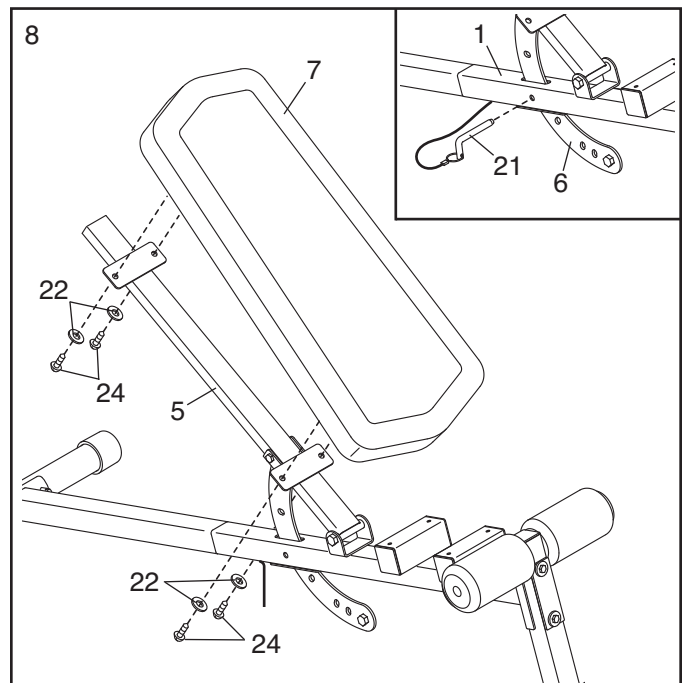

9. Attach the Seat (8) to the Frame (1) with four M6 Washers (22) and four M6 x 60mm Screws (17).

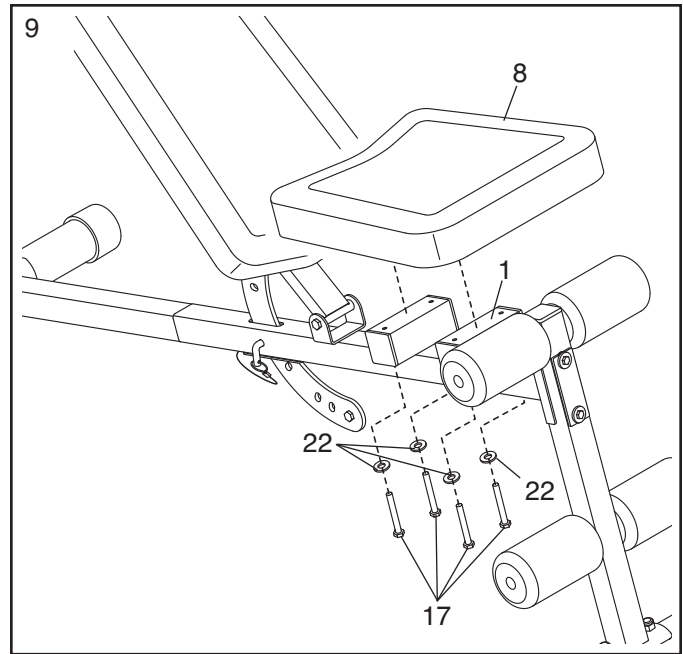

10. Make sure that all parts are properly tightened before you use the weight bench.

## ADJUSTMENT

See the EXERCISE GUIDELINES on page 10 for important exercise information, and refer to the accompanying exercise guide to see the correct form for several exercises.


Make sure that all parts are properly tightened each time the weight bench is used. Replace any worn parts immediately. The weight bench can be cleaned with a damp cloth and a mild, non-abrasive detergent; **do not use solvents to clean the weight bench.**

### ADJUSTING THE BACKREST

The Backrest (7) can be used in a declined position, a level position, or any of four inclined positions.

To adjust the Backrest (7), first remove the Locking Pin (21) from the Frame (1). Then, pivot the Backrest to the desired position, and reinsert the Locking Pin into the Frame and into an adjustment hole in the Pivot Bracket (6).

**⚠ WARNING:** Make sure that the Locking Pin (21) is fully inserted into the Frame (1) and into the Pivot Bracket (6).

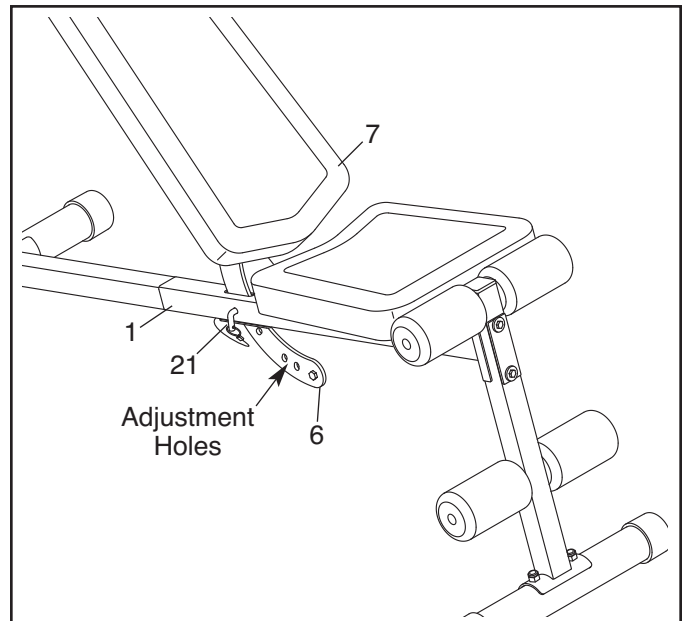

---

# EXERCISE GUIDELINES

## FOUR TYPES OF STRENGTH WORKOUTS

Note: A “repetition” is one complete cycle of an exercise, such as one sit-up. A “set” is a series of repetitions.

**Muscle Building**—Work your muscles near their maximum capacity and progressively increase the intensity of your exercise. Adjust the intensity level of an individual exercise as follows:

- Change the amount of resistance used.
- Change the number of repetitions or sets performed.

Use your own judgment to determine the amount of resistance that is right for you. Begin with 3 sets of 8 repetitions for each exercise you perform. Rest for 3 minutes after each set. When you can complete 3 sets of 12 repetitions without difficulty, increase the amount of resistance.

**Toning**—Tone your muscles by working them to a moderate percentage of their capacity. Select a moderate amount of resistance and increase the number of repetitions in each set. Complete as many sets of 15 to 20 repetitions as possible without discomfort. Rest for 1 minute after each set. Work your muscles by completing more sets rather than by using high amounts of resistance.

**Weight Loss**—To lose weight, use a low amount of resistance and increase the number of repetitions in each set. Exercise for 20 to 30 minutes, resting for a maximum of 30 seconds between sets.

**Cross Training**—Combine strength training and aerobic exercise by following this type of program:

- Strength training workouts on Monday, Wednesday, and Friday.
- 20 to 30 minutes of aerobic exercise on Tuesday and Thursday.
- One full day of rest each week to give your body time to regenerate.

## WORKOUT GUIDELINES

Familiarize yourself with the equipment and learn the proper form for each exercise. Use your own judgment to determine the appropriate length of time for each

workout, and the numbers of repetitions and sets to complete. Progress at your own pace and be sensitive to your body’s signals. Follow each workout with at least one day of rest.

**Warming Up**—Start with 5 to 10 minutes of stretching and light exercise. A warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

**Working Out**—Include 6 to 10 different exercises in each workout. Select exercises for every major muscle group, emphasizing areas that you want to develop. To give balance and variety to your workouts, vary the exercises from workout to workout.

**Cooling Down**—Finish with 5 to 10 minutes of stretching. Stretching increases the flexibility of your muscles and helps to prevent post-exercise problems.

## EXERCISE FORM

Move through the full range of motion for each exercise and move only the appropriate parts of the body. Perform the repetitions in each set smoothly and without pausing. The exertion stage of each repetition should last about half as long as the return stage. Exhale during the exertion stage of each repetition and inhale during the return stroke. Never hold your breath.

 
Rest for a short period of time after each set:

- Muscle Building—Rest for three minutes after each set.
- Toning—Rest for one minute after each set.
- Weight Loss—Rest for 30 seconds after each set.

## STAYING MOTIVATED

For motivation, keep a record of each workout. Write the date, the exercises performed, the resistance used, and the numbers of sets and repetitions completed. Record your weight and key body measurements once a month. To achieve good results, make exercise a regular and enjoyable part of your life.

| Key No. | Qty. | Description           | Key No. | Qty. | Description              |
|---------|------|-----------------------|---------|------|--------------------------|
| 1       | 1    | Frame                 | 18      | 2    | M10 x 63mm Carriage Bolt |
| 2       | 1    | Front Leg             | 19      | 10   | M10 Locknut              |
| 3       | 1    | Rear Leg              | 20      | 2    | M10 Washer               |
| 4       | 1    | Rear Stabilizer       | 21      | 1    | Locking Pin              |
| 5       | 1    | Backrest Frame        | 22      | 8    | M6 Washer                |
| 6       | 1    | Pivot Bracket         | 23      | 1    | M10 x 80mm Bolt          |
| 7       | 1    | Backrest              | 24      | 4    | M6 x 16mm Bolt           |
| 8       | 1    | Seat                  | 25      | 3    | M10 x 20mm Bolt          |
| 9       | 4    | Foam Pad              | 26      | 2    | M10 x 70mm Bolt          |
| 10      | 2    | Pad Tube              | 27      | 2    | M10 X 73mm Carriage Bolt |
| 11      | 4    | Pad Cap               | 28      | 1    | M4 x 16mm Screw          |
| 12      | 2    | Rear Stabilizer Cap   | 29      | 1    | Front Stabilizer         |
| 13      | 4    | 50mm Square Inner Cap | 30      | 2    | Front Stabilizer Cap     |
| 14      | 1    | 45mm Square Inner Cap | *       | —    | User's Manual            |
| 15      | 1    | 25mm x 50mm Inner Cap | *       | —    | Exercise Guide           |
| 16      | 2    | M10 x 63mm Bolt       | *       | —    | Grease Packet            |
| 17      | 4    | M6 x 60mm Bolt        |         |      |                          |



---

## ORDERING REPLACEMENT PARTS

To order replacement parts, please see the front cover of this manual. To help us assist you, be prepared to provide the following information when contacting us:

- the model number and serial number of the product (see the front cover of this manual)
- the name of the product (see the front cover of this manual)
- the key number and description of the replacement part(s) (see the PART LIST and the EXPLODED DRAWING near the end of this manual)

### LIMITED WARRANTY

**IMPORTANT: You must register this product within 30 days of the purchase date to avoid added fees for service needed under warranty. Go to [www.workoutwarehouse.com/registration](http://www.workoutwarehouse.com/registration).**

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase.

This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to repairing or replacing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be preauthorized by ICON. If the product is shipped to a service center, freight charges to and from the service center will be the customer's responsibility. For replacement parts shipped while the product is under warranty, the customer will be responsible for a minimal handling charge. For in-home service, the customer will be responsible for a minimal trip charge. This warranty does not extend to any damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, or repairs not provided by an ICON authorized service center; to products used for commercial or rental purposes or as store display models; or to products transported or purchased outside the US. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or costs of removal or installation; or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties, and any implied warranties of merchantability or fitness for a particular purpose are limited in their scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

**ICON Health & Fitness, Inc., 1500 S. 1000 W., Logan, UT 84321-9813**