

GOLD'S GYM®


XR 8.1

getgoldsgym.com

Model No. GGBE99517.0

Serial No. _____

 Write the serial number in the space above for reference.

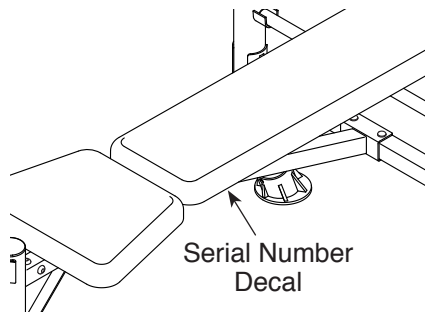

ACTIVATE YOUR WARRANTY

To register your product and activate your warranty today, go to my.getgoldsgym.com.

CUSTOMER CARE

For service at any time, go to getgoldsgym.com/service.

Or call 1-877-776-4777
Mon.–Fri. 6 a.m.–6 p.m. MT
Sat. 8 a.m.–12 p.m. MT

Please do not contact the store.

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

USER'S MANUAL


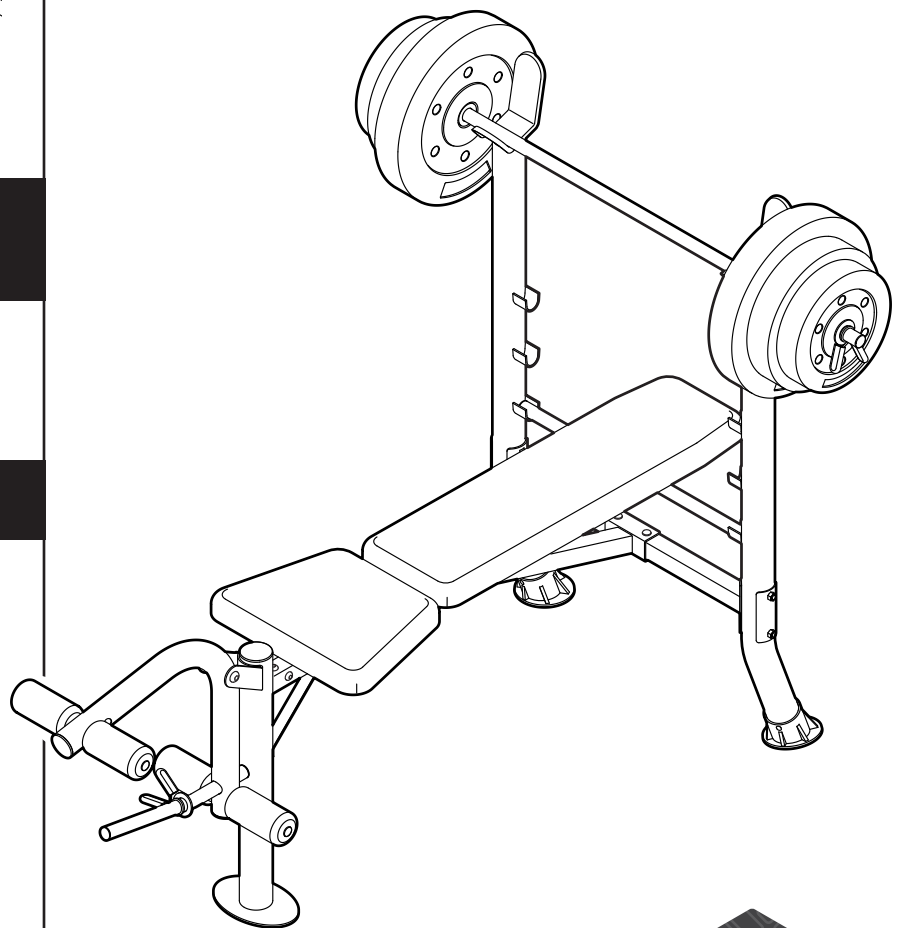 


TABLE OF CONTENTS

WARNING DECAL PLACEMENT	2
IMPORTANT PRECAUTIONS	3
BEFORE YOU BEGIN	5
PART IDENTIFICATION CHART	6
ASSEMBLY	7
ADJUSTMENT AND MAINTENANCE	13
PART LIST	18
EXPLODED DRAWING	19
ORDERING REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). If a decal is missing or illegible, see the front cover of this manual and request a free replacement decal. Apply the decal in the location shown. Note: The decal(s) may not be shown at actual size.

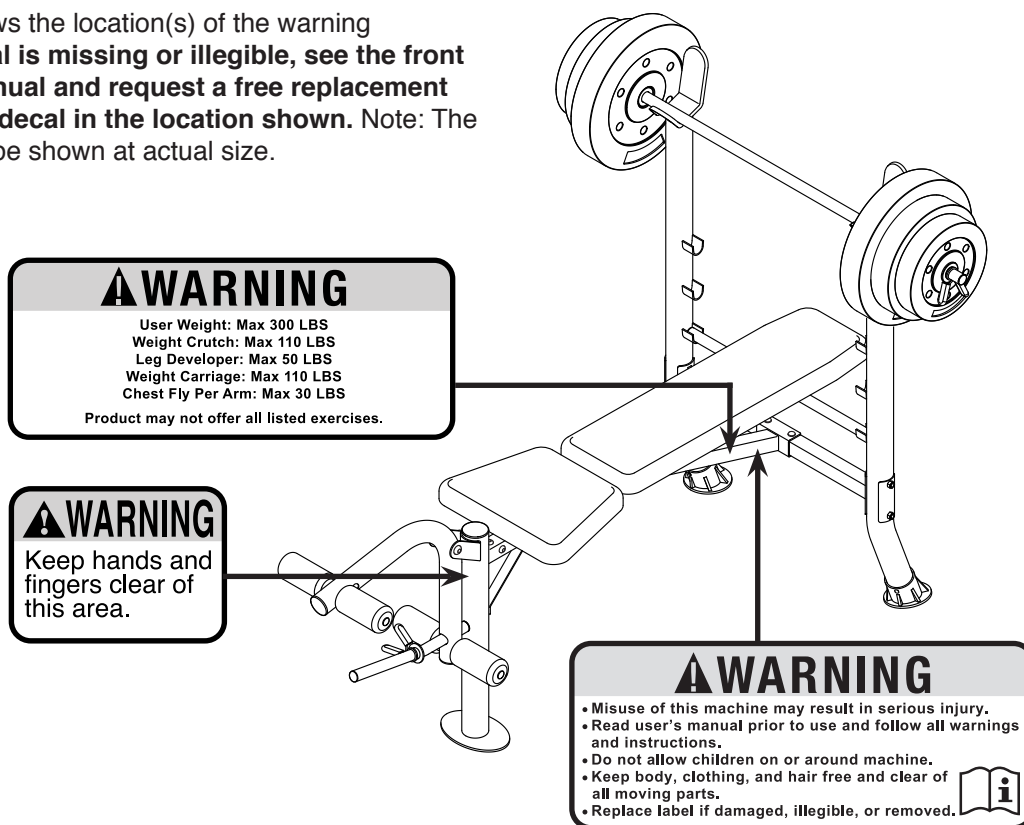 


IMPORTANT PRECAUTIONS

⚠️ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on the weight bench before using the weight bench. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. It is the responsibility of the owner to ensure that all users of the weight bench are adequately informed of all precautions.
2. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
3. The weight bench is not intended for use by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they are given supervision or instruction about use of the weight bench by someone responsible for their safety.
4. Use the weight bench only as described in this manual.
5. The weight bench is intended for home use only. Do not use the weight bench in any commercial, rental, or institutional setting.
6. Keep the weight bench indoors, away from moisture and dust. Do not put the weight bench in a garage or covered patio, or near water.
7. Place the weight bench on a level surface, with enough clearance around the weight bench to mount, dismount, and use the weight bench. To protect the floor or carpet from damage, place a mat under the weight bench.
8. Inspect and properly tighten all parts each time the weight bench is used. Replace any worn parts immediately.
9. Keep children under age 13 and pets away from the weight bench at all times.
10. Keep hands and feet away from moving parts.
11. Always wear athletic shoes for foot protection while using the weight bench.
12. The weight bench is designed to support a maximum user weight of 300 lbs. (136 kg) and a maximum total weight of 410 lbs. (186 kg). Do not place more than 110 lbs. (50 kg), including a barbell and weights, on the weight rests. Do not place more than 50 lbs. (23 kg) on the leg lever.
13. Do not use a barbell that is longer than 5 ft. (1.5 m) with the weight bench.
14. Always place the same amount of weight on both ends of the barbell. While adding or removing weights, always keep some weight on both ends of the barbell to prevent the barbell from tipping. Always secure weights with the spring collars.
15. Before using the leg lever, place the barbell with the same amount of weight on the weight rests to balance the bench.
16. Before using the backrest, make sure that the backrest support is inserted fully into the uprights.
17. Always exercise with a partner. Your partner should be ready to catch the barbell if you cannot complete a repetition.
18. Over exercising may result in serious injury or death. If you feel faint, if you become short of breath, or if you experience pain while exercising, stop immediately and cool down.

PROTECT

 YOUR FITNESS EQUIPMENT
WITH AN EXTENDED SERVICE PLAN

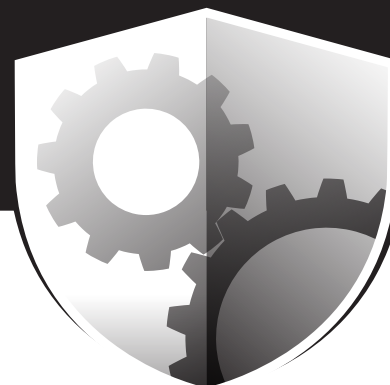

Your new fitness equipment is not an ordinary purchase; it is an investment in your health and well being for years to come.

As the leading provider of manufacturer's extended service plans, ICON strives to protect your equipment and your future.

Please review the following service plans and find one that best fits your needs.

PREVENTIVE MAINTENANCE SERVICE PLANS

Equipment Price	3-Year Plan	5-Year Plan
\$0.00 to \$1000.00	\$199.99	\$289.99
\$1001.00 to \$1500.00	\$259.99	\$379.99
\$1501.00 to \$2500.00	\$339.99	\$489.99
(Bikes/Systems Only) \$0.00 to \$2500.00	\$139.99	NA

Features:

- Includes an annual preventive maintenance and performance check at your convenience
- Unlimited in-home repairs; no shipping required
- Covers parts and labor on all manufacturer's defects, as well as wear and tear on parts
- Up to 5 years of coverage available

STANDARD SERVICE PLANS

Equipment Price	1-Year Plan	2-Year Plan	3-Year Plan
\$0.00 to \$300.00	\$29.99	\$39.99	\$59.99
\$301.00 to \$1000.00	\$89.99	\$119.99	\$149.99
\$1001.00 to \$2000.00	\$109.99	\$139.99	\$179.99
\$2001.00 to \$3000.00	\$179.99	\$209.99	\$239.99

Features:

- Unlimited in-home repairs; no shipping required
- Covers parts and labor on all manufacturer's defects, as well as wear and tear on parts
- Up to 3 years of coverage available

To protect your fitness equipment today, please
call Customer Care at **1-800-677-3838.**
Or, visit us online at **www.utserv.com.**



 
BEFORE YOU BEGIN

Thank you for selecting the GOLD'S GYM® XR 8.1 weight bench. The versatile XR 8.1 weight bench is designed to develop every major muscle group of the body. Whether your goal is to have a shapely figure, dramatic muscle size and strength, or a healthier cardiovascular system, the weight bench will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the weight bench. If you have questions after


reading this manual, please see the front cover of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the labeled parts.

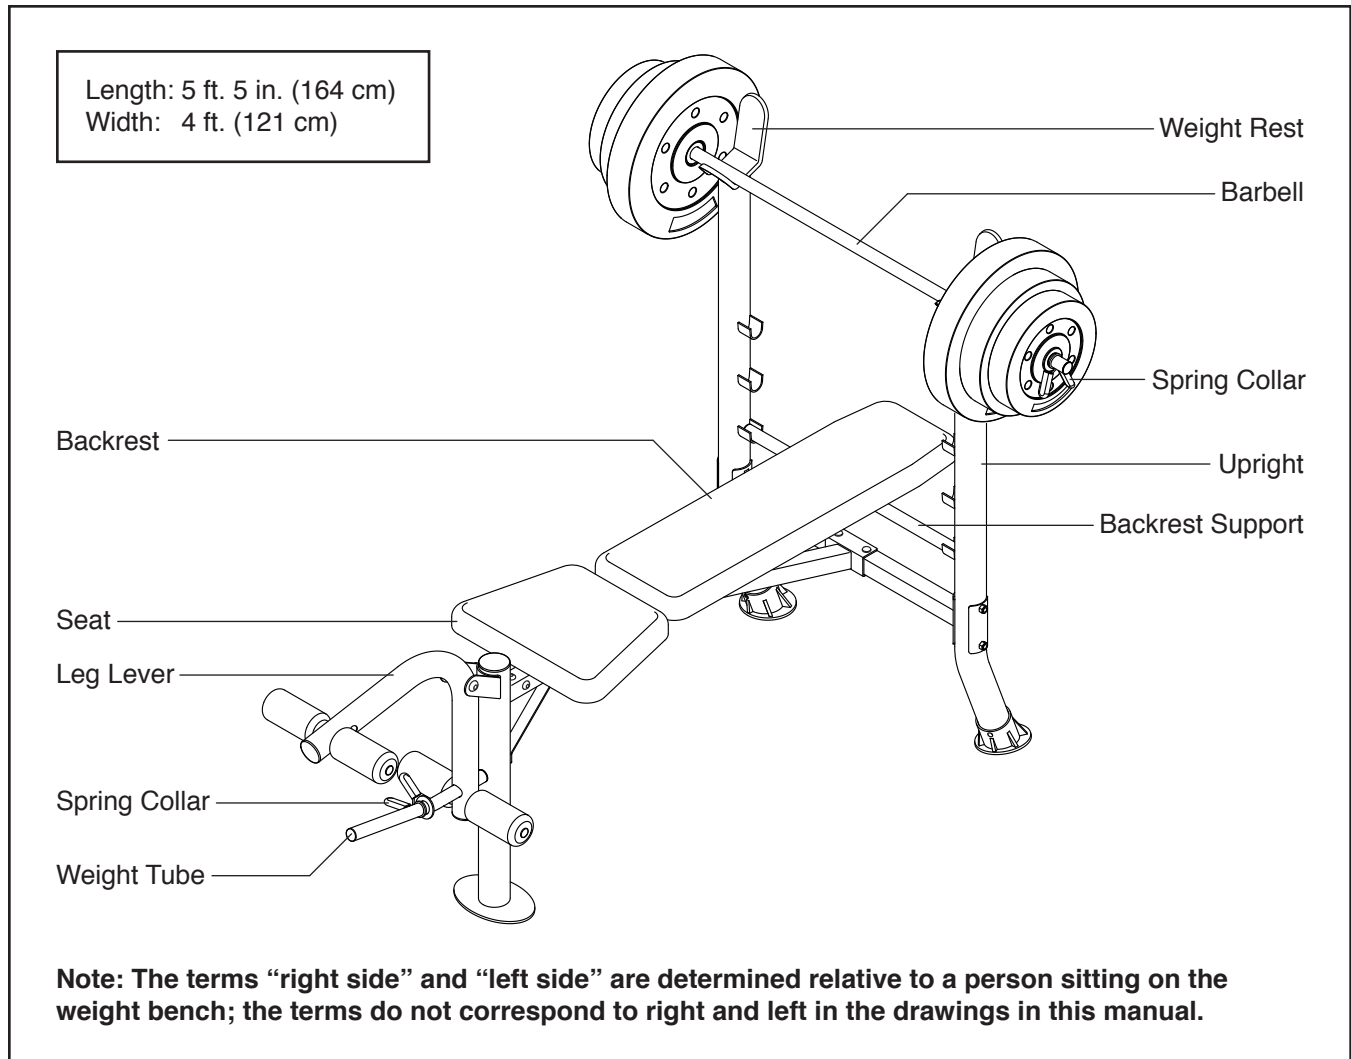


PART IDENTIFICATION CHART

 
Use the drawings below to identify the small parts needed for assembly. The number in parentheses below each drawing is the key number of the part, from the PART LIST near the end of this manual. **Note: If a part is not in the hardware kit, check to see if it has been preassembled. Extra hardware may be included.**




M8 Locknut
(33)–1

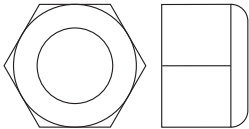 


M10 Locknut
(17)–6

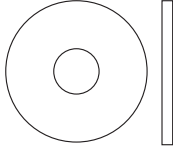 


M6 Washer
(26)–8

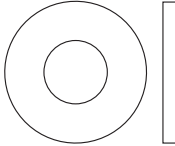 


M8 Washer
(16)–3

 


M4 x 19mm
Screw (27)–4

 


M6 x 40mm Screw
(30)–8

 


M8 x 15mm
Screw (19)–3

 

M8 x 75mm Bolt (32)–1

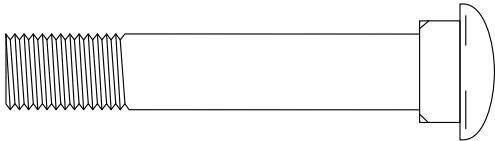 

M10 x 60mm Carriage Bolt (13)–2

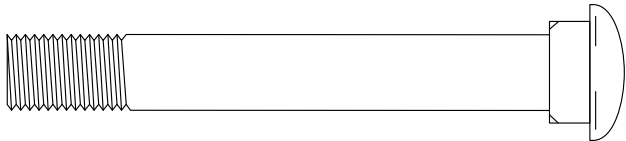 

M10 x 77mm Carriage Bolt (18)–4

ASSEMBLY

- To hire an authorized service technician to assemble this product, call 1-800-445-2480.
- Assembly requires two persons.
- Because of its weight and size, assemble the weight bench in the location where it will be used. Make sure that there is enough clearance to walk around the weight bench as you assemble it.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until you finish all assembly steps.

- To identify small parts, see page 6.
- In addition to the included tool(s), assembly requires the following tools:

one adjustable wrench



one Phillips screwdriver



 
Assembly may be easier if you have a set of wrenches. To avoid damaging parts, do not use power tools.

1. **Go to my.getgoldsgym.com on your computer and register your product.**

- documents your ownership
- activates your warranty
- ensures priority customer support if assistance is ever needed

Note: If you do not have internet access, call Customer Care (see the front cover of this manual) and register your product.


1

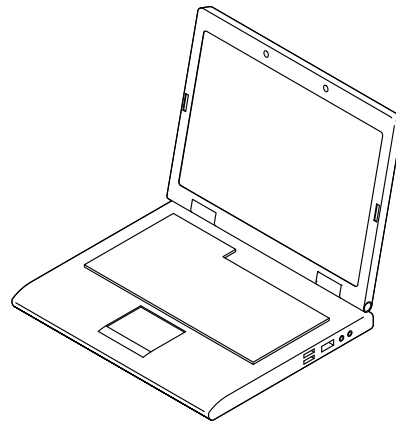

2. Identify the Right and Left Uprights (1, 14), and orient them as shown.


Attach an Upright Foot (15) to the Left Upright (14) with an M4 x 19mm Screw (27).

 Attach the other Upright Foot (15) to the Right Upright (1) in the same way.

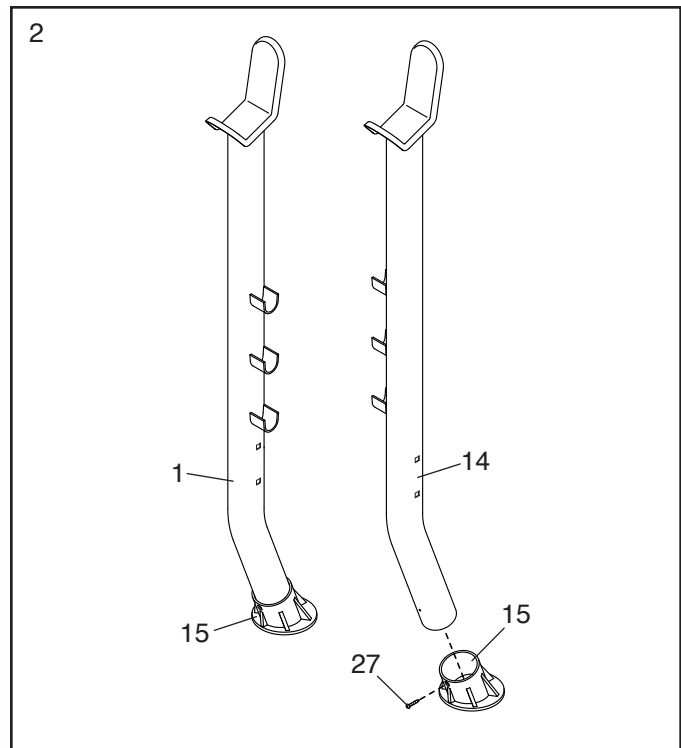


3. Attach the Crossbar (3) to the Left Upright (14) with two M10 x 77mm Carriage Bolts (18), an Upright Bracket (22), and two M10 Locknuts (17); **do not tighten the Locknuts yet.**

 Attach the Crossbar (3) to the Right Upright (1) in the same way.

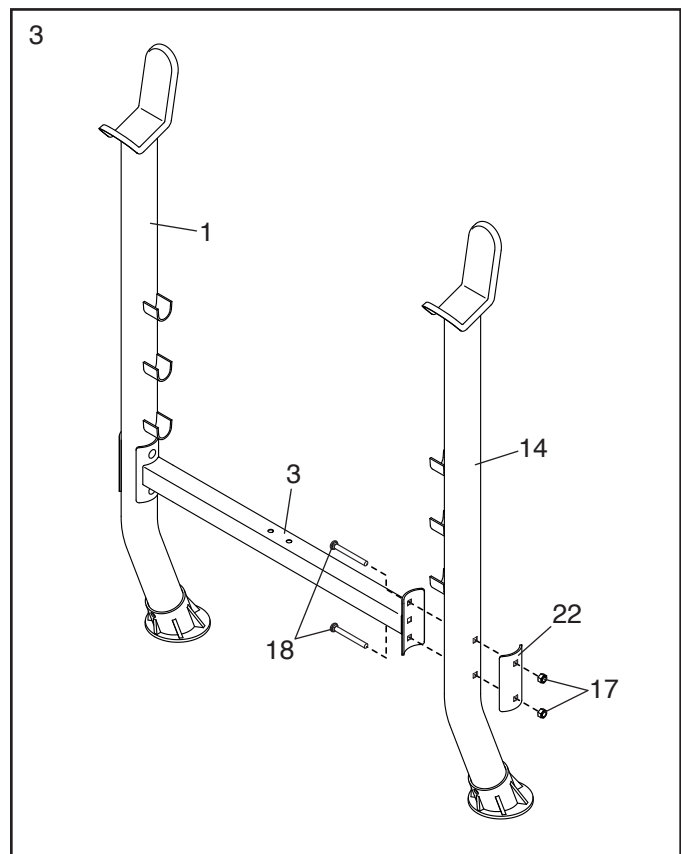


4. Attach the Front Leg (8) to the Frame (2) with three M8 x 15mm Screws (19) and three M8 Washers (16); **do not tighten the Screws yet.**

 See the inset drawing. Attach the Frame Bracket (36) to the Frame (2) and to the Front Leg (8) with two M4 x 19mm Screws (27); **do not tighten the Screws yet.**

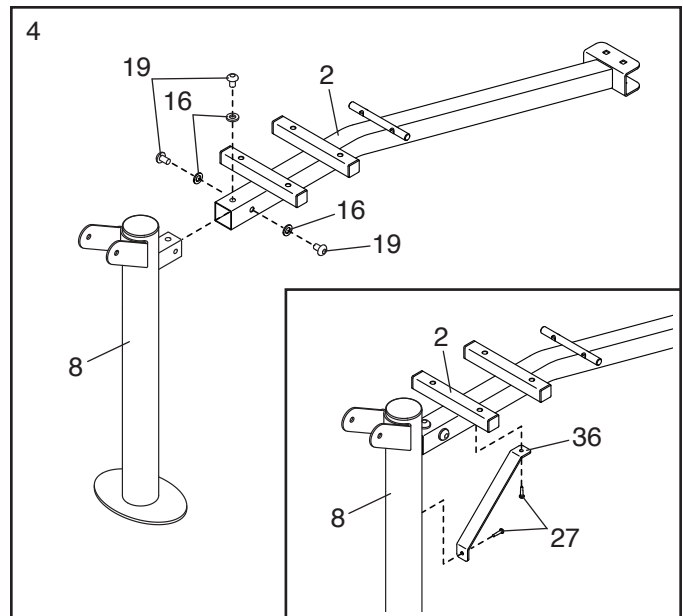


5. Attach the Frame (2) to the Crossbar (3) with two M10 x 60mm Carriage Bolts (13) and two M10 Locknuts (17).

 See steps 3 and 4. Tighten the M10 Locknuts (17), the M8 x 15mm Screws (19), and the M4 x 19mm Screws (27).

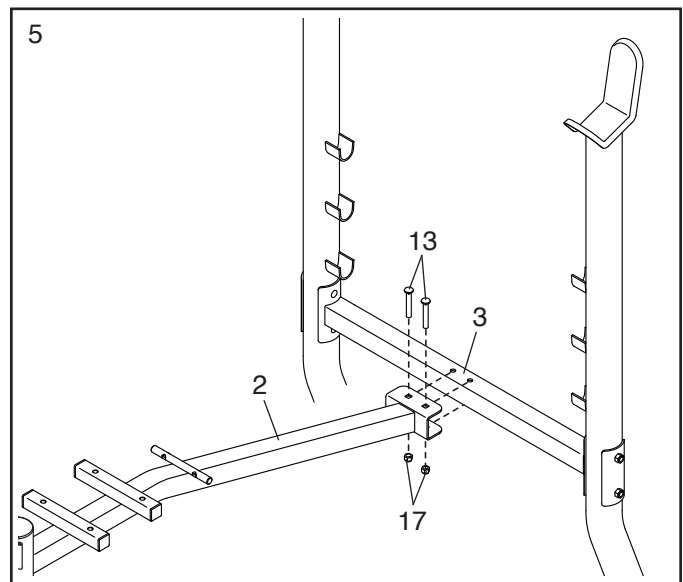


6. Insert a Pad Tube (10) into a hole in the Leg Lever (4). Slide a Foam Pad (23) onto each side of the Pad Tube.

 Attach the other Pad Tube (not shown) and two Foam Pads (23) in the same way.

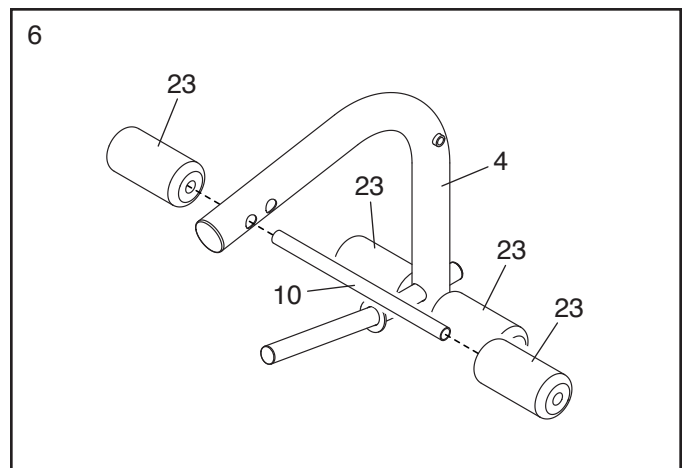

7. Using a plastic bag to keep your fingers clean, apply a generous amount of the included grease to an M8 x 75mm Bolt (32).

 
Attach the Leg Lever (4) to the brackets on the Front Leg (8) with the M8 x 75mm Bolt (32) and an M8 Locknut (33). **Do not overtighten the Locknut; the Leg Lever must pivot easily.**

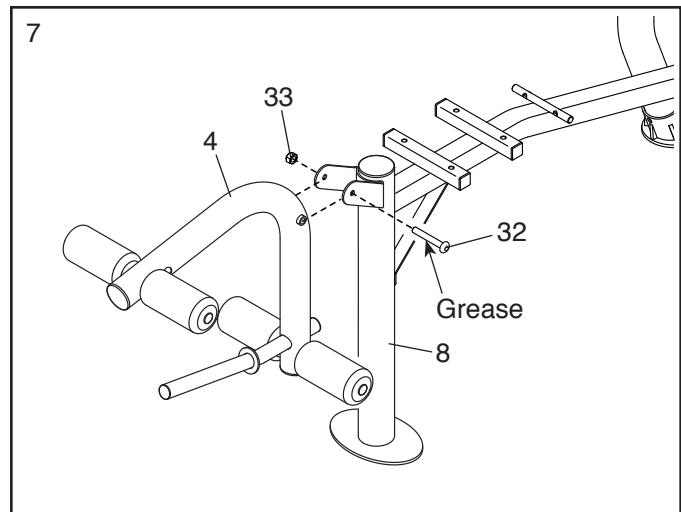

8. Apply a generous amount of the grease to the pivot rod (A) on the Frame (2)


Set the Backrest Support (7) into a set of brackets on the Uprights (1, 14).

 Orient the Backrest Tubes (5) as shown. Slide a Backrest Tube onto each side of the pivot rod (A).

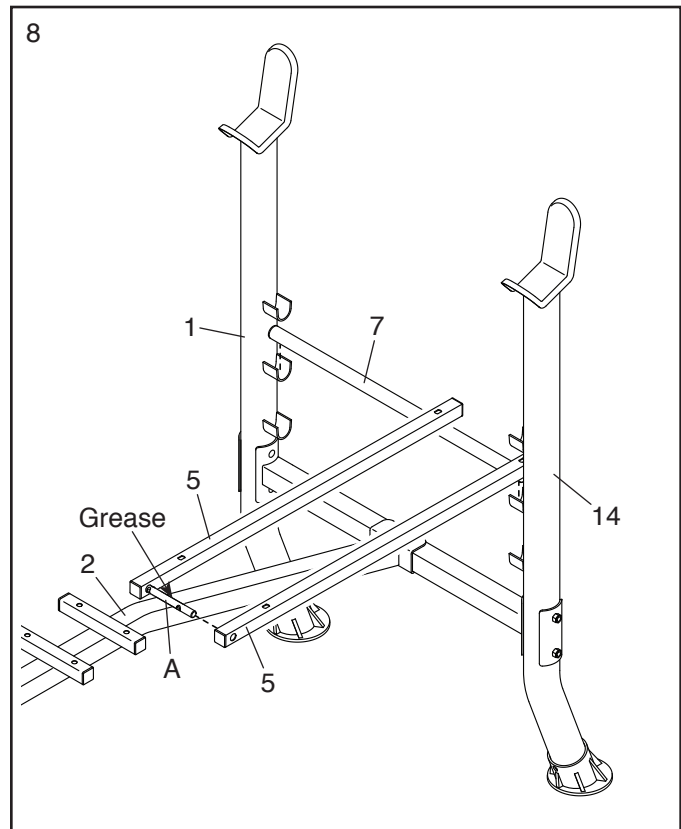


9. Orient the Backrest (6) so that the narrow end (B) is in the indicated location.

 Attach the Backrest (6) to the Backrest Tubes (5) with four M6 x 40mm Screws (30) and four M6 Washers (26); **start all the Screws, and then tighten them.**

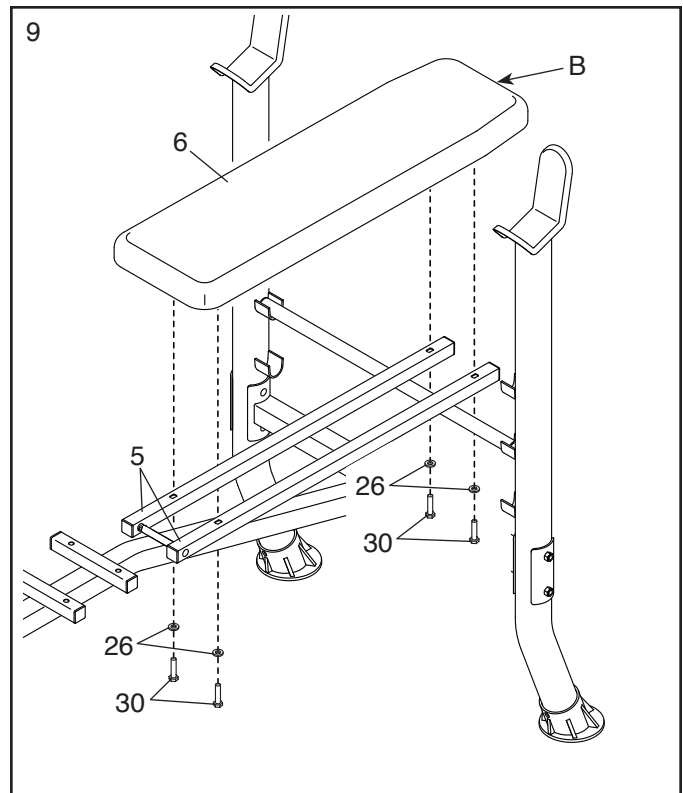


10. Orient the Seat (11) as shown.

 Attach the Seat (11) to the Frame (2) with four M6 x 40mm Screws (30) and four M6 Washers (26); **start all the Screws, and then tighten them.**

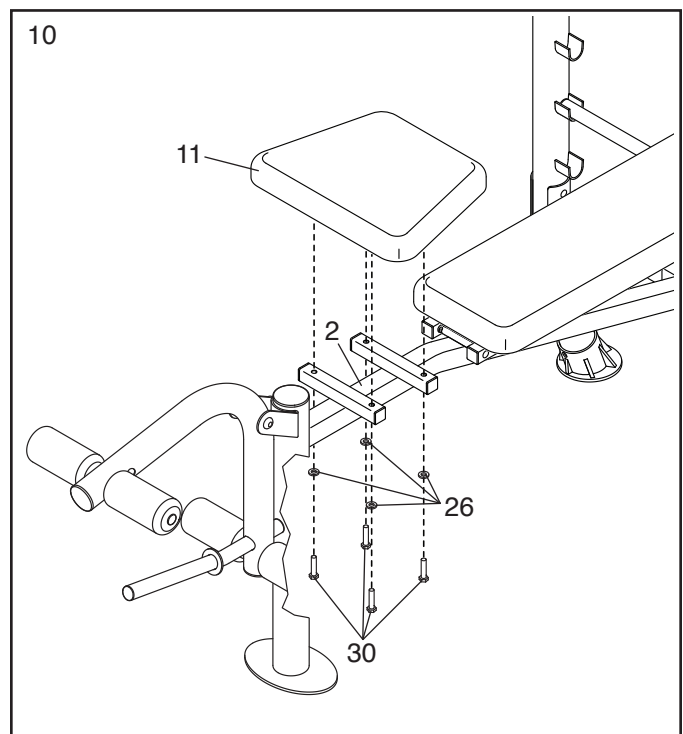

11. Attach a Spring Collar (25) to the weight tube on the Leg Lever (4).

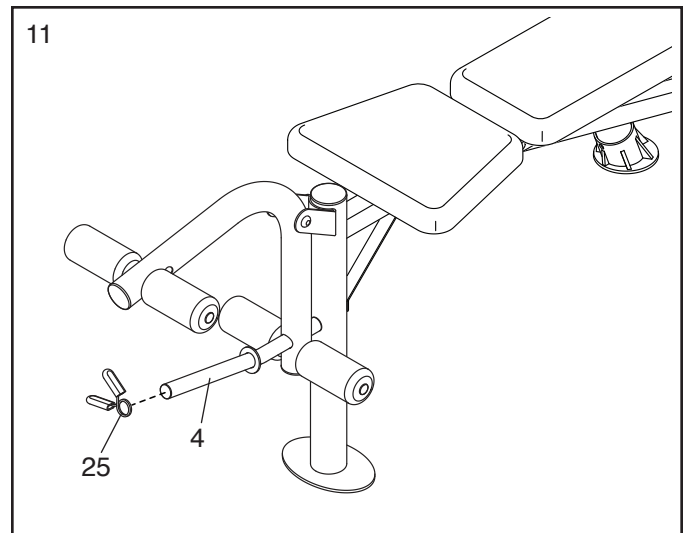 

12. **Make sure that all parts are properly tightened before you use the weight bench.** Extra parts may be included. The use of all remaining parts will be explained in ADJUSTMENT AND MAINTENANCE, beginning on page 13.

 
ADJUSTMENT AND MAINTENANCE

The steps below explain how the weight bench can be adjusted. See the accompanying exercise guide to see the correct form for several exercises.

Make sure that all parts are properly tightened each time you use the weight bench. Replace any worn parts immediately. The weight bench can be cleaned with a damp cloth and a mild, non-abrasive detergent; **do not use solvents.**

ADJUSTING THE BACKREST


The Backrest (6) can be used in any of three positions. To adjust the position of the Backrest, lift the Backrest, set the Backrest Support into the desired set of brackets (A) on the Uprights (1, 14), and then rest the Backrest on the Backrest Support.

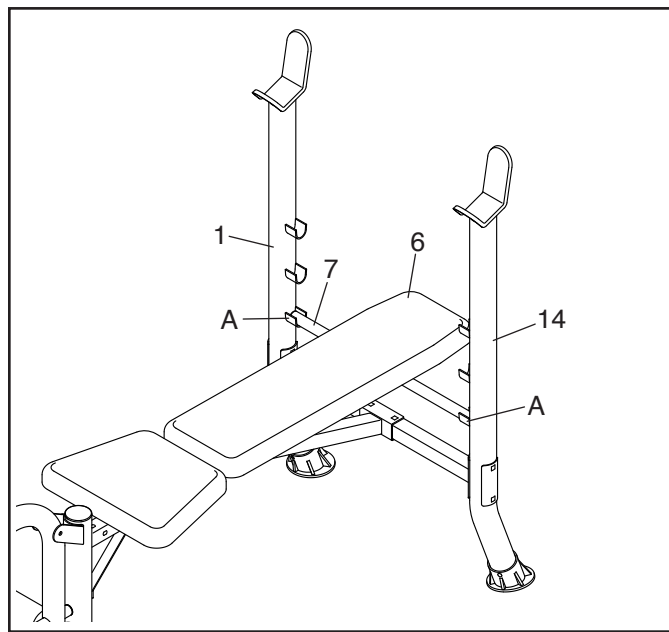

ATTACHING WEIGHTS TO THE LEG LEVER

To use the Leg Lever (4), slide the desired Weights (24, 31, 34) onto the weight tube (B) on the Leg Lever. Secure the Weights with a Spring Collar (25).

 
⚠ WARNING: When using the Leg Lever (4), place the Barbell (29) with the same amount of weight on the weight rests to balance the weight bench. Do not place more than 50 lbs. (23 kg) on the Leg Lever.

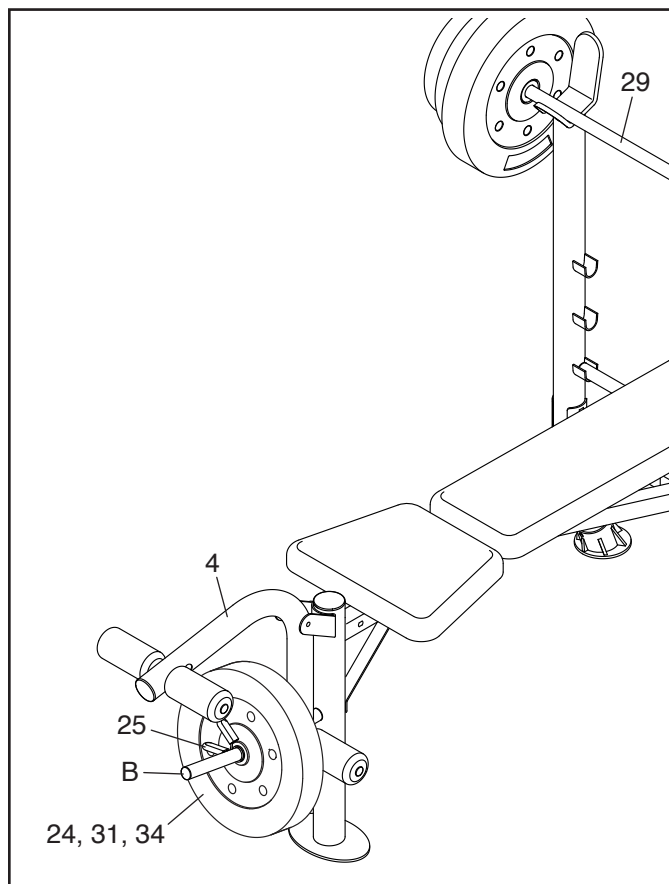

ATTACHING WEIGHTS TO THE BARBELL

Slide the same amount of Weight (24, 31, 34) onto both ends of the Barbell (29). Then, slide the Spring Collars (25) against the Weights.

 ⚠ WARNING: Always secure Weights (24, 31, 34) on the Barbell (29) with the Spring Collars (25). Do not place more than 110 lbs. (49 kg), including the Barbell and Weights, on the weight rests.

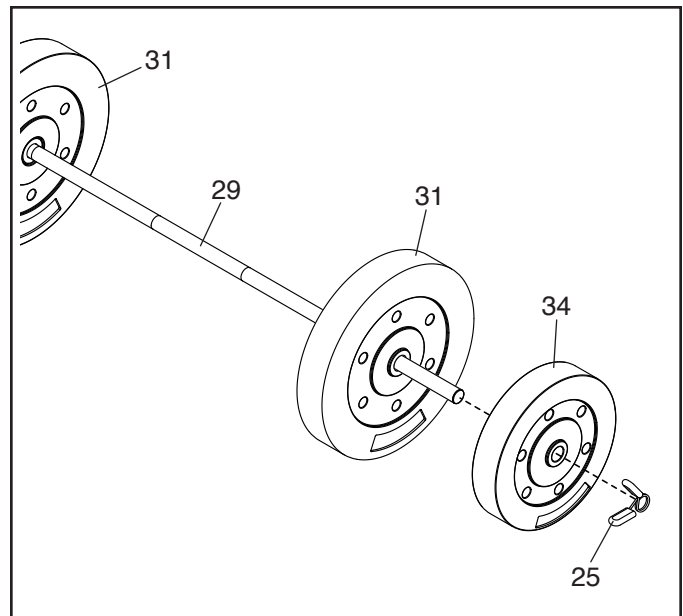

EXERCISE GUIDELINES

FOUR TYPES OF STRENGTH WORKOUTS

Note: A “repetition” is one complete cycle of an exercise, such as one sit-up. A “set” is a series of repetitions.

Muscle Building—Work your muscles near their maximum capacity and progressively increase the intensity of your exercise. Adjust the intensity level of an individual exercise as follows:

- Change the amount of resistance used.
- Change the number of repetitions or sets performed.

Use your own judgment to determine the amount of resistance that is right for you. Begin with 3 sets of 8 repetitions for each exercise you perform. Rest for 3 minutes after each set. When you can complete 3 sets of 12 repetitions without difficulty, increase the amount of resistance.

Toning—Tone your muscles by working them to a moderate percentage of their capacity. Select a moderate amount of resistance and increase the number of repetitions in each set. Complete as many sets of 15 to 20 repetitions as possible without discomfort. Rest for 1 minute after each set. Work your muscles by completing more sets rather than by using high amounts of resistance.

Weight Loss—To lose weight, use a low amount of resistance and increase the number of repetitions in each set. Exercise for 20 to 30 minutes, resting for a maximum of 30 seconds between sets.

Cross Training—Combine strength training and aerobic exercise by following this type of program:

- Strength training workouts on Monday, Wednesday, and Friday.
- 20 to 30 minutes of aerobic exercise on Tuesday and Thursday.
- One full day of rest each week to give your body time to regenerate.

WORKOUT GUIDELINES

Familiarize yourself with the equipment and learn the proper form for each exercise. Use your own judgment

to determine the appropriate length of time for each workout, and the numbers of repetitions and sets to complete. Progress at your own pace and be sensitive to your body’s signals. Follow each workout with at least one day of rest.

Warming Up—Start with 5 to 10 minutes of stretching and light exercise. A warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

Working Out—Include 6 to 10 different exercises in each workout. Select exercises for every major muscle group, emphasizing areas that you want to develop. To give balance and variety to your workouts, vary the exercises from workout to workout.

Cooling Down—Finish with 5 to 10 minutes of stretching. Stretching increases the flexibility of your muscles and helps to prevent post-exercise problems.

EXERCISE FORM

Move through the full range of motion for each exercise and move only the appropriate parts of the body. Perform the repetitions in each set smoothly and without pausing. The exertion stage of each repetition should last about half as long as the return stage. Exhale during the exertion stage of each repetition and inhale during the return stroke. Never hold your breath.

Rest for a short period of time after each set:

- Muscle Building—Rest for three minutes after each set.
- Toning—Rest for one minute after each set.
- Weight Loss—Rest for 30 seconds after each set.

STAYING MOTIVATED

For motivation, keep a record of each workout. Write the date, the exercises performed, the resistance used, and the numbers of sets and repetitions completed. Record your weight and key body measurements once a month. To achieve good results, make exercise a regular and enjoyable part of your life.

NOTES

NOTES

PART LIST


Model No. GGBE99517.0 R1017B

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Right Upright	21	2	Leg Lever Cap
2	1	Frame	22	2	Upright Bracket
3	1	Crossbar	23	4	Foam Pad
4	1	Leg Lever	24	2	10-pound Weight
5	2	Backrest Tube	25	3	Spring Collar
6	1	Backrest	26	8	M6 Washer
7	1	Backrest Support	27	4	M4 x 19mm Screw
8	1	Front Leg	28	4	25mm Round Cap
9	4	Pad Tube Cap	29	1	Barbell
10	2	Pad Tube	30	8	M6 x 40mm Screw
11	1	Seat	31	2	25-pound Weight
12	2	Backrest Support Cap	32	1	M8 x 75mm Bolt
13	2	M10 x 60mm Carriage Bolt	33	1	M8 Locknut
14	1	Left Upright	34	2	15-pound Weight
15	2	Upright Foot	35	8	Square Cap
16	3	M8 Washer	36	1	Frame Bracket
17	6	M10 Locknut	*	—	User's Manual
18	4	M10 x 77mm Carriage Bolt	*	—	Exercise Guide
19	3	M8 x 15mm Screw	*	—	Grease Packet
20	1	Front Leg Cap			

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. *These parts are not illustrated.

EXPLODED DRAWING

 Model No. GGBE99517.0 R1017B

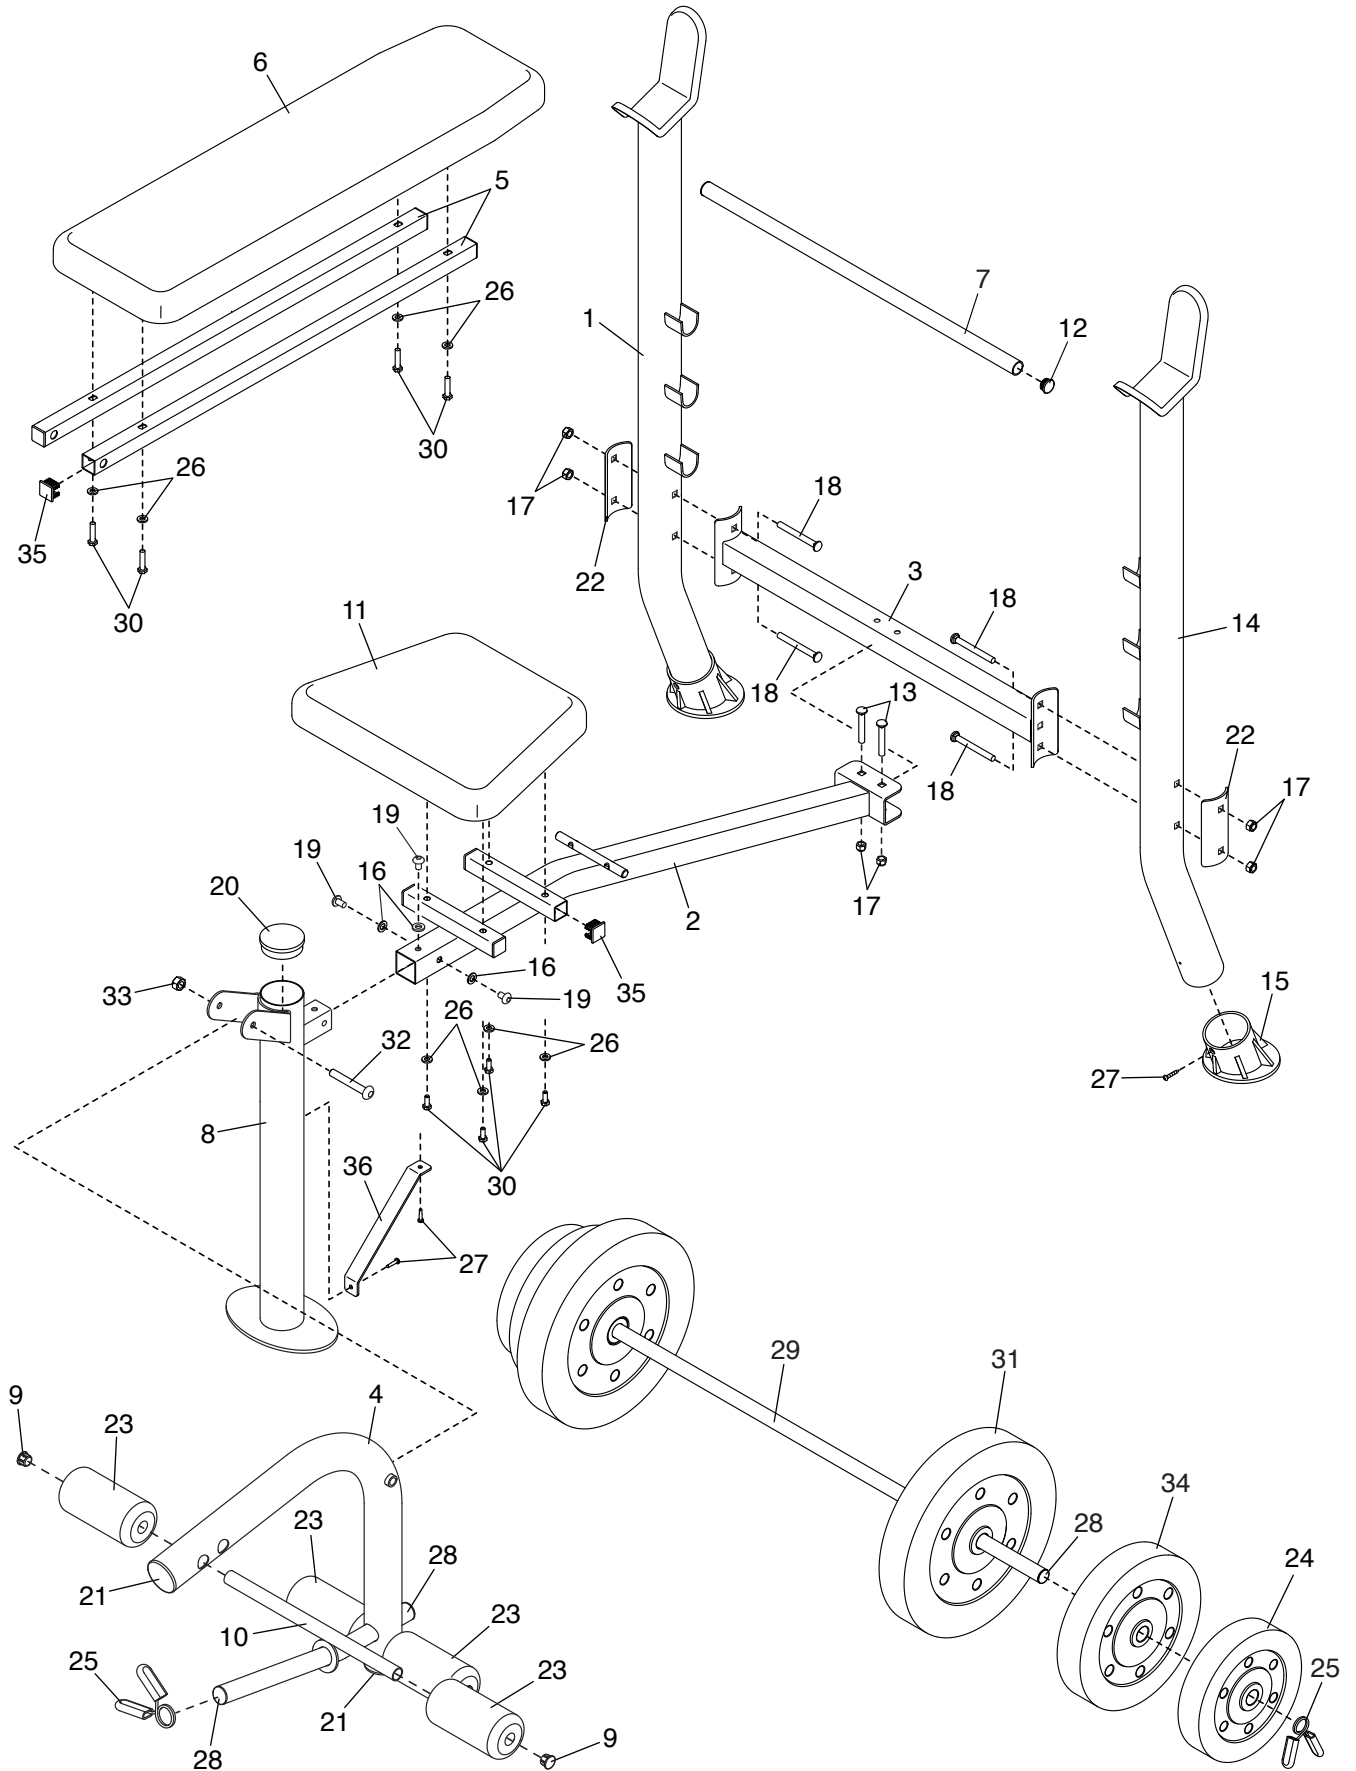

ORDERING REPLACEMENT PARTS

To order replacement parts, please see the front cover of this manual. To help us assist you, be prepared to provide the following information when contacting us:

- the model number and serial number of the product (see the front cover of this manual)
- the name of the product (see the front cover of this manual)
- the key number and description of the replacement part(s) (see the PART LIST and the EXPLODED DRAWING near the end of this manual)

LIMITED WARRANTY

IMPORTANT: To protect your fitness equipment with an extended service plan, see page 4.

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions. Parts and labor are warranted for ninety (90) days from the date of purchase.

This warranty extends only to the original purchaser (customer) and is not transferrable. ICON's obligation under this warranty is limited to repairing or replacing, at ICON's option, the product through one of its authorized service providers. All repairs for which warranty claims are made must be preauthorized by ICON. If replacement parts are shipped while the product is under warranty, the customer will be responsible for a minimal handling charge. For in-home service, the customer may be responsible for a minimal trip charge. This warranty does not extend to freight damage to the product. This warranty will automatically be voided by the following conditions: (1) if the product is used as a store display model, (2) if the product is purchased or transported outside the USA, (3) if all instructions and warnings in this manual are not followed, (4) if the product is abused or improperly or abnormally used, or (5) if the product is used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for the following damages: (1) indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; (2) damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or costs of removal or installation; or (3) other consequential damages of any kind. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to the customer.

The warranty extended hereunder is in lieu of any and all other warranties, and any implied warranties of merchantability or fitness for a particular purpose are limited in their scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to the customer. This warranty provides specific legal rights; the customer may have other rights that vary from state to state.

For warranty service, please call the telephone number on the front cover of this manual. Please be prepared to provide the model number and serial number of the product (see the front cover of this manual).

ICON Health & Fitness, Inc., 1500 S. 1000 W., Logan, UT 84321-9813