


FREEMOTION[®] E P I C[™] LEG PRESS

OWNER'S MANUAL

Model No. GZFI8043.5

Serial No. _____

Write the serial number in the space above for future reference.

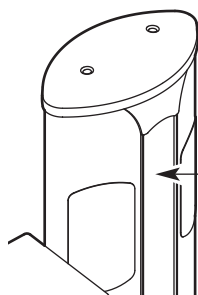


Serial Number
Decal (inside
tower)

QUESTIONS?

At FreeMotion Fitness, we are committed to providing complete customer satisfaction. If you have questions, see **HOW TO CONTACT CUSTOMER CARE** on the back cover of this manual.

CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

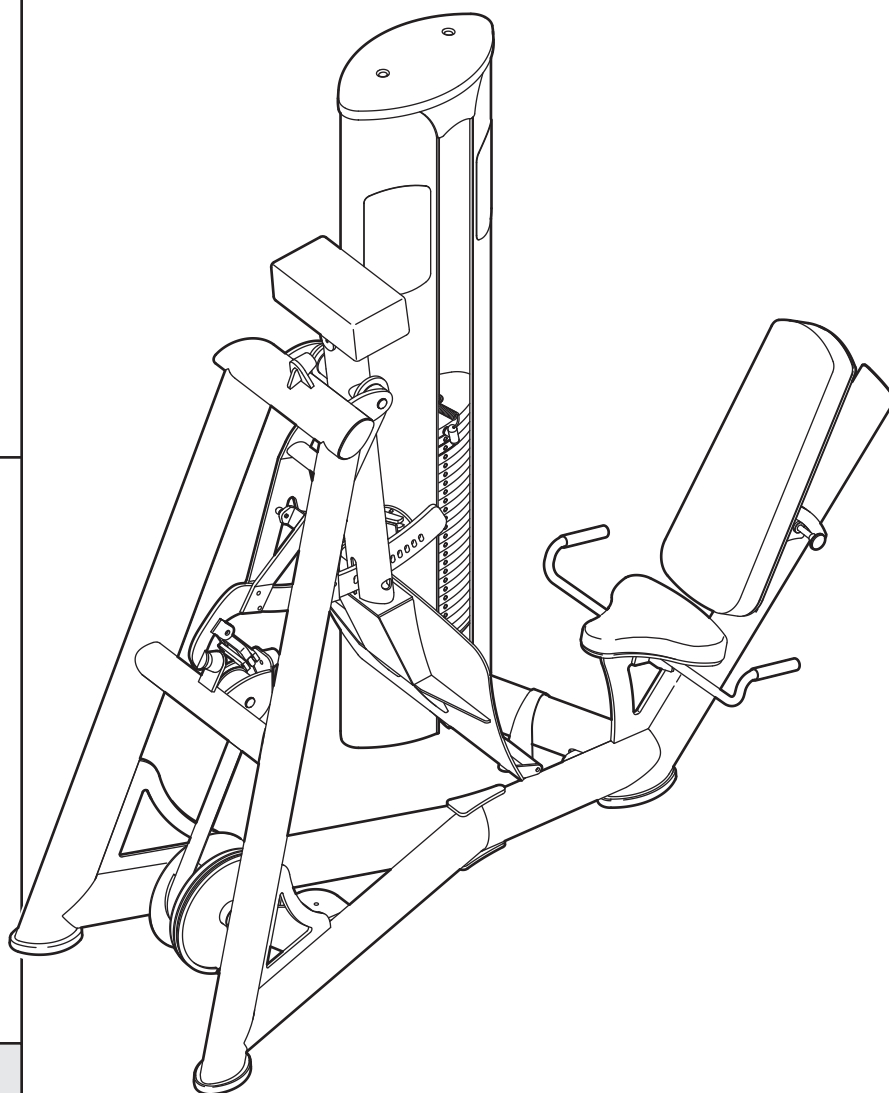

Visit our website at

www.freemotionfitness.com

HOW TO CONTACT CUSTOMER CARE

If you have questions after reading this manual, or if you require assistance, please contact Customer Care at the address and phone number listed below. Please be prepared to give the following information:

- the MODEL NUMBER of the product (GZFI8043.5)
- the NAME of the product (FREEMOTION EPIC LEG PRESS strength equipment)
- the SERIAL NUMBER of the product (see the front cover of this manual)

When ordering replacement parts, please also give the KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and the EXPLODED DRAWING on pages 12 to 15).

Customer Care: 1-800-201-2109, Monday–Friday, 8 a.m.–5 p.m. Mountain Time
FreeMotion Fitness, Inc. • 1096 Elkton Dr., Suite 600 • Colorado Springs, CO 80907

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS 3

WARNING DECAL PLACEMENT4

BEFORE YOU BEGIN 5

ADJUSTMENT6

MAINTENANCE AND TROUBLESHOOTING7

CABLE DIAGRAM11

PART LIST12

EXPLODED DRAWING14

HOW TO CONTACT CUSTOMER CAREBack Cover

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the strength equipment.

1. Read all instructions in this manual before using the strength equipment. Use the strength equipment only as described in this manual.
2. Keep the strength equipment indoors, away from moisture and dust. Do not put the strength equipment in a garage or covered patio, or near water.
3. Use the strength equipment only on a level surface. Cover the floor beneath the strength equipment to protect the floor.
4. It is the owner's responsibility to ensure that there is enough space around the strength equipment for the intended exercise. Do not crowd the strength equipment.
5. Anchor the strength equipment to the floor with the anchor strap where required or whenever possible to provide maximum stability.
6. It is the responsibility of the owner to ensure that all users of the strength equipment are adequately informed of all precautions, have read and understood all warning and caution labels, and are informed of how to use the strength equipment properly.
7. Keep children under age 12 and pets away from the strength equipment at all times.
8. The strength equipment is designed to support a maximum user weight of 350 lbs. (159 kg).
9. Always wear athletic shoes for foot protection while exercising.
10. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength equipment when it is in use.
11. All users of the strength equipment should be instructed to report any injury or strength equipment irregularity to facility staff immediately.
12. Make sure that the weight pin is completely inserted into one of the weight plates.
13. Check the cable, cable connections, and pulleys before each use of the strength equipment. Make sure all parts are properly tightened. Replace any worn parts immediately.
14. Make sure that the cable remains on the pulleys at all times. If the cable binds while you are exercising, stop immediately and make sure that the cable is on the pulleys and nothing is interfering with the cable or pulleys.
15. If you feel pain or dizziness while exercising, stop immediately and cool down.

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. FreeMotion Fitness assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

WARNING DECAL PLACEMENT

The decals shown below have been placed on the strength equipment in the indicated locations. If a decal is missing or illegible, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual, and order a free replacement decal. Apply the decal in the location shown. Note: The decals may not be shown at actual size.

 **WARNING**

- Obtain a medical exam before beginning an exercise program.
- Inspect the machine before use. Do not use if machine appears damaged or inoperable.
- Keep body and clothing free and clear of all moving parts.
- Be certain that the weight pin is completely inserted.
- NEVER pin the weight stack in an elevated position. NEVER use the machine if found in this condition.
- INSPECT all cables, straps and their connections. Do not use if any component is found to be worn or damaged.
- Do not use dumbbells or other means to incrementally increase the weight resistance, other than those provided by the manufacturer.
- Do not allow children on machines. Machine use by teenagers must be supervised by a knowledgeable adult.
- This equipment to be used only under qualified supervision.
- Do not remove this label. REPLACE IF DAMAGED.


Decal 1
GZ7003

 **CAUTION**



Weight selector pin must be fully inserted into the weight plate.

Decal 2
GZ7026

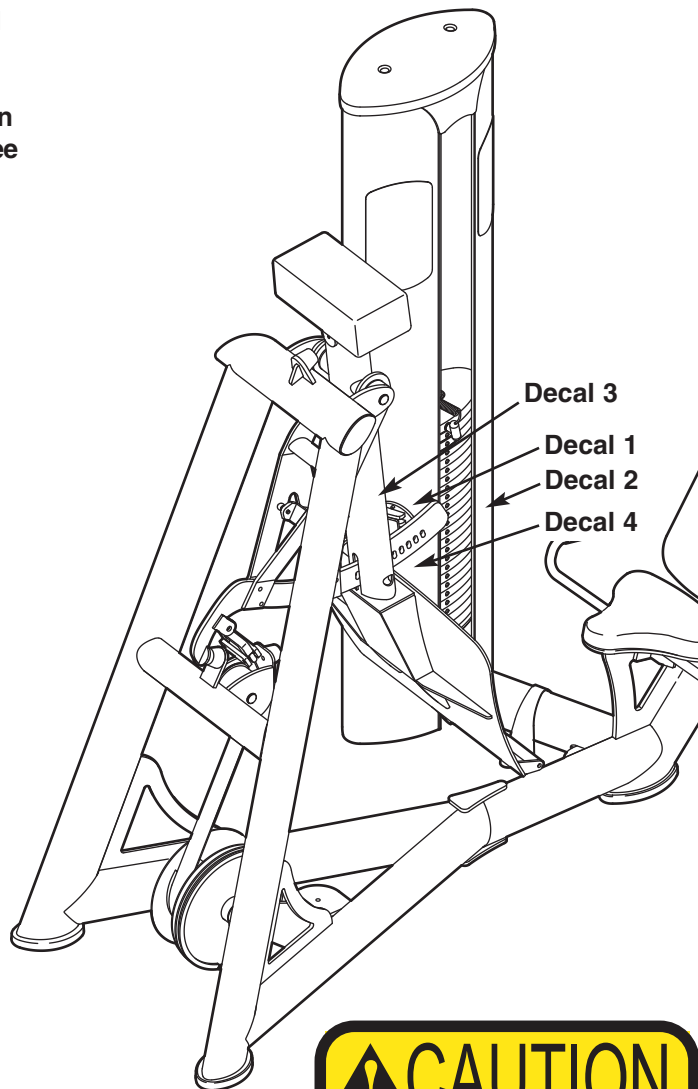

Decal 3
211883

 **CAUTION**

Do not press yellow pedal while platform assembly is under load.

211883

Decal 4
GZ7005

 **CAUTION**

KEEP AWAY FROM MOVING PARTS. FAILURE TO DO SO COULD RESULT IN PERSONAL INJURY.

7005-1199


BEFORE YOU BEGIN

Thank you for selecting the FREEMOTION® EPIC™ LEG PRESS strength equipment. The strength equipment's stylish ergonomic design and never-before-seen features improve upon traditional strength training. The innovative features and quality construction provide a reliable product for your club. And the advanced solutions to isolating individual muscle groups make the LEG PRESS strength equipment a key tool for members to reach their goals.

For your benefit, read this manual carefully before using the strength equipment. If you have questions

after reading this manual, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual. To help us assist you, please note the product model number and serial number before calling. The model number is GZFI8043.5. The serial number can be found on a decal attached to the strength equipment (see the front cover of this manual).

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

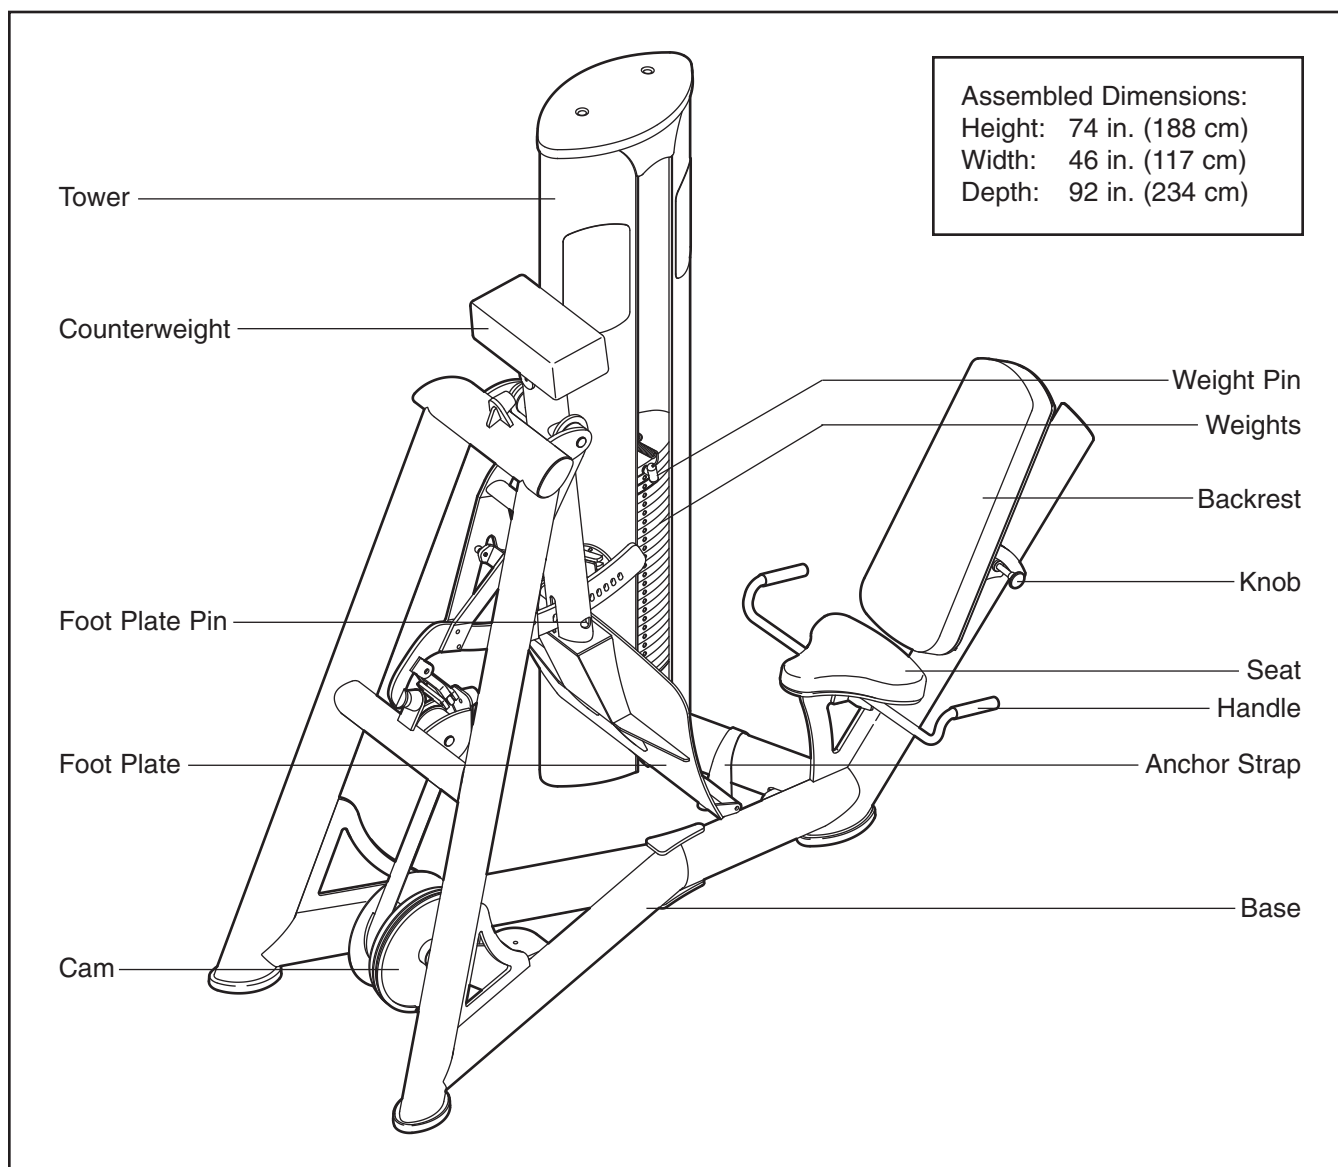


ADJUSTMENT

This section explains how to adjust the strength equipment. Make sure all parts are properly tightened each time the strength equipment is used. Replace any worn parts immediately.

ADJUSTING THE RESISTANCE


To change the amount of resistance for your workout, insert the weight pin into the desired weight. Make sure that the weight pin is fully inserted into the weight stack.

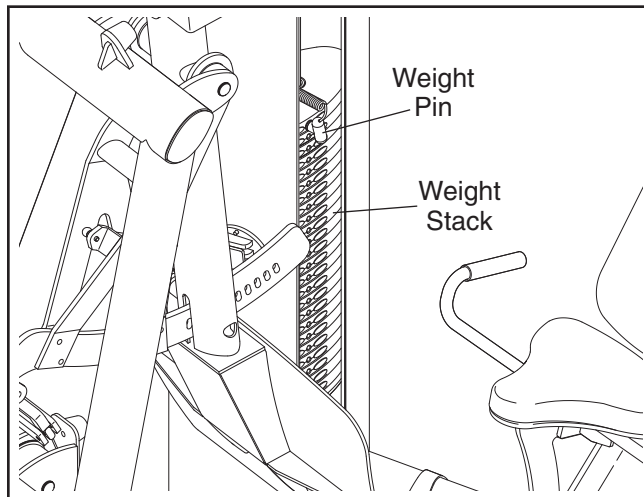

ADJUSTING THE FOOT PLATE

To adjust the starting position of the foot plate forward, pull the red handle on the bottom of the foot plate toward the seat.

To adjust the starting position of the foot plate backward, depress the yellow foot pedal, push the foot plate to the desired position, and then release the foot pedal.

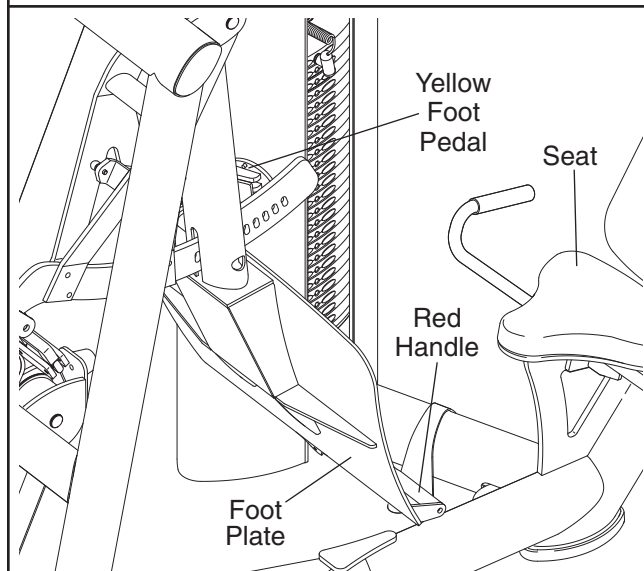


⚠ WARNING: Always make sure that the foot plate pin is fully engaged in the selector bracket before using the foot plate.

ADJUSTING THE BACKREST

To adjust the backrest forward, pull the backrest knob out and move the backrest to the desired position. Then, reengage the backrest knob.

To adjust the backrest backward, pull the backrest knob out and move the backrest to the desired position. Then, reengage the backrest knob.

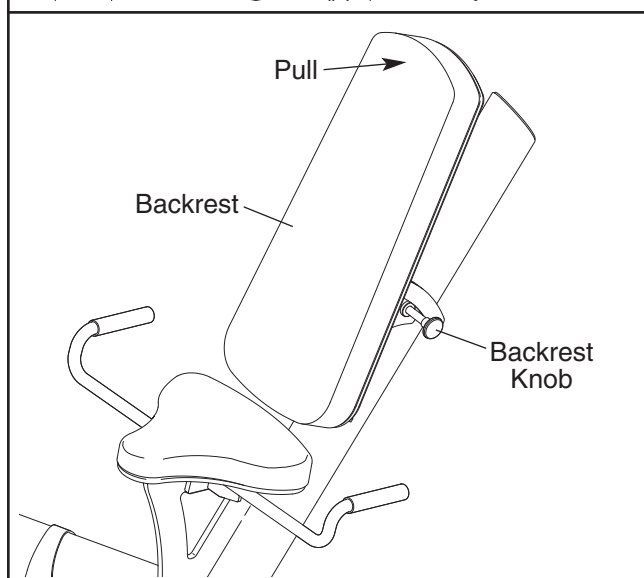

MAINTENANCE AND TROUBLESHOOTING

For optimal performance of the strength equipment and to reduce the chances of injury to users, you must perform preventive maintenance on a regular basis. Instruct all personnel to perform the procedures described in this section. Personnel must also record and report any accident. To maintain the strength equipment's warranty, use only FREEMOTION EPIC parts for repair or replacement. If there are any questions or concerns, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

DAILY MAINTENANCE

Upholstery and Frame—General Cleaning

1. Clean the strength equipment using a soft cloth dampened with a light solution of mild soap and warm water. If necessary, use a soft bristle brush with the cleaning solution.
2. Rinse the area thoroughly using a soft cloth dampened with clean water and dry thoroughly.

Upholstery—Difficult Stains

1. Spray the stain with a non-abrasive household cleaner such as FORMULA 409® cleaner, SIMPLE GREEN®, or a similar product. Rub the stained area gently and let the cleaning solution sit for a few minutes.
2. Rinse the area thoroughly using a soft cloth dampened with clean water and dry thoroughly.
3. Repeat these steps if necessary using a soft bristle brush.

Optional Method for Difficult Stains

1. Rub the stained area gently using a soft cloth dampened with rubbing alcohol.
2. Rinse the area thoroughly using a soft cloth dampened with clean water and dry thoroughly.

CAUTION: When using any cleaning product, try it first in an unnoticeable place to ensure that there is no damage to the material. Follow the directions and the safety precautions of the manufacturer of each cleaning product used. FreeMotion Fitness and its vendors cannot be held liable for damage or injuries resulting from the use or misuse of cleaning products.

Important: Do not use abrasive cleaners, which may scratch the strength equipment. Strong cleaners and abrasives will damage decals; use caution around decals. Do not use solvents such as lacquer thinner, kerosene, gasoline, or similar liquids.

WEEKLY MAINTENANCE


Hardware

Check all nuts and bolts and tighten them as required.

Important: All FREEMOTION EPIC cushions have dense plywood supports with tee-nuts that are used to bolt the cushions to the strength equipment. Because the tee-nuts are held by the plywood, they will not withstand the torque that standard nuts and bolts will. When tightening the bolts securing a cushion, turn them only until they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future.


Cables

1. Check each cable for proper tension (see CABLE ADJUSTMENT on page 8).
2. Check the entire length of each cable by slowly performing one repetition on the strength equipment; inspect the cable that is exposed on the exterior of the strength equipment and the cable inside the tower. Run your fingers along the cable, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn cable in need of replacement:
 - A. a torn or split cable sheath that exposes the cable
 - B. a kinked or severely bent cable
 - C. a curled or twisted sheath
 - D. a stretched cable sheath, showing a thinning cross-section

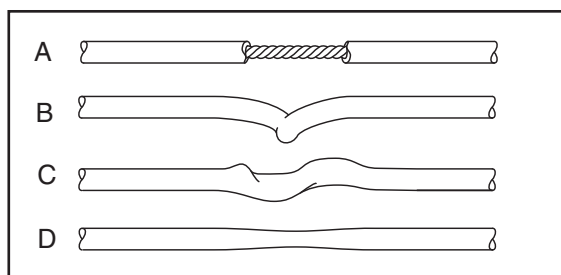


Belts

1. Run your fingers along the belt, paying close attention at the bends and attachment points.
2. Watch for the following conditions, which may indicate a worn belt in need of replacement:
 - A. peeling skin
 - B. stretched areas, showing a thinning cross-section
 - C. waves
 - D. cracks or splits
 - E. strands hanging out or significant fraying

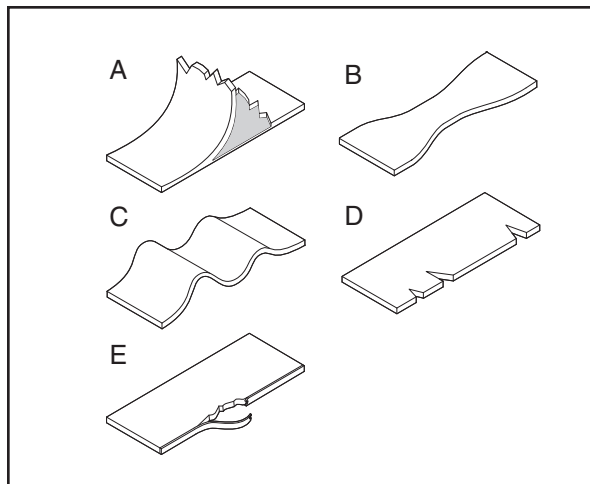

Cable Guards

Check the cable guards to ensure that they are not rubbing against the cables and that they are holding the cables in the grooves of the pulleys. If a cable guard is not correctly aligned, loosen the bolt slightly, readjust the cable guard as necessary, and retighten the bolt.

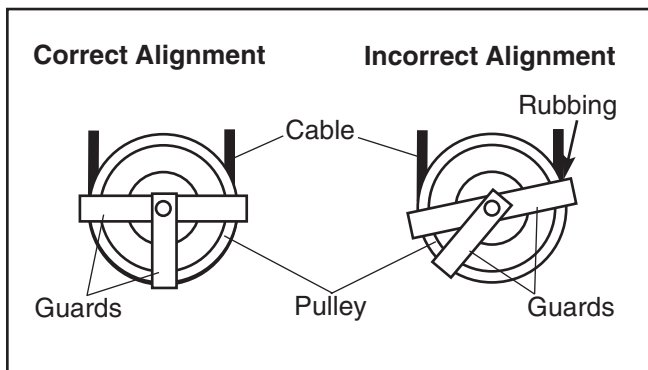

MONTHLY MAINTENANCE

Grips

Check the grips and replace them if needed.

GUIDE ROD LUBRICATION

Clean and lubricate the full length of each guide rod by wiping it with a soft cloth containing a lightweight motor oil, 10W-40 or 10W-30 weight. Apply only a light coating over the entire length of the guide rod. **Do not use TEFLON® or silicone-based lubricants.**

CABLE ADJUSTMENT

For the strength equipment to function correctly, the cables must be tensioned correctly. To check the tension of the cables, insert the weight pin into the top weight plate. Next, slowly raise and lower the top weight by performing one repetition. The top weight should come to rest just on top of the third weight when the repetition is completed.


If there is too much tension on the cables, the top weight will not rest on the second weight, and it may be difficult to insert the weight pin into the weight plates. If there is not enough tension on the cables, the top weight will not be lifted immediately when the repetition is begun. Ideally, the cable should not move more than 1/2 in. (1.5 cm) from the resting position before the top weight is lifted.

If there is too much tension or not enough tension on a cable, adjust the cable as described on page 9.


Tower Pulley Adjustment

Tools required: 5/16" hex key, 9/16" open end wrench

1. Lift the top weight off the weight stack and insert the weight pin into the third weight and the sixth hole from the top of the weight rod.

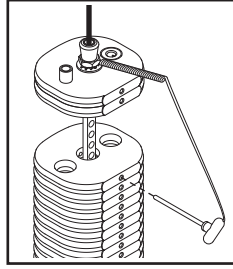

2. Loosen the locknut attaching the pulley to the bracket in the top of the tower.

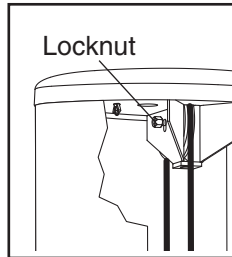


3. Move the pulley to the appropriate location in the bracket. If more slack is needed in the cable, move the pulley down. If less slack is needed in the cable, move the pulley up.
4. Make sure that the cable guard is properly oriented (see CABLE GUARDS on page 8) and retighten the locknut attaching the pulley to the bracket.
5. Lift the top weight and remove the weight pin. Lower the top weight onto the third weight.
6. Readjust as necessary.
7. Slowly perform a repetition using a light load and have someone make sure that the cable is not derailed from a pulley or rubbing on a cable guard.

Top Weight Adjustment

Tools required: 5/32" hex key

1. If the cable needs to be shortened 3/4 in. (2 cm) or more, follow the instructions in steps 1 and 2 at the left; then, go to step 2 below.
2. Lift the coupler cover from the top weight coupler. Loosen but do not remove the two set screws in each side of the weight coupler.
3. Pull the cable out of the top weight coupler. Determine the amount that the cable needs to be shortened, and cut that much off the end of the cable. **The cable must be long enough to be held by the set screws without lifting the top weight.**

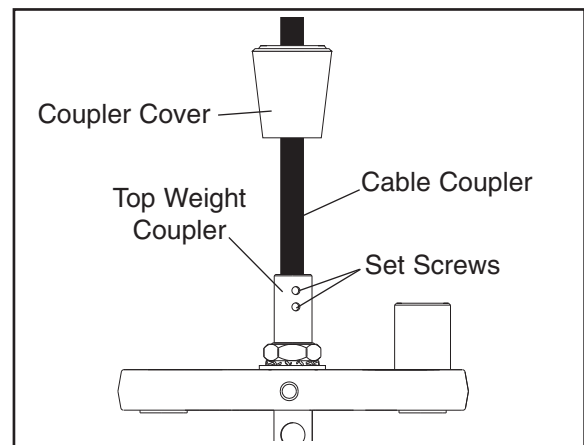


4. Cut the cable to the desired length and strip 1 in. (2.5 cm) of the vinyl sheath from the cut end of the cable.
5. Insert the cable into the top weight coupler until all four set screws can be tightened against the cable. Tighten each set screw alternately 1/4 turn, until all are set to 150 inch/pounds (17 Newton-meters)
6. Lower the coupler cover over the top weight coupler.
7. Slowly perform a repetition using a light load and have someone make sure that the cable is not derailed from a pulley or rubbing on a cable guard.

WEIGHT STACK SERVICING

Servicing the weight stack involves replacing the two guide bushings and weight insert in the top weight. To order these parts, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

1. Remove the wingnuts under the tower cap and remove the tower cap from the tower.
2. Remove the guide rod nuts and washers from the top of each guide rod.
3. Lift the coupler cover and loosen the four set screws—this will release the cable.
4. Lift the guide rods out of the top of the tower.
5. Remove the rod nut, rod star washer, and rod washer from the top of the weight rod. Lift and rotate the top weight, and remove it through the front opening of the tower.
6. Use a punch to drive the two existing guide bushings and the weight insert out of the top weight.

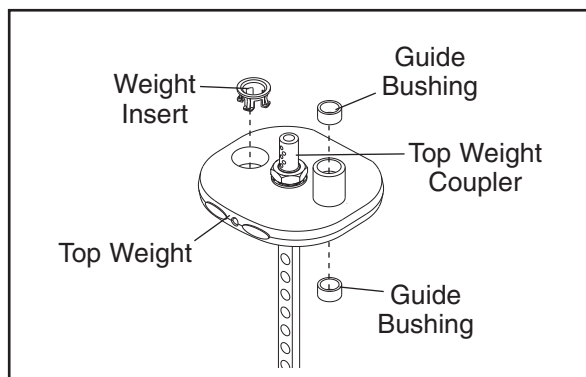

7. Hold one of the new guide bushings square to the face of one of the holes in the top weight, place a protective piece of wood on top of the guide bushing, and lightly tap the guide bushing until it is flush with the surface. **Insert the other guide bushing and the weight insert in the same way.**
8. Replace the top weight. Next, tighten the rod nut, rod star washer, and rod washer onto the weight rod.

9. Reattach the cable to the top weight coupler. Retighten the four set screws into the threaded holes. Tighten the set screws equally until they contact the cable. Then, tighten each screw alternately 1/4 turn, until all are set to 150 inch/pounds (17 Newton-meters).
10. Clean and lubricate the guide rods by wiping them with a soft cloth containing a lightweight motor oil, 10W-40 or 10W-30 weight. Apply only a light coating over the entire length. **Do not use TEFLON® or silicone-based lubricants.**
11. Reinsert the guide rods through the top of the tower and into the weight stack. Note: If the weight stack has shifted, use a short bar to realign the holes in the weight plates. Hold the weight plates while inserting the guide rods.



⚠ WARNING: Do not force the guide rods into the weights; doing so will damage the bushings and weight inserts.

12. Reattach the guide rods to the top of the frame with the two guide rod nuts and washers.
13. Insert the weight pin into the top weight. Slowly perform a repetition, lifting the top weight as far as possible. Then, slowly lower the top weight. If the top weight sticks, loosen one of the guide rod nuts. Slowly perform another repetition. Retighten the guide rod nut. Check the full travel again and readjust the guide rod nuts as necessary.
14. Slowly perform a repetition using a light load and have someone make sure that the cable is not derailed from a pulley or rubbing on a cable guard.
15. Replace the tower cap and retighten the wingnuts onto the bolts.

CABLE DIAGRAM

The diagrams show the proper route of the belt and the cable. Use the diagram to make sure that the belt, the cable, and the cable guards have been assembled correctly. If the belt or the cable has not been correctly routed, the strength equipment will not function properly and damage may occur. The numbers show the correct route of the belt and the cable.

Make sure that the cable guards do not touch or bind the cable.

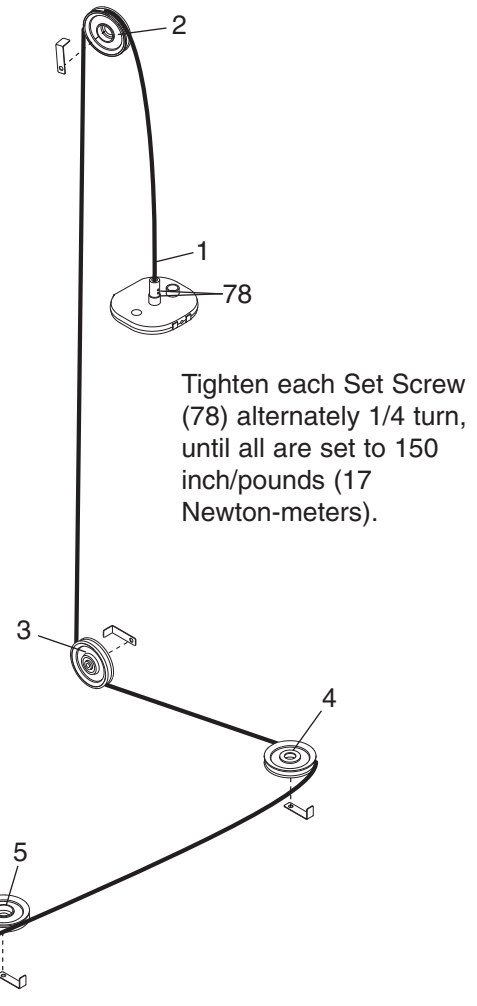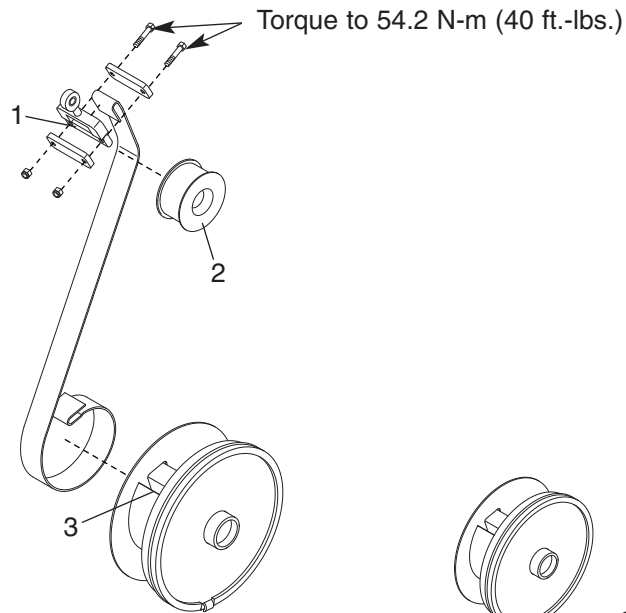

PART LIST—Model No. GZFI8043.5

R1106A

If replacement parts are needed, or if parts are missing or damaged, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.


Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Base	53	1	Spacer
2	1	Tower	54	2	3/8" x 3/4" Button Screw
3	1	Tower Cover	55	1	8" Pivot Rod
4	1	Foot Plate	56	6	1" Bearing
5	1	Cam	57	1	Cam Belt
6	1	Left Brace	58	6	1" Snap Ring
7	1	Right Brace	59	6	Nylon Washer
8	1	Selector Bracket	60	6	3/8" x 2" Bolt
9	1	Brace Tube	61	4	Cable Guard
10	1	Counter Weight	62	2	1/2" x 1 1/4" Screw
11	1	Foot Plate Bar	63	4	3/8" x 1 1/4" Bolt
12	2	Weight Guide	64	17	3/8" Nut
13	2	Long Trim	65	1	Top Weight
14	24	Weight	66	1	Yellow Cover
15	1	Seat	67	2	Bushing
16	1	Backrest	68	1	1/4" x 2 1/2" Flat Head Bolt
17	1	Backrest Frame	69	9	3/8" x 1 3/4" Bolt
18	1	Right Handle	70	1	Threaded Spacer
19	1	Left Handle	71	3	5/16" Nut
20	2	Base Foot	72	1	Rounded Clamp End
21	4	5/16" Washer	73	2	1/2"-20 Nut
22	4	Pulley	74	12	Rivet
23	1	Threaded Clamp End	75	1	Clamp End
24	1	Clamp Center	76	1	Threaded Tapered Pop-pin
25	1	Long Panel	77	2	1/8" Roll-pin
26	1	Long Panel Frame	78	4	5/16" x 5/16" Set Screw
27	1	Cover	79	1	Anchor Strap
28	1	Long Clamp End	80	1	10 1/2" Pivot Rod
29	1	Bumper	81	1	Shock
30	1	Short Panel Frame	82	1	Belt Pulley
31	1	Short Panel	83	1	3 1/2" Pivot Rod
32	4	Tower Foot	84	2	5/16" x 1" Bolt
33	49	Weight Insert	85	1	Selector Tab
34	2	Guide Bushing	86	1	Seat Pivot Bar
35	1	Weight Rod	87	1	Pedal Bracket
36	1	1" Washer	88	1	1/2" Rod End
37	1	Star Washer	89	2	3/8" Serrated Washer
38	1	1-14 UNF Nut	90	1	Weight Pin
39	1	Coupler Cover	91	4	2 1/2" Snap Ring
40	1	Weight Cable	92	1	3/8" x 3/4" Screw
41	16	3/8" x 1/2" Button Bolt	93	4	Guide Rod Washer
42	2	Handle Grip	94	4	Guide Rod Nut
43	1	Tapered Pop-pin	95	2	5/8" Snap Ring
44	1	Backrest Knob	96	1	1/2" Nylon Locknut
45	1	Long Base Foot	97	1	1/2" x 1 3/4" Bolt
46	5	1/4" Locknut	98	8	3/8" x 1" Screw
47	1	Backrest Bracket	99	3	1/4" x 3/4" Button Screw
48	6	3/8" x 1" Non-patch Bolt	100	1	Ball Stud
49	2	1/4" x 1" Button Bolt	101	2	Spring
50	5	Cone Bumper	102	1	3/8" Rod End
51	2	Weight Bumper	103	1	Weight Tube Pin
52	2	Wingnut	104	2	Tube Pin Cap

Key No.	Qty.	Description	Key No.	Qty.	Description
105	1	4" Wear Cover	112	6	1/4" Cage Nut
106	3	#10 x 3/8" Screw	113	1	Backrest Cover
107	1	18" Wear Cover	114	2	Handle Endcap
108	1	9" Wear Cover	115	2	Handle Collar
109	1	Access Panel	116	8	#10 x 1/8" Set Screw
110	1	Access Panel Gasket	#	-	Owner's Manual
111	6	1/4" x 3/4" Bolt			

Note: “#” indicates a non-illustrated part. Specifications are subject to change without notice.

EXPLODED DRAWING A—Model No. GZFI8043.5

R1106A

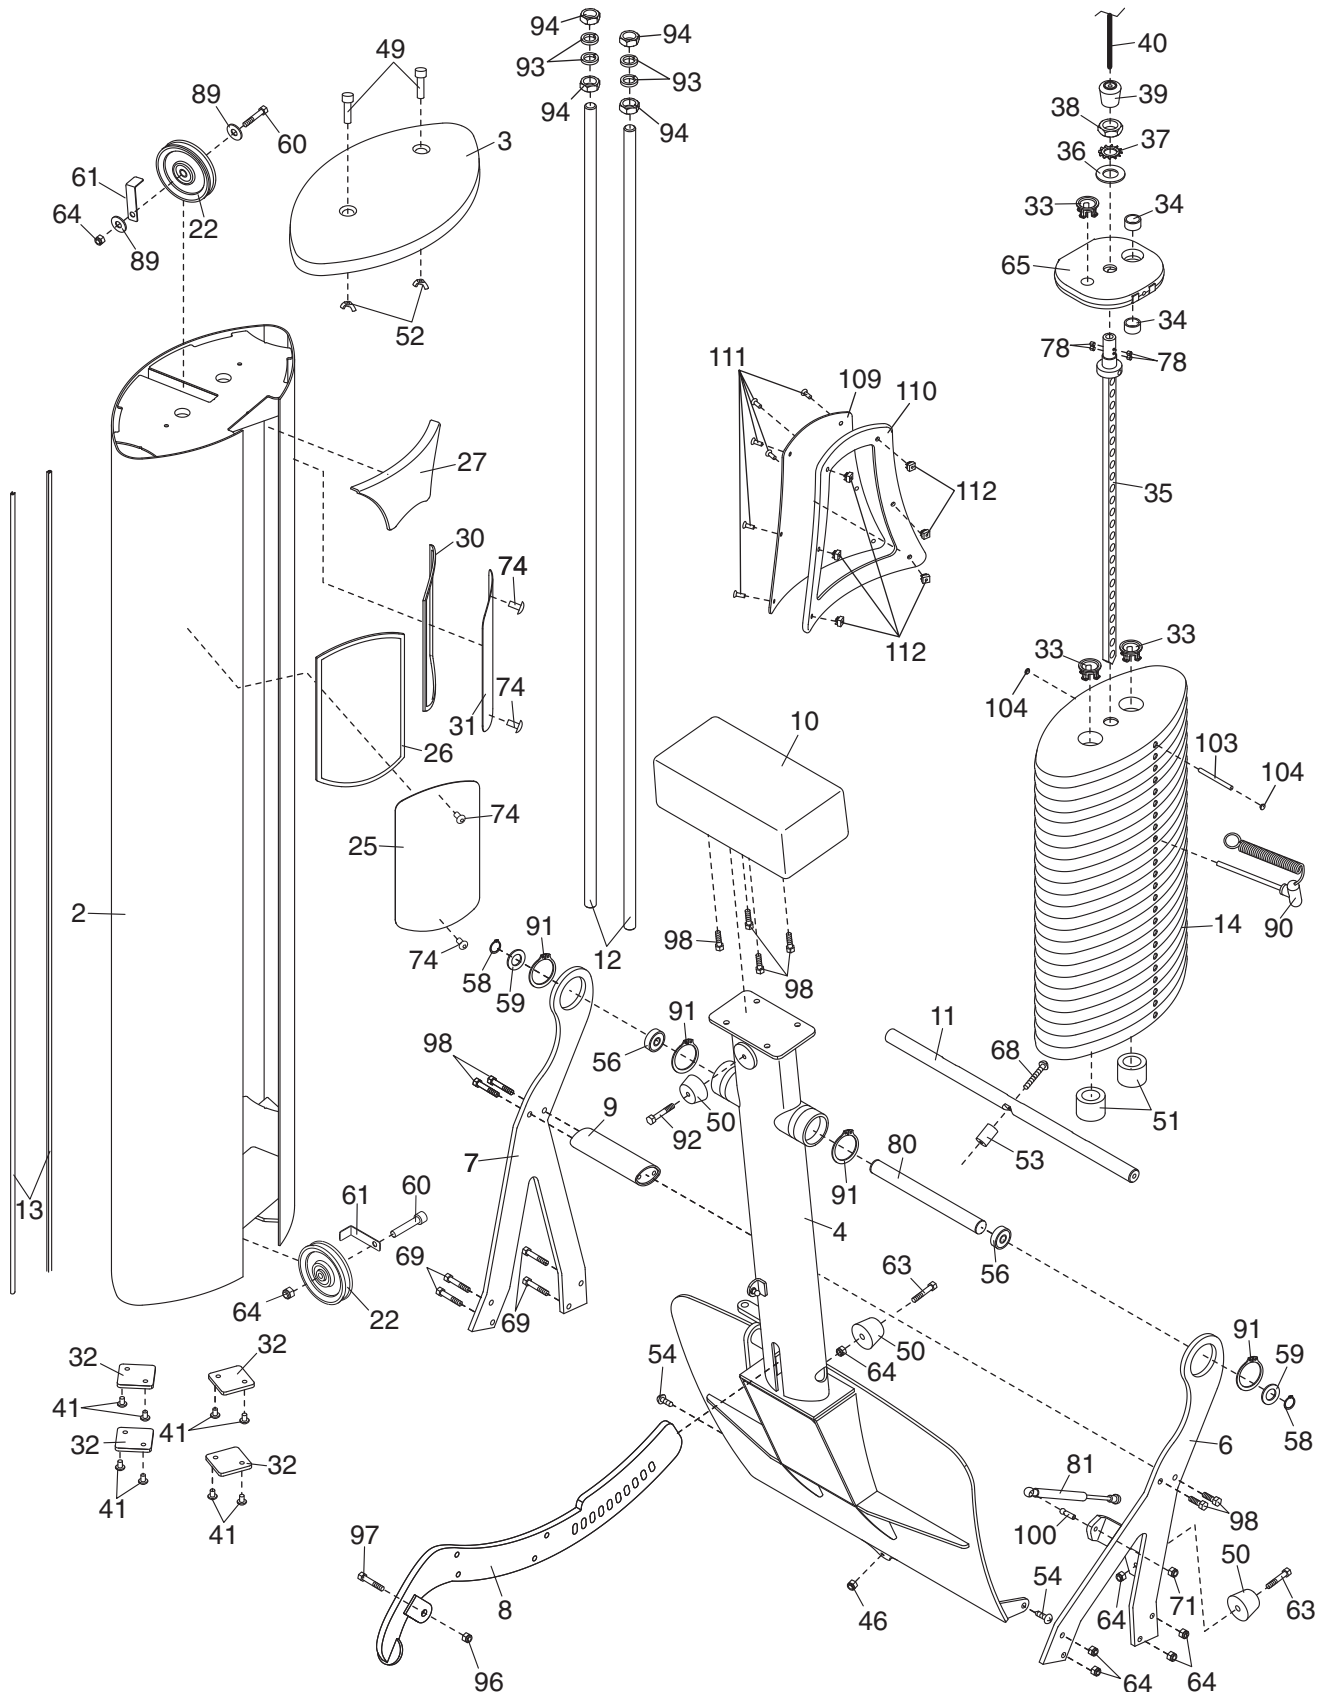

EXPLODED DRAWING B—Model No. GZFI8043.5

R1106A

