

Stereo Speaker Kit

Model No. HRMC98680

Congratulations for purchasing high fidelity speakers for your HEALTHRIDER® treadmill. The patented speakers are amplified and specially designed to boost bass at low volumes for optimal audio quality. To install and operate the speakers, follow the step-by-step instructions in this guide.

Before installing the speakers, please read all precautions and instructions in this guide. If you have any questions after reading this guide, or if there are any damaged parts, please call our **toll-free Customer Hot Line at 1-800-999-3756**, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays).


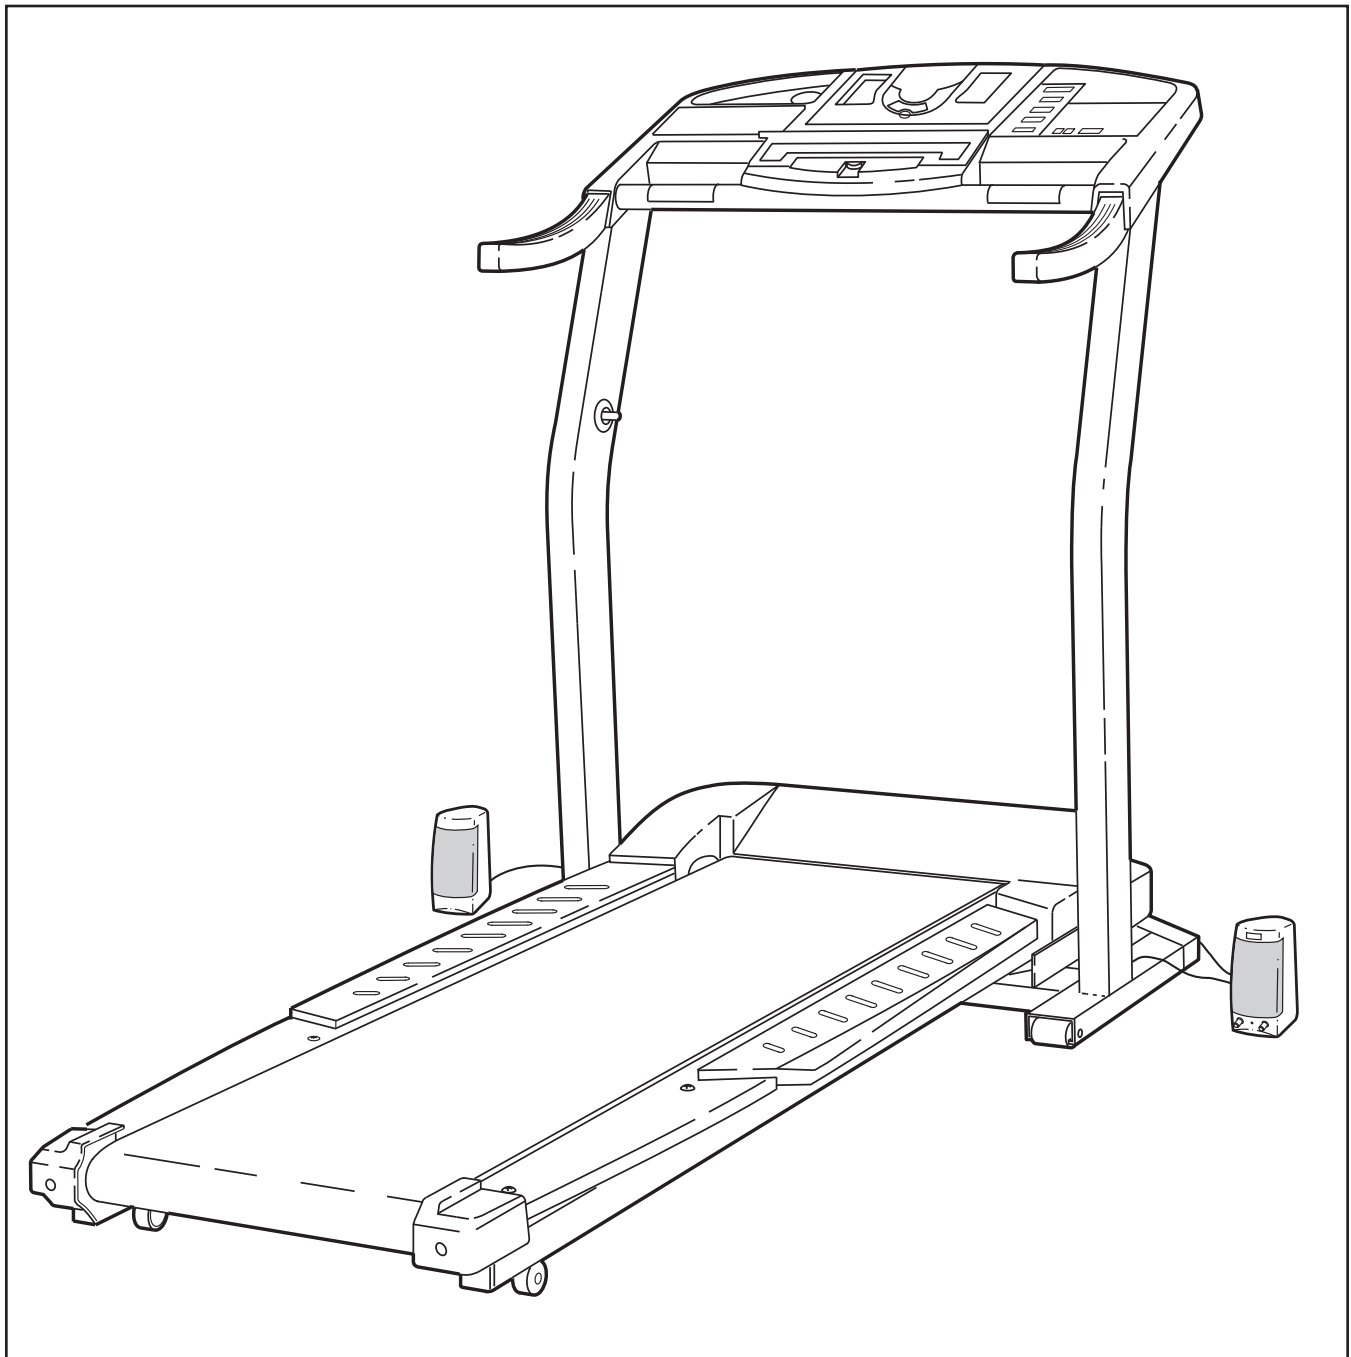 


Diagram of the Speakers

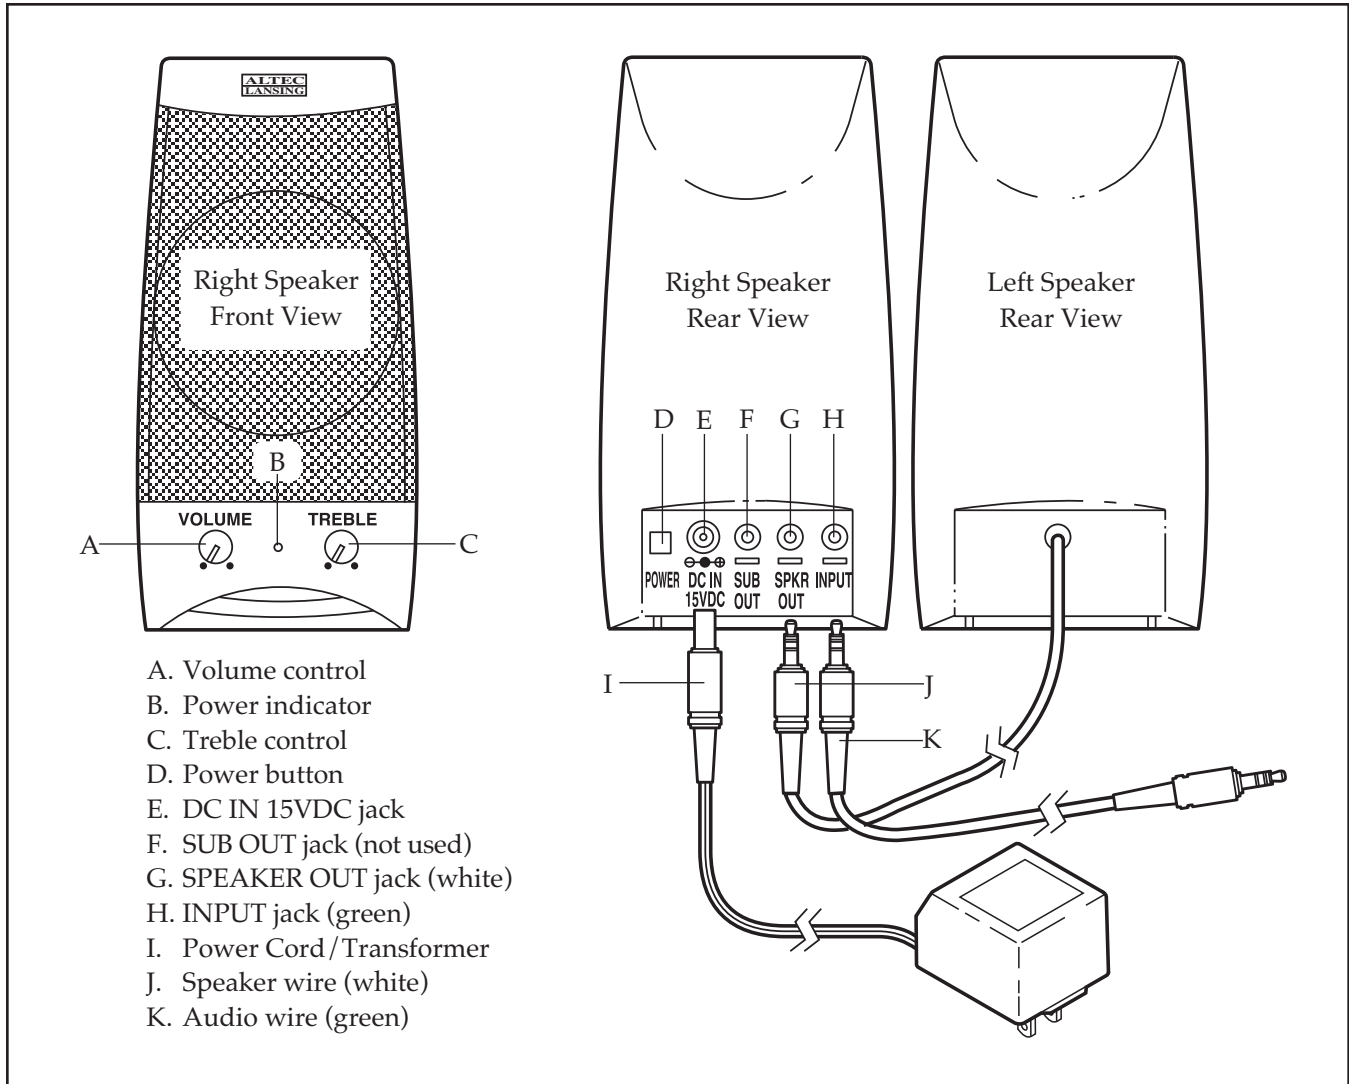 

Important Precautions

1. Keep the power cord, wires, and speakers away from walkways and heated surfaces.
2. Keep all wires away from moving parts.
3. Clean the speakers only with a soft, dry cloth. Never use abrasives or solvents.
4. Keep liquids away from the speakers.
5. The speakers should be serviced by qualified service personnel if : (a) the power cord is damaged, (b) liquid has been spilled into the speakers, (c) the speakers do not operate normally, or (d) the speakers have been dropped or damaged.

How to Install the Speakers

Before beginning installation, lay all parts in a cleared area and remove the packing materials. **Do not dispose of the packing materials until installation is completed.**

 
Place the right and left speakers near the front of the treadmill as shown on the front of this guide. Follow the steps below to connect the speakers.

1

Locate the audio wire (K). Plug one end of the audio wire into the INPUT jack on the right speaker. Plug the other end into the jack on the right upright.

Locate the speaker wire (J) attached to the left speaker. Plug the speaker wire into the SPEAKER OUT jack on the right speaker.


Next, plug the power cord (I) into the DC IN 15VDC jack on the right speaker.

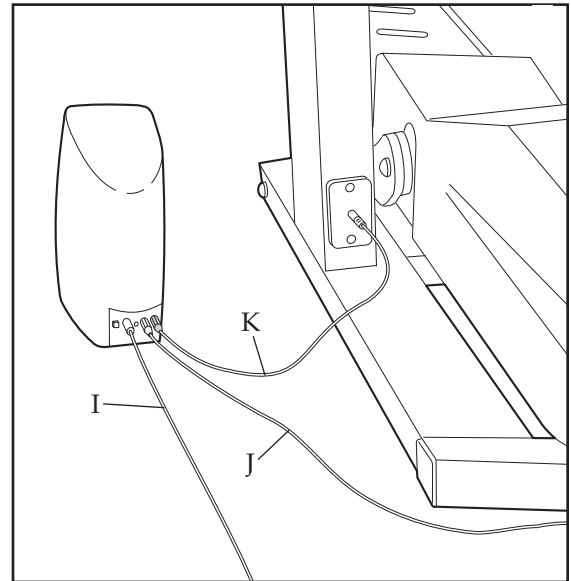

2

Plug the transformer (L) on the power cord into a 120-volt outlet.

 Refer to the opposite page and make sure that all wires are fully plugged into the appropriate jacks.

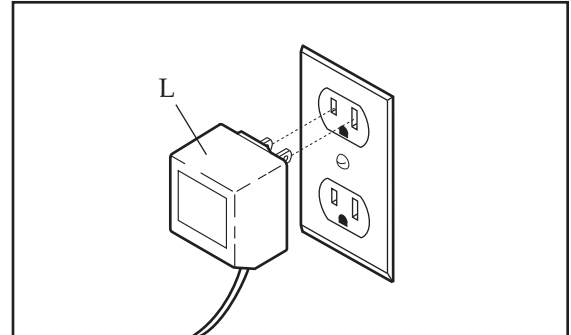

How to Operate the Speakers

1. Press the POWER button on the back of the right speaker. The green indicator on the front of the speaker will light.
2. Rotate the VOLUME control on the right speaker to adjust the volume of both speakers. Note: The volume can also be adjusted with the buttons on the console (see the user's manual included with your CD player).
3. Rotate the TREBLE control to adjust the treble response.

Warranty

ICON Health & Fitness, Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center, products used for commercial or rental purposes, or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in con-

nection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON Health & Fitness, Inc., 1500 S. 1000 W., Logan, UT 84321-9813

HealthRider® is a registered trademark of ICON Health & Fitness, Inc.