


LEGEND™
SPORTING GOODS

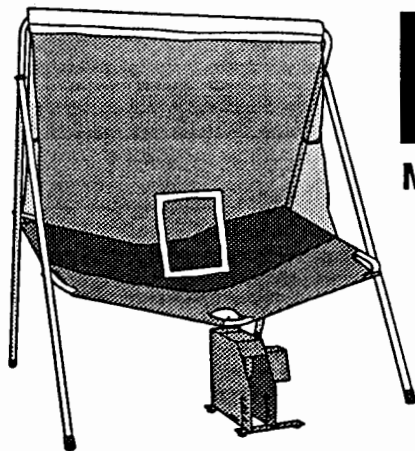

FUNGO™
MOTORIZED FIELDING MACHINE

MODEL NO. LP101430
PATENT PENDING

OWNER'S MANUAL

IMPORTANT SAFETY PRECAUTIONS


WARNING: Use of the FUNGO exposes you to the risk of serious injury from being struck with a ball, coming in contact with moving parts, or electrical shock. Thoroughly read and understand this manual before attempting to use the FUNGO. Save this manual for future reference.

1. Use the FUNGO only as described in this manual.
2. Use the FUNGO only with mature, knowledgeable supervision. Keep small children away from the FUNGO at all times.
3. Do not use the FUNGO if the power cord or plug is worn or damaged. Only three-pronged (grounded) extension cords should be used. Damaged or worn extension cords should not be used.
4. Never touch a wet electrical outlet or plug.
5. Use the FUNGO only on a level, flat surface. Always turn the speed dial to the off position and unplug the power cord before moving the FUNGO.
6. Never approach the FUNGO from the front; always approach from the side.
7. Only one person should use the FUNGO at a time. When the FUNGO is in use or the power cord is plugged in, the area should be kept clear of all obstructions and people other than the user.
8. All users should use good judgement in determining the distance that they stand from the FUNGO, and the speed at which the ball is returned.
9. Never use the FUNGO while you are under the influence of drugs or alcohol.
10. Use only standard-size baseballs when the FUNGO is adjusted to the baseball setting. Use standard-size softballs when in the softball setting. Only one type of ball should be used at a time. Polyurethane pitching balls are recommended. Never use wet balls. Do not place objects other than balls in the FUNGO at any time.
11. If a ball or other object becomes lodged in the FUNGO, approach the FUNGO from the side and unplug the power cord before attempting to dislodge the object.
12. Keep hands and feet away from the throwing wheel while the throwing wheel is turning or the power cord is plugged in. Keep hair and loose clothing away from the throwing wheel at all times.
13. Always turn the speed dial to the off position and wait for the throwing wheel to stop before adjusting the throwing angle.
14. Never use the FUNGO while it is raining or during an electrical storm when lightning is present.
15. Never leave the FUNGO unattended while the power cord is plugged in. Turn the speed dial to the off position and unplug the power cord when you are finished using the FUNGO.
16. When not in use, the FUNGO should be secured against unauthorized and unsupervised use.

ASSEMBLY

Congratulations for selecting the versatile FUNGO™ Motorized Fielding Machine. If you find that a part is missing, or if you have questions, please do not call the store where you purchased the FUNGO. For immediate assistance, call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays).

Set all parts of the FUNGO in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. For help identifying the small hardware used in assembly, see the drawings below. The number in parenthesis below each part refers to the key number of the part. The second number refers to the quantity needed for assembly. **Assembly requires two adjustable wrenches (not included).**

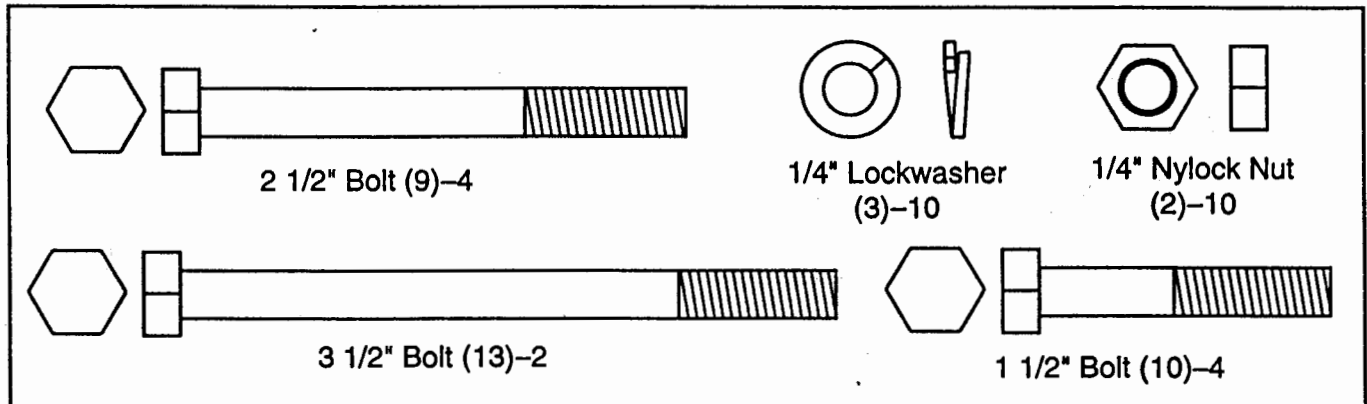


In the following four drawings, note that each tube is labeled with a letter followed by a number in parenthesis. The letter refers to the mark that is stamped on the tube for easy identification; the number in parenthesis refers to the key number of the tube.

1. Assemble the following parts as shown in the drawing at the right:

Metal Clip (8)
 Rt. 90° Tube w/Fastener—G (33)
 30° Tube w/Fastener—I (31)
 Lt. 90° Tube w/Fastener—H (32)
 37 1/2" Tube—J (37)
 Lt. 90° Tube—K (34)
 30° Tube—M (36)
 Rt. 90° Tube—L (35)


Note: The 37 1/2" Tubes—J (37) will fit loosely until step 3 is completed. The other Tubes will be attached with the Metal Clips (8).

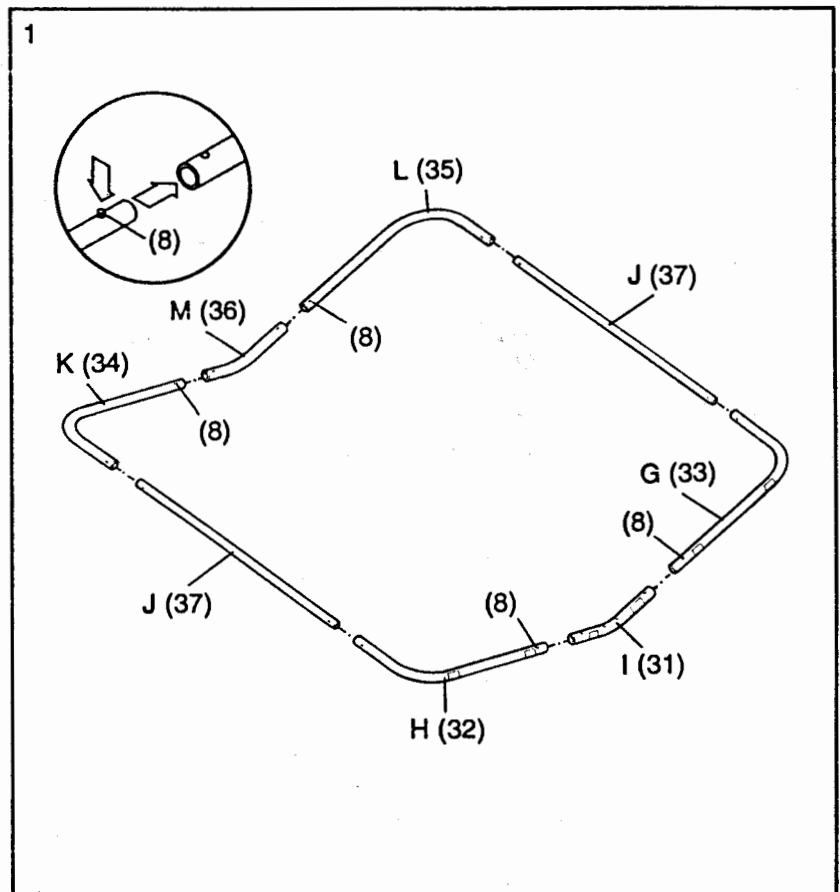

2. Assemble the following parts as shown in the drawing at the right:

1/4" Nut (2)
 1/4" Lockwasher (3)
 1/4" x 2 1/2" Bolt (9)
 1/4" x 1 1/2" Bolt (10)
 "I" Plate (11)
 40" Tube—A (38)
 27 1/2" Tube—B (43)
 33" Tube—C (41)
 38" Tube—D (42)
 Short 90° Tube—E (45)


Note: Do not overtighten the 1/4" Nuts (2) or the Tubes will be crushed. The 1/4" x 2 1/4" Bolts (9) will hold the Tubes loosely until step 3 is completed.

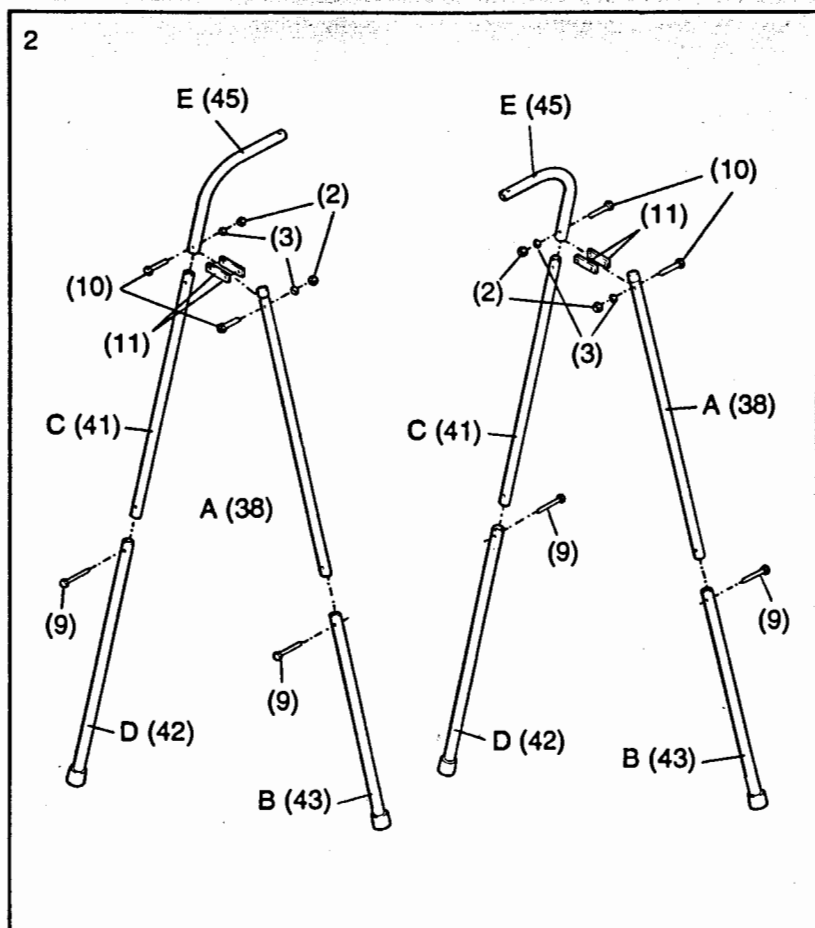

3. Assemble the following parts as shown in the drawing at the right:

1/4" Nut (2)
 1/4" Lockwasher (3)
 1/4" x 2 1/4" Bolt (9)
 Metal Clip (8)
 Short 90° Tube—E (45)
 42" Tube—F (39)


Note: Do not overtighten the 1/4" Nuts (2) or the Tubes will be crushed. The 42" Tube—F (39) will be attached with the Metal Clips (8).

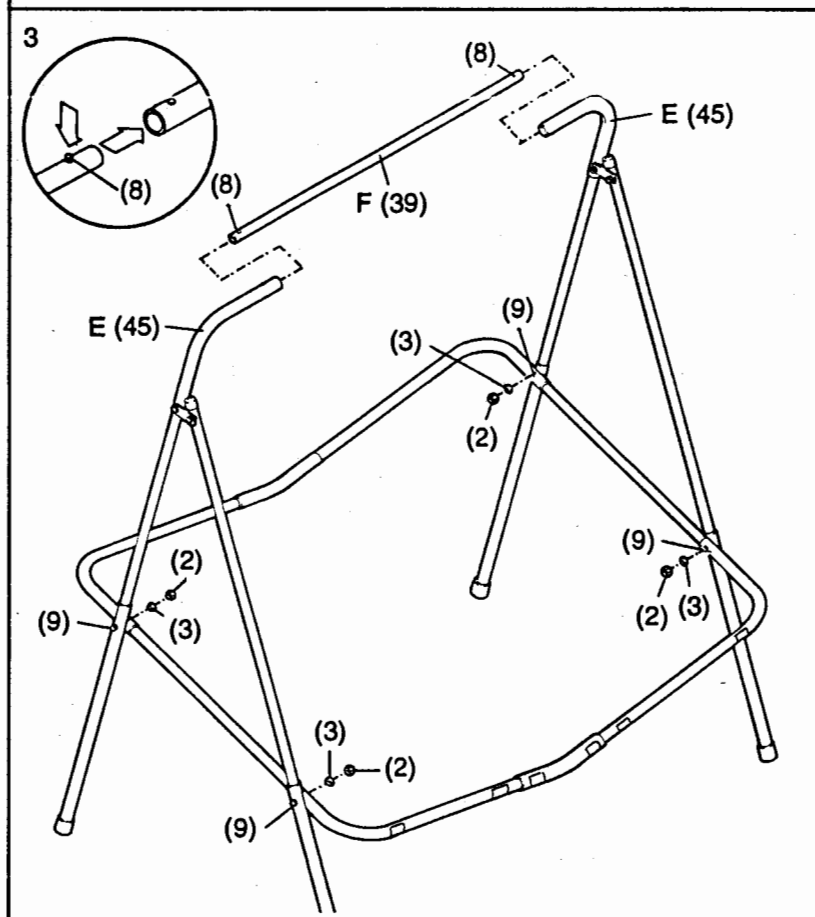

4. Assemble the following parts as shown in the drawing at the right:

Net (1)
1/4" Nut (2)
1/4" Lockwasher (3)
1/4" x 3 1/2" Bolt (13)
Motor Housing (25)
30° Tube w/Fastener—I (30)

Note: To attach the Net (1), first pull apart the fastener strips on the Net. Wrap the strips around the tubes and press the strips back together. Do not overtighten the 1/4" Nuts (2) or the Tube will be crushed.

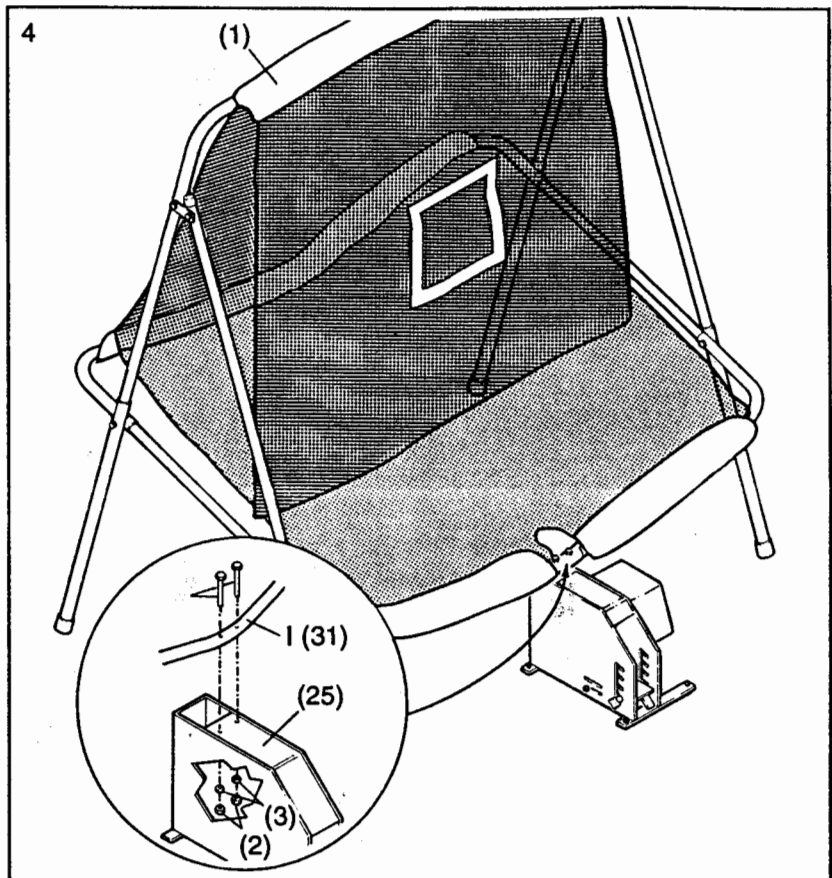


ADJUSTING AND OPERATING THE FUNGO

PLUGGING IN THE POWER CORD


This product must be grounded. If it malfunctions, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product has a power cord with an equipment-grounding conductor and a grounding plug. **Plug the power cord into an outlet that is properly installed and grounded in accordance with all local codes and ordinances. WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electric shock.** Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product—if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit, and has a grounding plug like the plug illustrated in Drawing 1. A temporary adapter like the adapter illustrated in Drawing 2 may be used to connect this plug to a 2-pole receptacle as shown in Drawing 2 if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Drawing 1) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter **must be connected to a permanent ground** such as a properly grounded outlet box cover. When ever the adapter is used it **must be held in place by a metal screw.** **Some 2-pole receptacle outlet box covers are not grounded. Contact a qualified electrician to determine if the outlet box cover is grounded before using an adapter.**

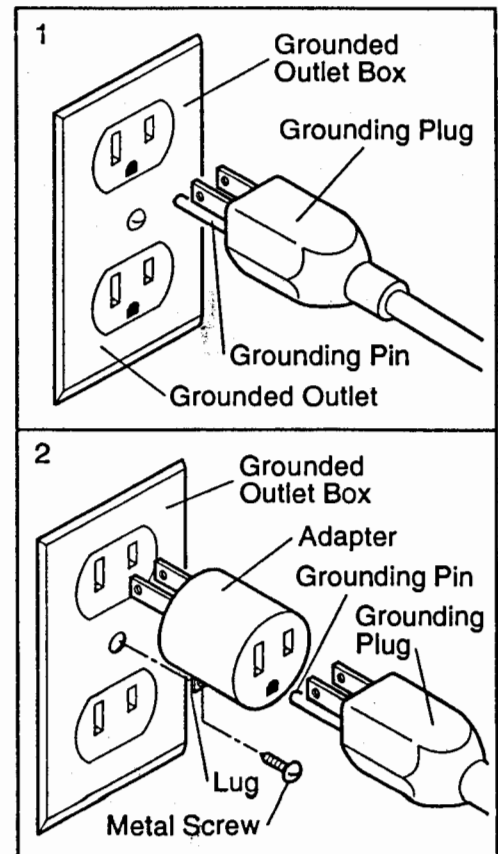


ADJUSTING THE THROWING ANGLE

WARNING: Turn the speed dial to the off position and wait for the throwing wheel to stop before adjusting the throwing angle. The FUNGO will throw fly balls, line drives or grounders, depending on the angle of the Ball Guide (28). To adjust the Ball Guide, first loosen the Guide Knob (27). Hold the tab on the Ball Guide and move the Ball Guide to the desired slot in the Motor Housing (25). Tighten the Guide Knob.

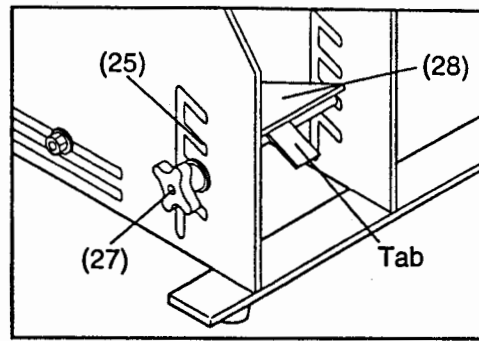

ADJUSTING THE BALL SPEED

The speed of the ball is controlled by turning the speed dial on the back of the motor housing. The farther clockwise the speed dial is turned, the faster the ball will be thrown. **WARNING:** Select low speed settings until you are familiar with the operation of the FUNGO.

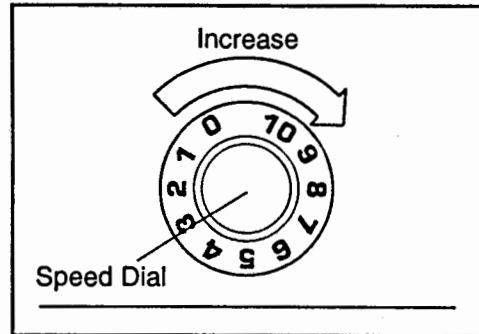

OPERATING THE FUNGO

WARNING: Use only standard-size baseballs (or softballs) with the FUNGO. Only one type of ball should be used at a time. Polyurethane pitching balls are recommended. Never use wet balls. Do not place objects other than balls in the FUNGO at any time.

PITCHING

Stand at an appropriate distance from the FUNGO and throw the ball at the strike zone on the net (the red and white rectangle). The ball will automatically drop into the hole in the bottom of the net and be thrown back. The ball can be thrown back as either a pop fly, a line drive or a grounder, depending on the angle of the ball guide (see ADJUSTING THE THROWING ANGLE above). Aim at specific areas of the net in order to improve your accuracy and control.

FIELDING

The FUNGO can be used for fielding practice by pitchers, infielders and outfielders. Set the FUNGO so that it will throw the ball at the desired angle and speed (see ADJUSTING THE THROWING ANGLE and ADJUSTING THE BALL SPEED above).

For infield practice, drills can include fielding the ball straight on, going to the right, going to the left, and "charging" a slow-moving ball. These kinds of drills will improve your range. After catching the ball, set, rotate and throw the ball back into the net. Vary the distance that you stand from the FUNGO to allow for the fielding of "short hops."

For outfield practice, drills can include fielding fly balls and bouncing balls. Field balls moving in every direction—right, left, forward and backward. Depending on the distance that you stand from the FUNGO, it may be necessary to throw the ball to another player who can throw the ball back into the net.

BATTING


Although not its primary purpose, the FUNGO can be used as a "soft toss" batting machine. With practice, it is possible to consistently hit the ball into the net so that the ball will continue to be thrown as a "soft toss." **WARNING:** When using the FUNGO for batting, use extreme caution to adjust the throwing angle and ball speed so that the ball will be thrown slowly out in front of the net.

CONVERTING THE FUNGO FOR USE WITH SOFTBALLS

To use the FUNGO with softballs, the Ball Guide (28) must be moved to the **lower slot** in the Motor Housing (25). Remove the 1/4" Nut (2) and 5/16" Washer (29) from the end of the indicated 1/2" x 5" Bolt (30). Slide the Bolt out of the Motor Housing and the Ball Guide. Insert the Bolt through the lower slot in the Motor Housing and through the Ball Guide. Reattach the Nut and Washer to the Bolt. Do not overtighten the Nut; the Ball Guide must be able to pivot and slide freely.

In addition, the Baseball Chute (26) must be removed from the Motor Housing (25). Using an adjustable wrench, remove the 1/4" Nylock Nuts (4) from the four 1/4" x 1/2" Screws (24). It may be necessary to hold the Screws stationary using an allen wrench in order to remove the Nuts. Slide the Baseball Chute up out of the Motor Housing. Keep the Nuts and Screws in a secure place.

To use the FUNGO with baseballs, reattach the baseball chute and move the ball guide to the **upper slot** in the motor housing.

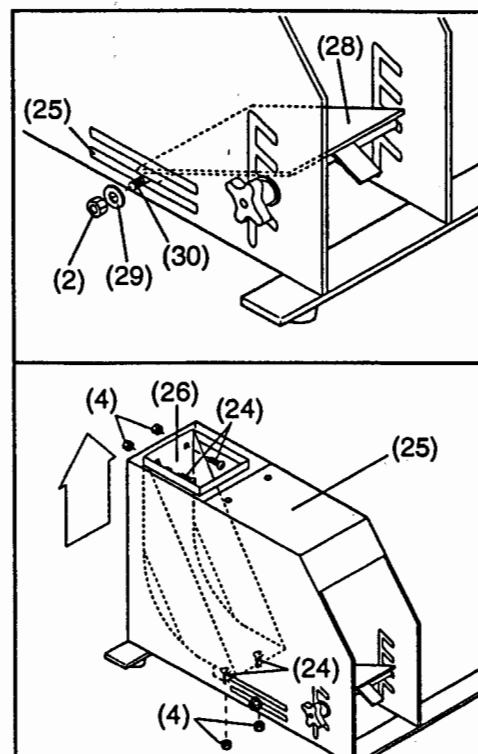

MAINTENANCE OF THE FUNGO


Inspect and tighten all parts of the FUNGO regularly. Never leave the FUNGO outside overnight or when it is raining or snowing. If particles appear in the bottom of the motor housing, unplug the power cord and sweep or vacuum the particles out. The frame, net and motor housing can be cleaned using a soft cloth, water and mild detergent. Do not use solvents or abrasive cleaner. **WARNING: When cleaning the motor housing, unplug the power cord and exercise caution to avoid getting the motor wet.**

PART LIST—Model No. LP101430

Key No.	Qty.	Description	Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Net	18	1	Power Cord	35	1	Rt. 90° Tube
2	13	1/4" Nut	19	1	Speed Control	36	1	30° Tube
3	12	1/4" Lockwasher	20	1	Wheel	37	2	37 1/2" Tube
4	6	1/4" Nylock Nut	21	1	Retaining Screw	38	2	40" Tube
5	2	#10 Nylock Nut	22	4	Rubber Pad	39	1	42" Tube
6	2	1/4" Washer	23	4	#6 x 5/8" Bolt	40	2	Rubber Cap
7	4	#6 Nylock Nut	24	6	1/4" x 1/2" Screw	41	2	33" Tube
8	6	Metal Clip	25	1	Ball Return Housing	42	2	38" Tube
9	4	1/4" x 2 1/4" Bolt	26	1	Ball Chute	43	2	27 1/2" Tube
10	4	1/4" x 1 1/2" Bolt	27	1	Guide Knob	44	4	Foot Cap
11	4	"I" Plate	28	1	Ball Guide	45	2	Short 90° Tube
12	2	1/4" x 6" Bolt	29	4	5/16" Washer	46	1	Strain Relief
13	2	1/4" x 3 1/2" Bolt	30	2	1/2" x 5" Bolt	47	1	Speed Dial
14	6	Fastener	31	1	30° Tube w/Fastener	48	1	3/8" Thin Nut
15	1	Cover Plate	32	1	Lt. 90° Tube w/Fastener	49	1	3/8" Star Washer
16	1	Motor	33	1	Rt. 90° Tube w/Fastener	#	1	Owner's Manual
17	1	Shield	34	1	Lt. 90° Tube			

Note: "#" indicates a non-illustrated part.

EXPLODED DRAWING—Model No. LP101430

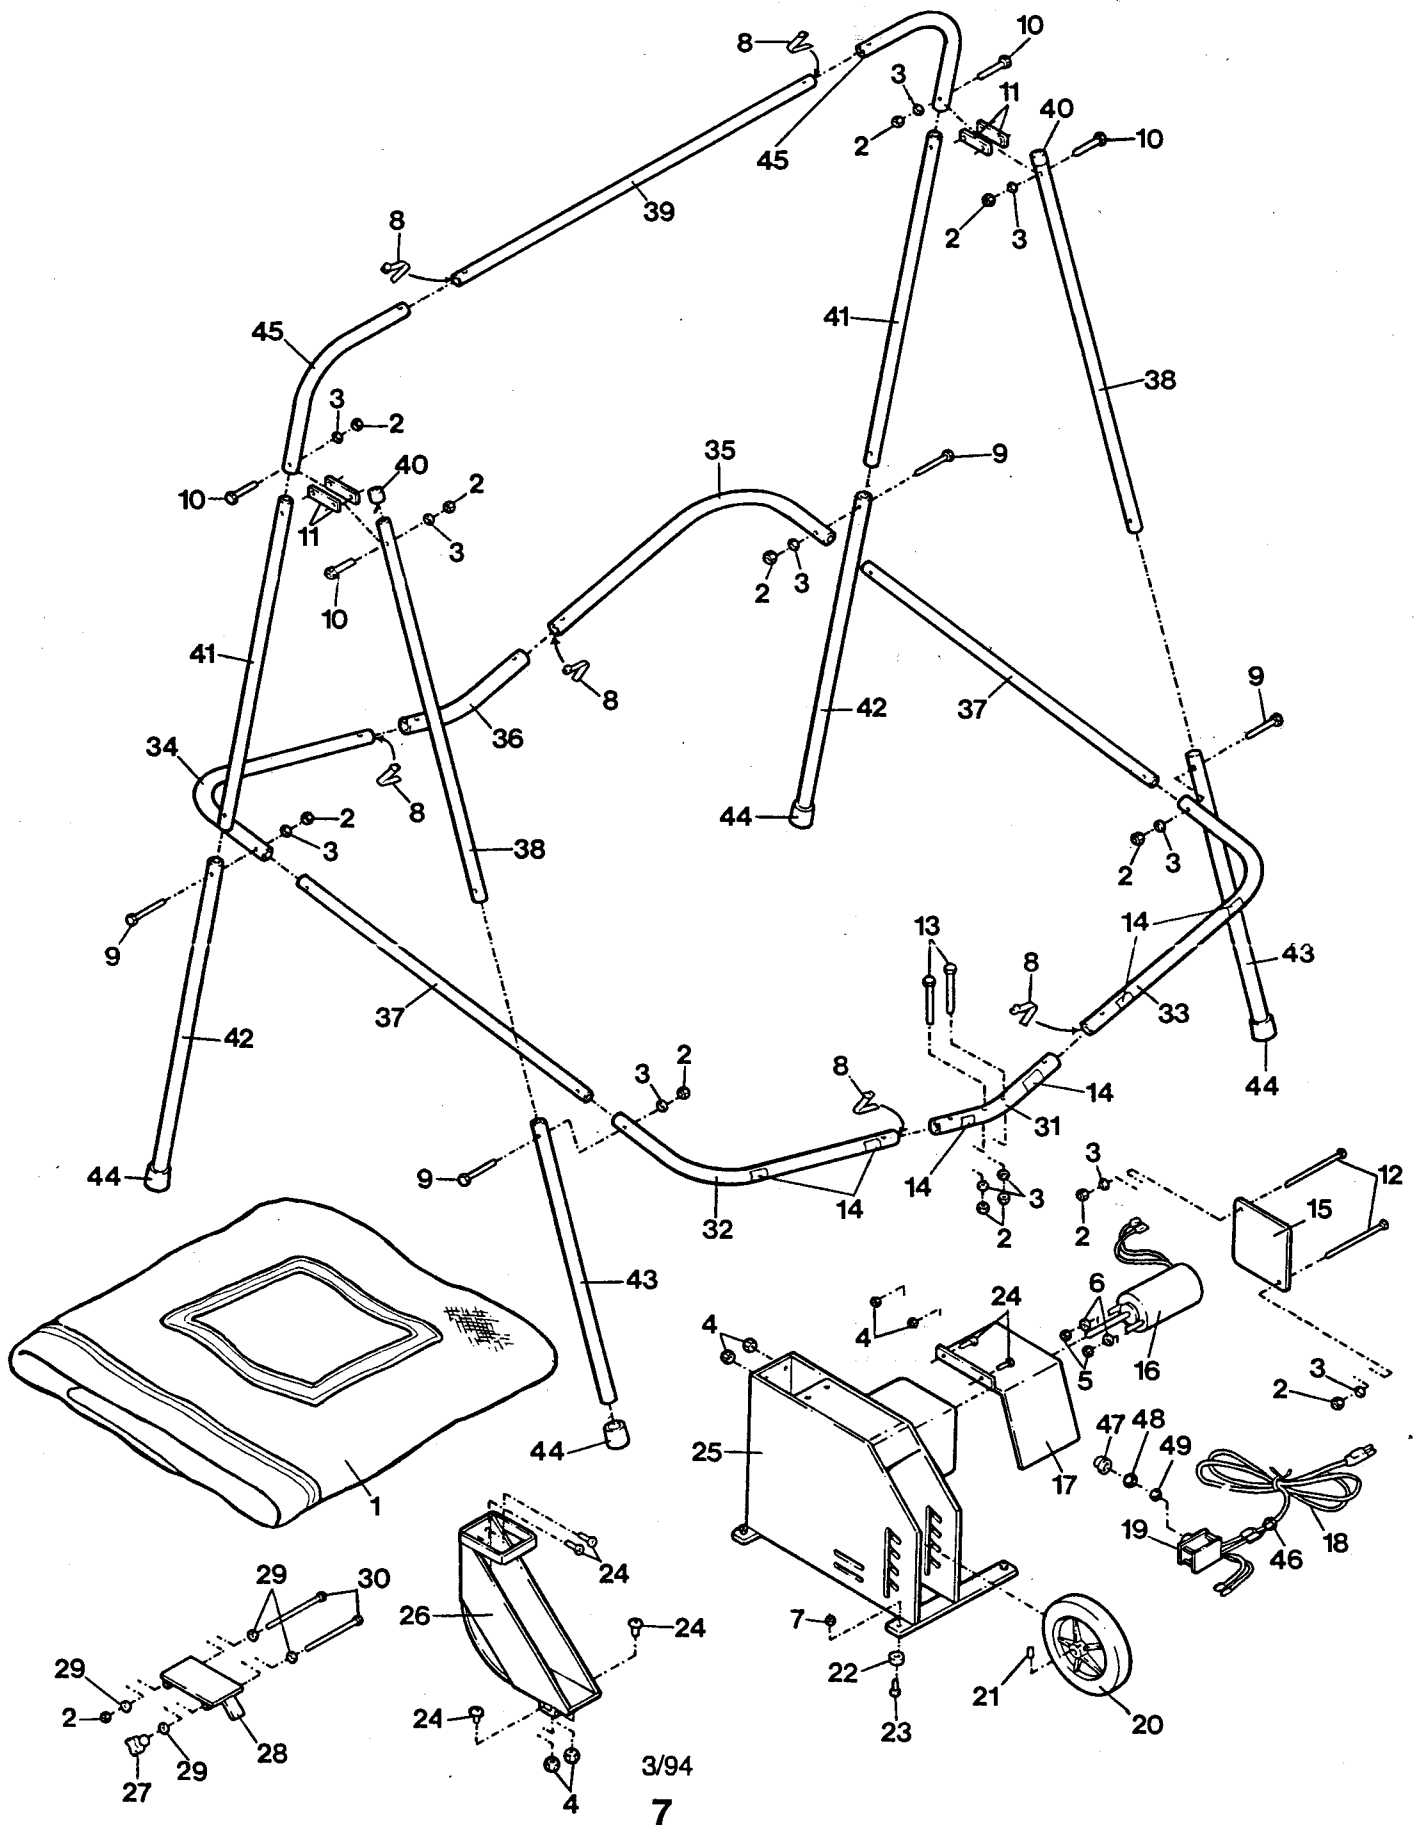

ORDERING REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information when calling:

1. The MODEL NUMBER of the product (LP101430).
2. The NAME of the product (LEGEND® FUNGO Motorized Fielding Machine).
3. The SERIAL NUMBER of the product (see the front cover of this manual).
4. The KEY NUMBER and DESCRIPTION of the part(s) from page 6 of this manual.

LIMITED WARRANTY

Proform Fitness Products, Inc. ("PROFORM"), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. PROFORM's obligation under this warranty is limited to replacing or repairing, at PROFORM's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by PROFORM at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by PROFORM. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by a PROFORM authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by PROFORM.

PROFORM IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES OF WHATSOEVER NATURE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ANY AND ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

PROFORM FITNESS PRODUCTS, INC., 1500 S. 1000 W., LOGAN UT 84321-9813