


CADENCE™ 5.0

ELECTRONIC ERGOMETER

Model No. TL5.0
Serial No.
Write the serial number in the
space above for reference.

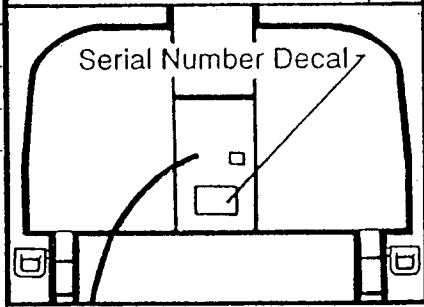

Warranty 2

Safety Precautions 3


Operation 5

Maintenance and Trouble-Shooting 6

Conditioning 8

Part List 10

Part Ordering 12

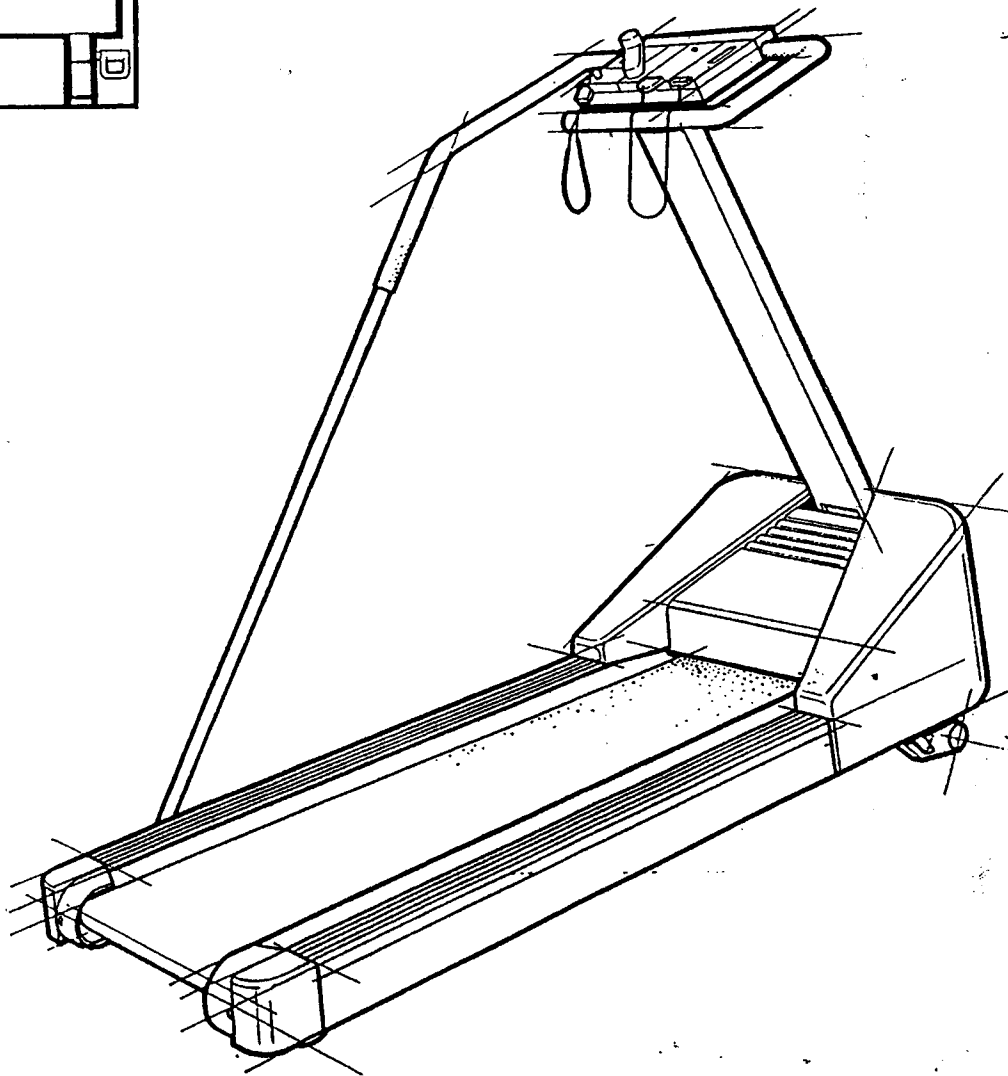

weslo, inc™
A Weider Health and Fitness, Inc. Company

OWNER'S MANUAL

CAUTION: Read all instructions carefully before using this product. Retain this Owner's Manual for reference.

Part No. 046226 4/90

LIMITED WARRANTY

Weslo, Inc. ("Weslo") warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. Weslo's obligation under this Warranty is limited to replacing or repairing, at Weslo's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by Weslo at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by Weslo. Pre-authorization may be obtained by calling Weslo's Customer Service Department at 1-800-99WESLO. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by a Weslo authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by Weslo.

WESLO IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES OF WHATSOEVER NATURE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ANY AND ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

WESLO INC., P.O. BOX 10, LOGAN, UT 84321

WARNING: Before beginning this or any exercise program consult your physician. This is especially important for individuals over the age of 35 or persons with pre-existing health problems. Read all instructions before using. Weslo assumes no responsibility for personal injury or property damage sustained by or through the use of this Weslo product.

CADENCE 5.0TM

ELECTRONIC ERGOMETER

IMPORTANT SAFETY PRECAUTIONS

WARNING: To reduce the risk of burns, fire, electric shock or injury to persons, read the following important safety precautions and information before operating the treadmill.

1. Position the treadmill on a clear, level surface with a minimum of 8 feet of clearance behind the treadmill. Do not place the treadmill on thick carpet, near water or outdoors.
2. Plug the treadmill power cord directly into a grounded circuit carrying 12 amps or more. (See the TREADMILL OPERATION section of this manual for proper grounding instructions.) Due to the power requirements of this treadmill, no other appliance should be on the same circuit. Keep the power cord away from heated surfaces. If an extension cord is needed, use only the type specified on the power cord decal.
3. Never operate the treadmill if the cord or plug are damaged, or if the treadmill is not working properly. (Refer to the BEFORE YOU BEGIN section of this manual for instructions if the treadmill is not working properly.)
4. Never start the treadmill while you are standing on the walking belt. Always hold the handrail when walking or running on the treadmill.
5. Keep small children away from the treadmill during operation. Never leave the treadmill unattended while it is running. Always turn the treadmill power off after use.
6. Always wear appropriate clothing when using the treadmill. Do not wear flowing clothing that could become caught in the treadmill. *Always wear running or aerobic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals.* Athletic support clothes are also recommended for both men and women.
7. Never drop or insert any object into any opening.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Never allow more than one (1) person on the treadmill at a time. Use the treadmill only as described in this manual.
10. Always unplug the power cord before performing the maintenance and adjustment procedures described in this manual. Never remove the motor hood unless instructed to do so by an authorized service representative. Servicing other than the procedures in this manual should be performed by an authorized service representative only.


SAVE THESE INSTRUCTIONS

BEFORE YOU BEGIN

Thank you for purchasing a Weslo CADENCE 5.0 Electronic Ergometer treadmill. The CADENCE 5.0 combines advanced technology with innovative design to let you enjoy one of the best forms of cardiovascular exercise at your convenience, in the privacy of your own home.

This manual is designed to help you understand the easy assembly and operation of this treadmill. Read this manual carefully before initial use of the treadmill. If you have additional questions, please call one of our Customer Service representatives toll-free at 1-800-99WESLO (999-3756), Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the model number and serial number of your treadmill before calling. The model number is listed on the front cover of this manual. The serial number is recorded on a decal on the frame (see the drawing on the front cover for the location of the decal). If possible, place your telephone near the treadmill for easy reference.


Before reading the following sections of this manual, please review the drawing below and familiarize yourself with the parts labeled.

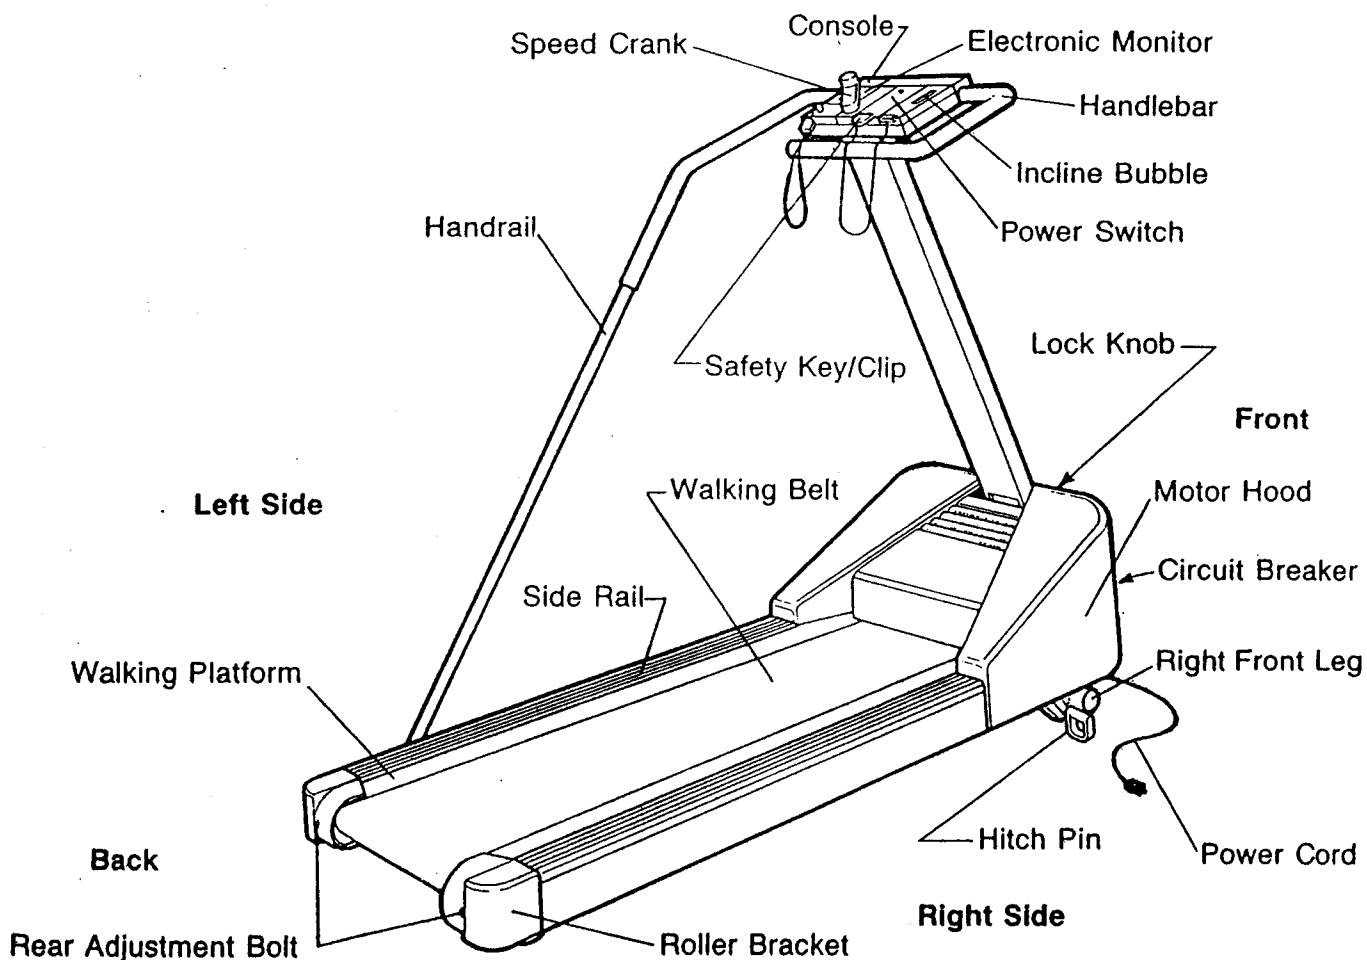


ASSEMBLY

Set the treadmill in a clear area on the floor and remove all packing materials. **Be sure that all parts are included before disposing of the packing materials.** Please read all instructions before beginning assembly. Refer to the Exploded Drawing and the Part List on pages 10 and 11 for help in part identification. Assembly can be completed using the tool provided.


1. Raise the Handrail Upright (3) to a vertical position. Insert the Lock Knob (4), with the Lock Knob Washer (5), into the Handrail Upright, and turn the Knob clockwise until almost tight. Leave a little play in the Handrail Upright for the following steps.

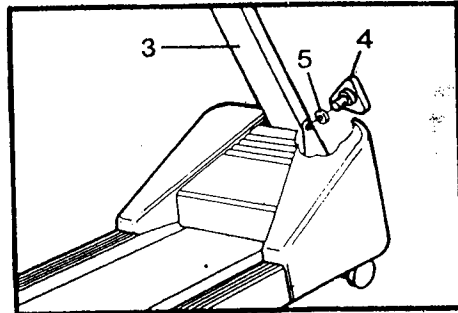

2. Slide the upper end of the Handrail (56) into the opening in the left side of the Console (1). Insert the Short Handrail Screw (17), with a Flat Washer (47), through the metal plate under the Console, and tighten the Screw into the Handrail. Note: If the Handrail cannot be inserted into the Console far enough to attach the Screw, roll back the Foam Grip (7) slightly.

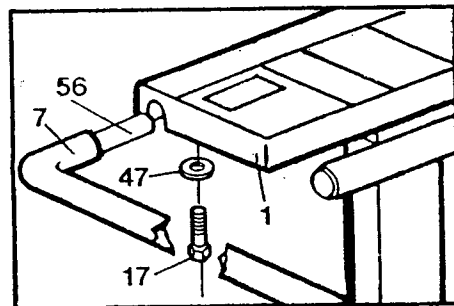

3. Align the hole in the lower end of the Handrail (56) with the hole in the Frame (20). Attach the Handrail with the Long Handrail Screw (9), Formed Washer (37) and Flat Washer (47). Tighten the Lock Knob (see step 1).

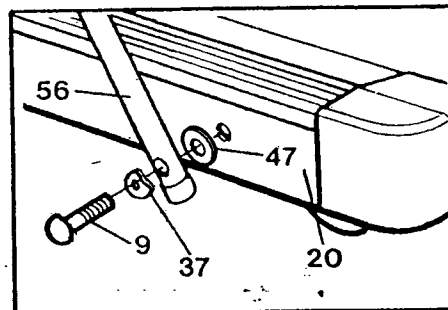

Make sure that all parts are tightened securely before using the treadmill.


TREADMILL OPERATION

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. **The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.**

DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in Drawing 1. A temporary adapter that looks like the adapter illustrated in Drawing 2 may be used to connect this plug to a 2-pole receptacle as shown in Drawing 2 if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Drawing 1) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter **must** be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it **must be held in place by a metal screw**. **CAUTION:** Some 2-pole receptacle outlet box covers are not grounded. Contact a qualified electrician to determine if the outlet box cover is grounded before using an adapter.

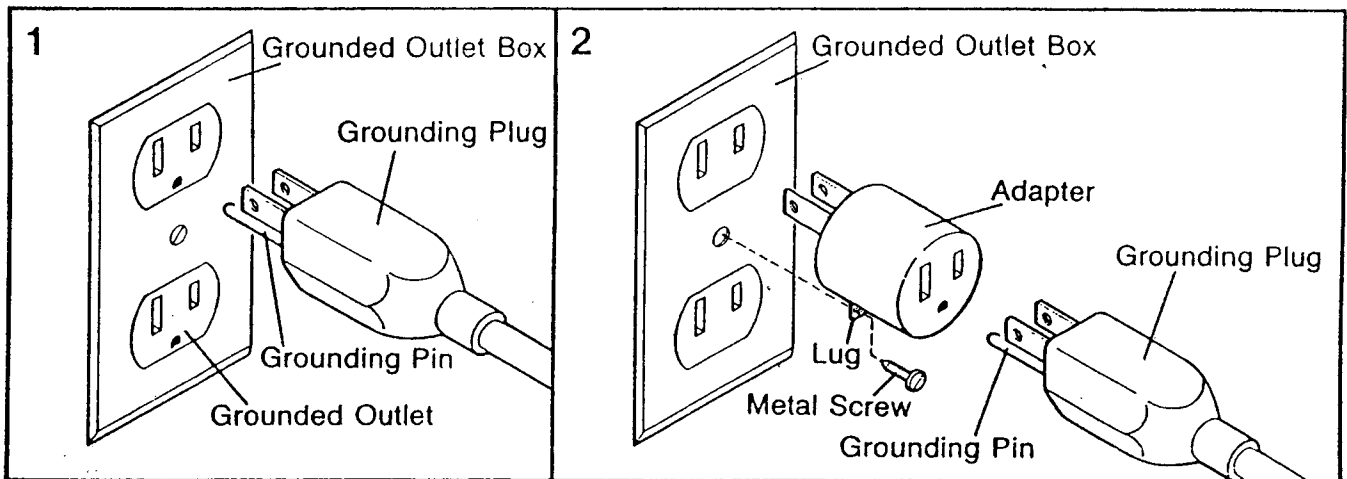

OPERATING INSTRUCTIONS


Read the instructions below carefully before starting the treadmill.

1. Step onto the Side Rails and hold the Handrail with an overhand grip.
2. Attach the Clip on the Safety Key to the waistband of your clothing. Insert the Key into the Power Switch. To turn the power on, move the Key to the right until the power indicator lights.
IMPORTANT: For your safety, always wear the Clip when using the treadmill. If you slip or fall while exercising, the Key will be disengaged from the Switch, instantly turning the power off.
3. Carefully step onto the moving Walking Belt and begin walking.
4. Turn the Speed Crank until the Walking Belt is moving at the desired speed. Turn the Crank counterclockwise to increase the speed, or clockwise to decrease the speed. Note: Turn the Crank only when the Walking Belt is moving. Do not turn the Crank too far or the Cable may be damaged.
5. To turn the treadmill off, move the Safety Key to the left. Remove the Key from the Power Switch.

INCLINE ADJUSTMENT

To increase or decrease the level of exercise difficulty, the angle of the treadmill can be adjusted in the following manner:

1. **Unplug the power cord.** Lay the treadmill on it's left side. Do not drop the treadmill.
2. Remove the hitch pin from the right leg and adjust the leg to the desired height. Replace the hitch pin and carefully tip the treadmill upright.
3. Lay the treadmill on it's right side and adjust the left leg in the same manner. Make sure that both legs are at the same height. **Plug the power cord in.**

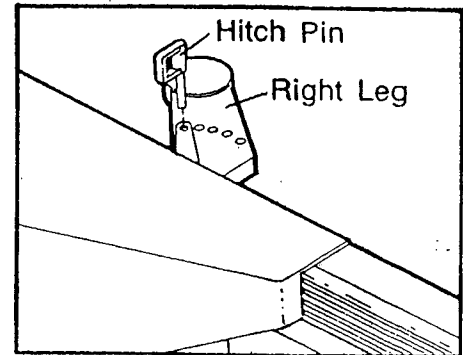

There is a bubble mounted on the right side of the console to measure the incline of the treadmill. The bubble can be adjusted, if necessary, by placing the hitch pins in the center holes of the front legs and then pressing the ends of the bubble until the bubble shows level 3.

MAINTENANCE AND TROUBLE-SHOOTING


This treadmill is designed to be virtually maintenance-free. Check all parts periodically to ensure that they are tightened securely. Outside surfaces of the treadmill can be cleaned using a damp cloth and mild, non-abrasive detergent. Do not allow liquids to come in contact with the console.

WALKING BELT ADJUSTMENT


To prevent damage to the Walking Belt, always keep the Belt centered during operation. Stand beside the treadmill and turn the treadmill on at medium speed. Observe the spaces between the edges of the Walking Belt and the Side Rails. If the Belt is closer to one Side Rail than to the other, center the Belt in the following manner:

1. Locate the Rear Adjustment Bolt and the Allen Wrench. **CAUTION: Keep your hands away from the moving Walking Belt or serious injury could result.**

2. A. If the Walking Belt has shifted to the left side:
Turn the left Adjustment Bolt clockwise and the right Adjustment Bolt counterclockwise, 1/8 of a turn at a time, until the Belt moves to the center.

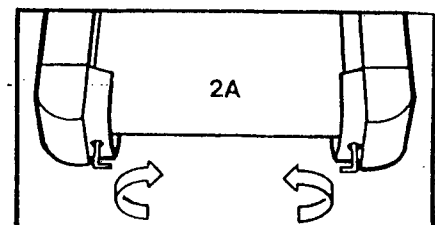

- B. If the Walking Belt has shifted to the right side:
Turn the left Adjustment Bolt counterclockwise and the right Adjustment Bolt clockwise, 1/8 of a turn at a time, until the Belt moves to the center.

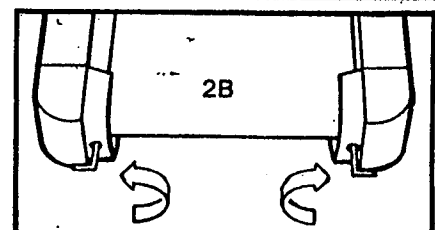





If the Walking Belt slips during operation, the tension should be adjusted. Turn both Adjustment Bolts clockwise an equal amount until the Belt no longer slips. Be careful to keep the Belt centered. **Do not over-tighten the Bolts** or the Belt may be stretched.

To check for proper Walking Belt tightness, **unplug the power cord** and lift the sides of the Belt. You should be able to lift both sides approximately 2-3 inches off of the Walking Platform. The center of the Belt should remain just at the surface of the platform, causing the Belt to bow.

The Allen Wrench can be stored on one of the Roller Brackets using the adhesive Tool Clamp included.


SILICONE APPLICATION

To maintain the low-friction quality of the Walking Belt and reduce treadmill wear, a **non-oil, non-petroleum base silicone lubricant** should be applied generously to the **Walking Platform**. (Silicone lubricant is available at most hardware and automotive stores.) It is **very important** to apply silicone lubricant before initial use of the treadmill. Lubricant should also be applied after every 10 hours of use or whenever a decrease in performance is noticed. **Unplug the Power Cord**, lift each side of the Walking Belt and apply the lubricant generously to the area indicated in the drawing.

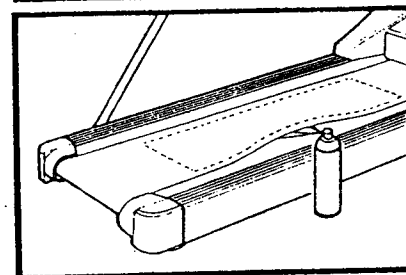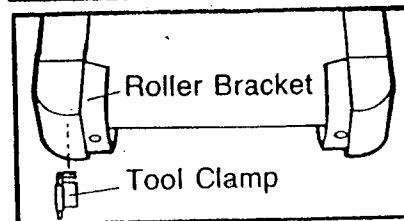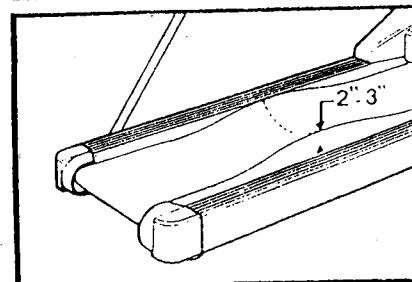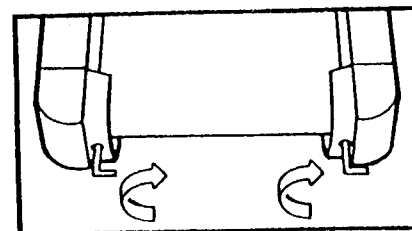

CIRCUIT BREAKER

If the treadmill stops or will not start, check the Circuit Breaker located on the front of the Frame near the Power Cord. The Circuit Breaker is designed to protect the electrical system. If the Circuit Breaker has tripped, the switch will protrude as shown. To reset the Circuit Breaker, allow the treadmill to cool for a few minutes and then push the switch back in.

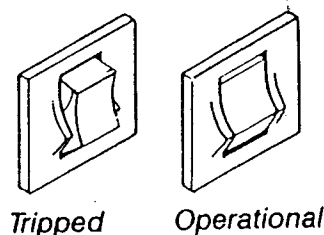

STORAGE

Always unplug the Power Cord when the treadmill is not in use. To convert the treadmill to the storage position, first remove the Screws and Washers from the lower and upper ends of the Handrail. Store the Screws and Washers in a secure location. Loosen the Lock Knob and lay the Handrail Upright on the treadmill. Lay the Handrail on the treadmill.

Always remove the batteries from the Electronic Monitor when storing the treadmill for extended periods of time.

CONDITIONING GUIDELINES

The following guidelines will help you to plan and regulate your personal fitness program. **However, before beginning this or any exercise program, consult your physician.** Remember that adequate rest and good nutrition are also essential to the success of any fitness program.

EXERCISE INTENSITY

To maximize health benefits from exercising, your level of exertion must exceed mild demands while falling short of causing breathlessness and fatigue. The proper level of exertion can be determined using the heart rate as a guide. For effective aerobic exercise the heart rate must be maintained at a level between 70% and 85% of your maximum heart rate. This is your "Training Zone."

You can determine your Training Zone by consulting the table below. Training Zones are given for both conditioned and unconditioned persons. Use the column that is appropriate for you.

AGE	UNCONDITIONED TRAINING ZONE (BEATS/MIN)	CONDITIONED TRAINING ZONE (BEATS/MIN)	AGE	UNCONDITIONED TRAINING ZONE (BEATS/MIN)	CONDITIONED TRAINING ZONE (BEATS/MIN)
20	138-167	133-162	55	127-155	122-149
25	136-166	132-160	60	126-153	121-147
30	135-164	130-158	65	125-151	119-145
35	134-162	129-156	70	123-150	118-144
40	132-161	127-155	75	122-147	117-142
45	131-159	125-153	80	120-146	115-140
50	129-156	124-150	85	118-144	114-139

During the first few weeks of your exercise program you should keep your heart rate near the low end of your Training Zone. Over the course of a few months, gradually increase your heart rate until you reach the high end of your Training Zone. As your condition improves, a greater workload will be required in order to raise your heart rate to your Training Zone.

You can measure your heart rate and find the proper level of exercise intensity using the electronic monitor (see the ELECTRONIC MONITOR OPERATION GUIDE). First, set the monitor for 4 minutes. Press the "START/STOP" key and exercise at a comfortable pace until the 4 minutes elapse. Immediately measure your heart rate using the PULSE function. If your heart rate is below your Training Zone increase your level of exertion. If your heart rate is too high, reduce your level of exertion.

EXERCISE PATTERN

Each workout should consist of a basic 5-step pattern.

1. At rest 2. Warm-up 3. Training Zone exercise 4. Cool-down 5. At rest

Warming up is an important part of your workout and should not be taken lightly. Warming up prepares the body for more strenuous exercise by increasing the circulation, delivering more oxygen to the muscles, and raising the body temperature. This can be done by stretching and light calisthenics for 5-10 minutes prior to exercising.

Begin exercising at a light pace for a few minutes. Then increase the intensity to raise your heart rate to your Training Zone for a period of 20-30 minutes.

Cooling down after vigorous exercise is important in aiding circulation and preventing soreness. 5-10 minutes of light exercise or stretching will allow the body to cool down.

To maintain or improve your condition you must work out 2-3 times per week following the pattern described above. A day of rest between workouts is recommended. After several months of exercise the number of workouts can be increased to 4-5 times per week. The key to a successful program is REGULAR EXERCISE.

PART LIST - Model No. TL5.0

Rev. 4/90


Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Console	37	1	Formed Washer
2	1	Safety Key/Clip	38	1	Earclip
3	1	Handrail Upright	39	1	Clothes Clip
4	1	Lock Knob	40	1	Electronic Monitor
5	1	Lock Knob Washer	41	1	Speed Crank
6	1	Handlebar	42	2	Hex Head Screw
7	2	Foam Grip	43	1	Motor Retainer
8	1	Sensor Wire/Reed Switch	44	1	Incline Bubble
9	1	Long Handrail Screw	45	1	Motor Pulley
10	1	Hinge Bolt	46	1	Fastener Strip
11	4	Hinge Washer	47	4	Flat Washer
12	10	Small Screw	48	2	Handlebar Locknut
13	1	Front Roller Adjustment Bolt	49	1	Circuit Breaker
14	5	Roller Adjustment Washer	50	1	Roller Lock
15	1	Power Cord	51	1	Hinge Nut
16	2	Swivel Shaft Bolt	52	1	Motor Hood
17	1	Short Handrail Screw	53	4	Hood Mounting Screw
18	2	Hitch Pin	54	1	Safety Cover
19	2	Side Rail	55	1	Walking Platform
20	1	Frame	56	1	Handrail
21	6	Large Screw	57	1	Adjustment Tool
22	2	Rear Foot	58	1	Tool Clamp
23	1	Right Roller Bracket	59	1	Cable Lock Bolt
24	2	Rear Roller Adjustment Bolt	60	1	Sensor Magnet
25	1	Left Roller Bracket	61	8	Phillips Screw
26	1	Walking Belt	62	1	Star Washer
27	1	Roller Bushing	63	1	Left Front Leg
28	4	Sensor Wire Clip	64	1	Right Front Leg
29	1	V-Belt	65	4	Rear Leg Screw
30	1	Front Roller/Pulley	#	1	Owner's Manual
31	1	Rear Roller	#	1	Monitor Operation Guide
32	1	Speed Adjustment Assem.			
33	2	Tension Swivel			
34	3	Tension Swivel Nut			
35	1	Motor Assembly			
36	1	Clamp			

Note: "#" indicates a non-illustrated part.

EXPLODED DRAWING - Model No. TL5.0

Rev. 4/90

*Specifications are subject to change without notice.

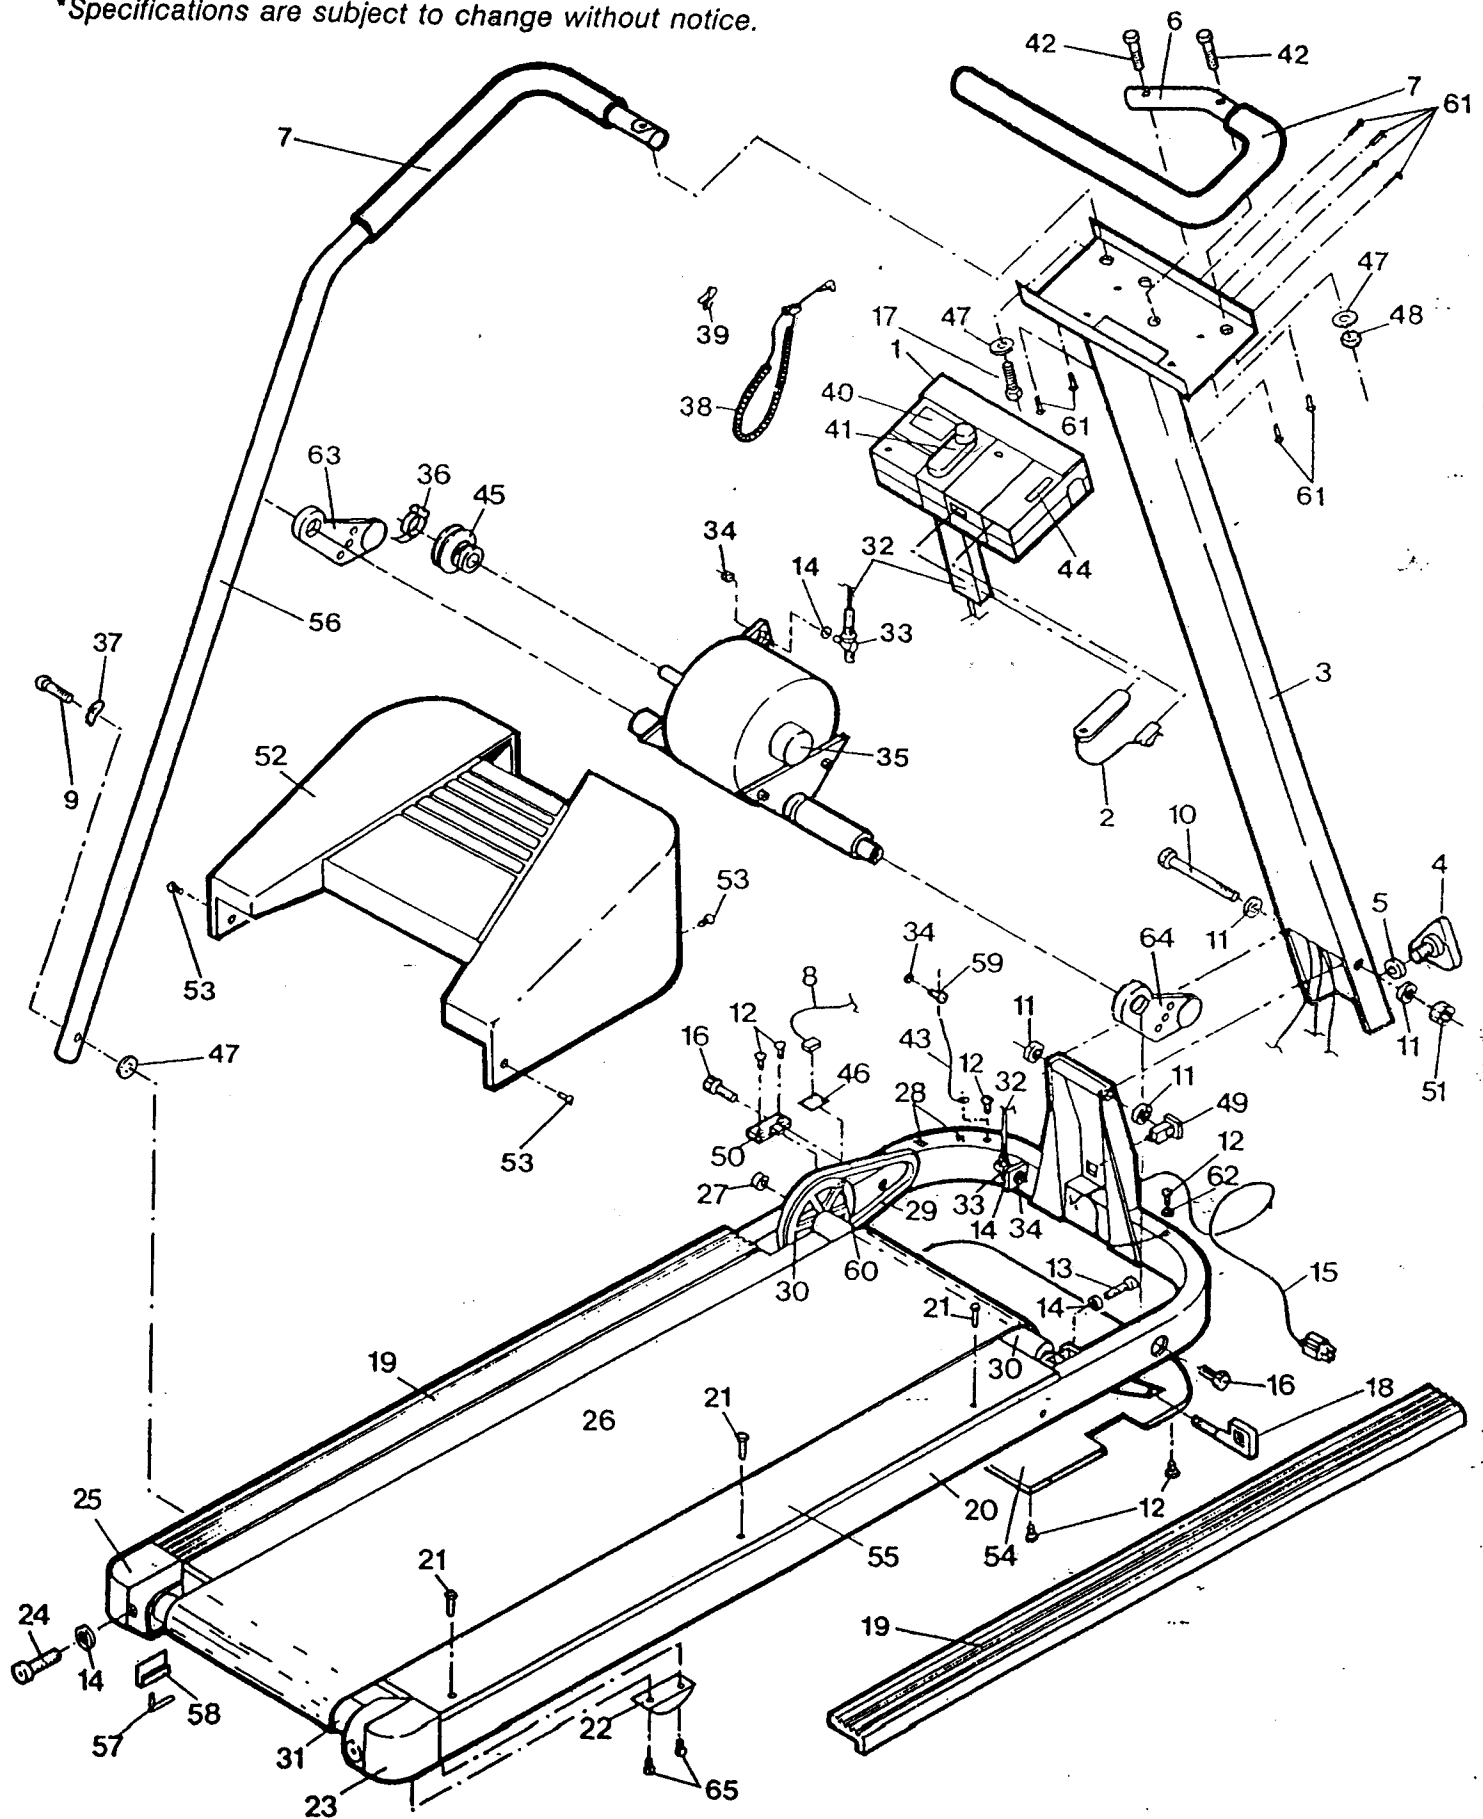

PART ORDERING

Replacement parts can be ordered by calling our Customer Service Department toll-free in the U.S.A. or Canada at **1-800-99WESLO (999-3756)**, during our regular business hours: Monday - Friday, 6 a.m. - 6 p.m. Mountain Time. When ordering parts, please be prepared to give the following information:

1. The NAME of the product (CADENCE 5.0 Electronic Ergometer).
2. The MODEL NUMBER of the product (TL5.0).
3. The SERIAL NUMBER of the product, found on a decal affixed to the product (see the drawing on the front cover for location of the decal).
4. The KEY NUMBER of the part from the Part List in this manual.
5. The DESCRIPTION of the part from the Part List in this manual.

If possible, place your telephone near the CADENCE 5.0 for easy reference.