

Limited Warranty

ICON Health & Fitness, Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by ICON at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center, products used for commercial or rental purposes, or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.


ICON Health & Fitness, Inc.
1500 S. 1000 W., Logan, UT 84321-9813

WESLO® is a registered trademark of ICON Health & Fitness, Inc.

Part No. 157134 R0100A Printed in USA © 2000 ICON Health & Fitness, Inc.

Massage Pool Float

User's Guide

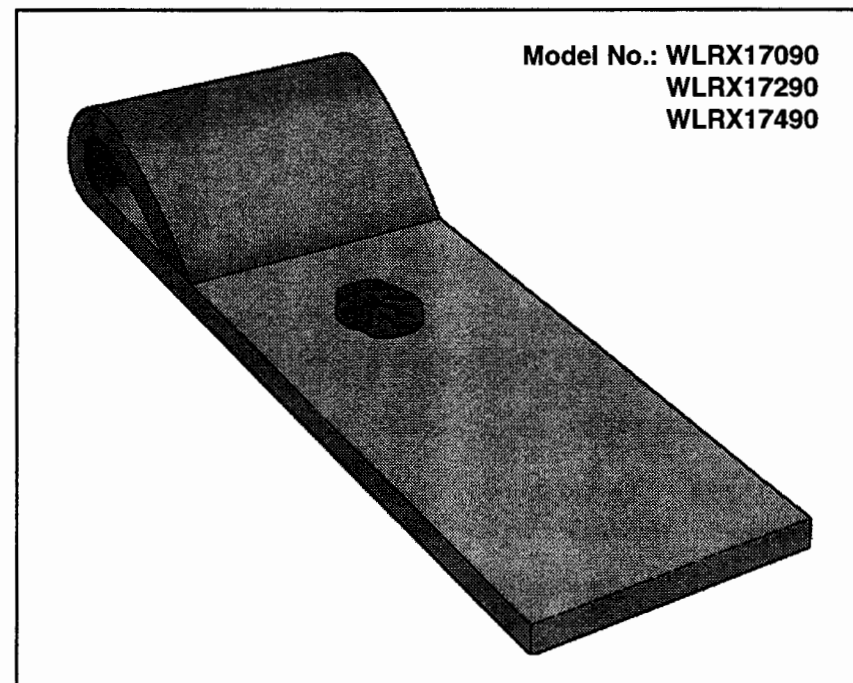

Thank you for selecting the innovative WESLO® MASSAGE POOL FLOAT. For your benefit and safety, please read this User's Guide carefully before using the MASSAGE POOL FLOAT.

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if a part is missing, we will guarantee complete satisfaction through direct assistance from our factory.

Please call our CUSTOMER HOT LINE at 1-800-999-3756
Mon.-Fri., 6 a.m.-6 p.m. MST (excluding holidays).


Make sure to visit our Web site at www.weslo.com!

Warnings


- This is a toy—not a life-saving device.
- Never leave a child in or near water without the constant supervision of a competent adult swimmer. Flotation toys are not substitutes for proper supervision.
- Use only in pools where every child present is within his or her depth.
- Do not allow diving onto this product.
- To avoid attracting children to the water, remove this toy from the pool area when it is not being used.
- Do not use in the ocean or other natural bodies of water as depth, waves, and currents may pose serious hazards.
- Misuse may result in serious injury, disability, or death by drowning.

Assembly

1. Turn the float (A) so the head rest is downward as shown.
2. Insert the six posts on the massage pad (B) into the six small holes in the float. **Make sure that the dimple in the massage pad is turned toward the head rest.**
3. Press the massager (C) into the square hole in the float. **Make sure that the on/off switch on the massager is pressed into the dimple in the massage pad.**
4. Place the back plate (D) over the massager so the cutout in the back plate is aligned with the battery cover (E). Firmly press the six fasteners (F) into the back plate and the posts on the massage pad.

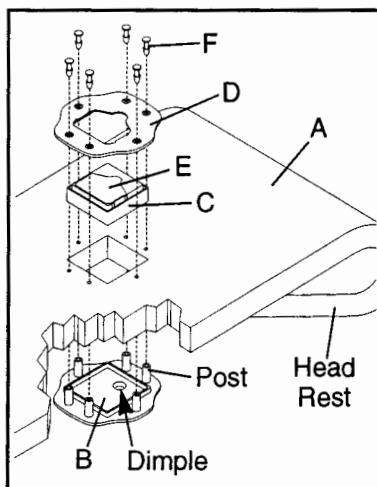


5. Make sure that all six fasteners (F) are pushed completely into the posts on the massage pad (B) by firmly pressing on each fastener while pressing on the massage pad from below.

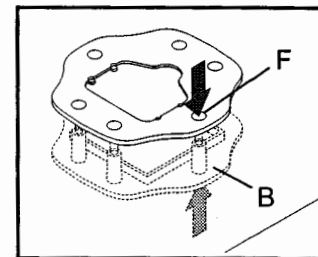

Battery Installation

The massager (C) requires four “C” batteries (not included). Alkaline batteries are recommended.

To install batteries, first turn the float (A) so the head rest (not shown) is downward. Next, remove the six screws (G) from the battery cover (E) and lift off the battery cover. Press four “C” batteries into the massager; **make sure that each battery is turned as shown on the inside of the massager.** Reattach the battery cover with the six screws.

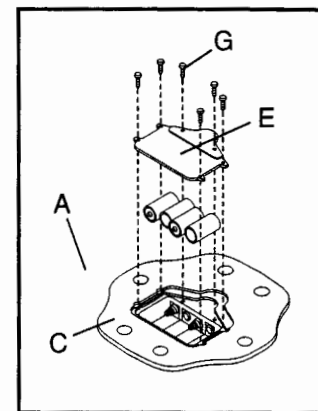

Using the MESSAGE POOL FLOAT

Before using the MESSAGE POOL FLOAT, make sure that you have read all warnings in this User's Guide.

Turn the float (A) so the head rest and the massage pad (B) are on top. Place the float in the water. Enter the water and climb onto the float.

To activate the massager, press the on/off button on the massage pad. Press the on/off button again to turn off the massager.

