

Activate Non Tread TV Bracket

ACTIVATE-NT-BRACKET

Parts Manual


1/5/2019 12:03:35 PM



Table of Contents

Activate Bracket	3
--	---

Activate Bracket

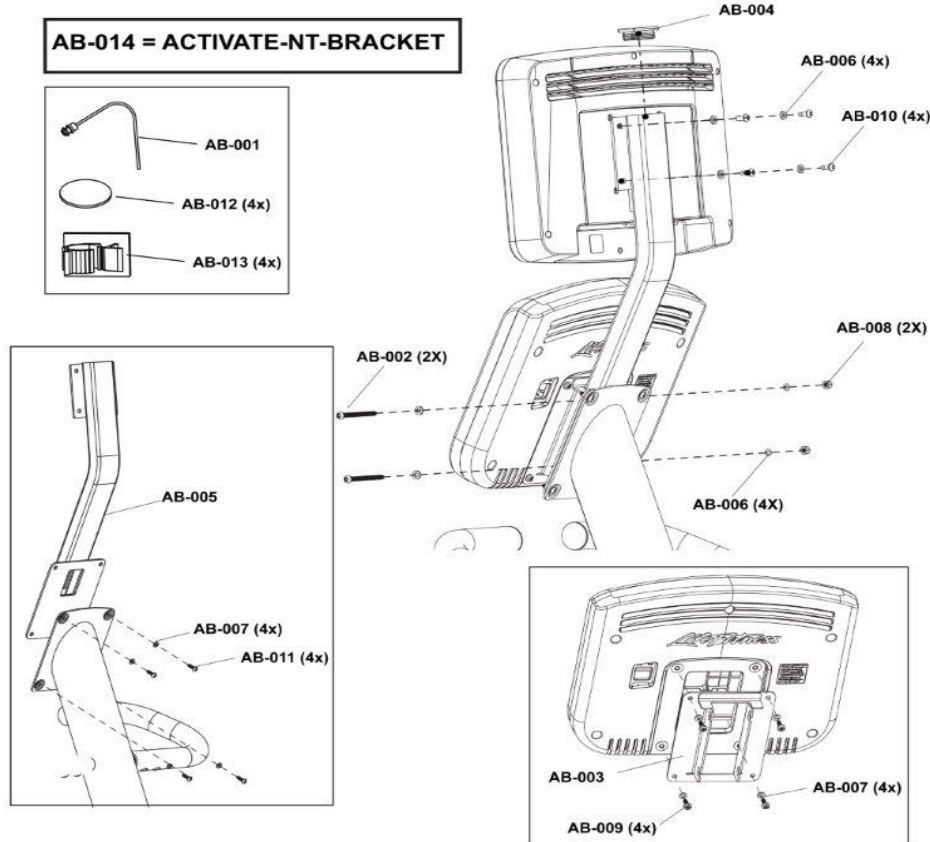

Ref #	Part Number	Qty	Description
AB-001	AK32-00078-0001	1	Power Extension Cable: 120"
AB-002	1003057-0001	2	SCREW: M6 X 1 X 70, HEX BUT BLT ST ZB
AB-003	1003056-0100	1	WELDMENT: INTERMEDIATE BRACKET. NON-TREAD, ARC
AB-004	1003028-0700	1	ENDCAP: TUBE, 1X2, BLACK
AB-005	1002325-5100	1	WELDMENT: INTERMEDIATE BRACKET. NON-TREAD, ARC ROBUST
AB-006	0017-00104-0488	8	Hardware: Flat Washers 11.5 MM OD
AB-007	0017-00104-0481	8	WSH M5.3 X 10.00 X 1.10MM DIN FLAT ST ZN
AB-008	0017-00103-0378	2	NUT: M6 X 1-6H6H, DIN, LOCKNUT, ST, BZ
AB-009	0017-00101-2025	4	Hardware: M5 X .8-5G6G X 16 DIN HXS BUT ST
AB-010	0017-00101-2003	4	Hardware: M6 X 1.00-6G6G X 014 DIN HXS BUT L CS ST
AB-011	0017-00101-1972	4	Hardware: Screw 14MM
AB-012	AK65-00119-0000	4	Assembly: Fastener Dual Lock; Make
AB-013	0017-00004-0182	1	BAG: POLY; 5"X8" 4 MIL, ZIP TOP, 1000 EA/BX, 2 BX/CASE
AB-014	0017-00004-0270	1	SHEET: POLY-FOAM; 32"X12", 206 EA/ROLL, 6 RLS/BUNDLE
AB-015	M051-00520-0001	1	LABEL: KIT-CONTROL
AB-016	1003194-0001	4	CLAMP: CABLE, ADHESIVE-BACKED
AB-017	1003273-0001	1	MANUAL: ADDENDUM, ACTIVATE NON TREAD TV BRACKET INSTALL

