

Activate Tread TV Bracket

ACTIVATE-TR-BRACKET

Parts Manual


1/5/2019 12:03:35 PM



Table of Contents


Activate Bracket 1	3
Activate Bracket 2	4
Activate Bracket 3	5

Activate Bracket 1

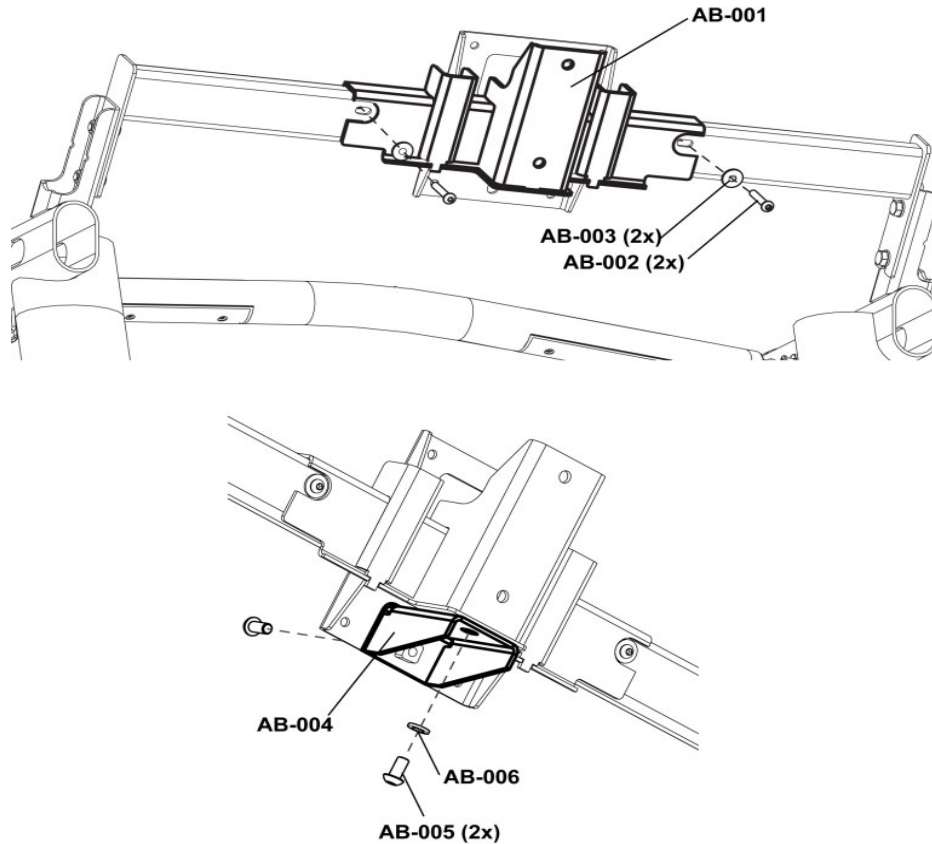


Ref #	Part Number	Qty	Description
AB-001	1003497-5100	1	ASSEMBLY: INTERMEDIATE TV BRACKET, TREAD, ARC ROBUST
AB-002	0017-00101-1954	2	Hardware: Mounting Screw 35MM
AB-003	1003193-0001	2	WASHER: M6, 6.4X18X1.6 DIN SL ST BZ
AB-004	1003305-0100	1	ASSEMBLY: GUSSET BRACKET
AB-005	0017-00101-2007	2	Hardware: Mounting Bolt 16MM
AB-006	0017-00104-0064	1	Hardware: Lock Washer 0.586" OD

Activate Bracket 2

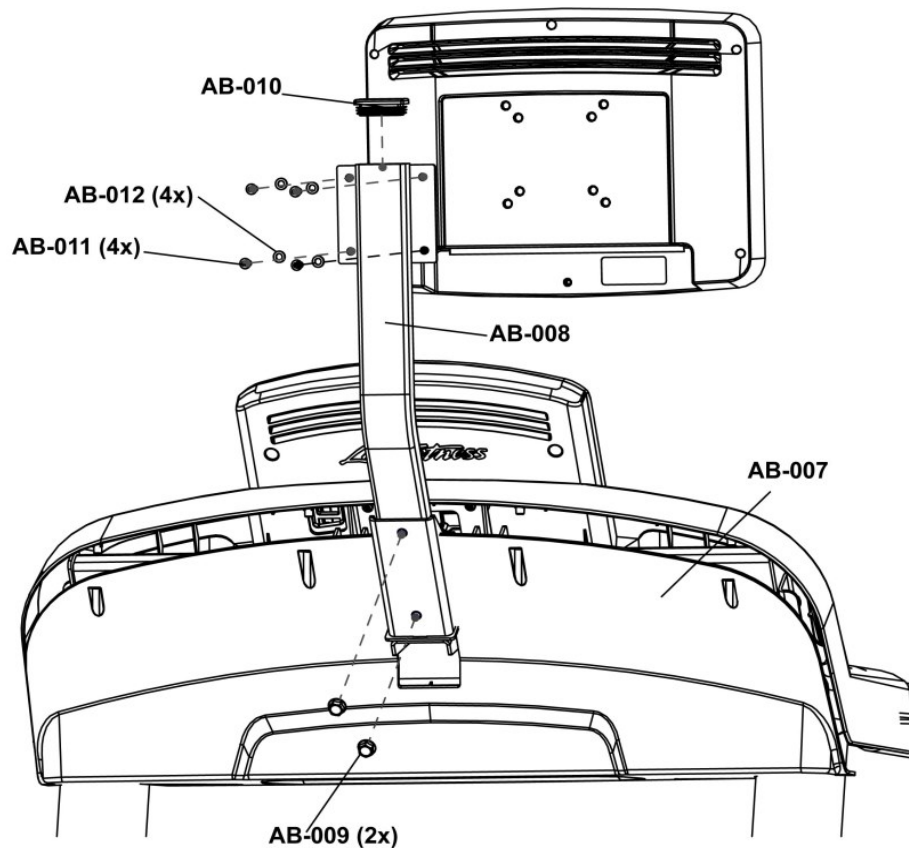

Ref #	Part Number	Qty	Description
AB-007	0K75-01021-0201	1	SHROUD: CONSOLE, BOTTOM, W/CUTOUT, SHDW GRAY
AB-008	1003510-5100	1	WELDMENT: TV BRACKET, TREAD, ARC
AB-009	0017-00101-2150	2	SCREW: M8 X 1.25 6G6H X 20, UHS, HXW, CS, ST, ZB
AB-010	1003028-0700	1	ENDCAP: TUBE, 1X2, BLACK
AB-011	0017-00101-2003	4	Hardware: M6 X 1.00-6G6G X 014 DIN HXS BUT L CS ST
AB-012	0017-00104-0488	4	Hardware: Flat Washers 11.5 MM OD

Activate Bracket 3

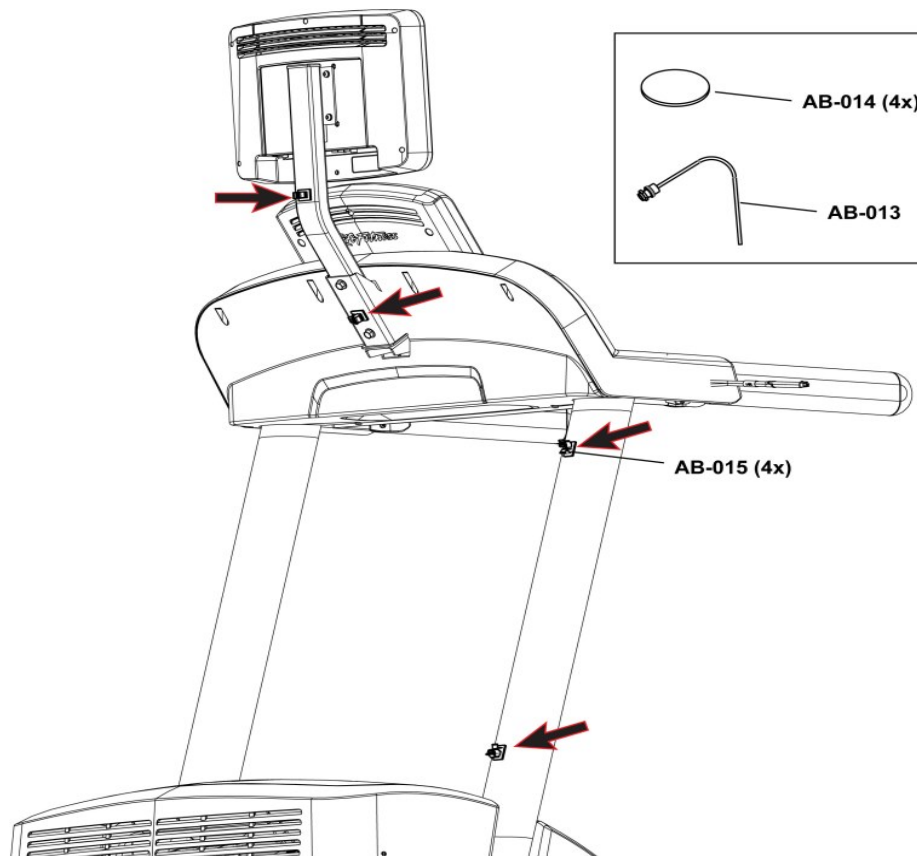

Ref #	Part Number	Qty	Description
AB-013	AK32-00078-0001	1	Power Extension Cable: 120"
AB-014	AK65-00119-0000	4	Assembly: Fastener Dual Lock; Make
AB-015	1003194-0001	4	CLAMP: CABLE, ADHESIVE-BACKED

