



LIFE CYCLE LC9100



Customer Support Services
PARTS MANUAL Rev. 16 Nov 2007

Manual	Part Number
Service Manual	M051-00K49-A012
Operator Manual	M051-00K20-B106
Installation Instructions	M051-00K49-A006
Installation Hardware	AK49-00025-0000


Contents

	Page
Frame Components	4
Side Shrouds, Seat Post Covers, Pedals	5
Alternator, Wheels, and Stabilizer Bar	6
Console Assembly	7
Handlebar Assembly.....	8
Crankarm Assembly	9
Freewheel Pulley/Clutch Assembly.....	10
Idler Arm Assembly.....	11
Seat w/Seat Post Assembly.....	12
Seat Plunger Assembly	13
Alternator Control Board	14


Life Cycle LC9100

Frame Components


LC91-0100-10

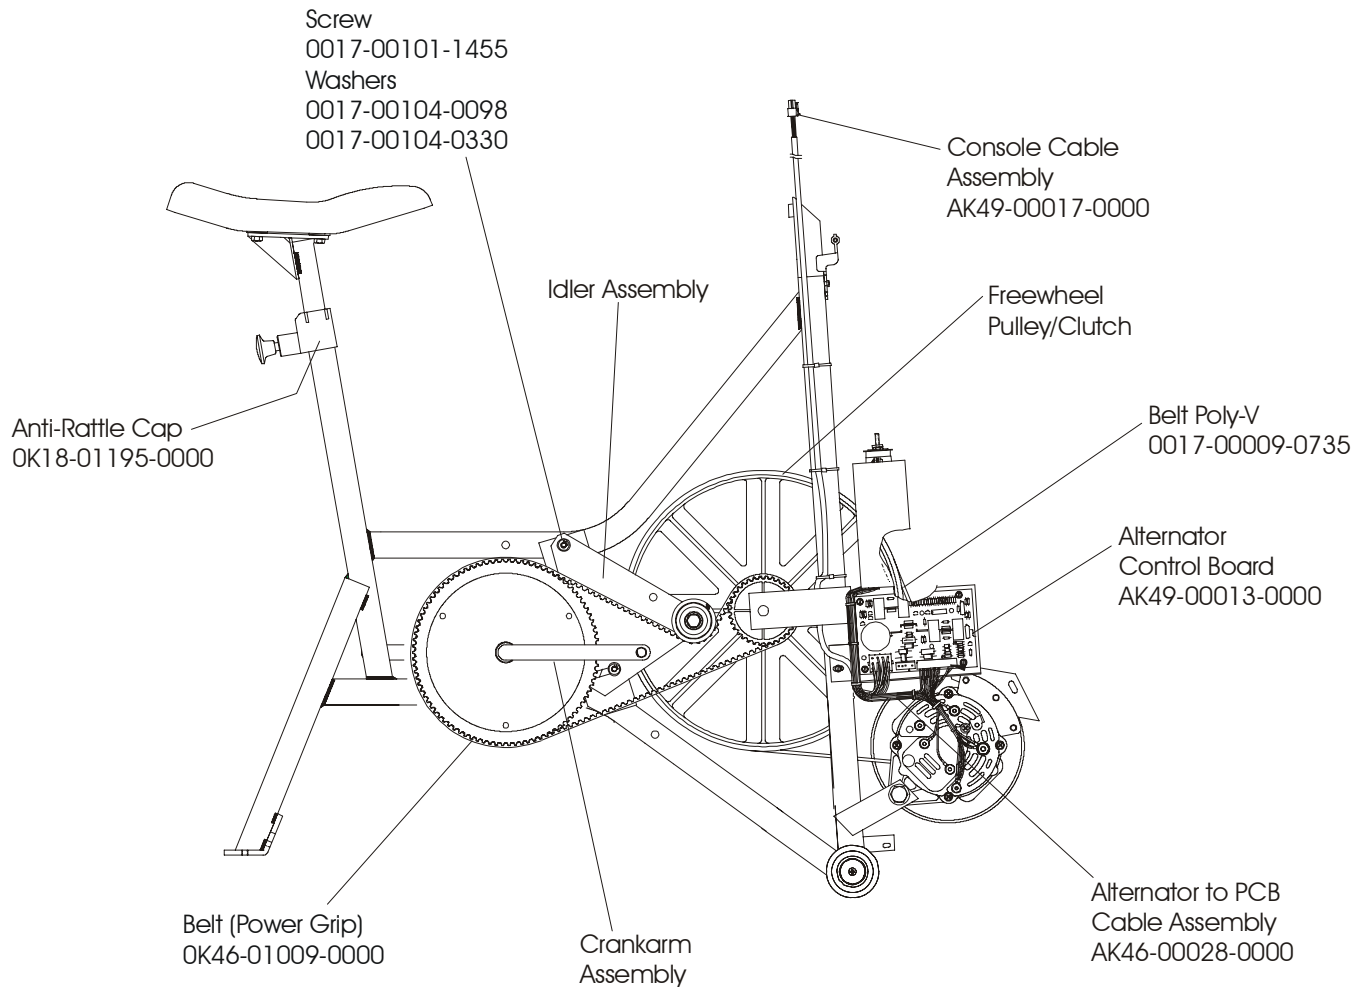



Side Shrouds, Seat Post Covers, and Pedals

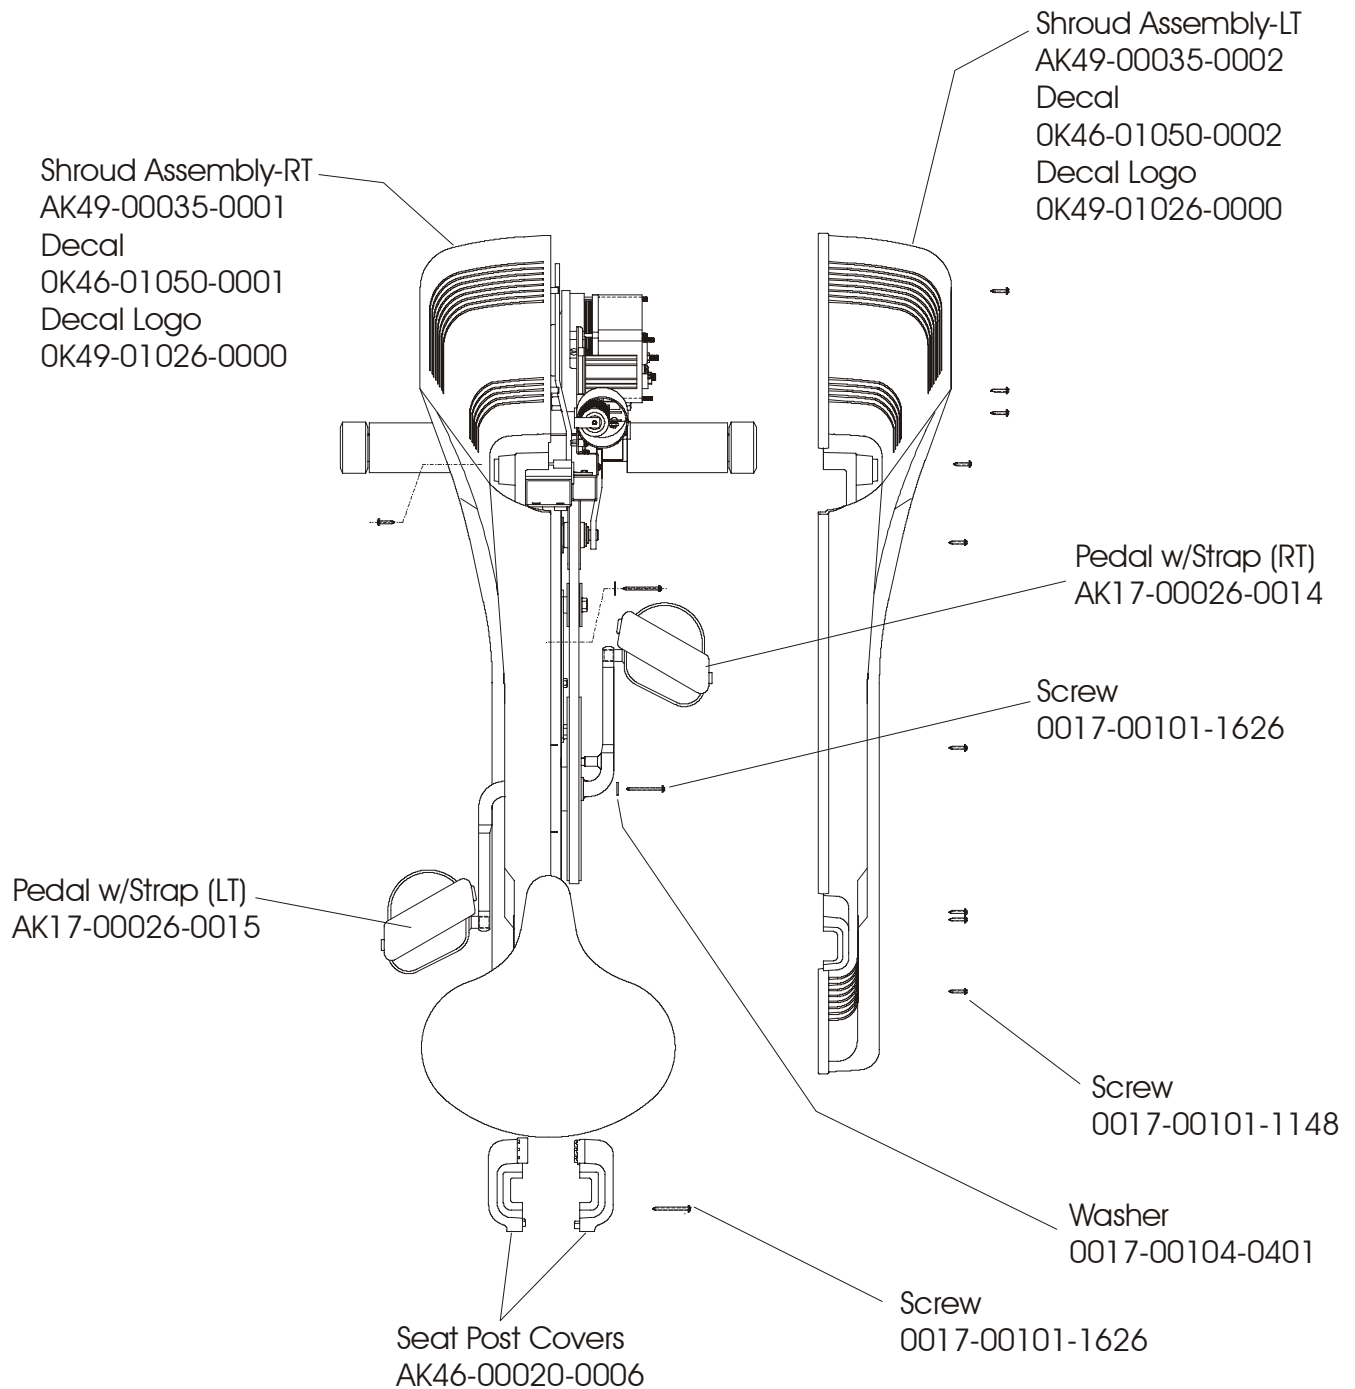

Alternator, Wheels, and Stabilizer Bar

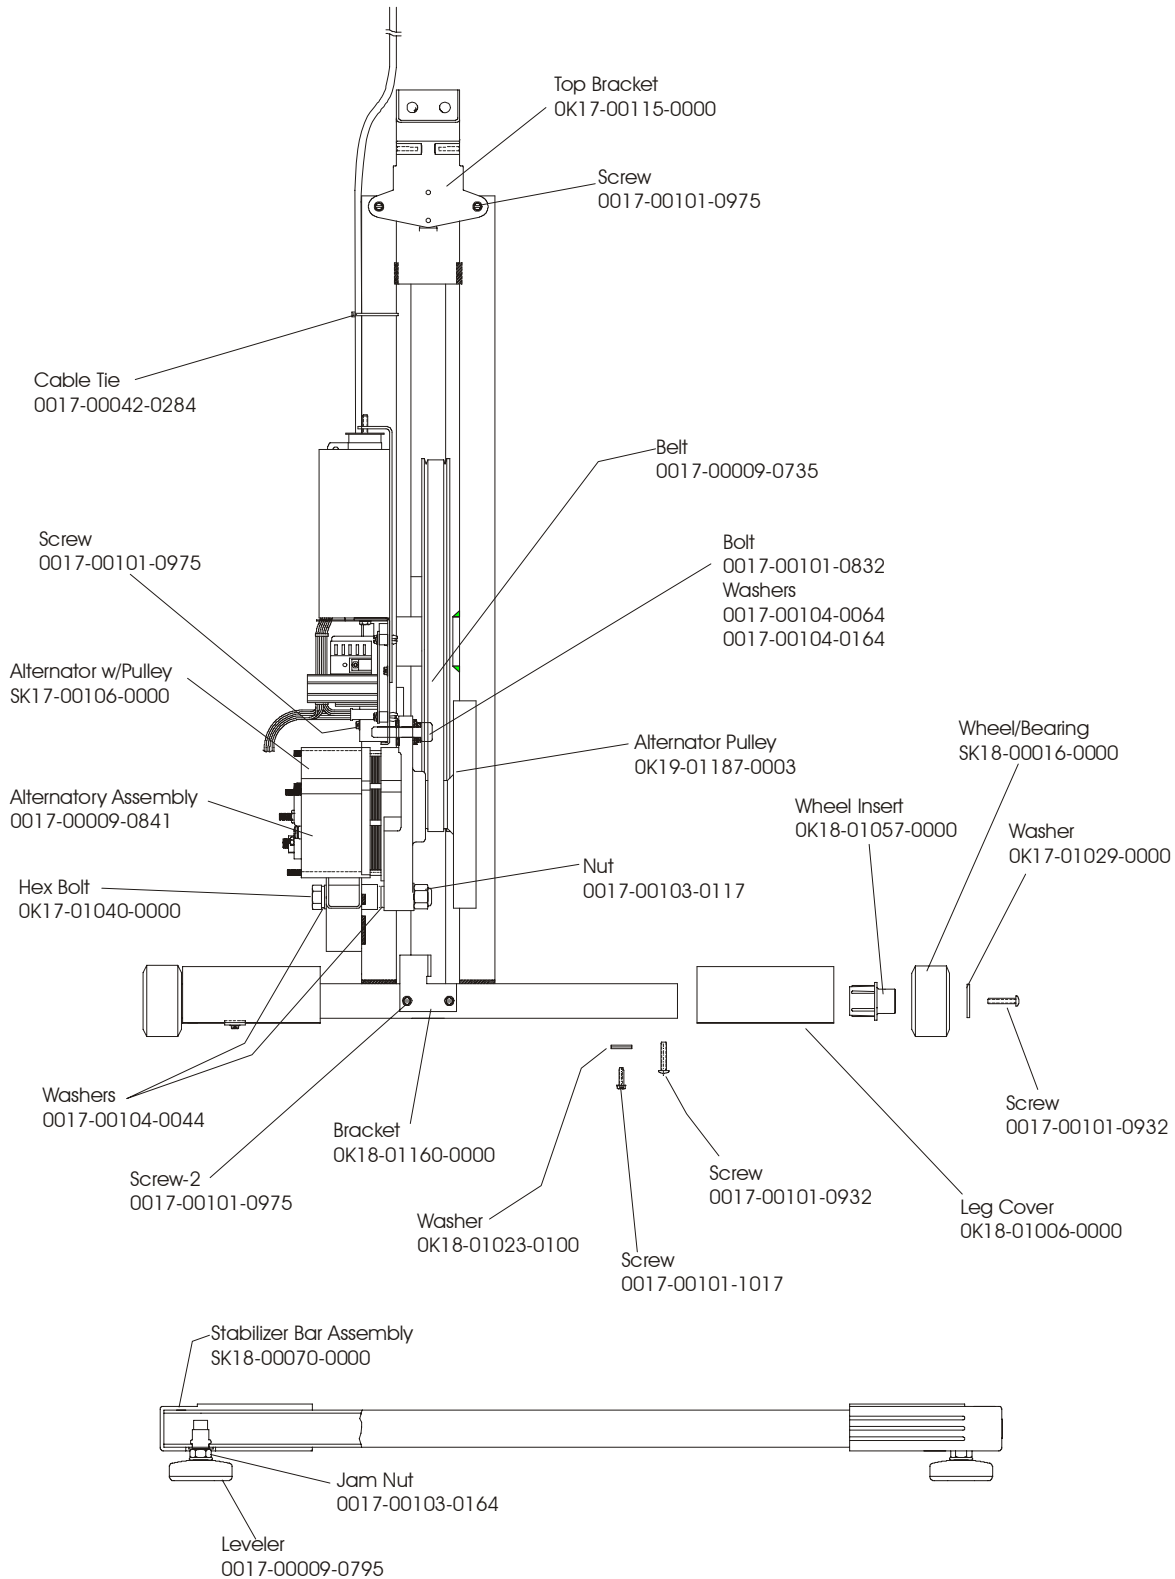

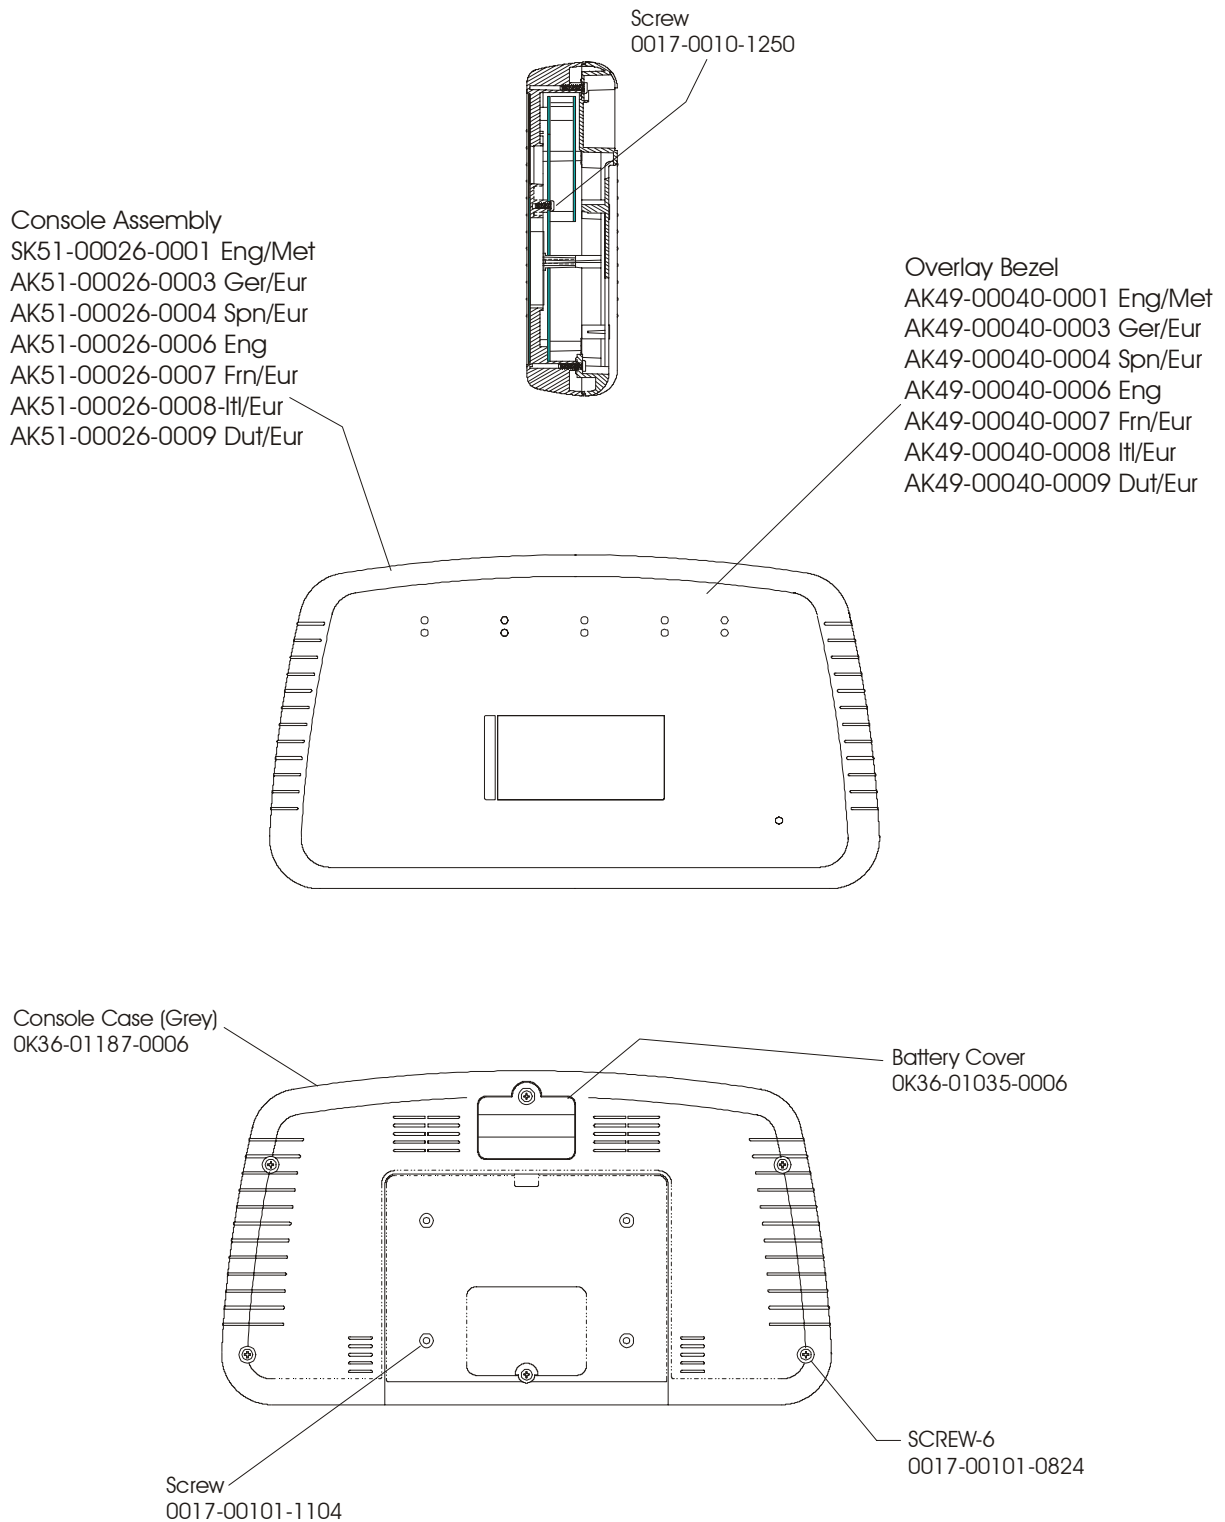


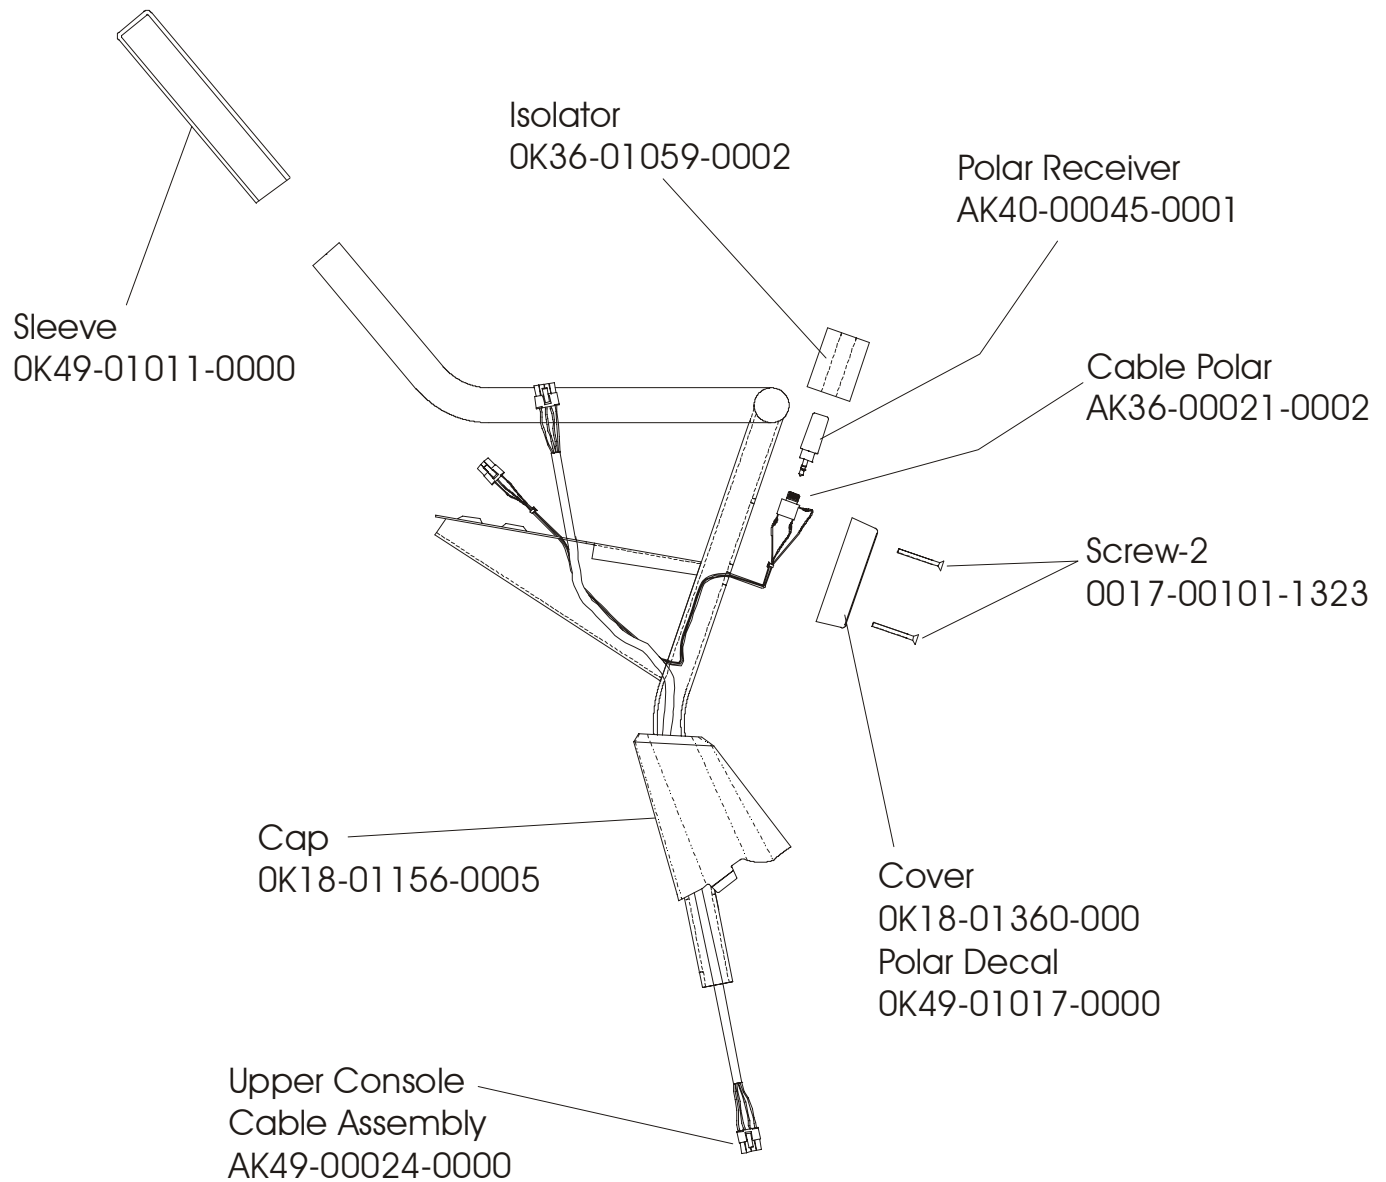

Life Cycle LC9100


Crankarm Assembly


LC91-0100-10

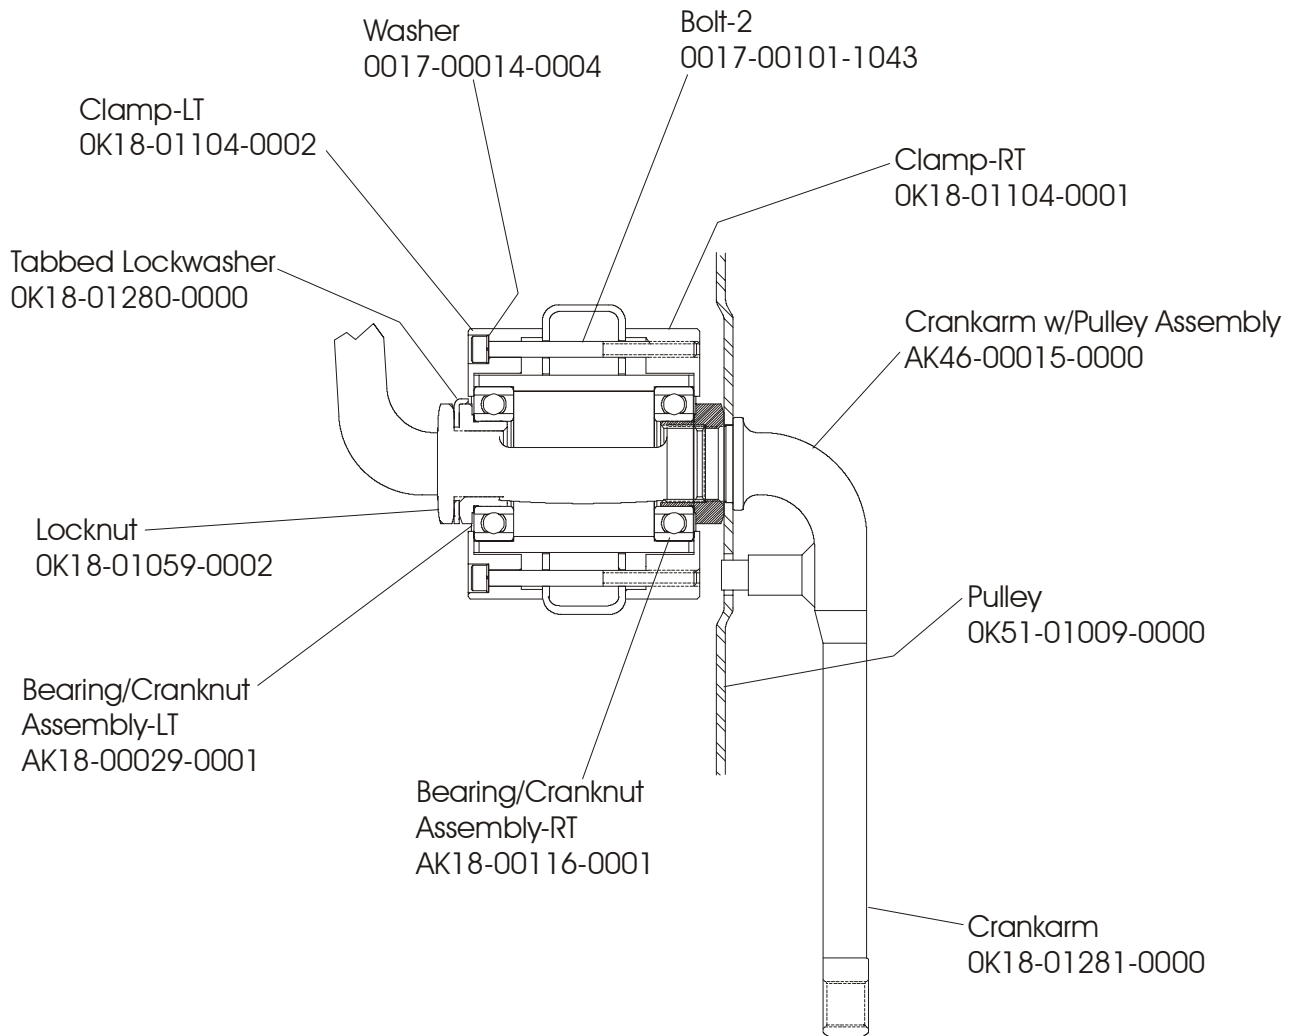

NOTE: For complete Crankarm Bearing Kit order: GK18-00004-0023

Freewheel Pulley/Clutch Assembly

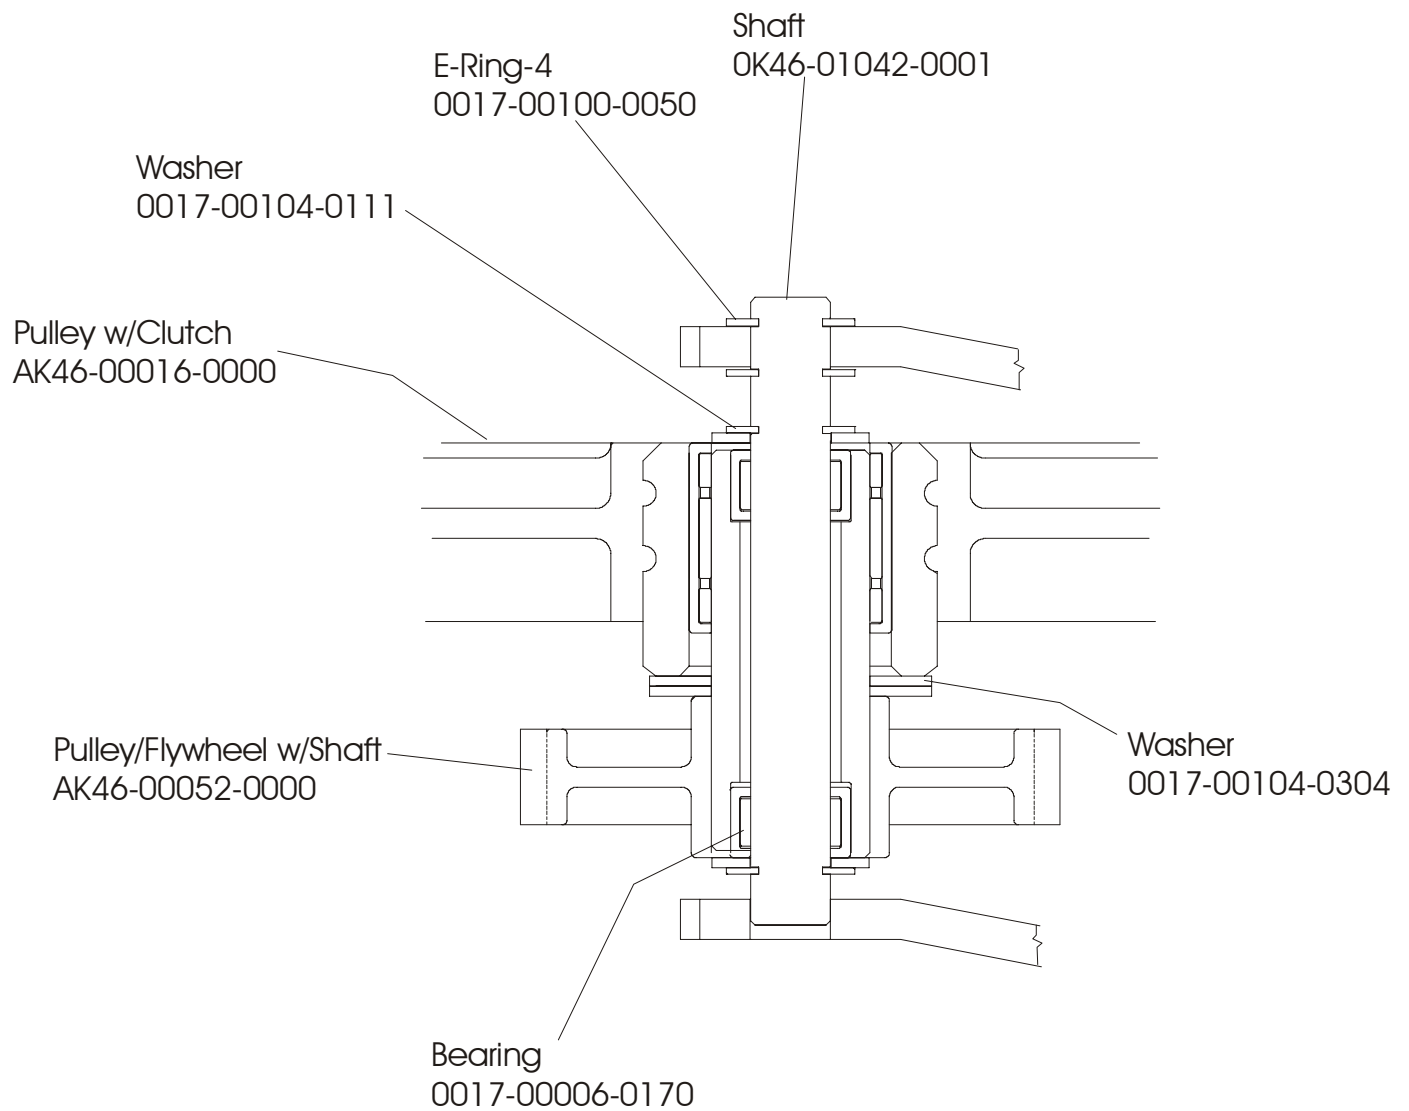

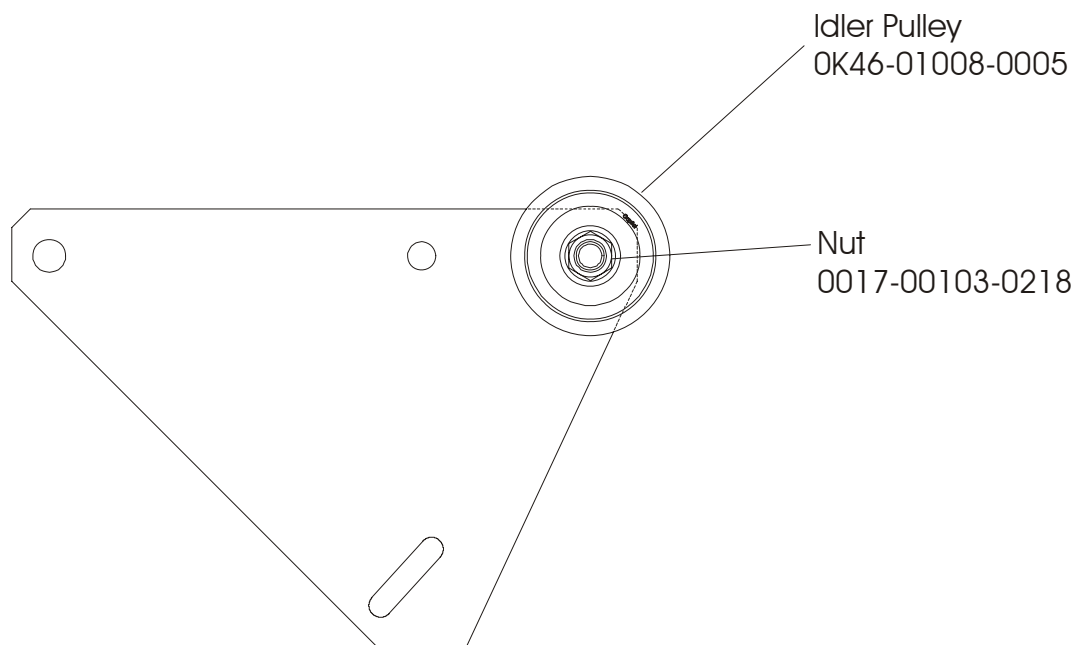

Life Cycle LC9100
Seat w/Seat Post Assembly

LC91-0100-10
AK49-00037-0000

