 
 
 


END OF LIFE

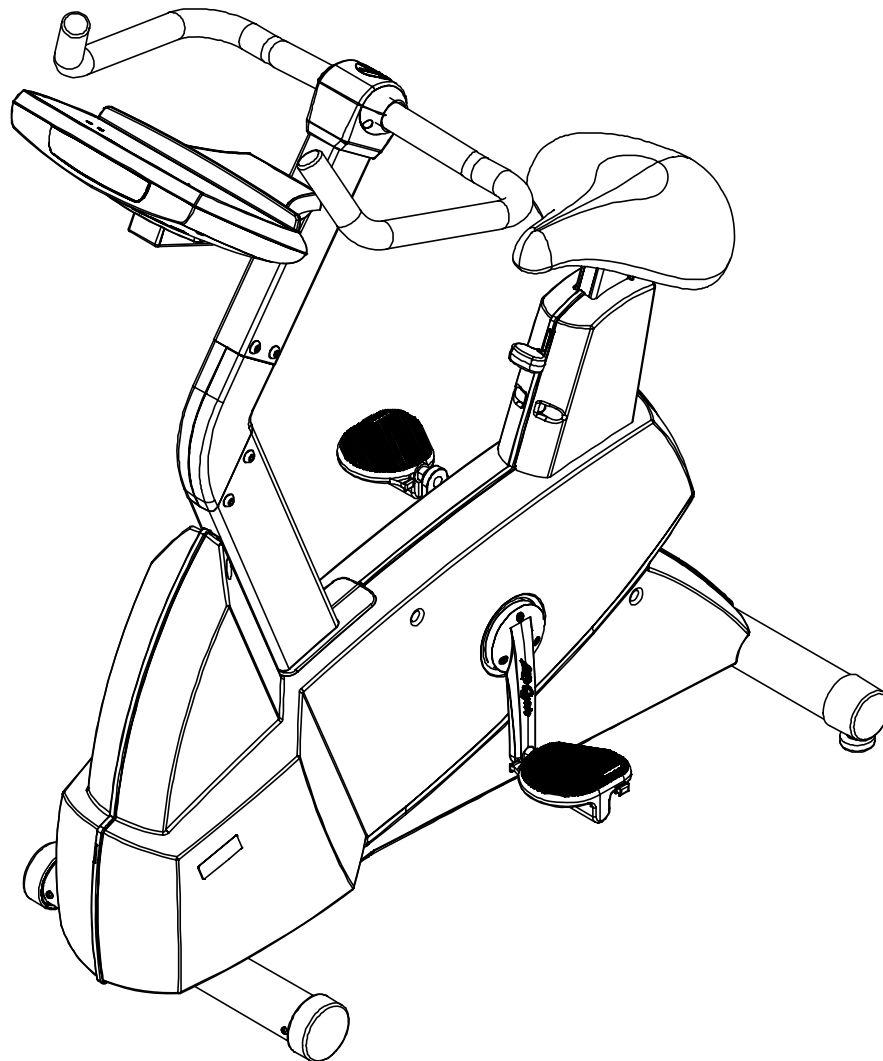

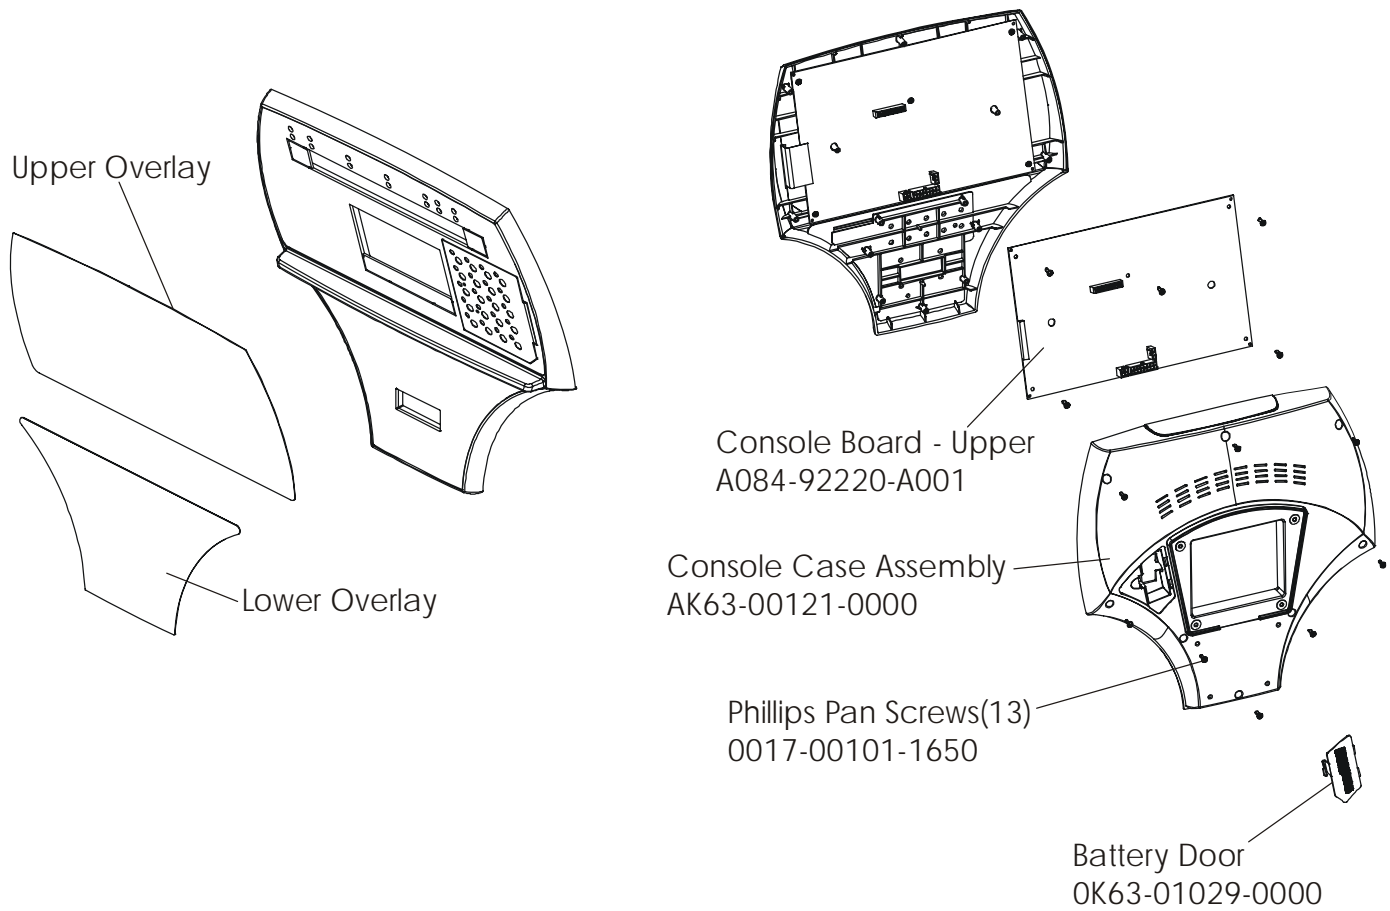

Language	Part Nos.			
	Console Assembly	Overlay Bezel	Upper Overlay	Lower Overlay
Eng Met	AK63-00071-0001	AK63-00079-0001	OK63-01100-0001	OK63-01102-0001
Ger Met	AK63-00071-0003	AK63-00079-0003	OK63-01100-0003	OK63-01102-0003
Spn Met	AK63-00071-0004	AK63-00079-0004	OK63-01100-0004	OK63-01102-0004
Jap Met	AK63-00071-0006	AK63-00079-0006	OK63-01100-0006	OK63-01102-0006
Frn Met	AK63-00071-0007	AK63-00079-0007	OK63-01100-0007	OK63-01102-0007
Itl Met	AK63-00071-0008	AK63-00079-0008	OK63-01100-0008	OK63-01102-0008
Dut Met	AK63-00071-0009	AK63-00079-0009	OK63-01100-0009	OK63-01102-0009
Por Met	AK63-00071-0010	AK63-00079-0010	OK63-01100-0010	OK63-01102-0010

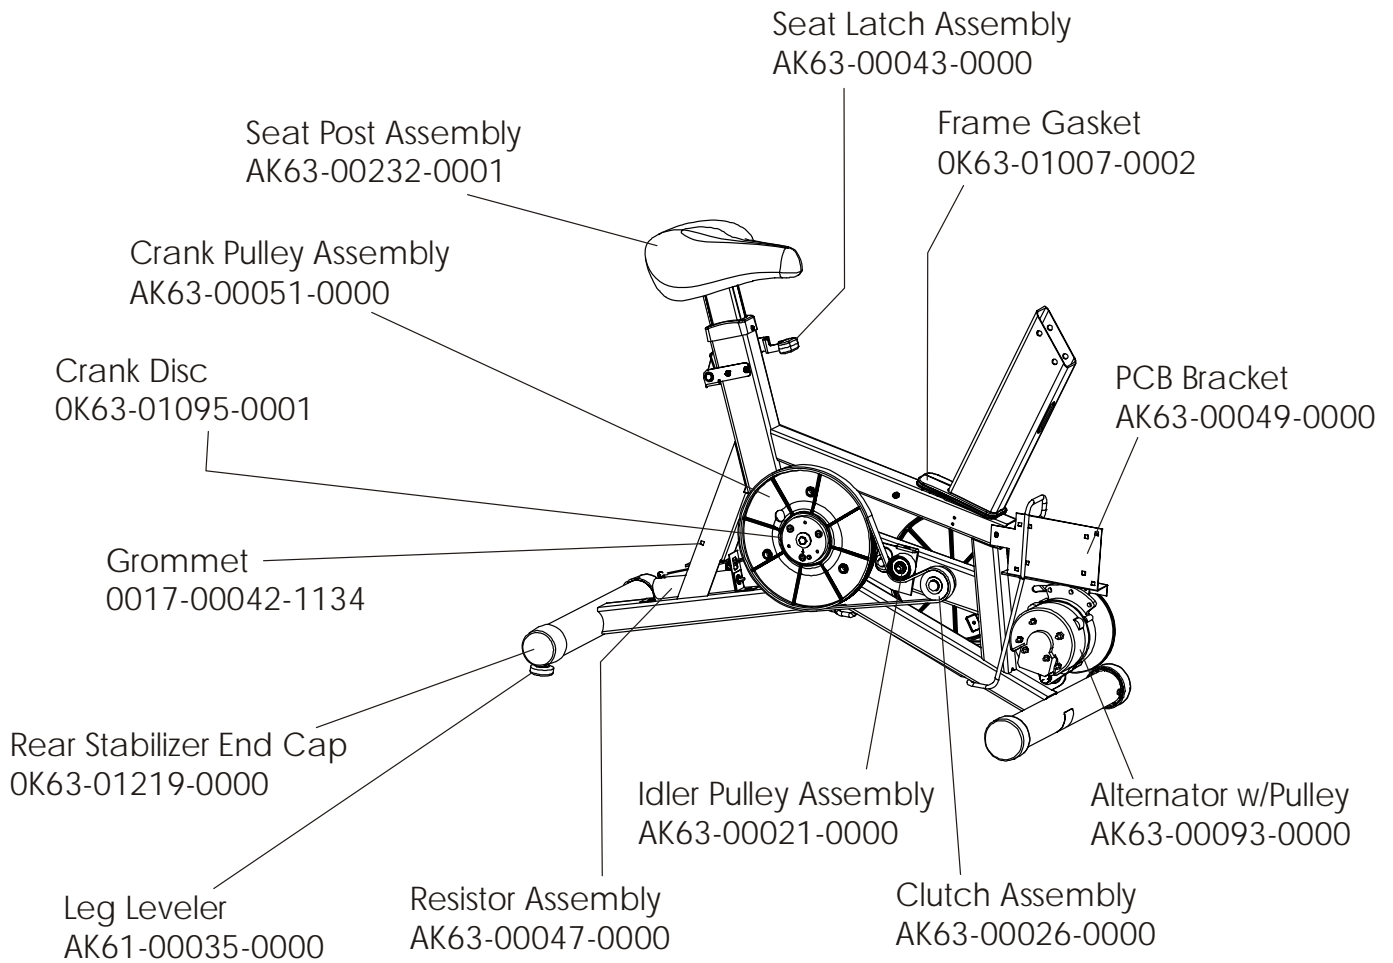

see page 19 for Reed Switch
and Auto-start Magnet

Alternator with Pulley
AK63-00093-0000

 
Alternator Pulley
OK61-02500-0001

Alternator
0017-00009-0841

Locking Nut
0017-00103-0117


Washer
0017-00104-0044

Bolt
0017-00101-0956

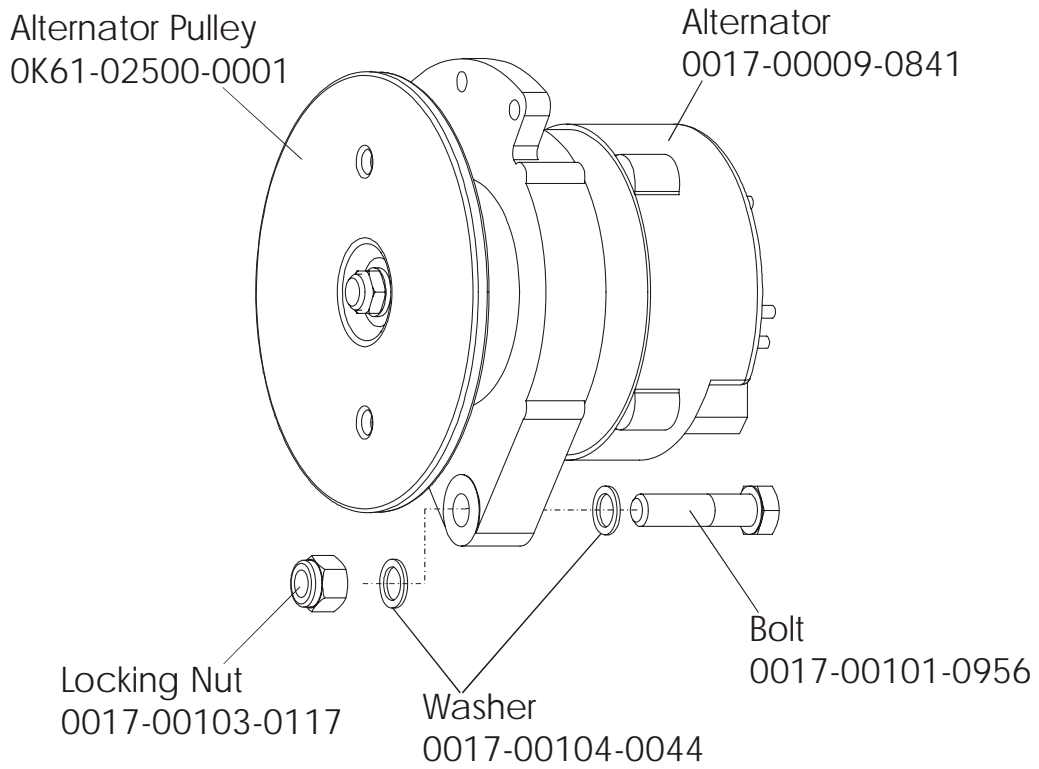


LifeCycle LC9100
Crank Shaft and Crank Bearing Assembly

 
LC91-XXXX-11

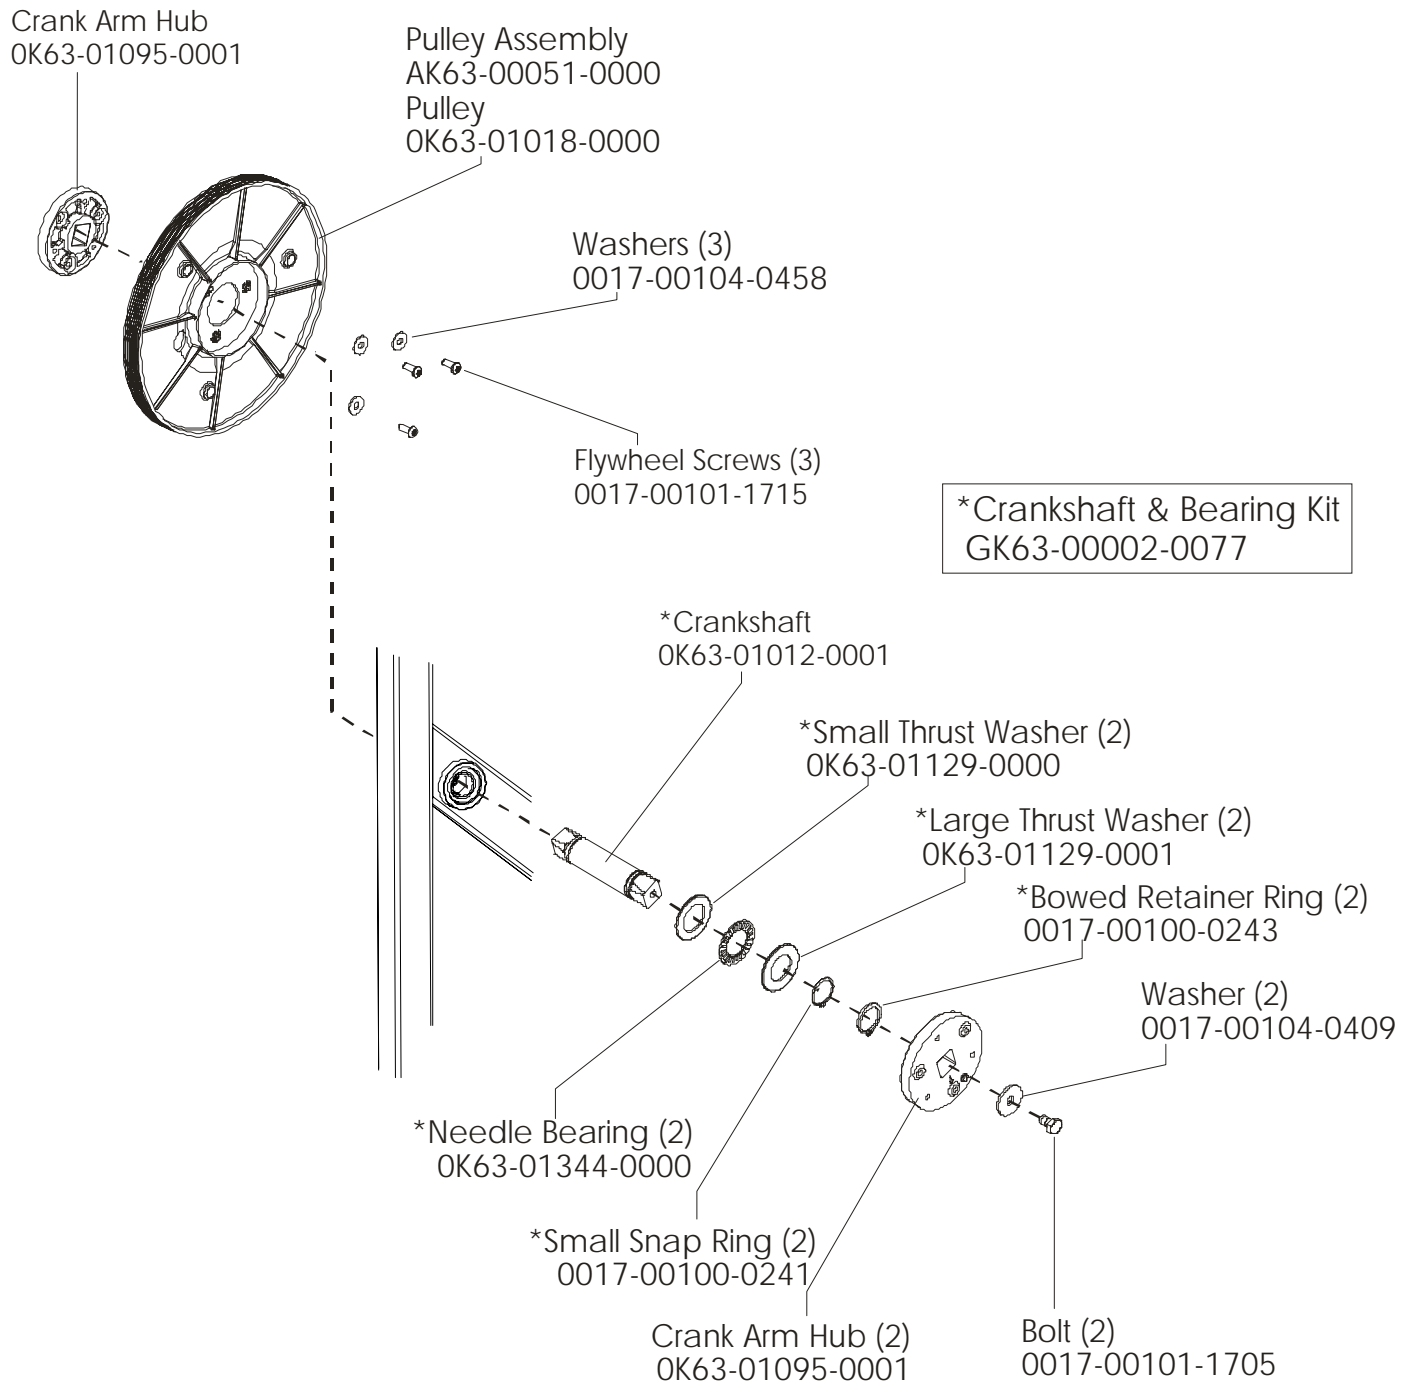

 
Intermediate Shaft and Bearing Assembly
GK63-00002-0007


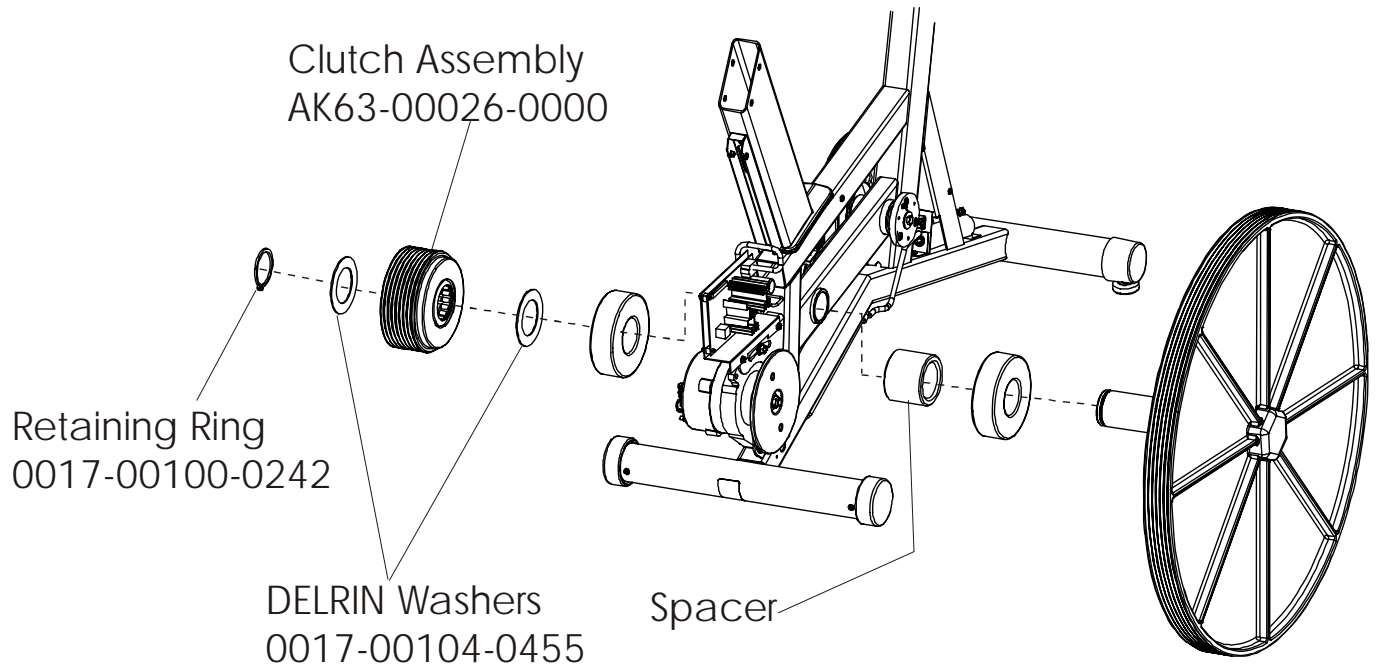


Seat Latch Assembly
AK63-00043-0000

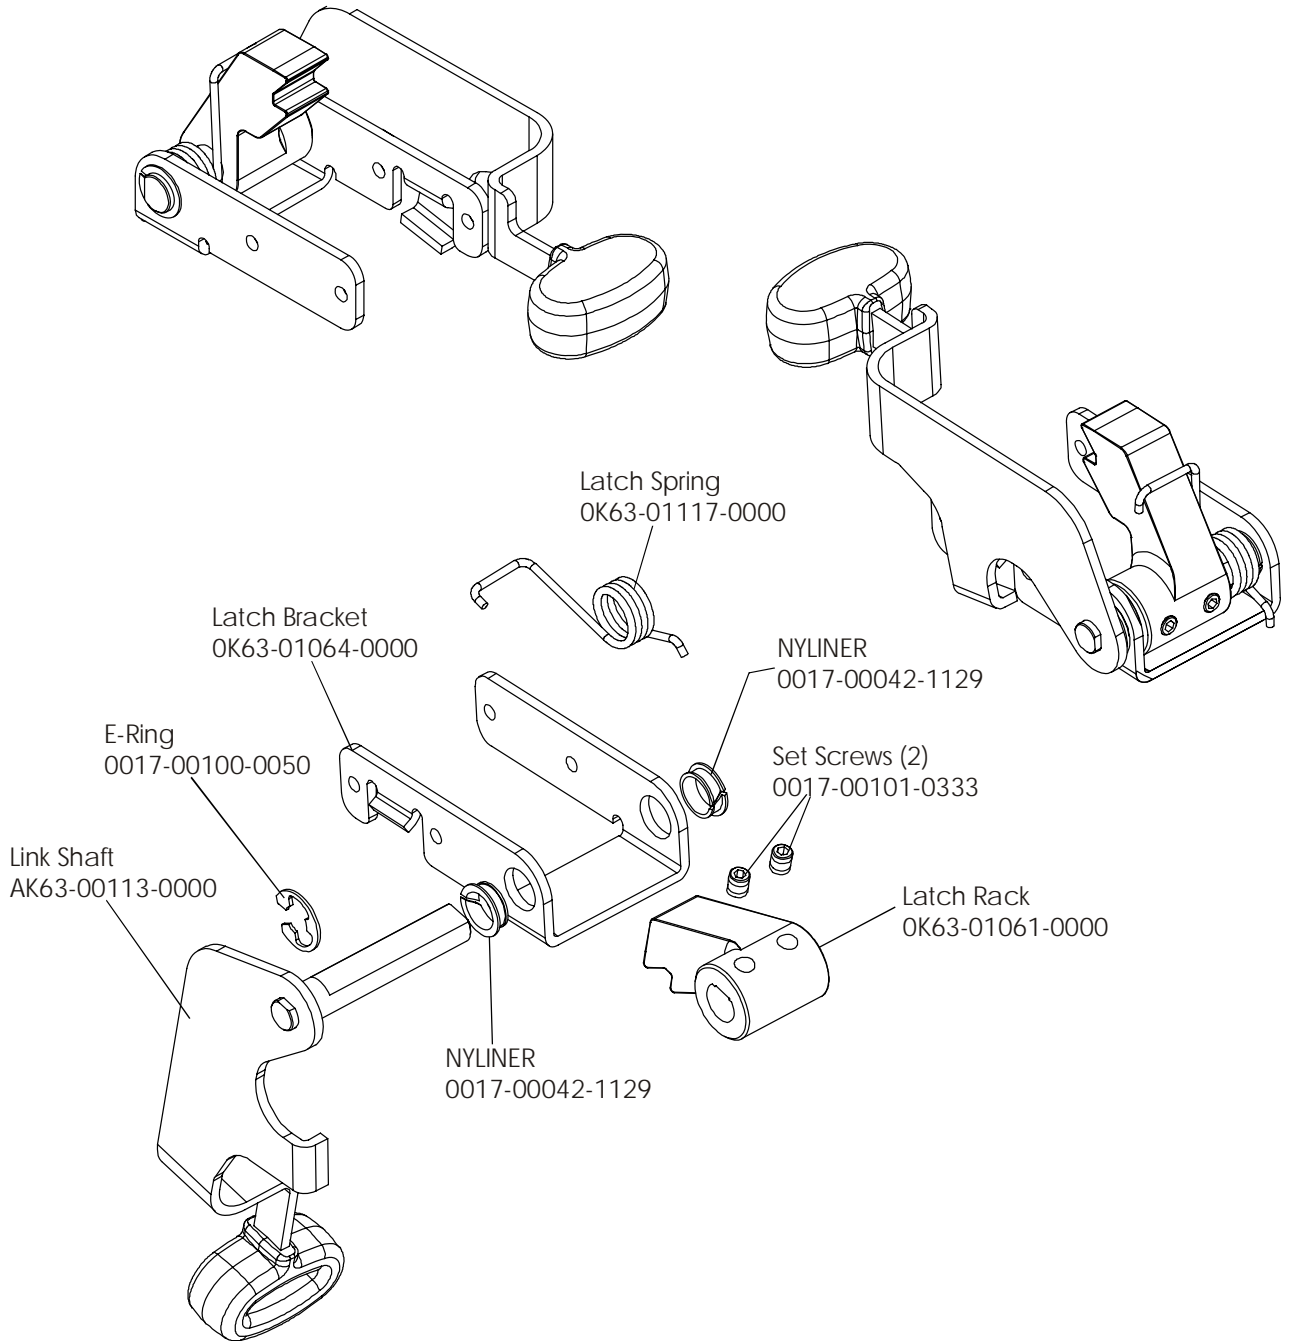 



Seat Post Assembly
 AK63-00232-0001

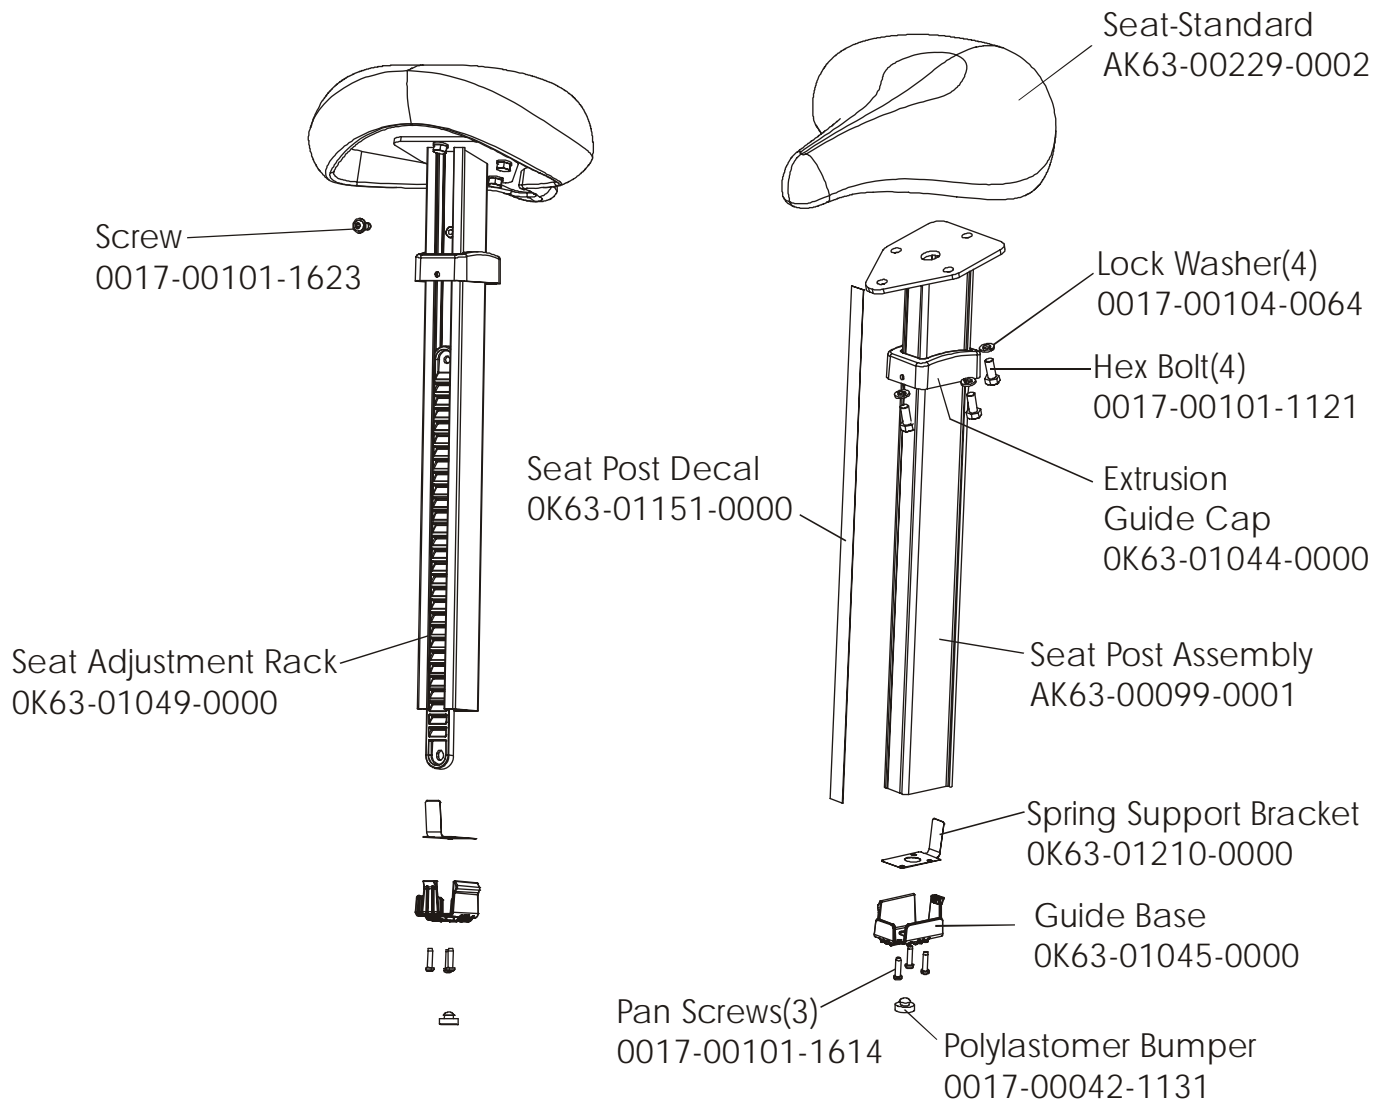 


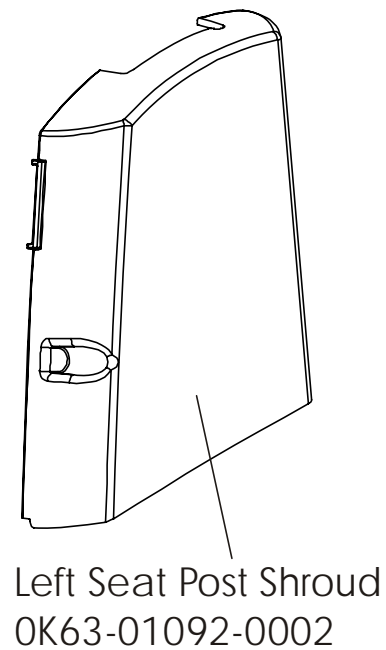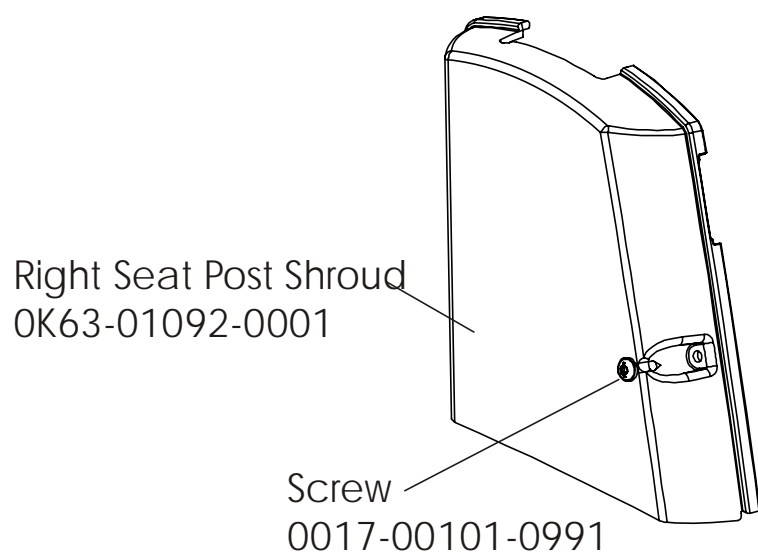  


Idler Bracket Assembly
AK63-00021-0000

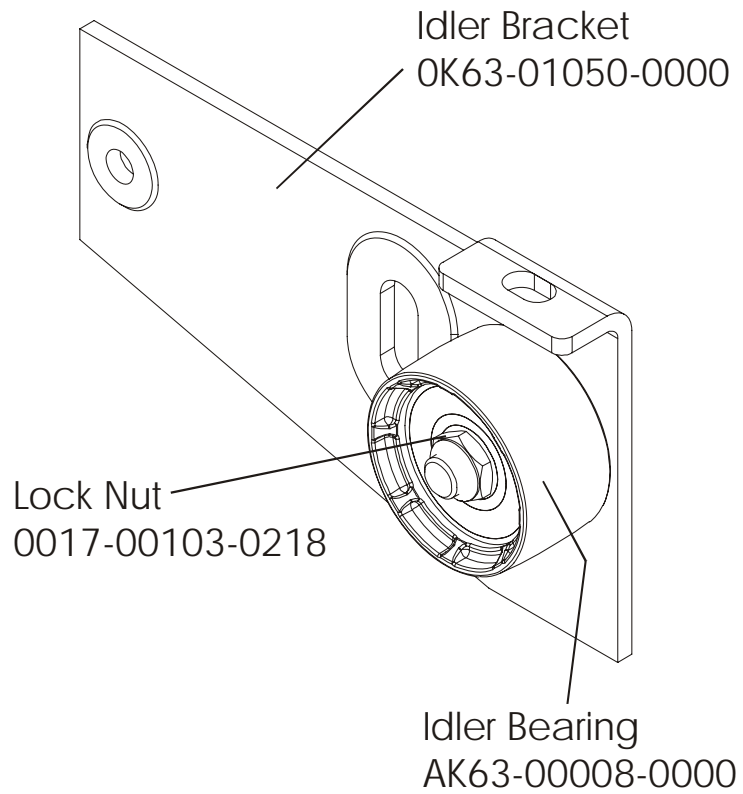 


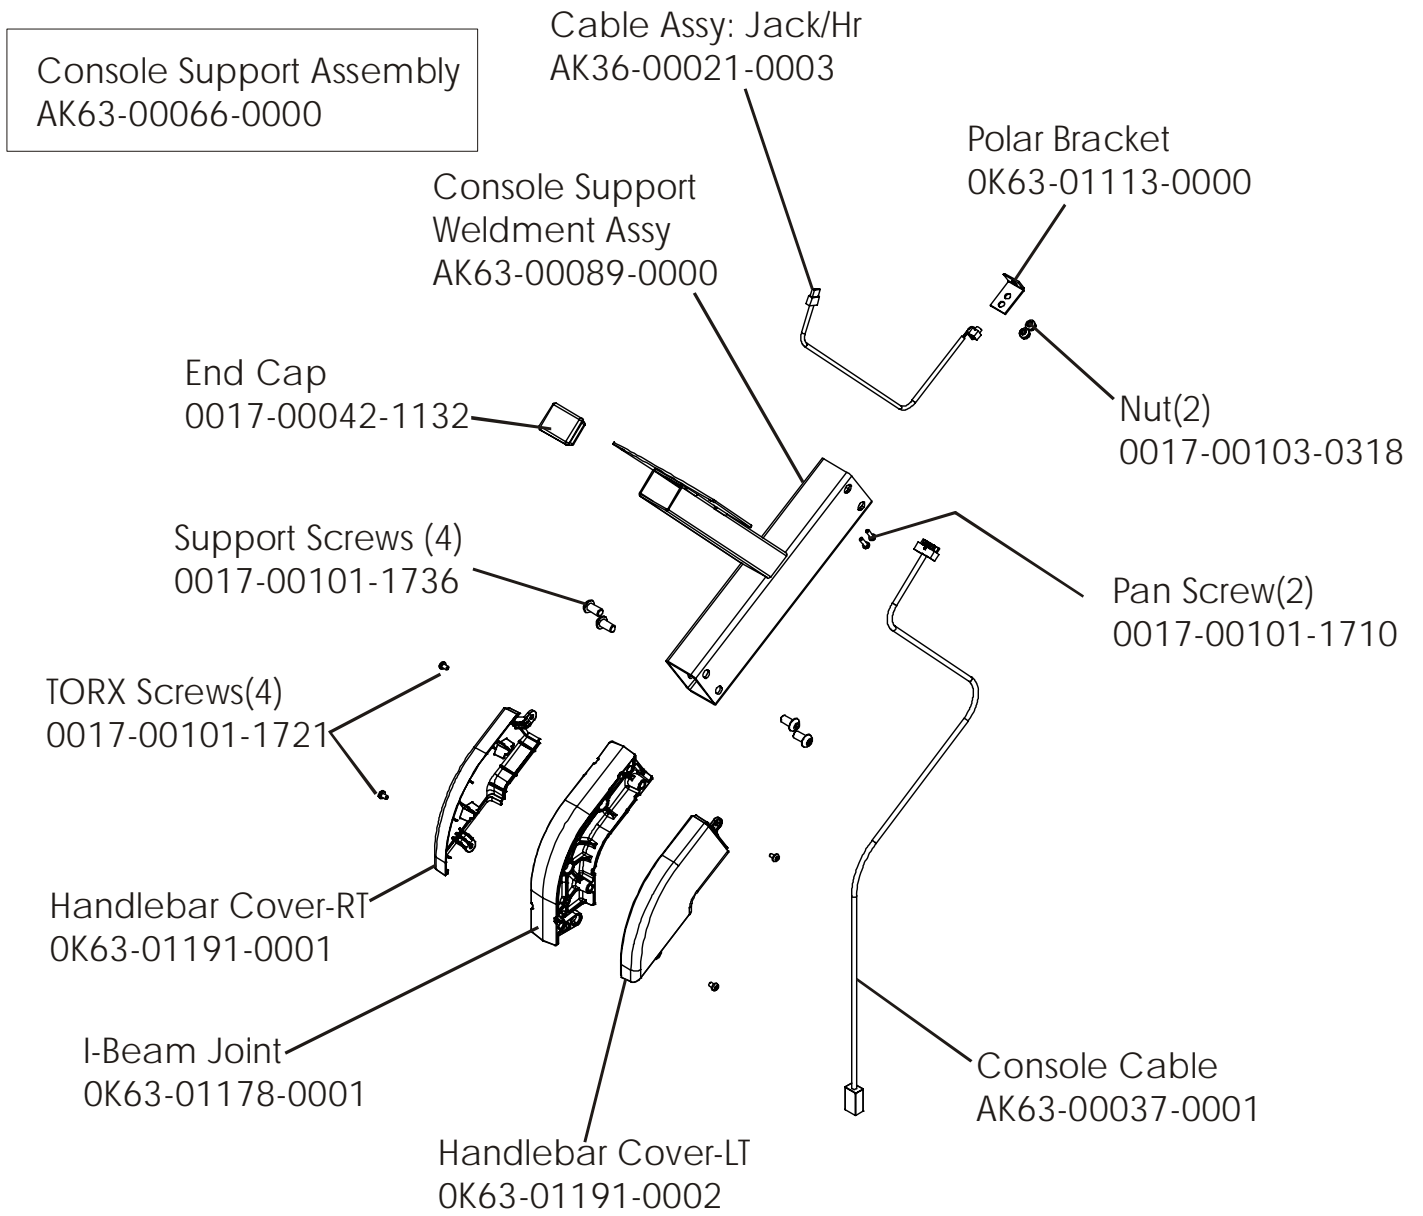 

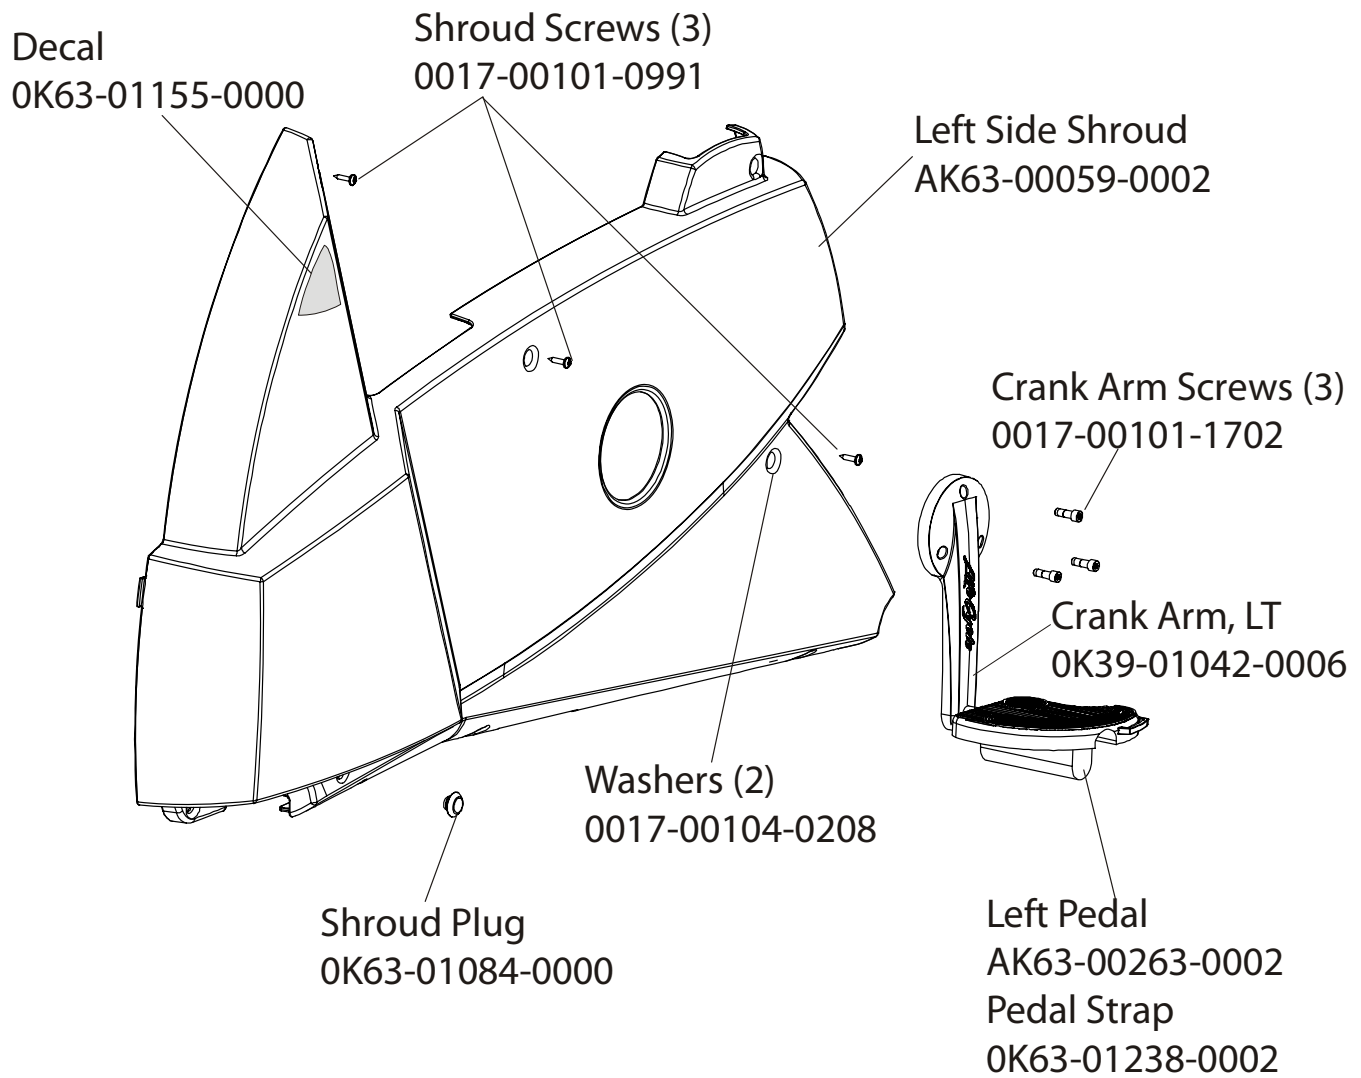 


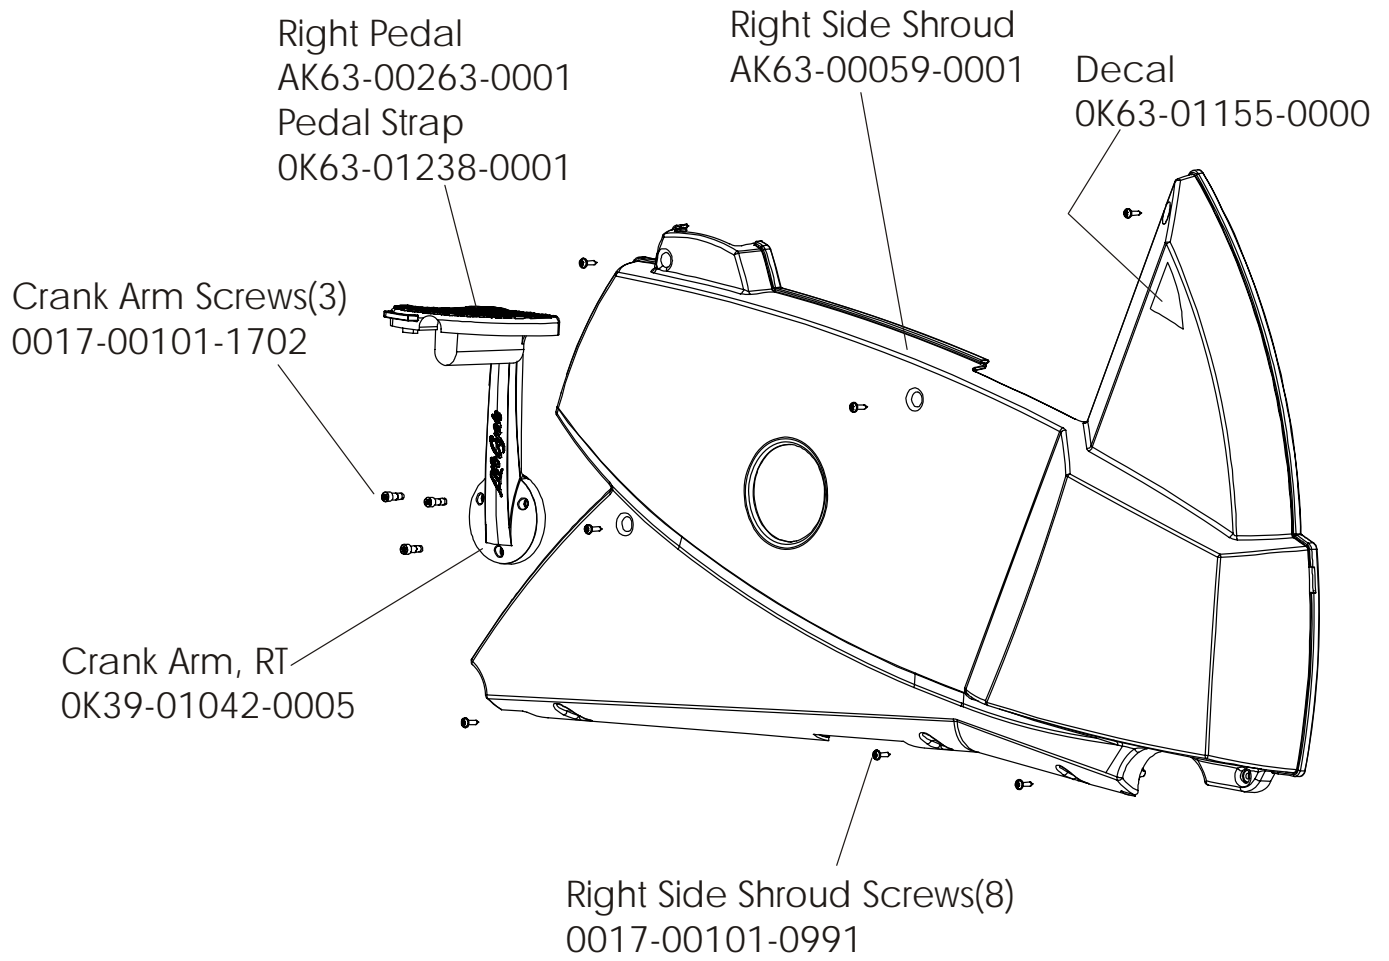 

 
PCB Mounting Bracket Assembly
AK63-00049-0000

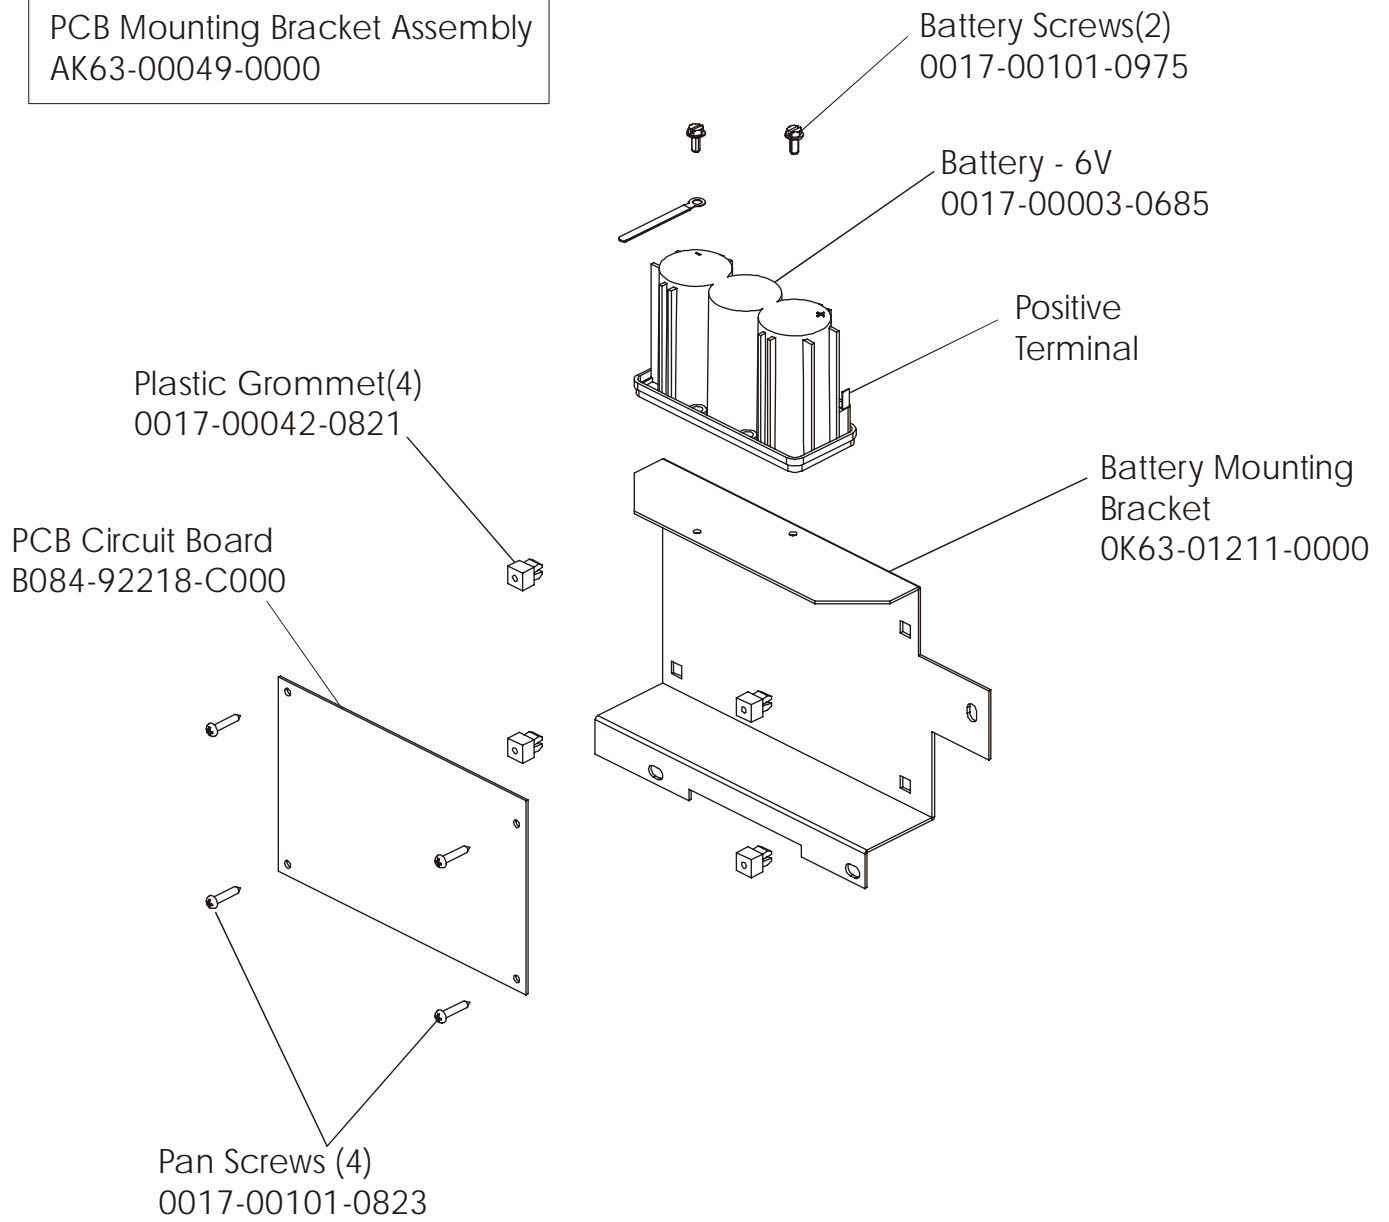


Front Wheels
AK63-00017-0000

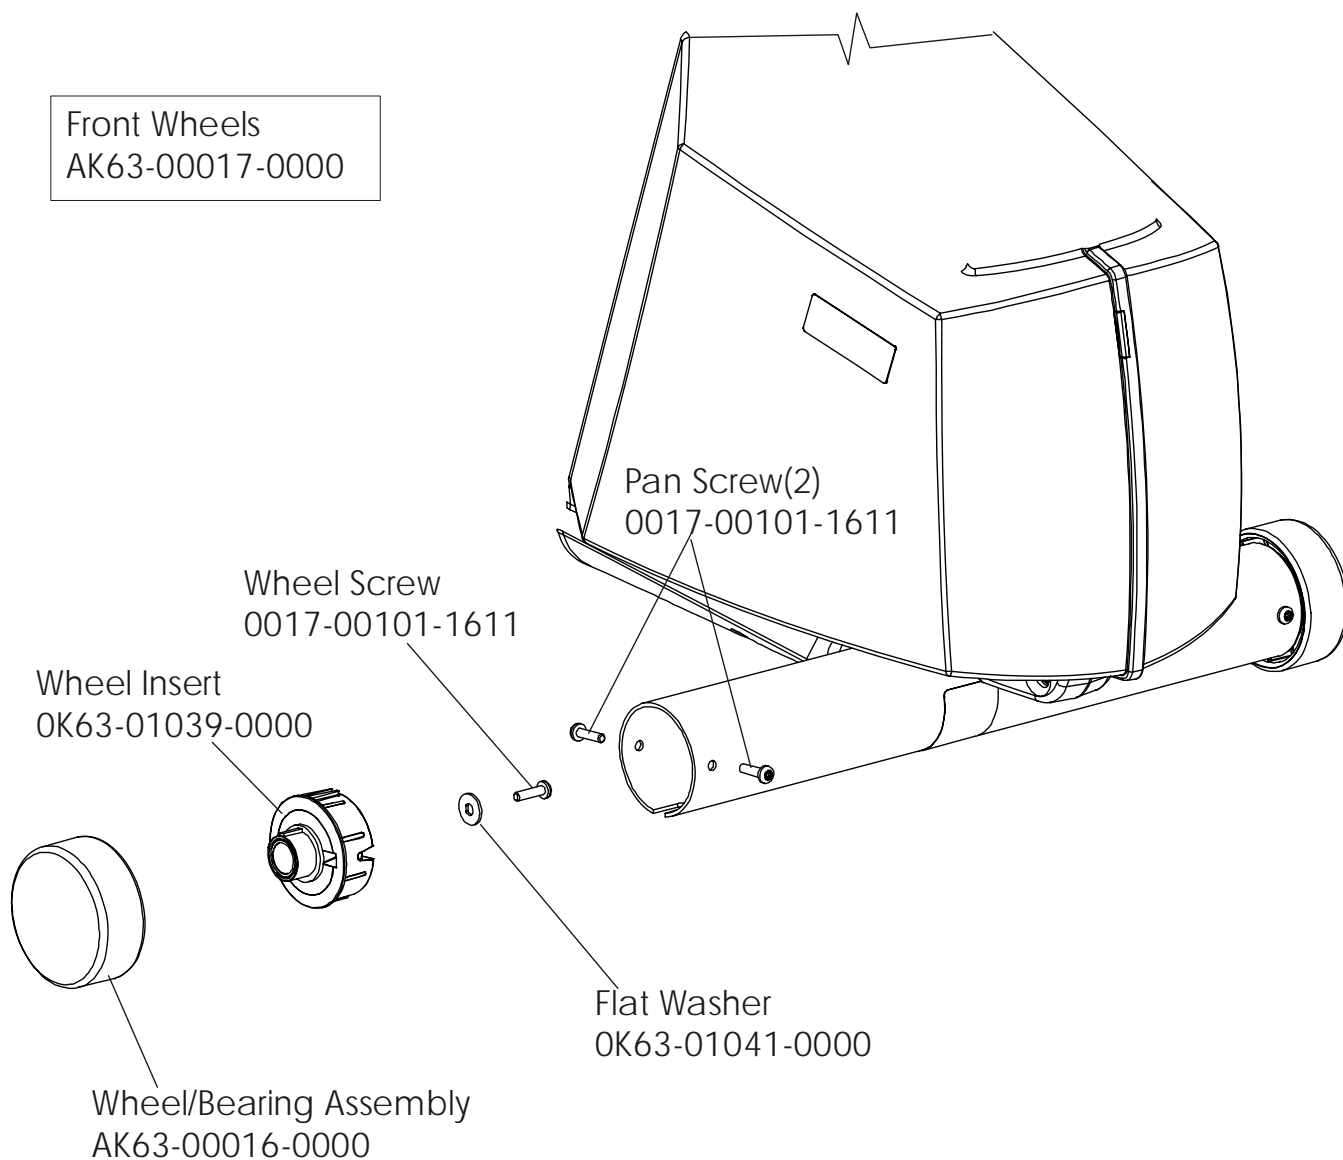 


Resistor Assembly
AK63-00047-0000


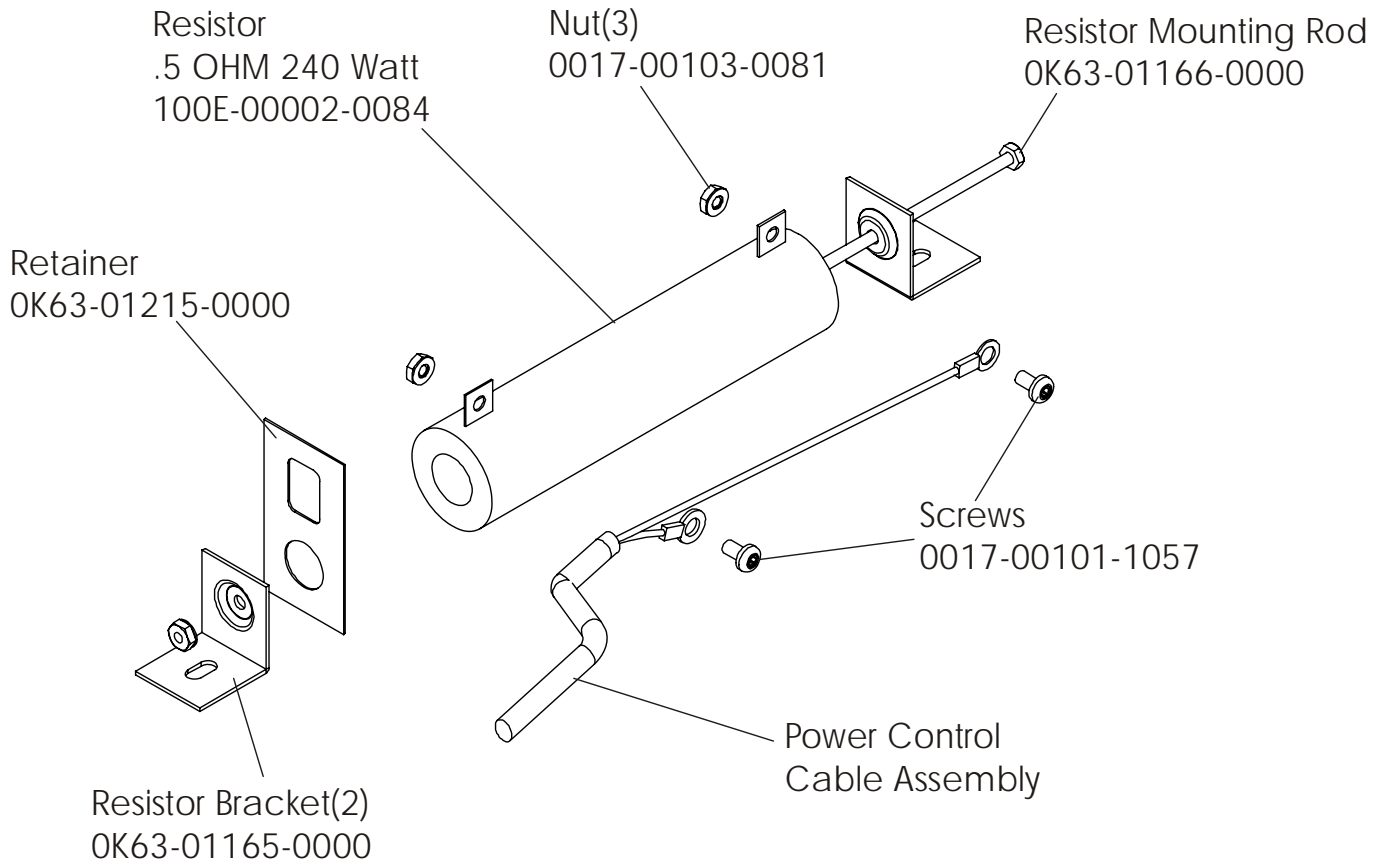 


Handlebar Assembly
AK63-00101-0000

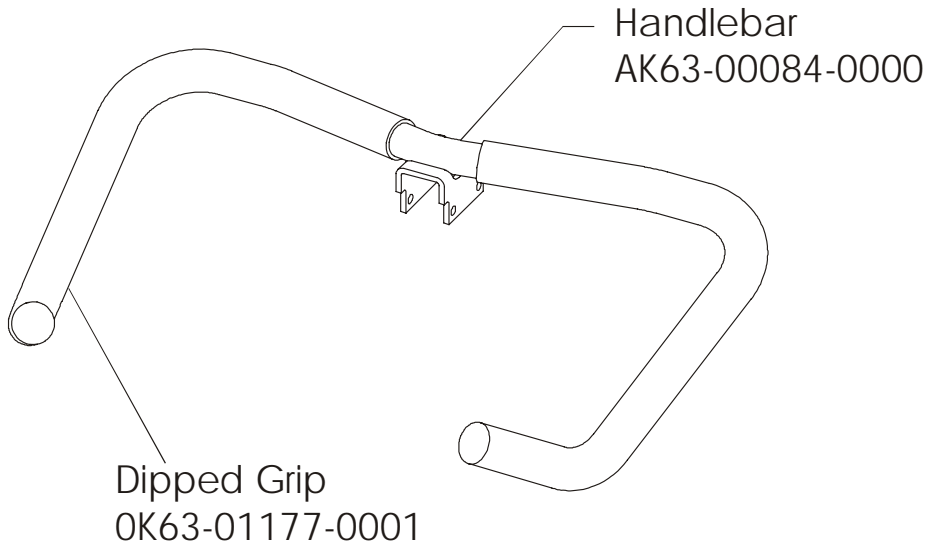 

Accessory Tray (black)
OK63-01030-0000

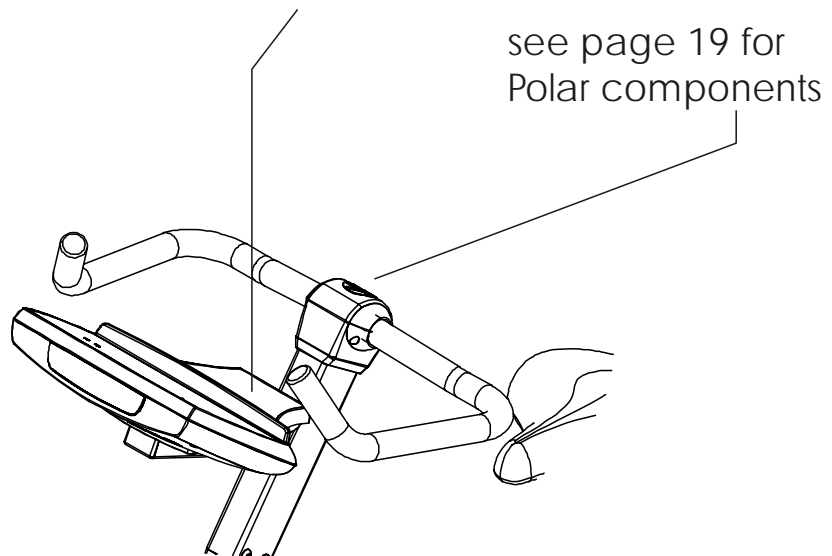 

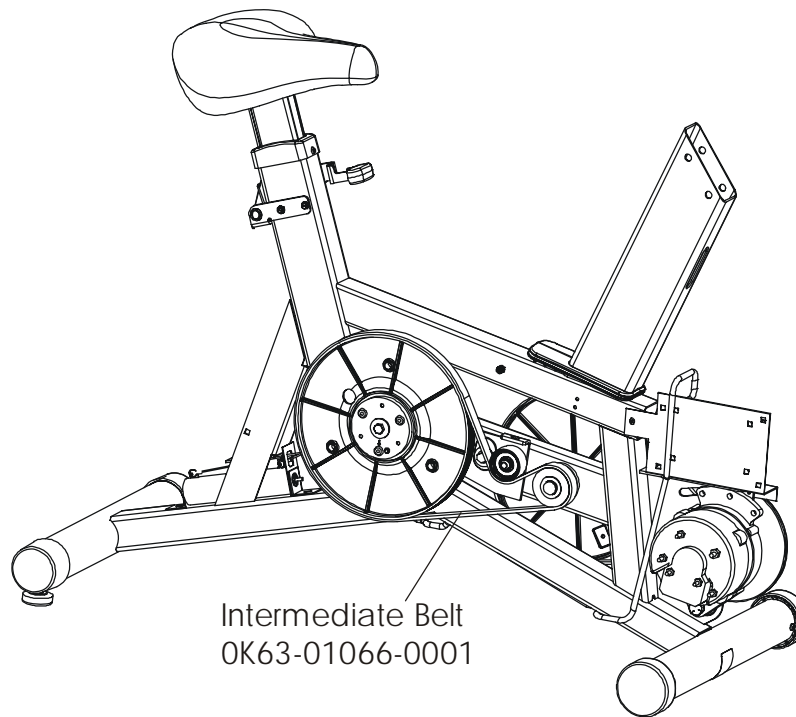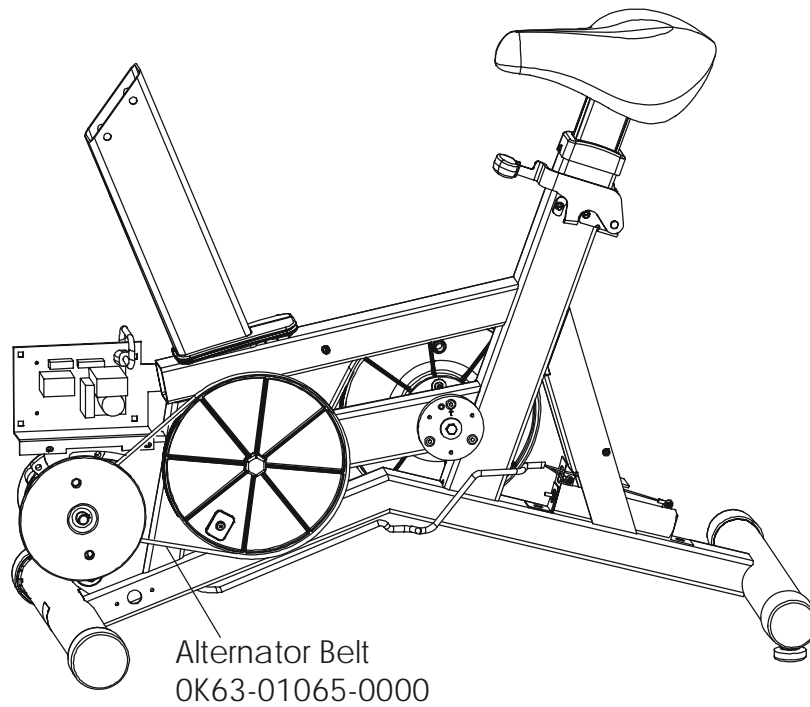  

- Polar Kit
 SK40-00045-0001
 Polar Cover, Top (black)
 OK63-01145-0000
 Polar Cover, Bottom (black)
 OK63-01146-0000

Reed Switch/Mounting
 Bracket Assembly
 AK63-00050-0000

Auto-Start Magnet
 118E-00001-0124

