 
 
 


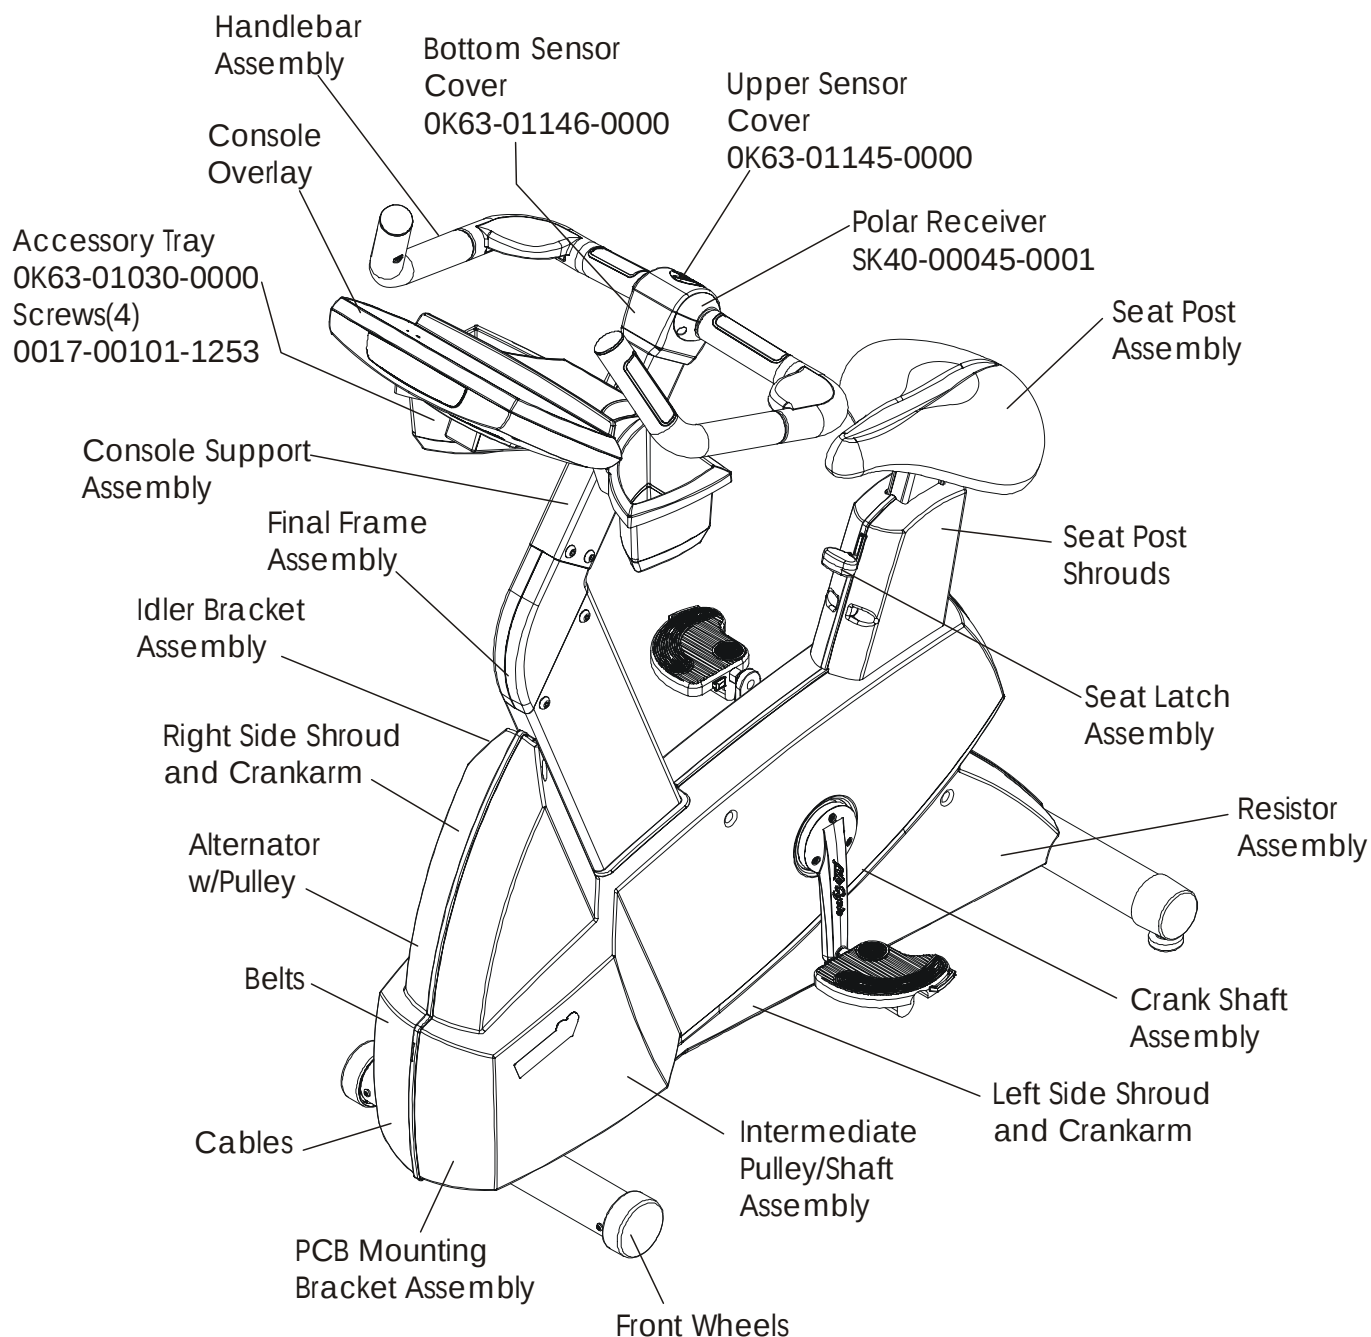

Operation Manual	M051-00K63-B043
Manual: Serv; LC95/91/85	M051-00K63-A009

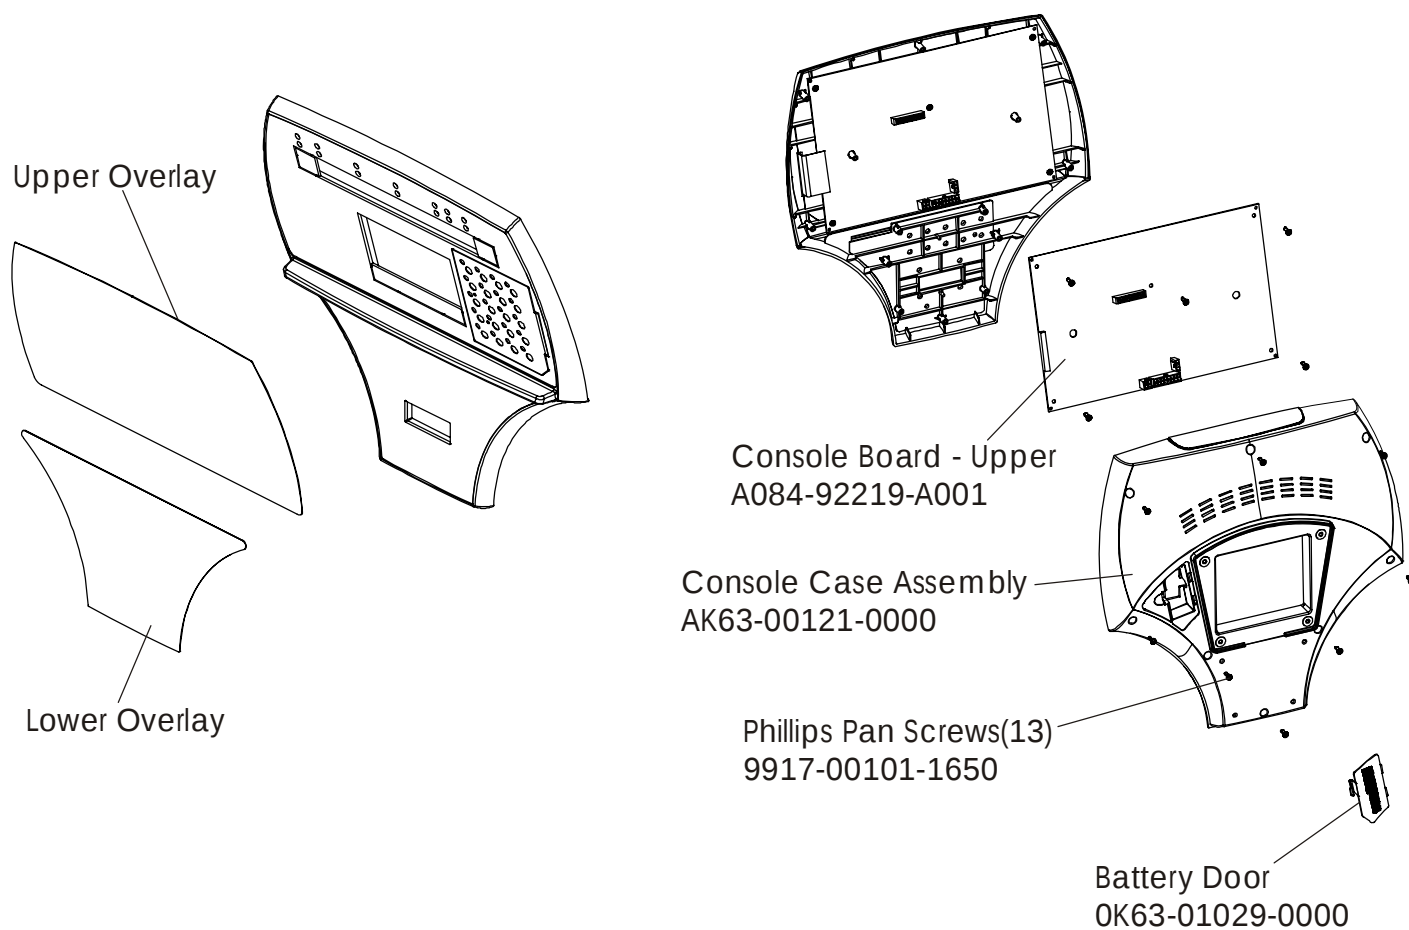

Console Assembly	Overlay Bezel
AK63-00070-0001 Eng Met	AK63-00063-0001 Eng Met
AK63-00070-0003 Ger Met	AK63-00063-0003 Ger Met
AK63-00070-0004 Spn Met	AK63-00063-0004 Spn Met
AK63-00070-0006 Jap Met	AK63-00063-0006 Jap Met
AK63-00070-0007 Frn Met	AK63-00063-0007 Frn Met
AK63-00070-0008 Itl Met	AK63-00063-0008 Itl Met
AK63-00070-0009 Itl Met	AK63-00063-0009 Itl Met
AK63-00070-0010 Por Met	AK63-00063-0010 Por Met

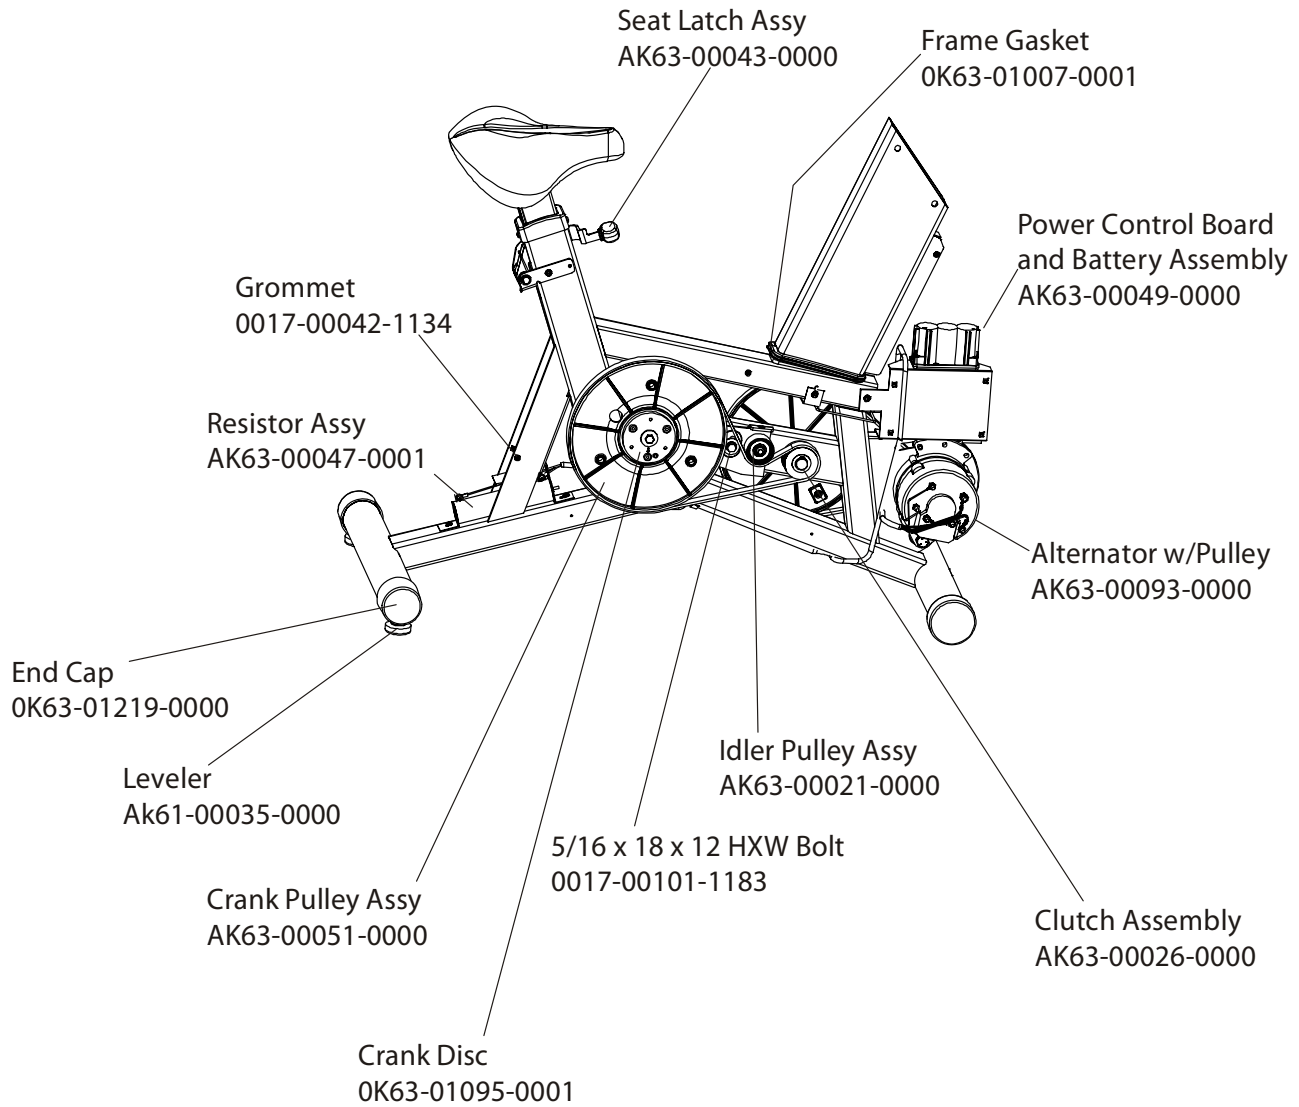

 
Alternator Pulley
OK61-02500-0001

 
Alternator
0017-00009-0841

 
Locking Nut
0017-00103-0117

 
Washer
0017-00104-0044

 
Bolt
0017-00101-0956

 
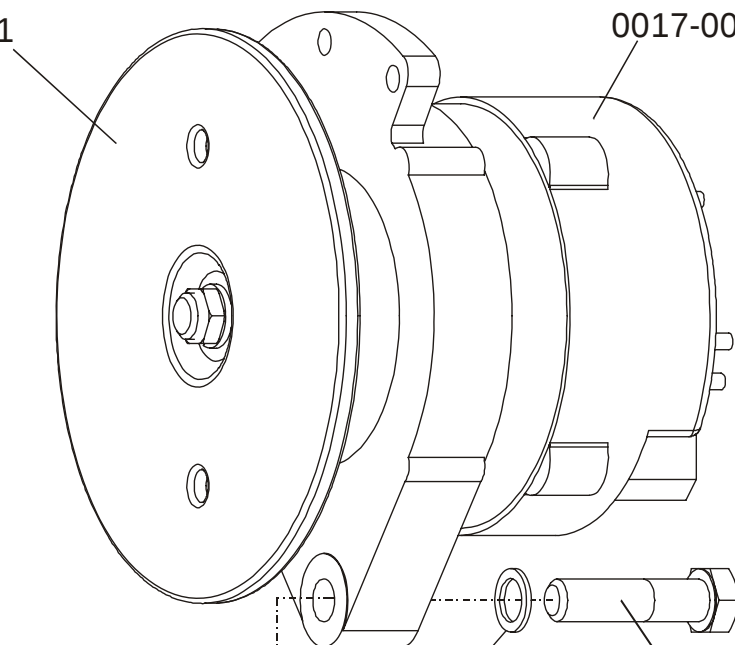 


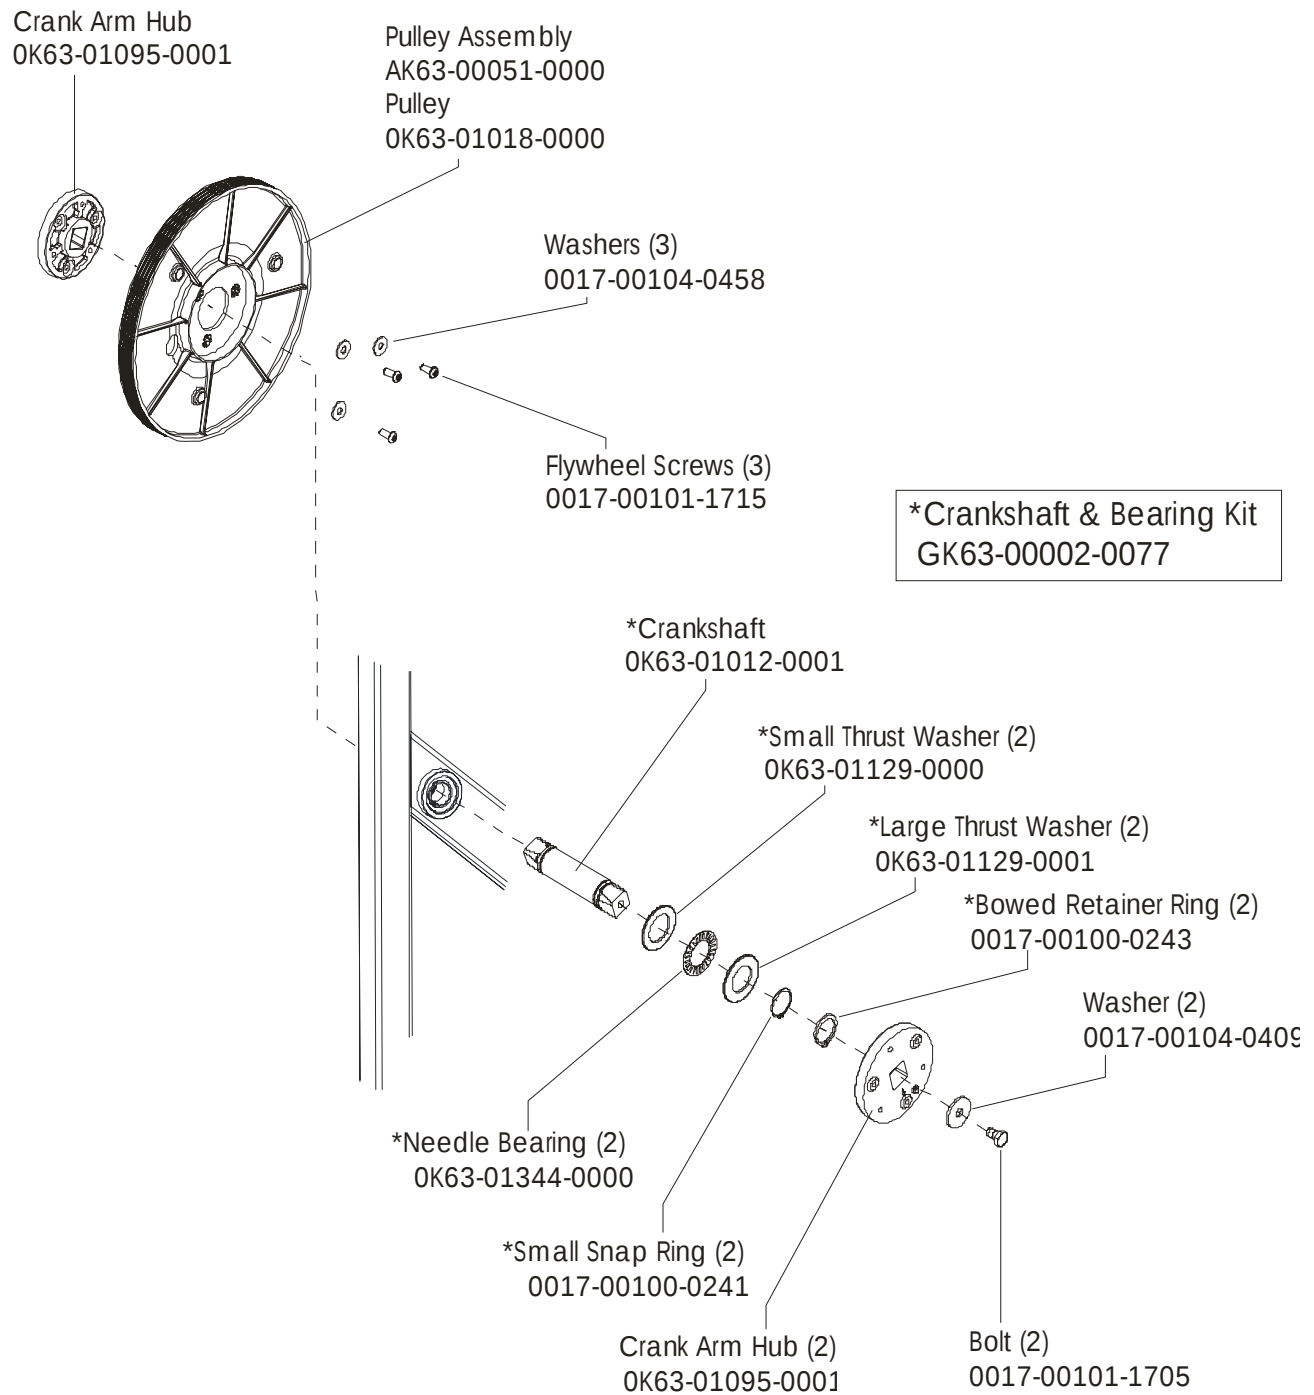 


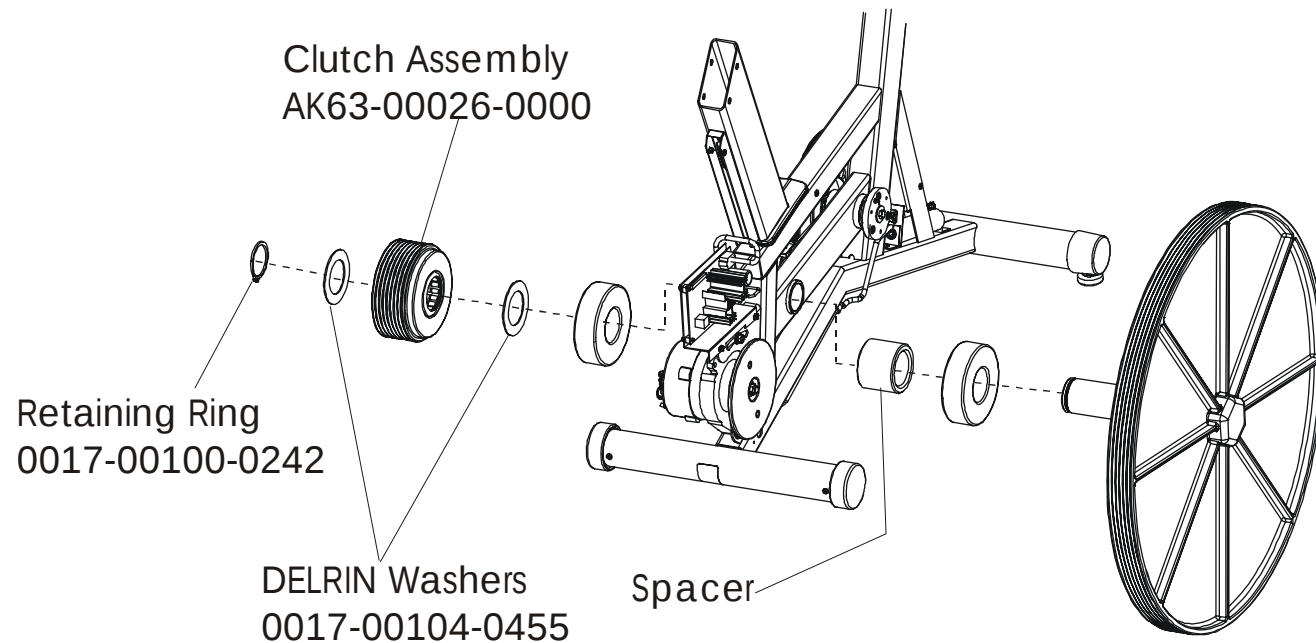 


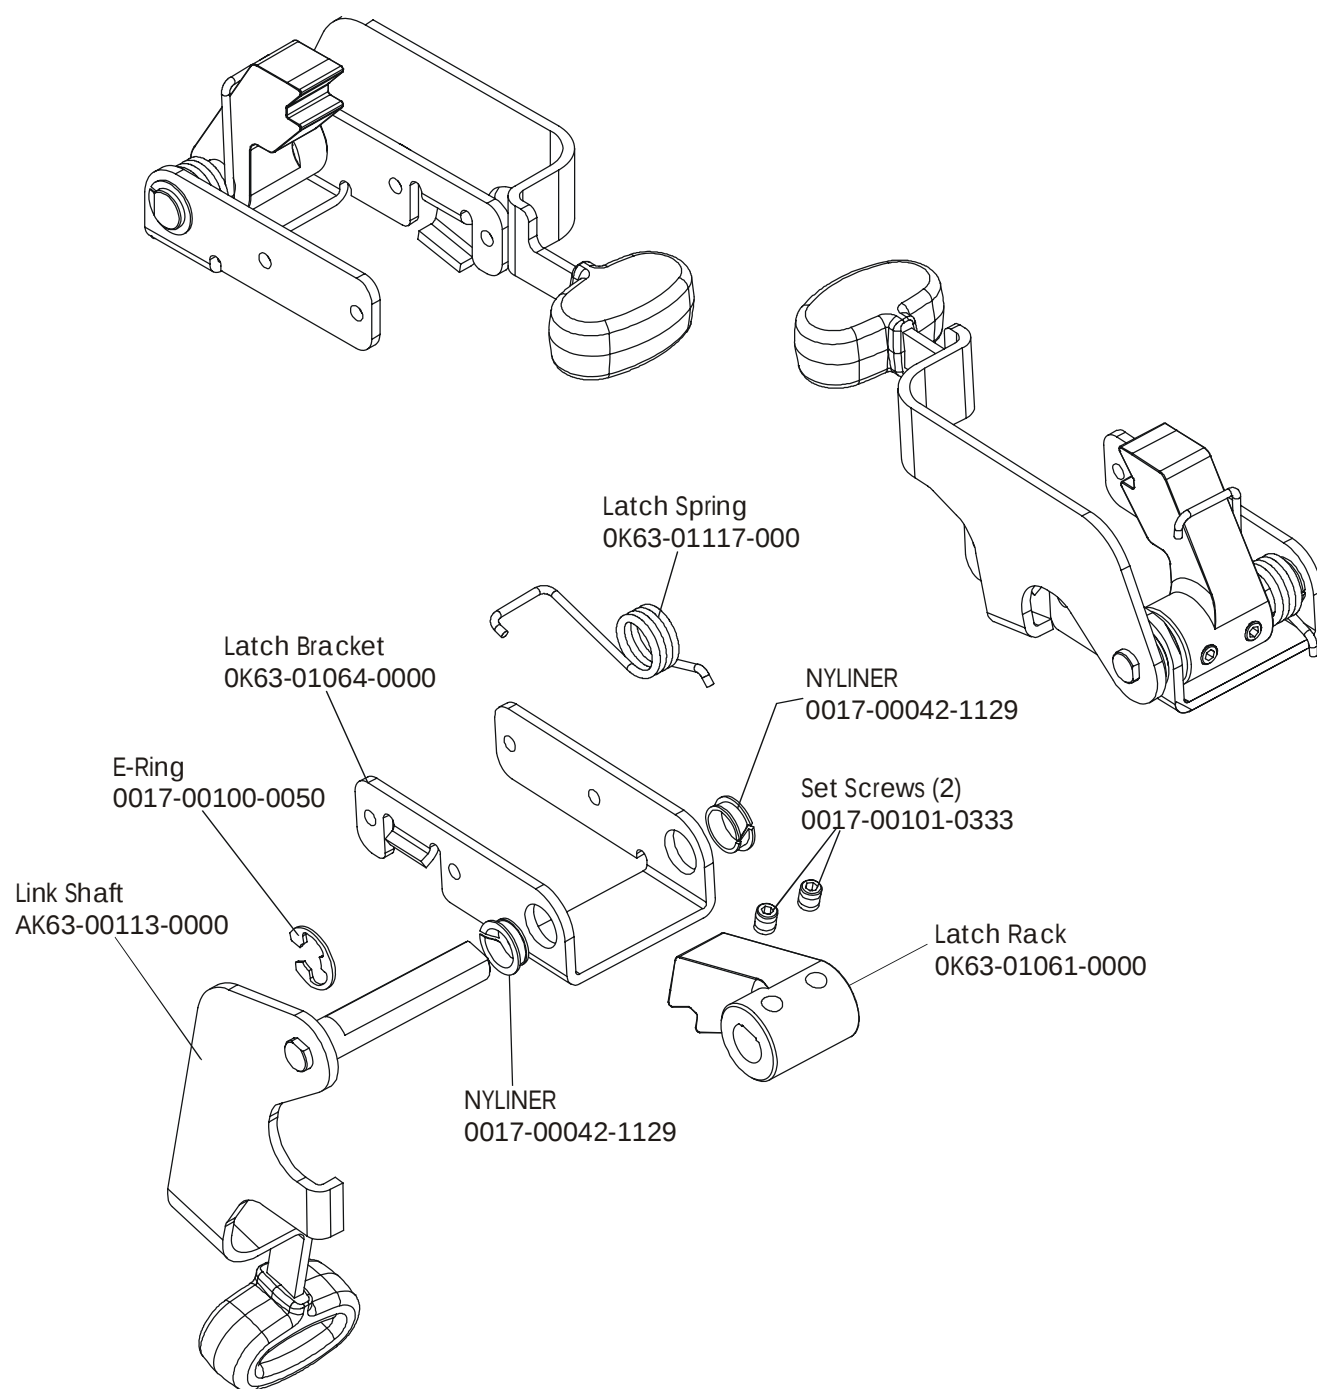 


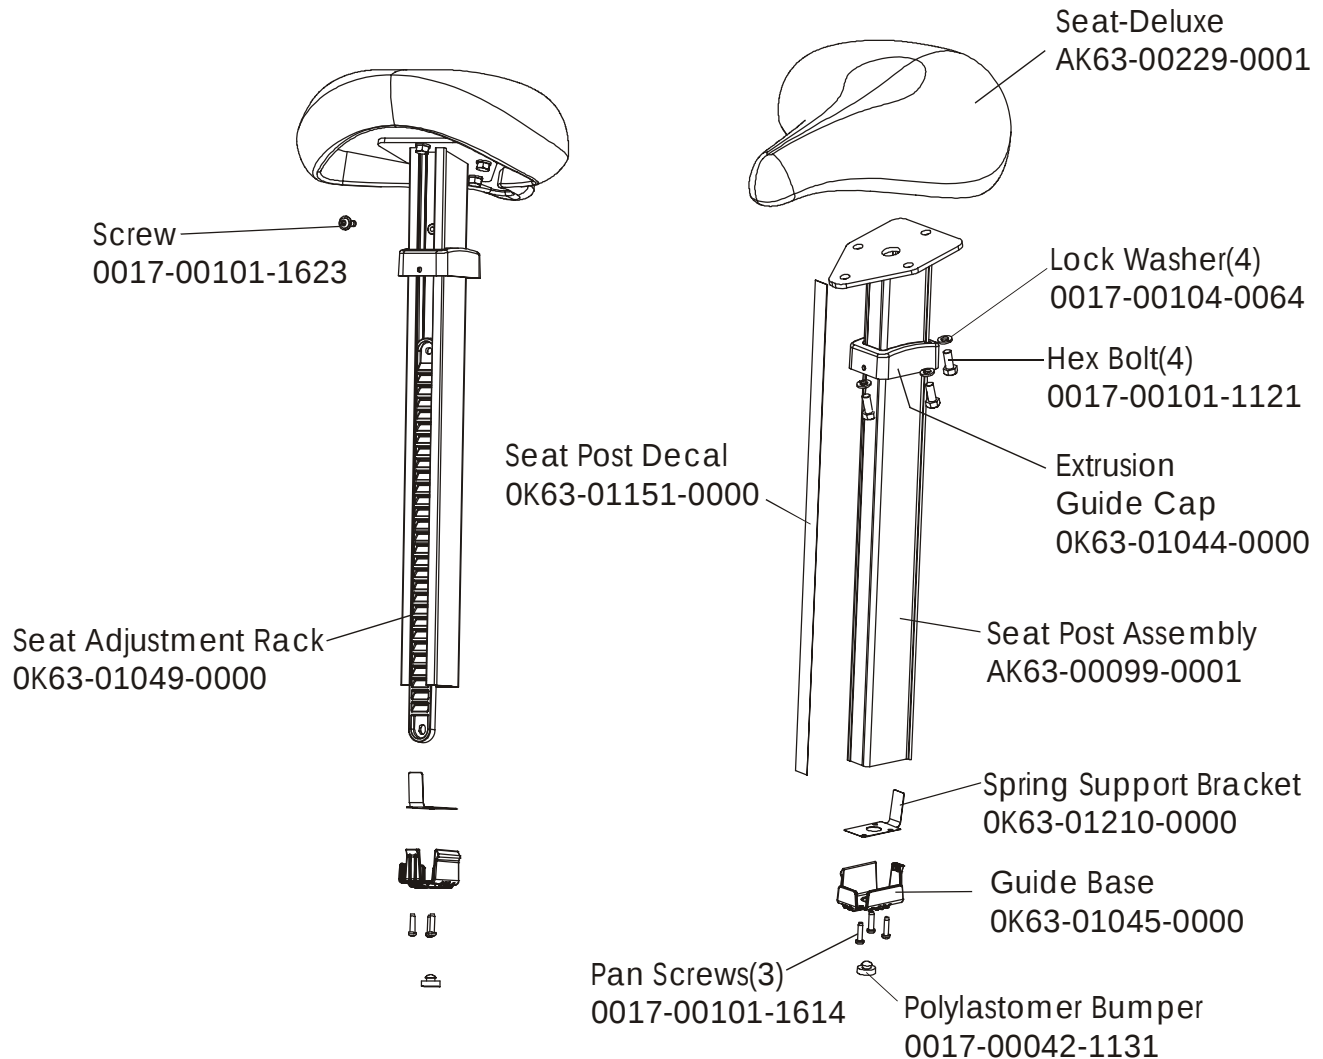 


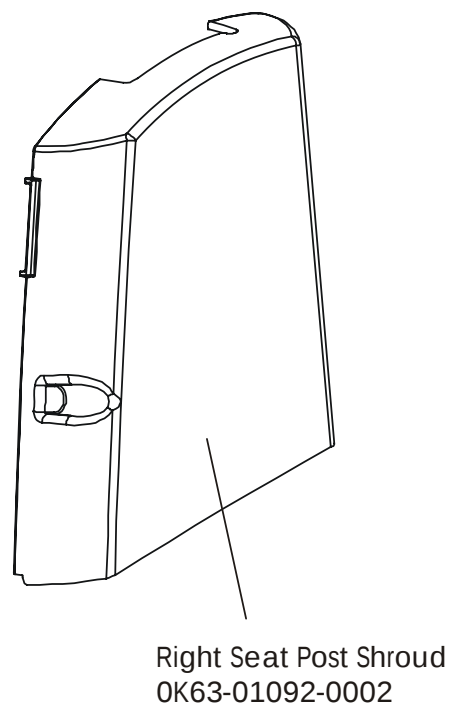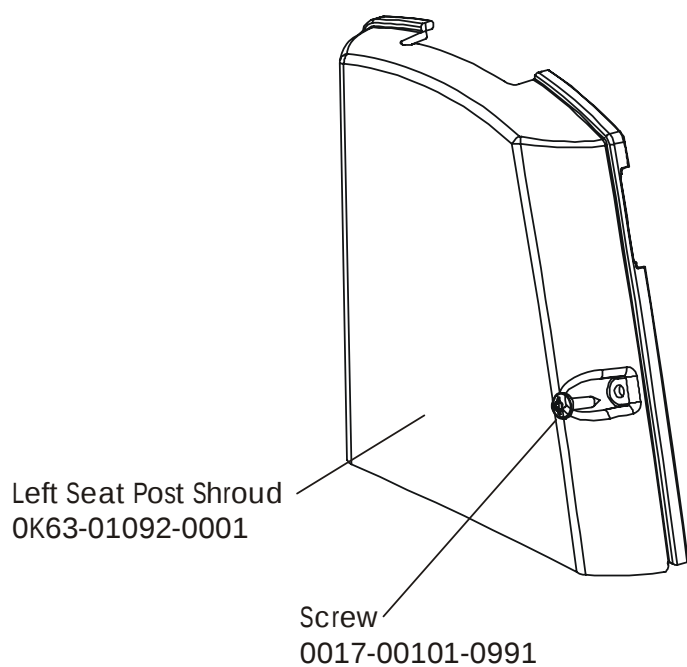 


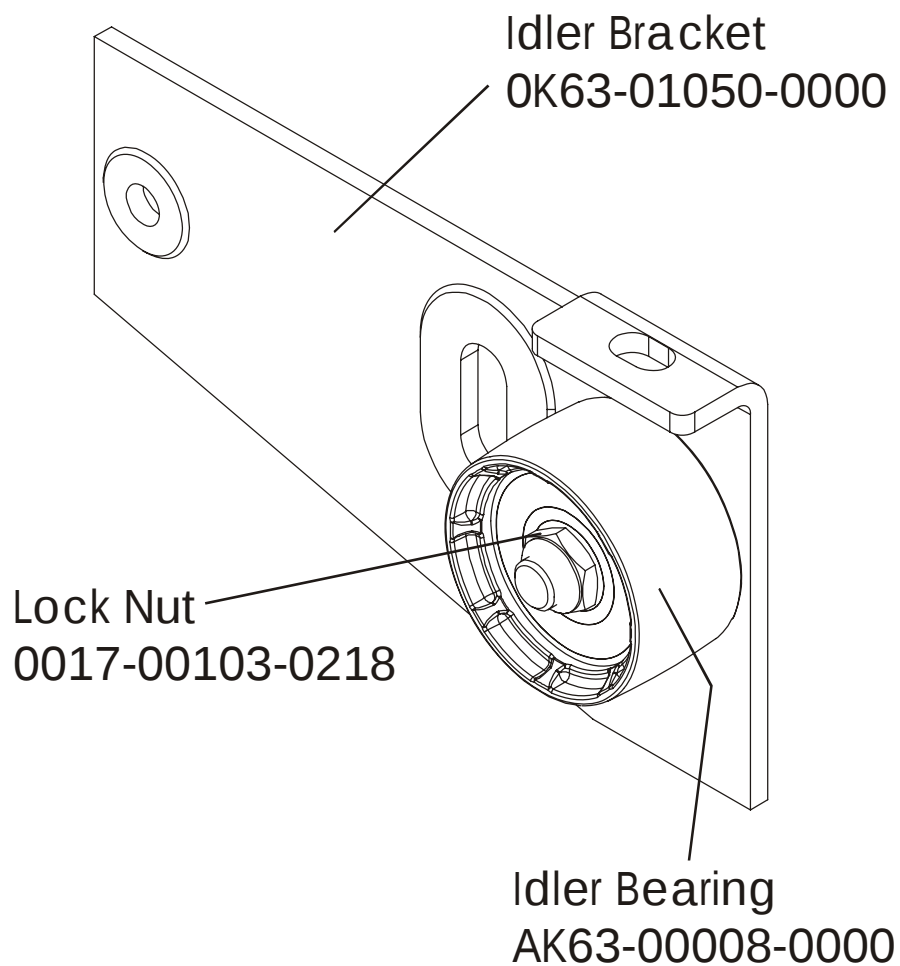 


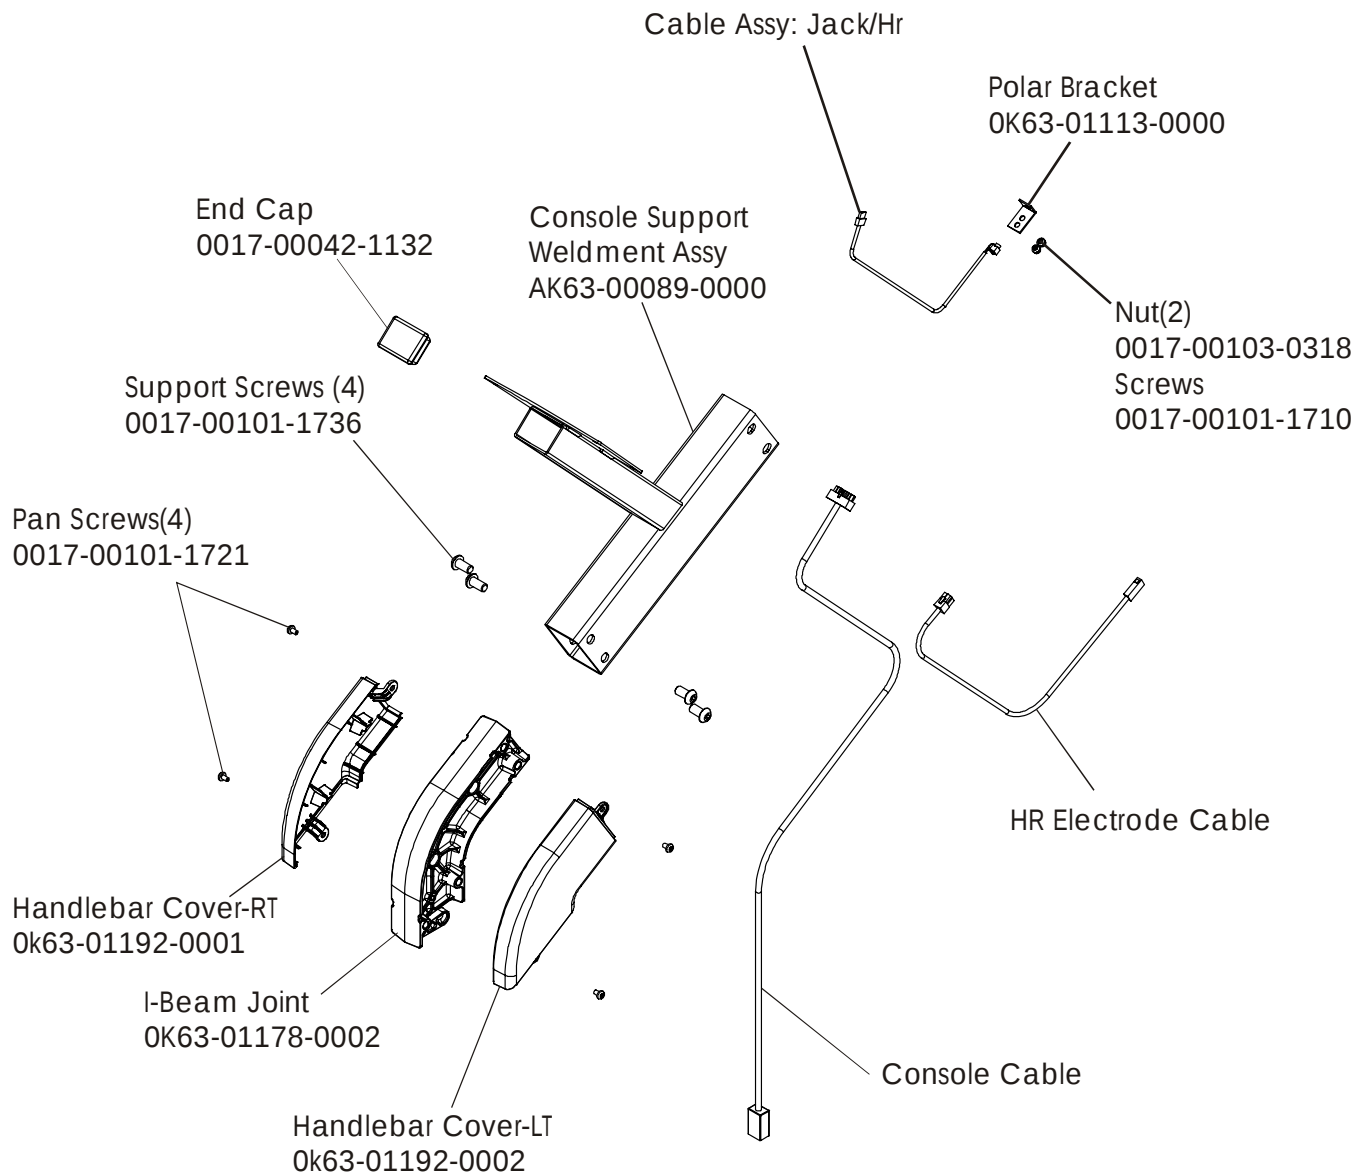 


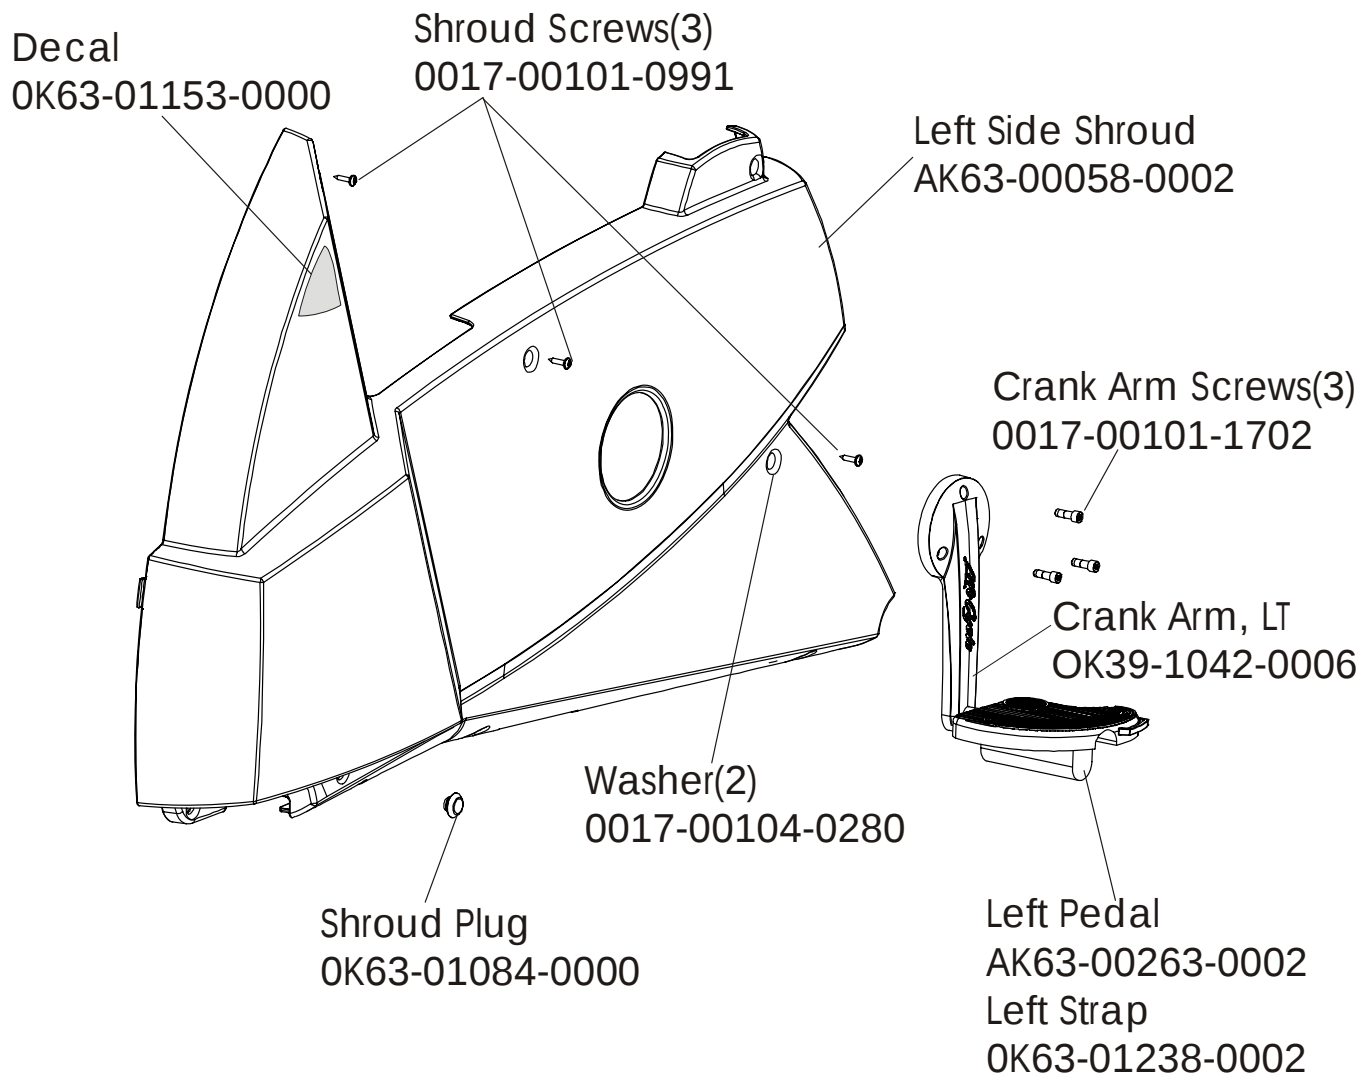 


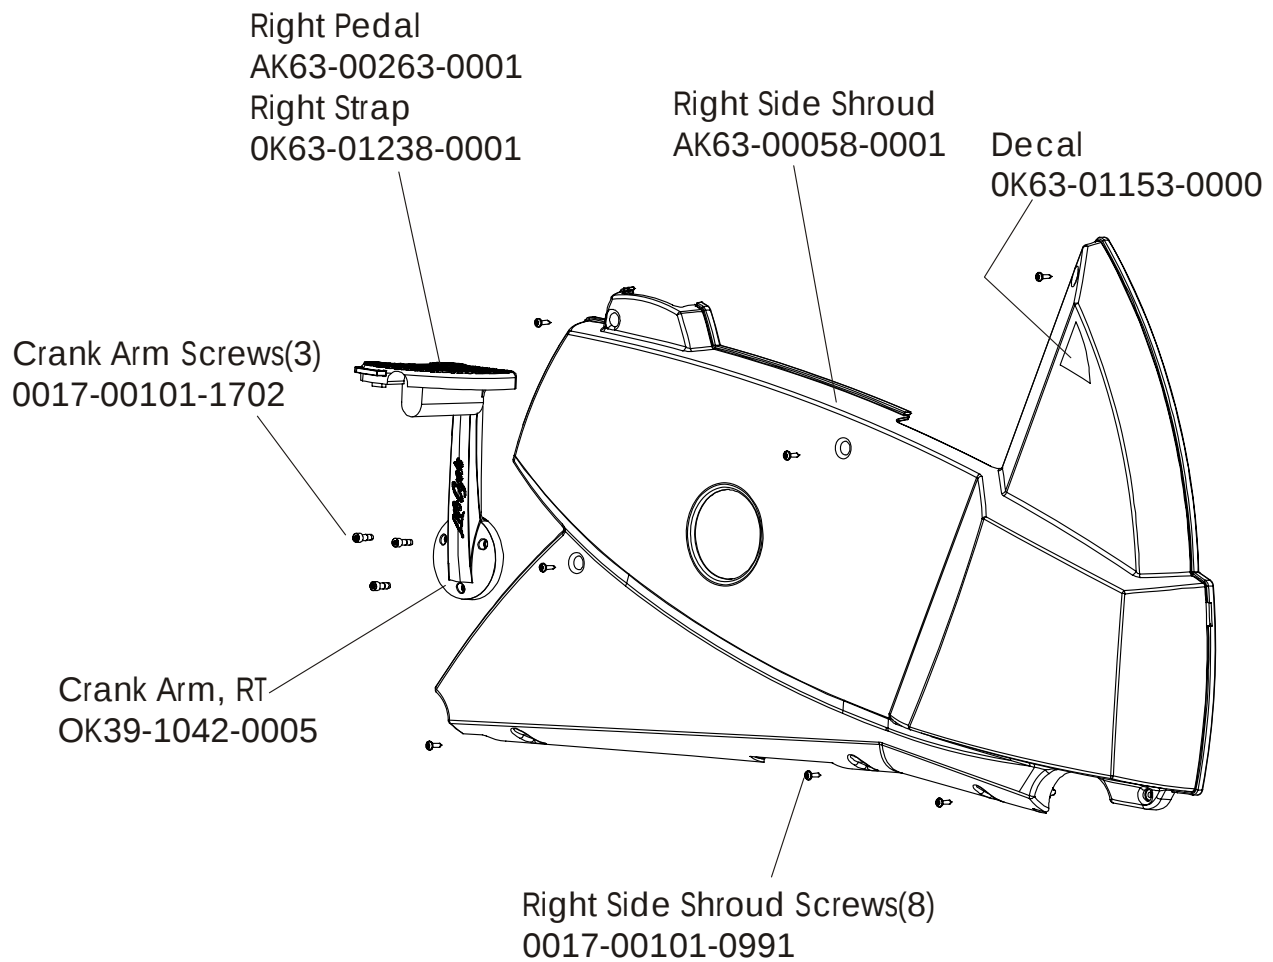 


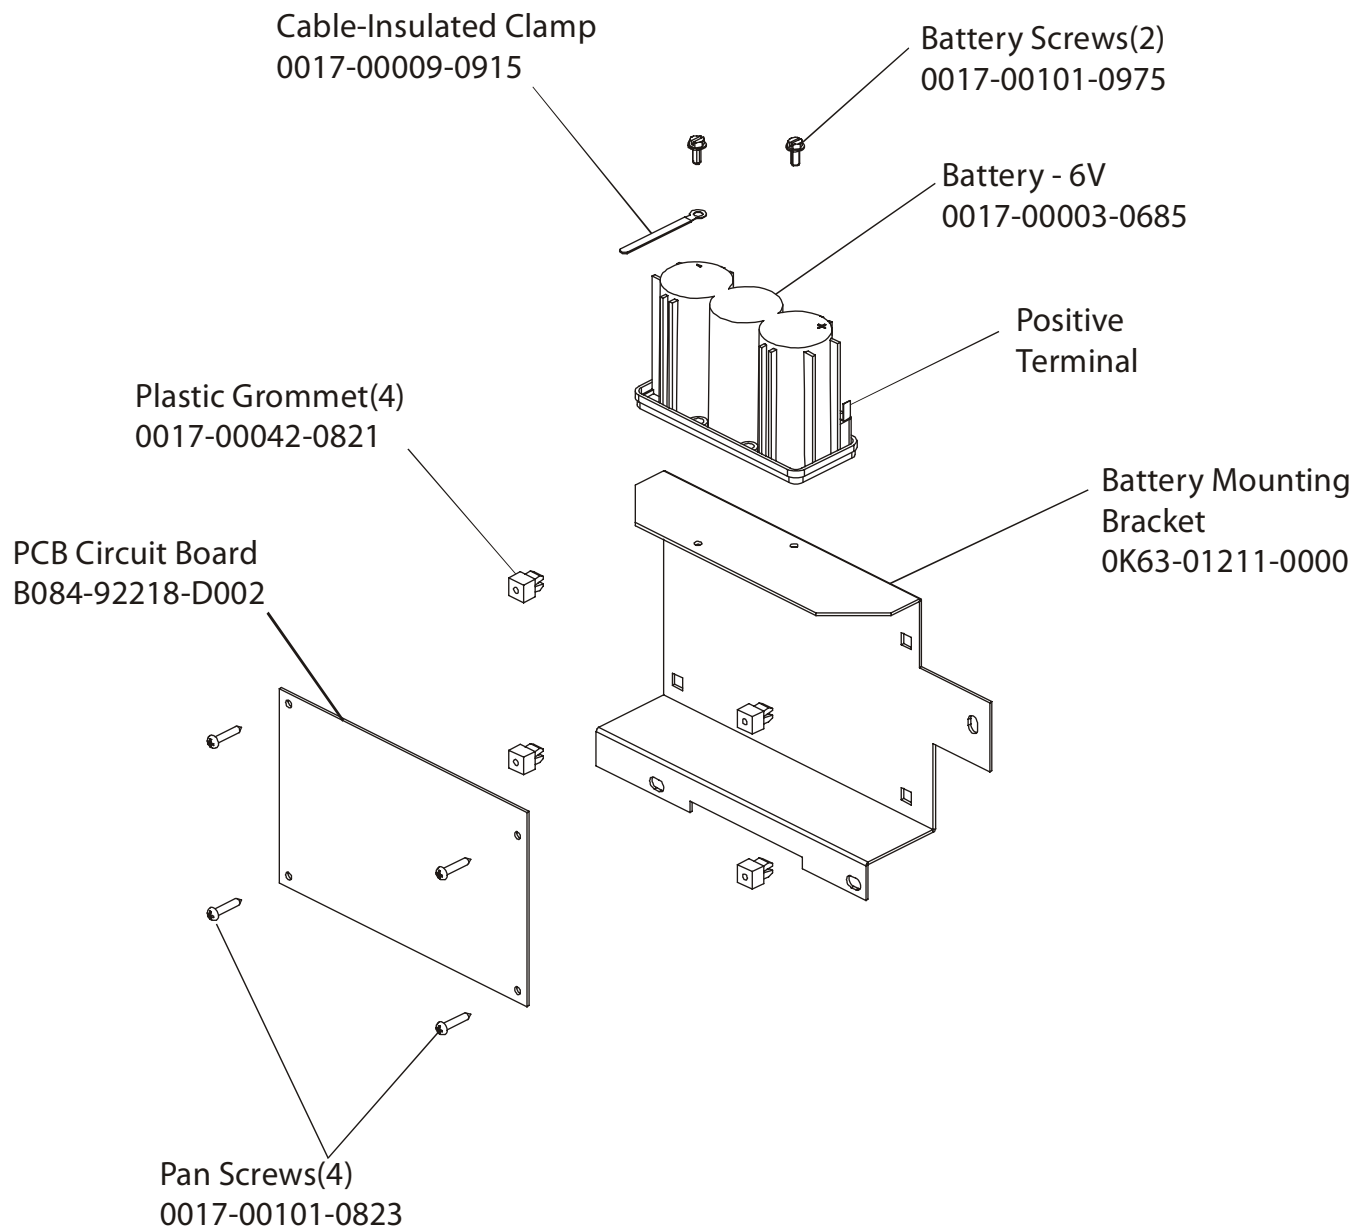

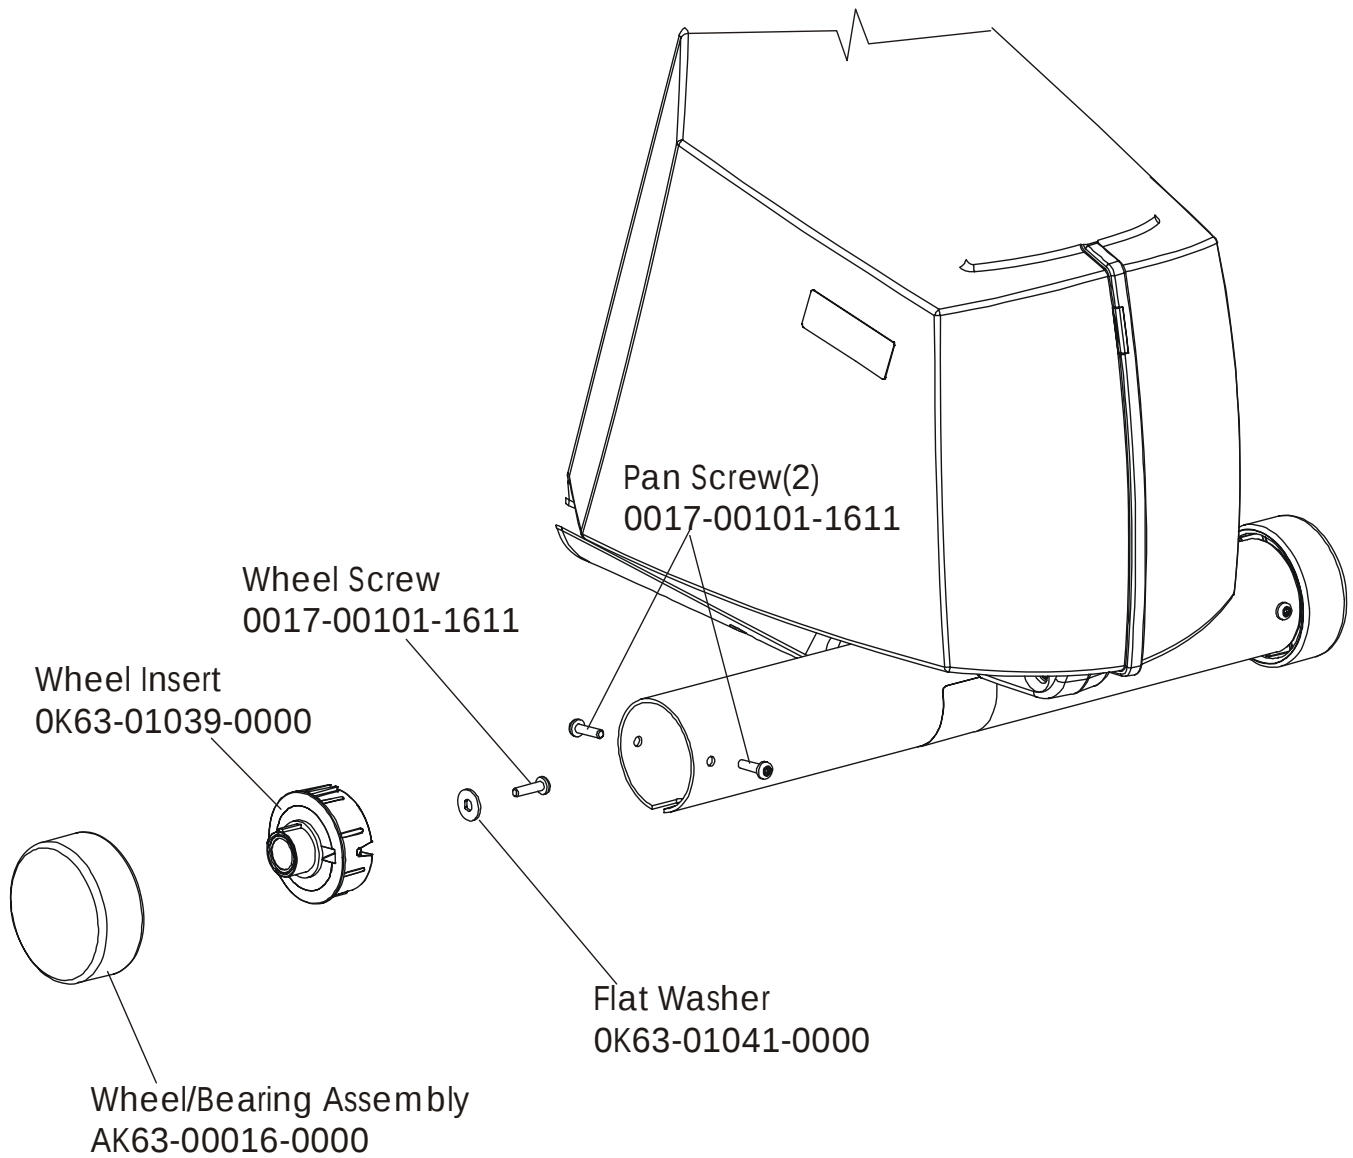


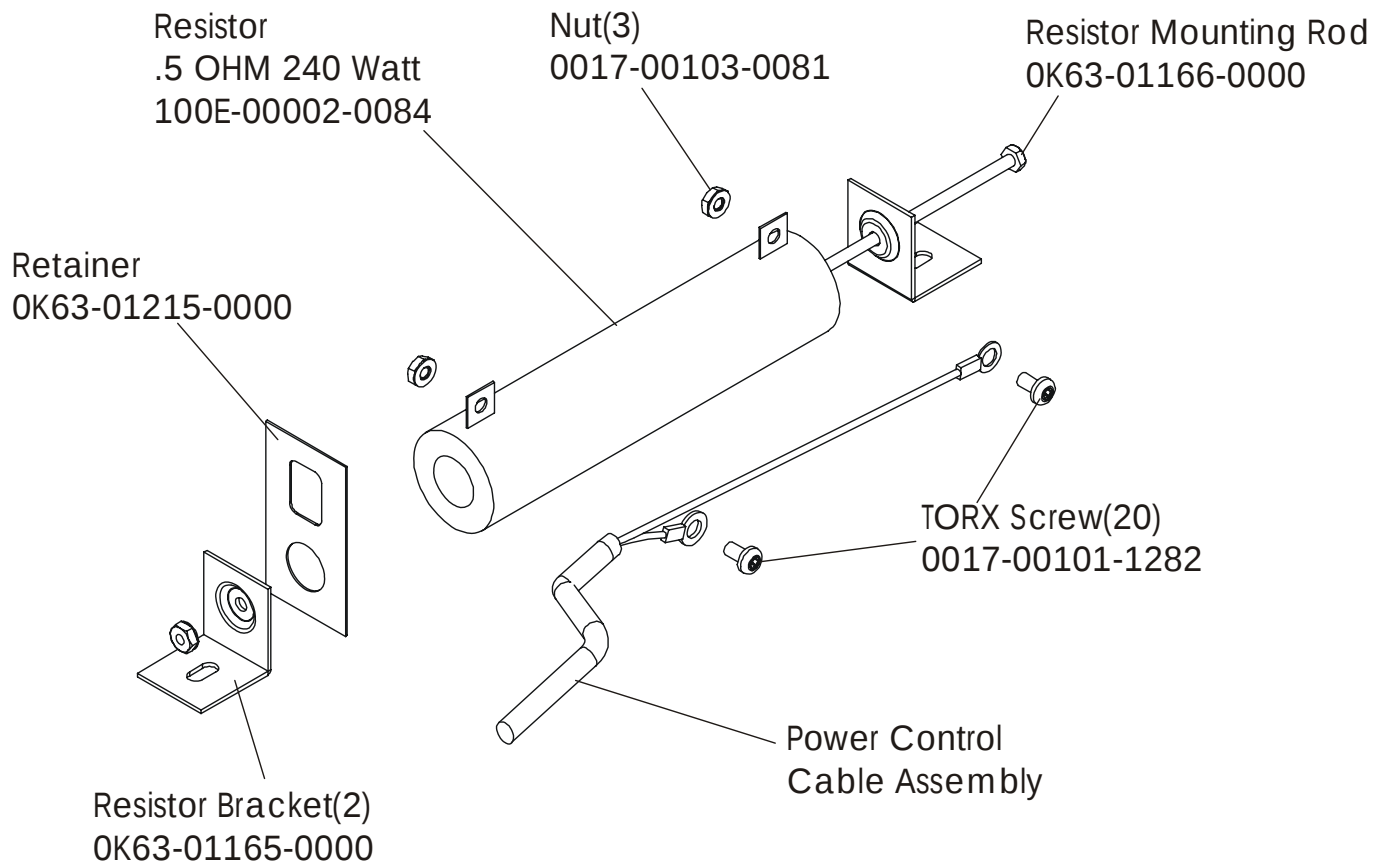

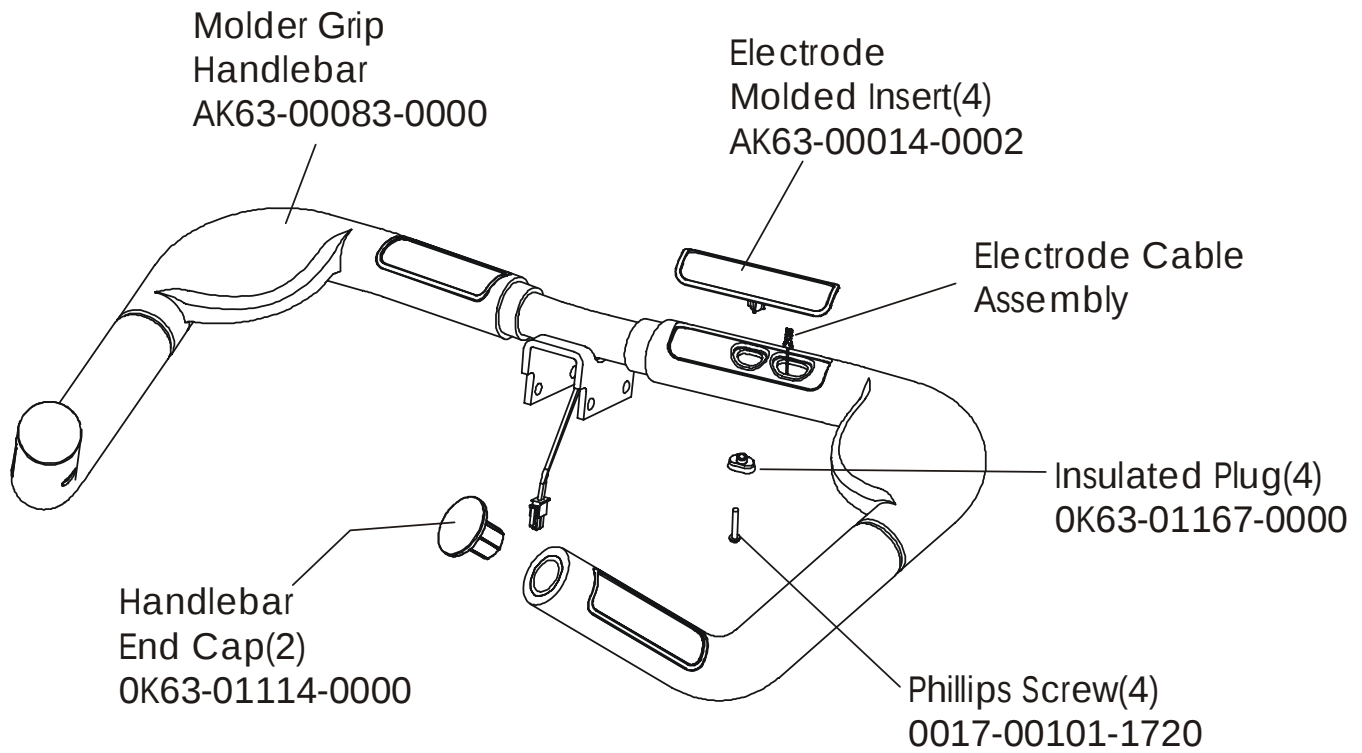

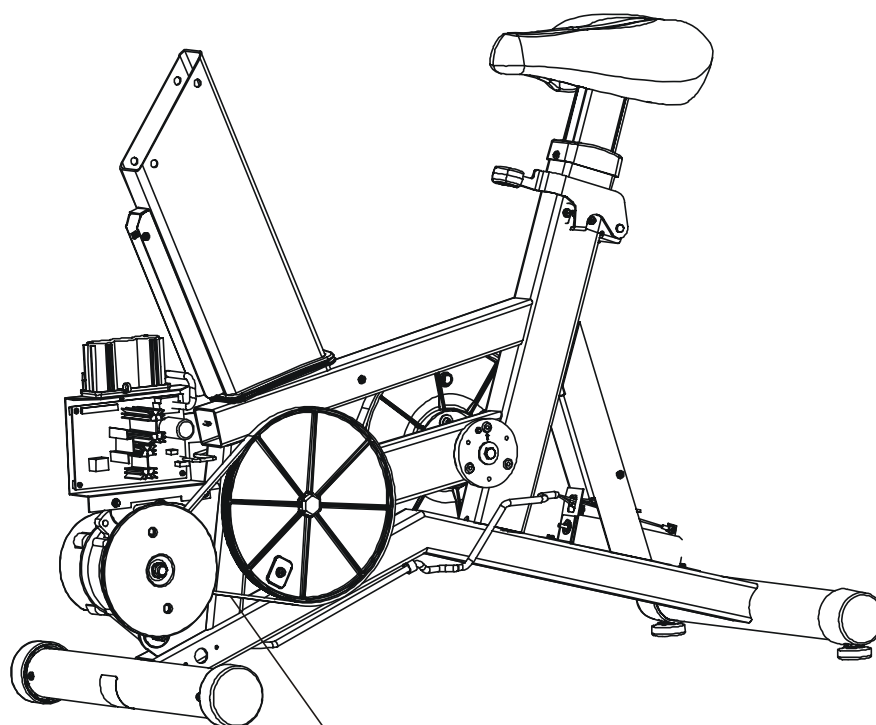

Alternator Belt
OK63-01065-0000

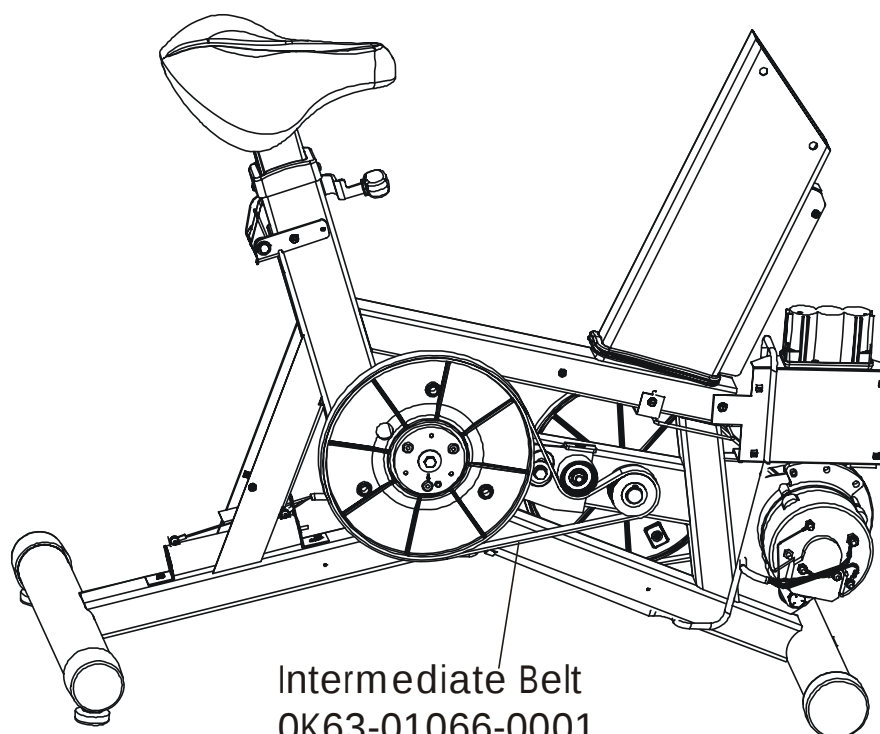 

Intermediate Belt
OK63-01066-0001

LC95-0000-12
S/N CBJ100000

