


LifeFitness

Arctic Silver 93R Recumbent Bike

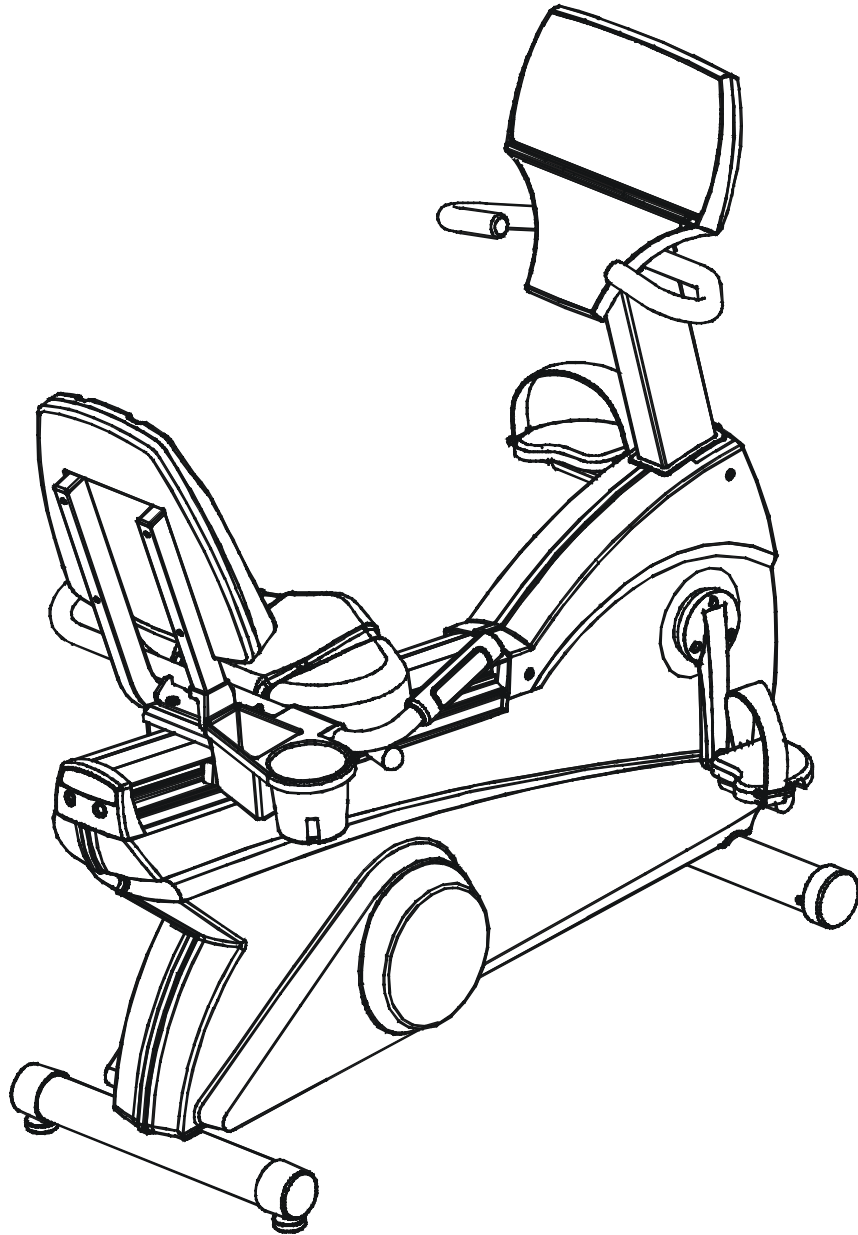

Customer Support Services
PARTS MANUAL rev Nov 2014

ARCTIC SILVER 93R
REFERENCES


93R-0XXX-02
S/N CCN100000 and UP

OPERATION MANUAL	M051-00K39-A020
NETWORK C-SAFE KIT	GK63-00002-0003
HARDWARE BAG	GK39-00002-0008
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K39-A012


	Page
CONSOLE COMPONENTS	4
CONSOLE SUPPORT ASSEMBLY	6
SHROUDS, END CAP, CRANKARMS AND PEDALS	7
BELTS AND 6V BATTERY	8
RESISTOR ASSEMBLY	9
POWER CONTROL BOARD	10
ALTERNATOR W/PULLEY	11
CRANKSHAFT AND BEARING ASSEMBLY	12
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	13
IDLER BRACKET ASSEMBLY	14
SEAT ASSEMBLY	15
SEAT BOTTOM ASSEMBLY	16
SEAT FRAME ASSEMBLY	17
SEAT PADS AND ACCESSORY TRAY	18
EXTRUSION ASSEMBLY	19
SEAT LOCKING ASSEMBLY	20
WHEEL AND LEVELER	21
CABLES	22

ARCTIC SILVER 93R
Console Components

93R-0XXX-02
S/N CCN100000 and UP

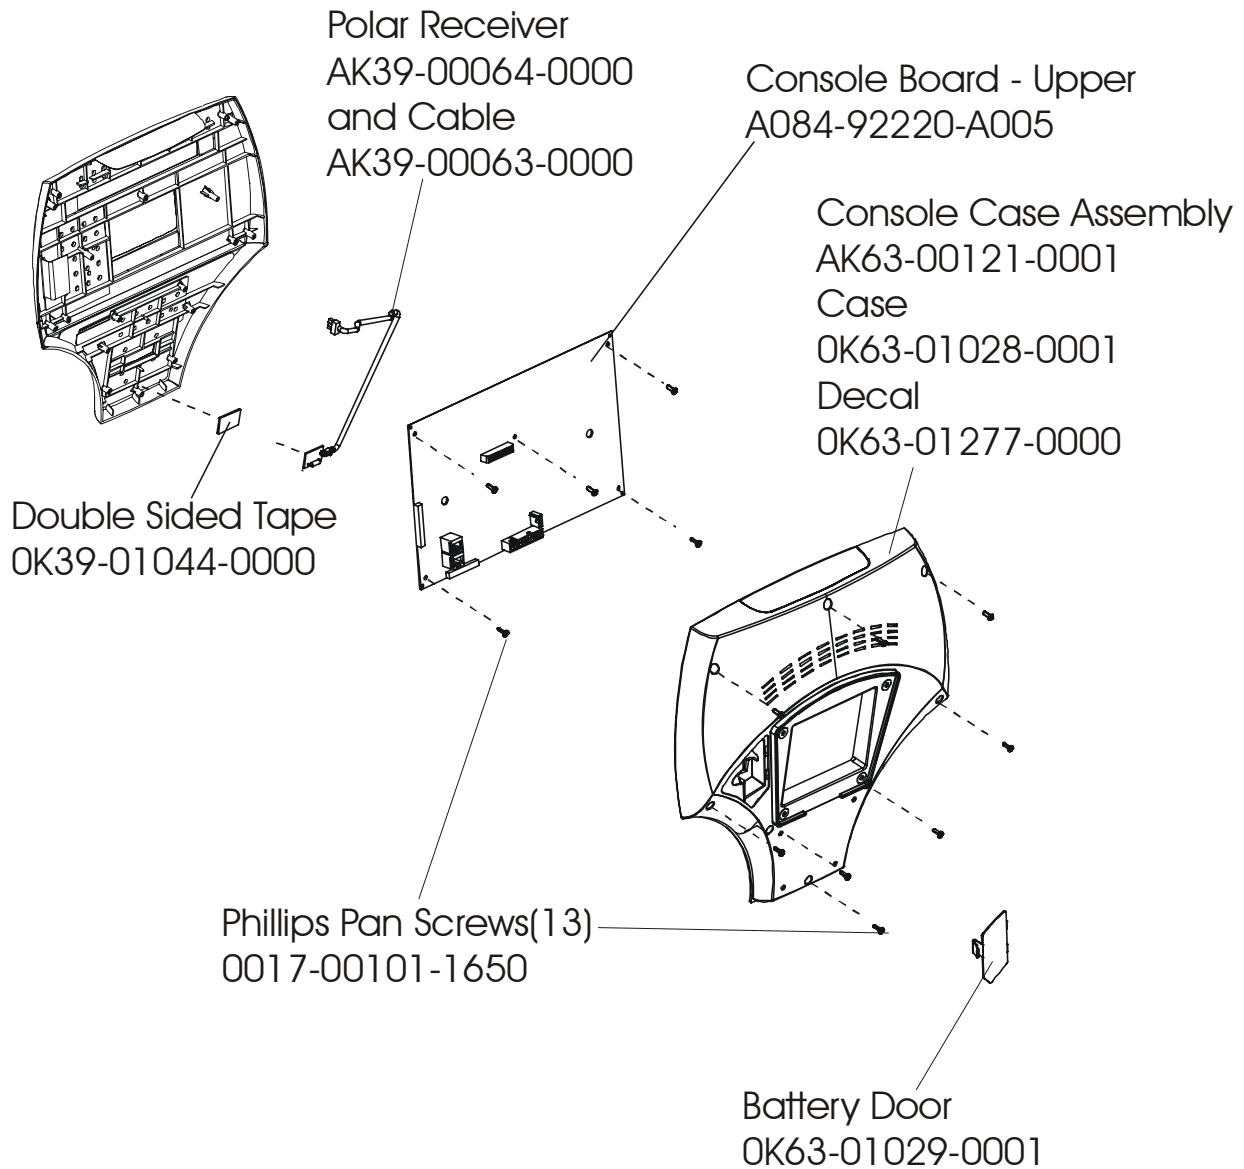


Console Assembly	Overlay/Bezel/Switch Assy.
AK39-00071-0001 Eng Met	AK63-00166-0001 Eng Met
AK39-00071-0003 Ger Met	AK63-00166-0003 Ger Met
AK39-00071-0004 Spn Met	AK63-00166-0004 Spn Met
AK39-00071-0006 Jap Met	AK63-00166-0006 Jap Met
AK39-00071-0007 Frn Met	AK63-00166-0007 Frn Met
AK39-00071-0008 Itl Met	AK63-00166-0008 Itl Met
AK39-00071-0009 Dut Met	AK63-00166-0009 Dut Met
AK39-00071-0010 Por Met	AK63-00166-0010 Por Met

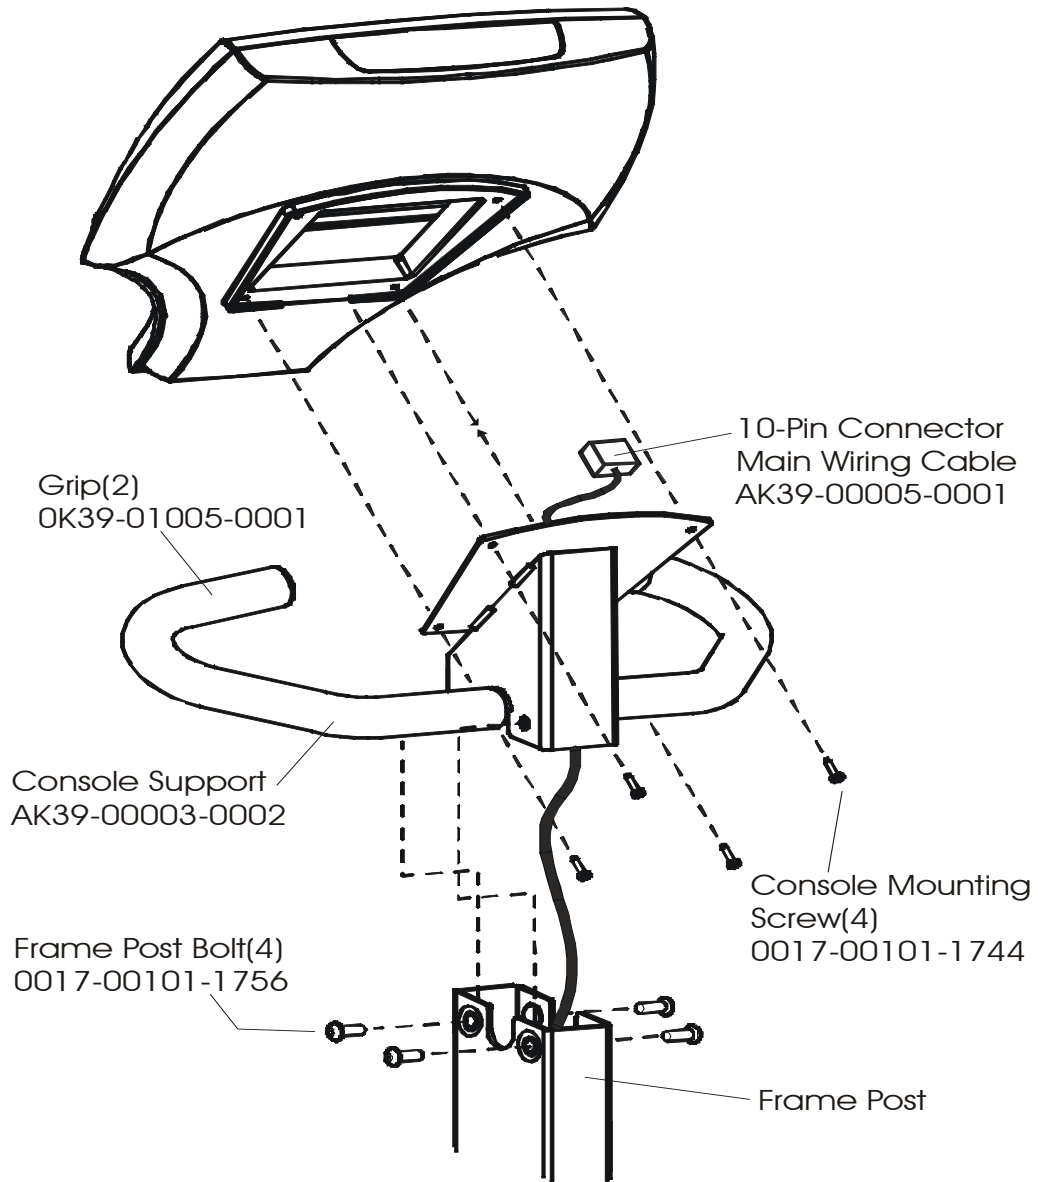

ARCTIC SILVER 93R
Shrouds, End Cap and Pedals

93R-0XXX-02
S/N CCN100000 and UP

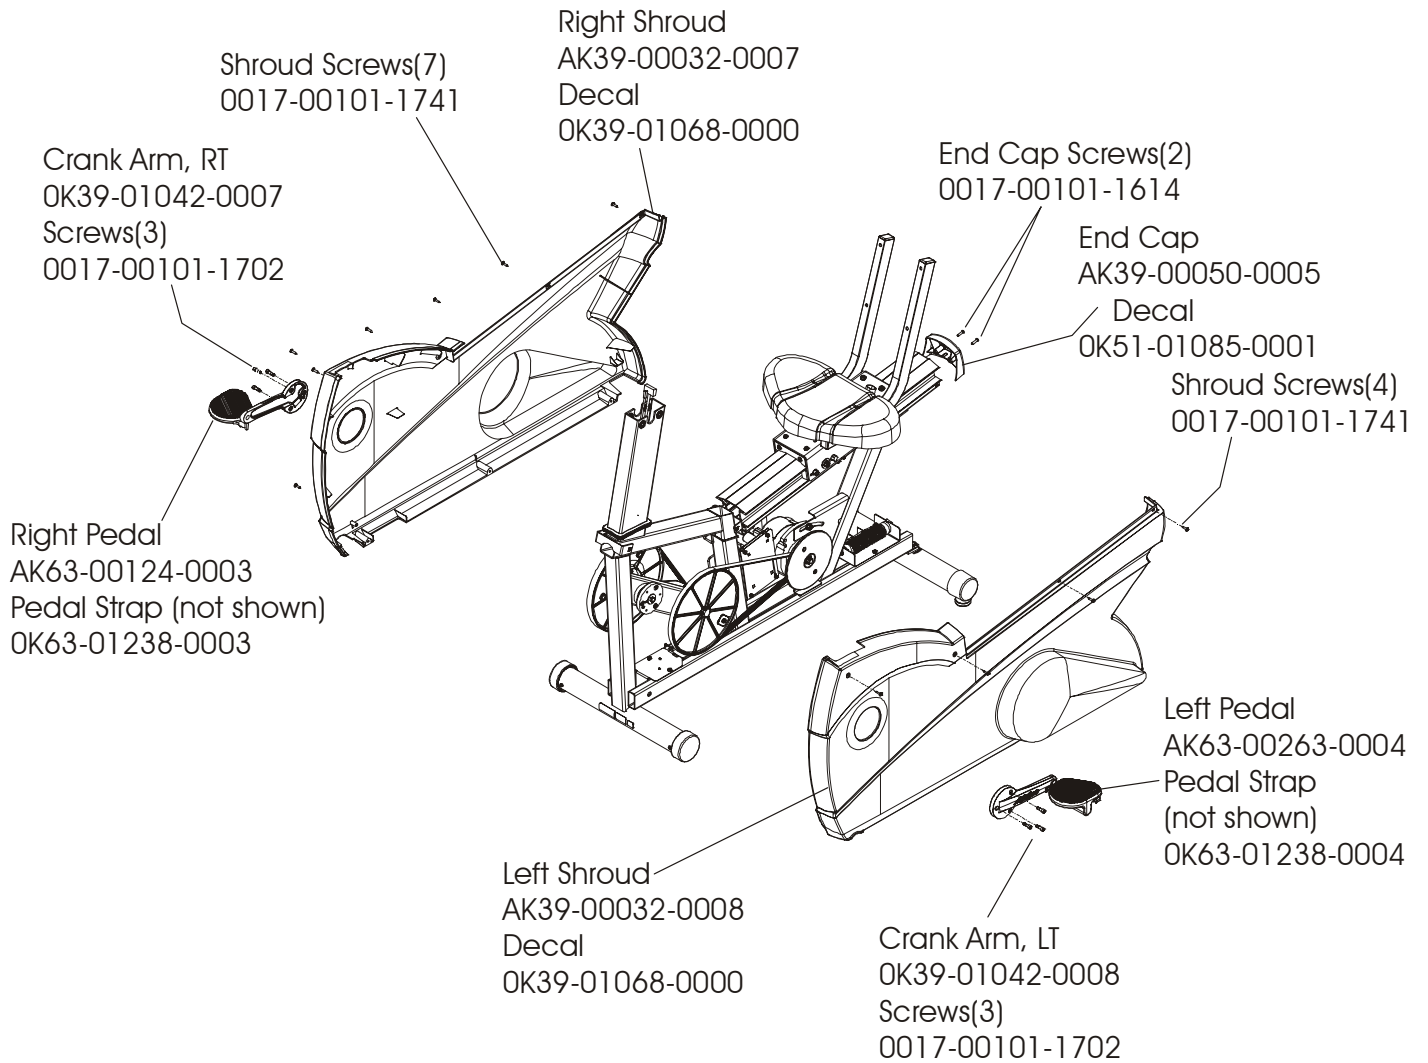


ARCTIC SILVER 93R

Belts


93R-0XXX-02

S/N CCN100000 and UP

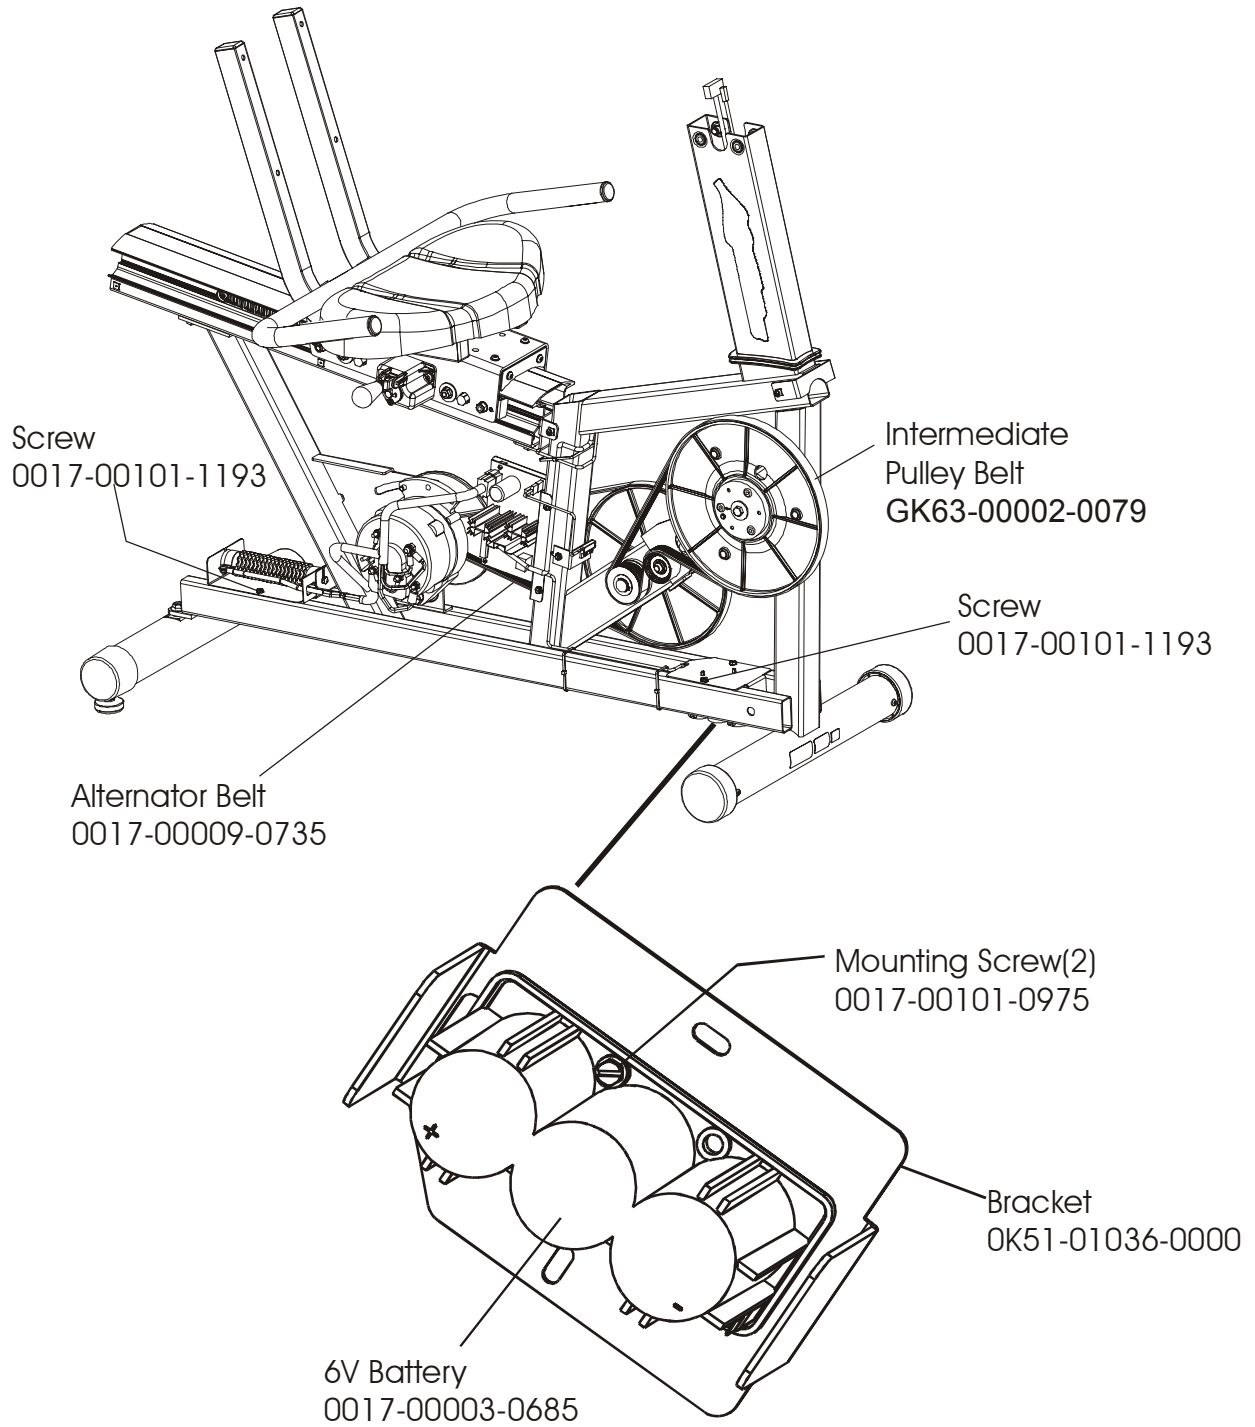

ARCTIC SILVER 93R
Resistor Assembly


93R-0XXX-02
S/N CCN100000 and UP

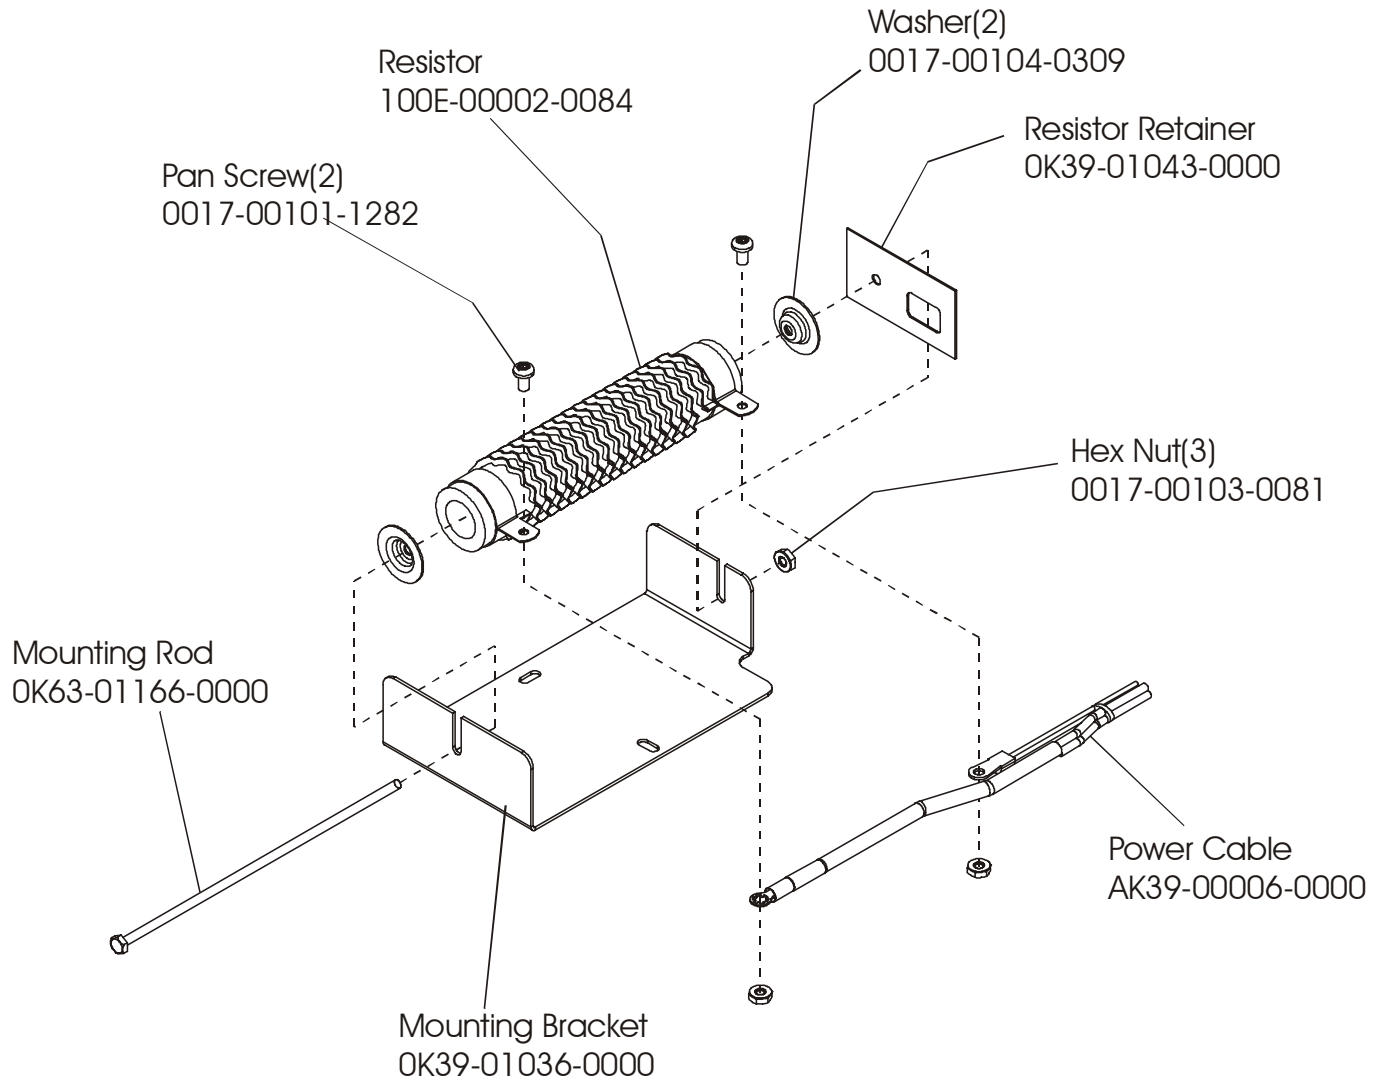

ARCTIC SILVER 93R
Power Control Board

93R-0XXX-02
S/N CCN100000 and UP


Assembly Number - AK39-00022-0001

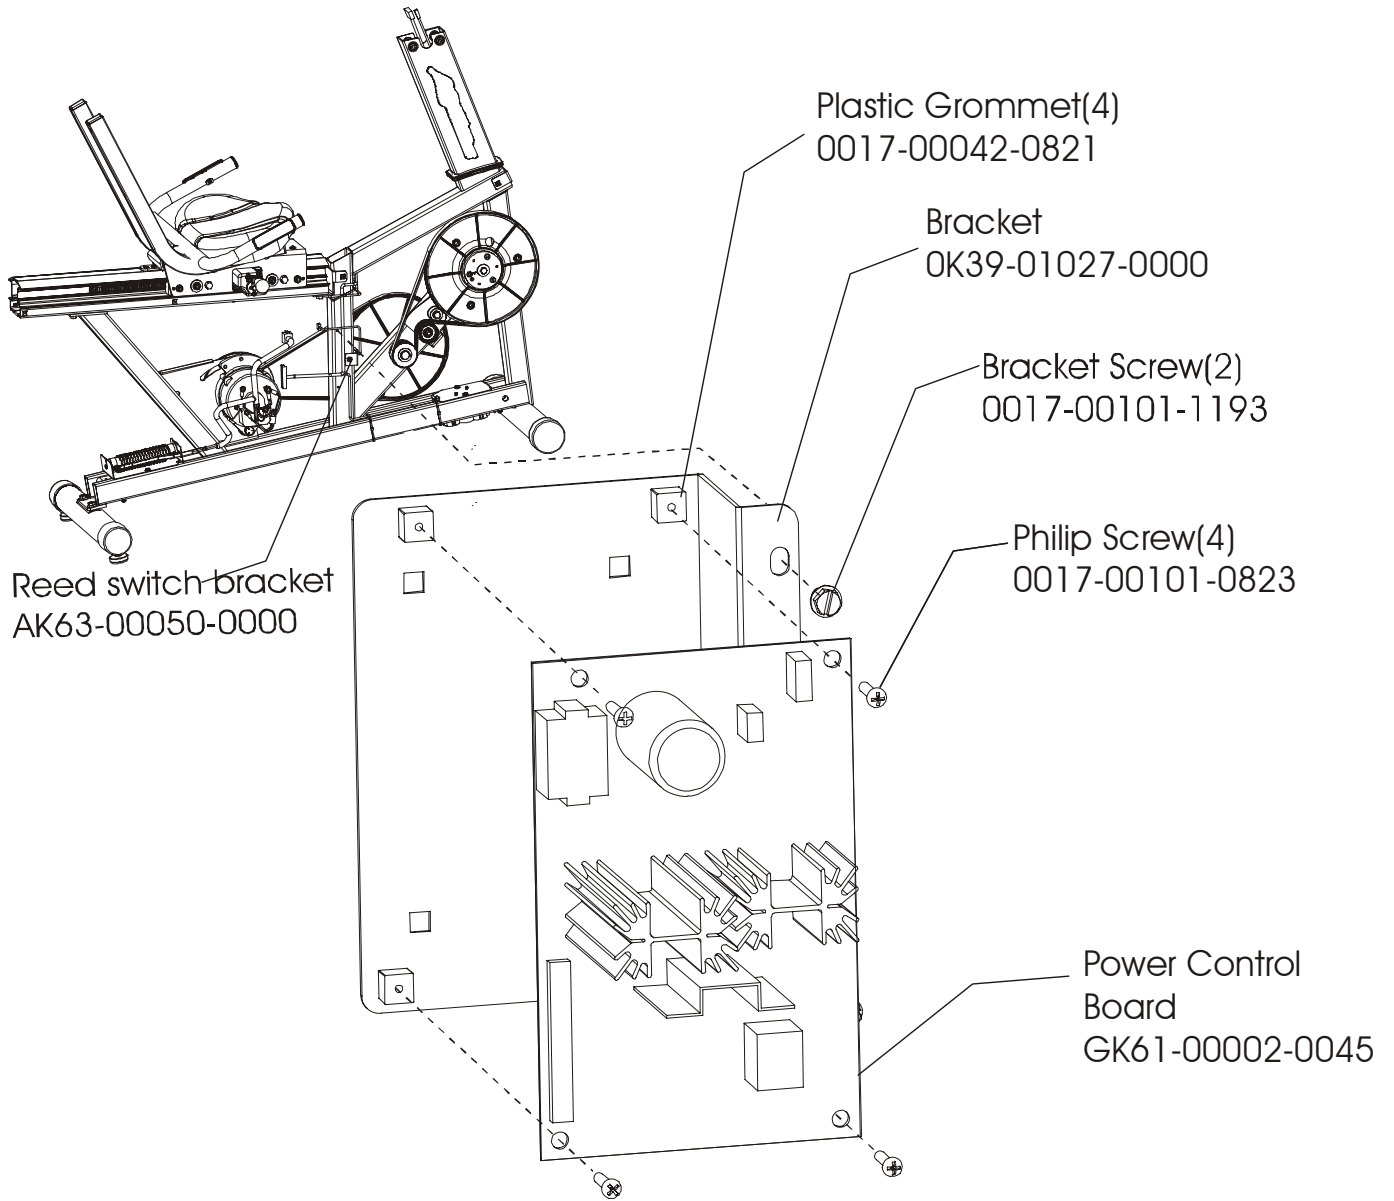

ARCTIC SILVER 93R
Alternator w/Pulley Assembly


93R-0XXX-02
S/N CCN100000 and UP

Assembly Number – AK63-00093-0000

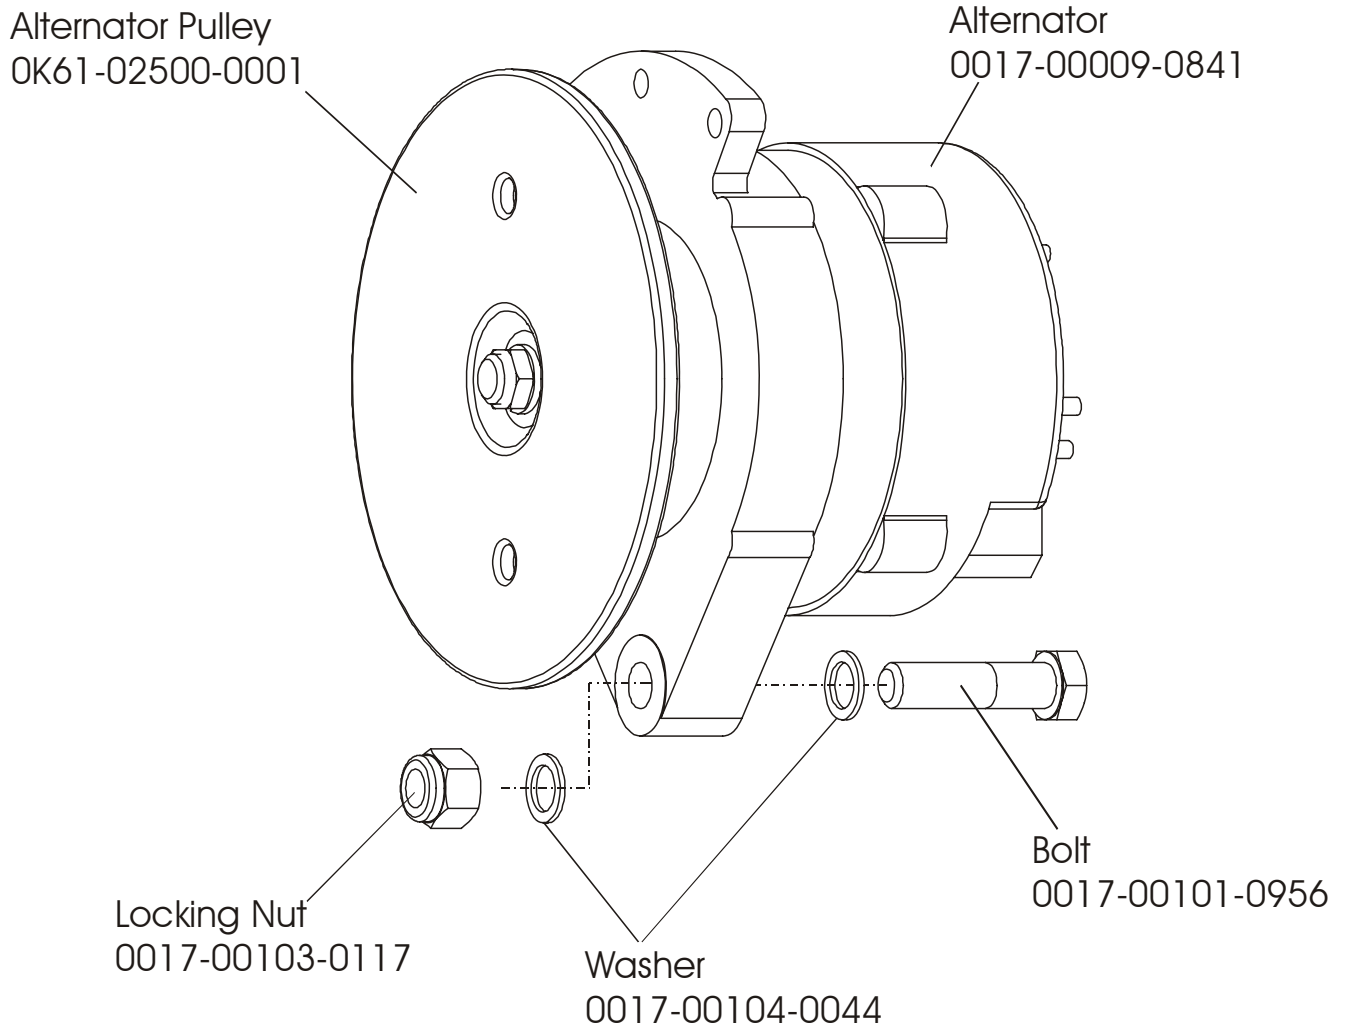

ARCTIC SILVER 93R
Crank Shaft and Bearing Assembly

93R-0XXX-02
S/N CCN100000 and UP

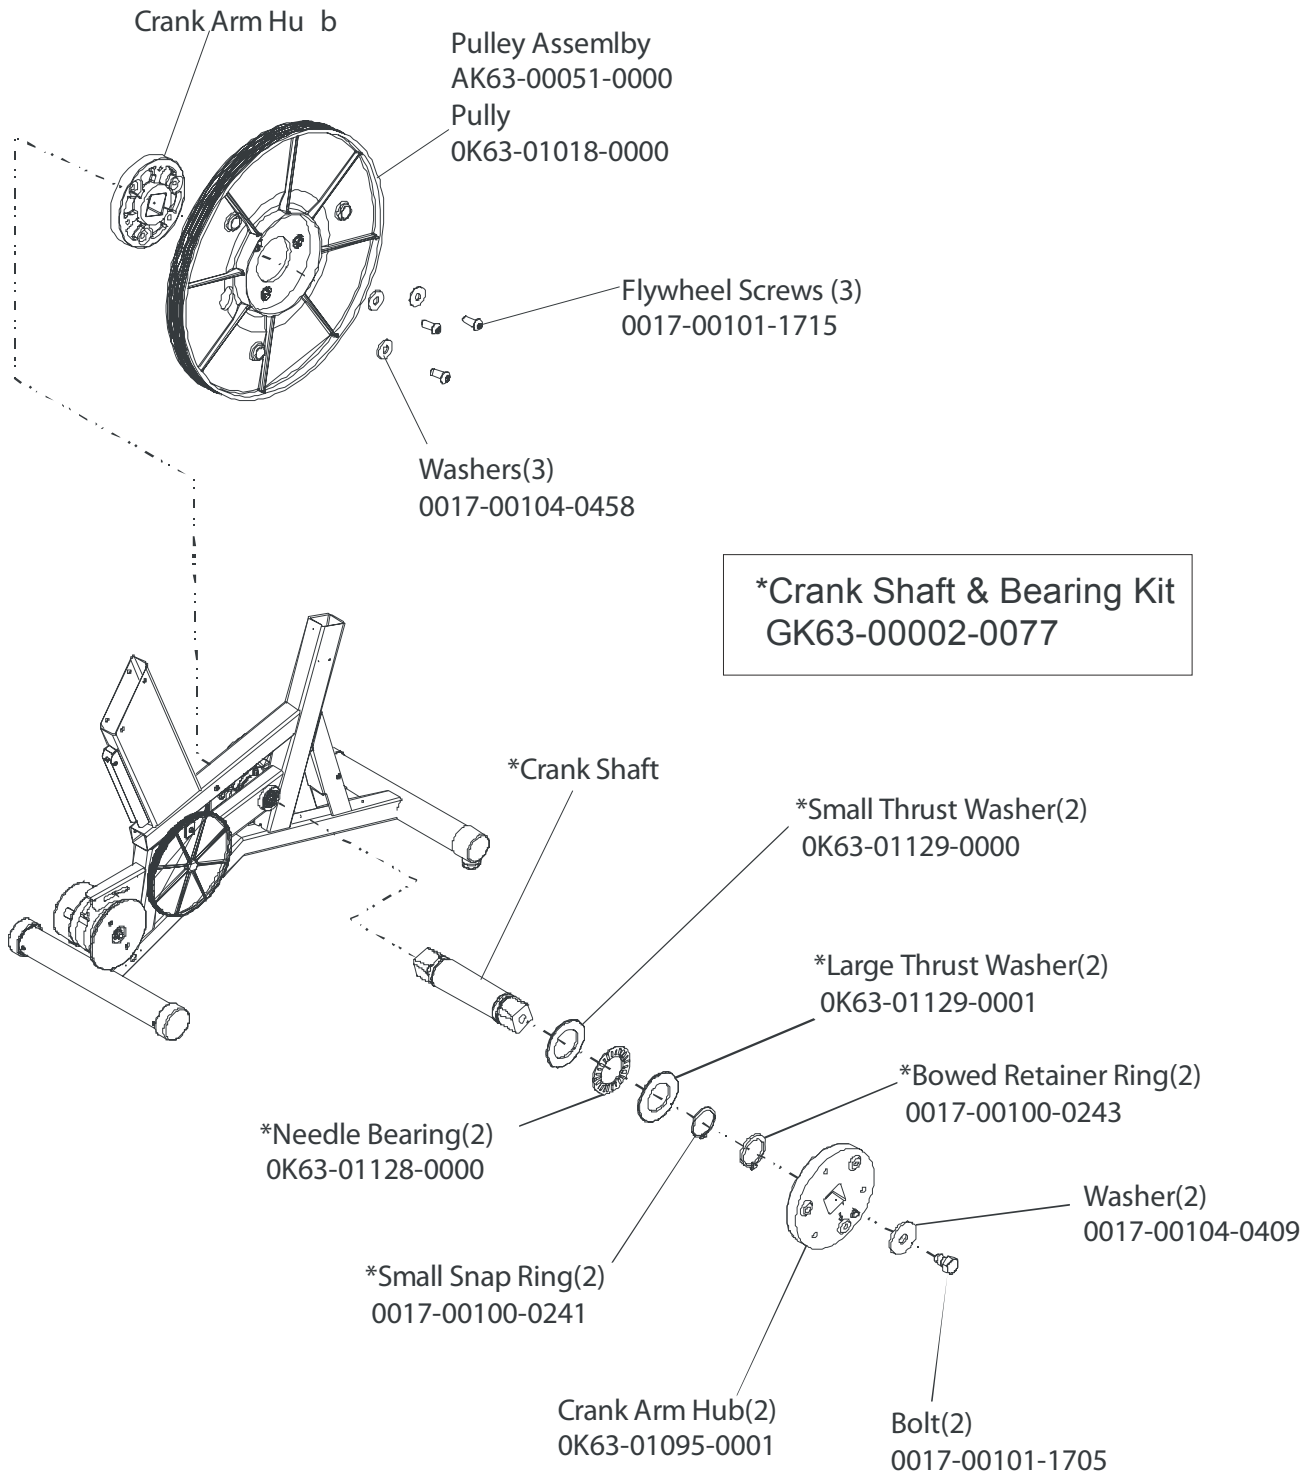

ARCTIC SILVER 93R


93R-0XXX-02

Intermediate Shaft and Bearing Assembly

S/N CCN100000 and UP

Clutch Assembly
GK63-00002-0079
(not included in kit)


Magnet
118E-00001-0124
(not included in kit)

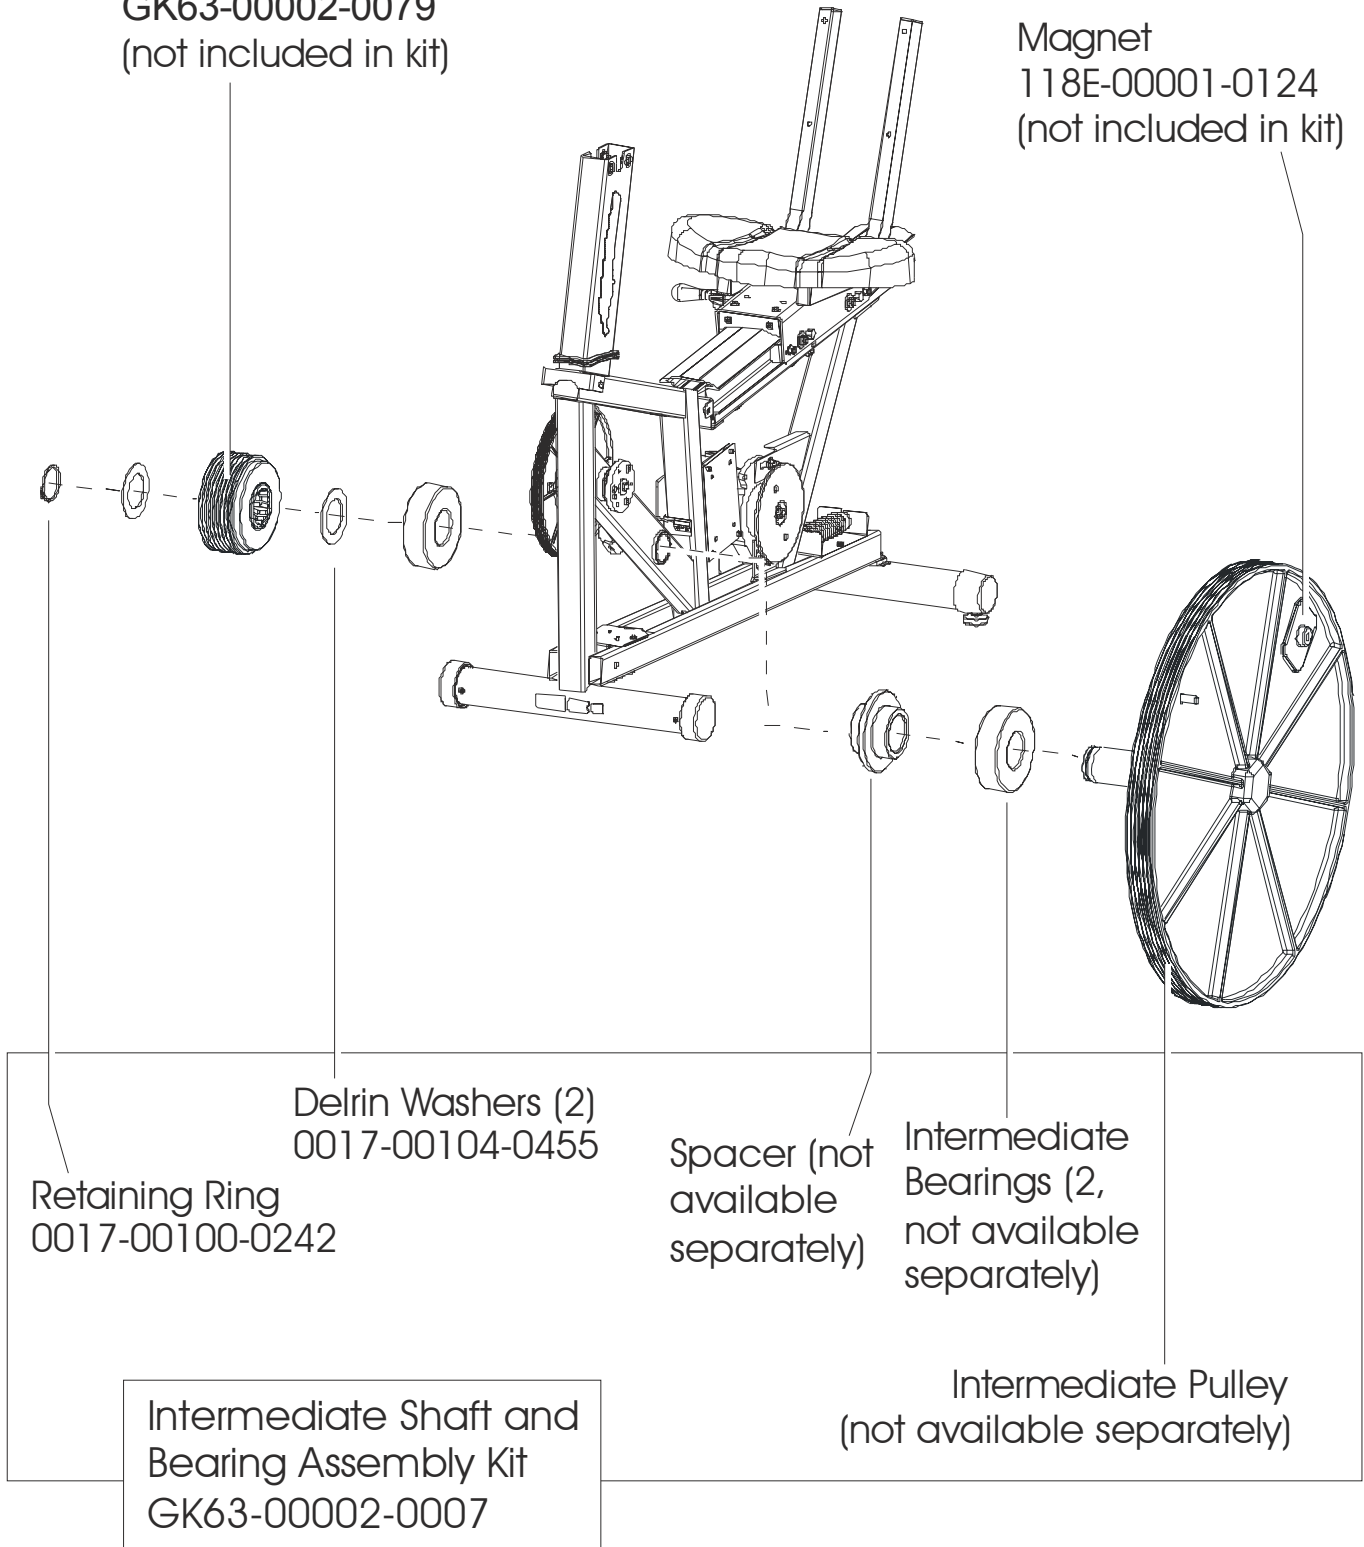

ARCTIC SILVER 93R
Idler Bracket Assembly


93R-0XXX-02
S/N CCN100000 and UP

Idler Bracket Assembly – AK63-00021-0000

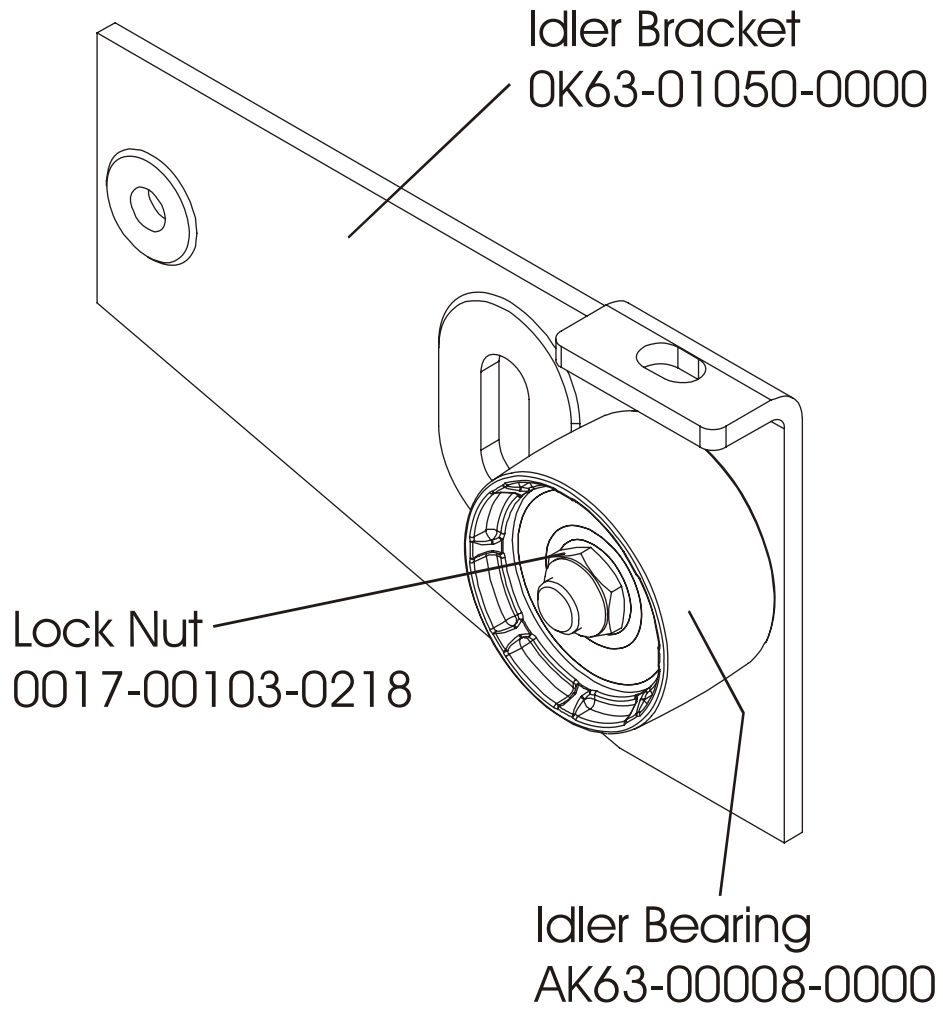


ARCTIC SILVER 93R
Seat Assembly

93R-0XXX-02
S/N CCN10000 and UP

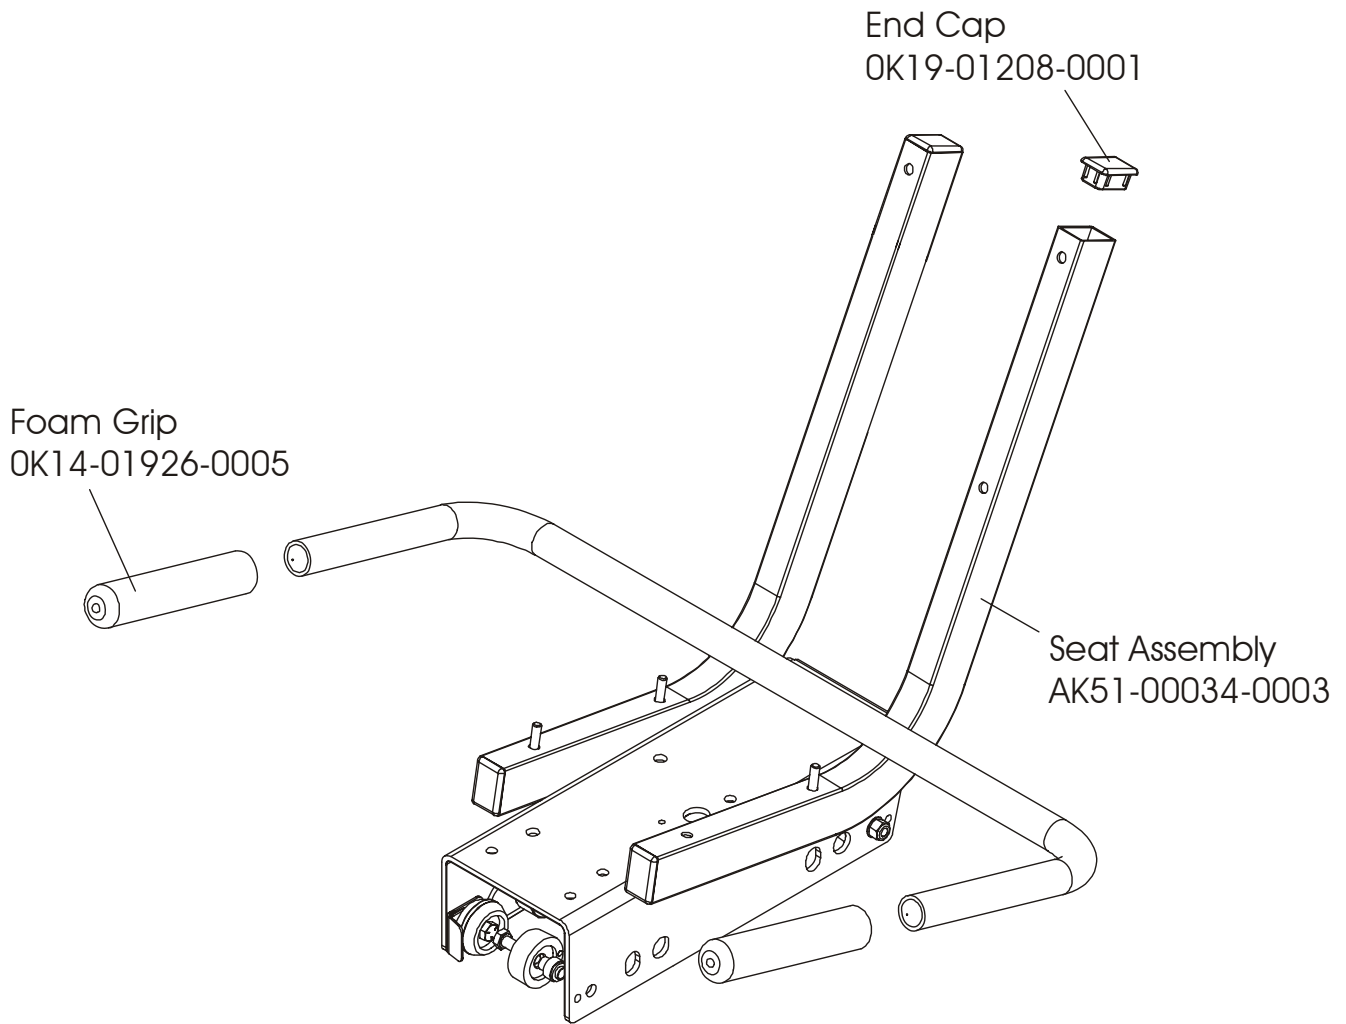


ARCTIC SILVER 93R
Seat Assembly - Bottom

93R-0XXX-02
S/N CCN10000 and UP

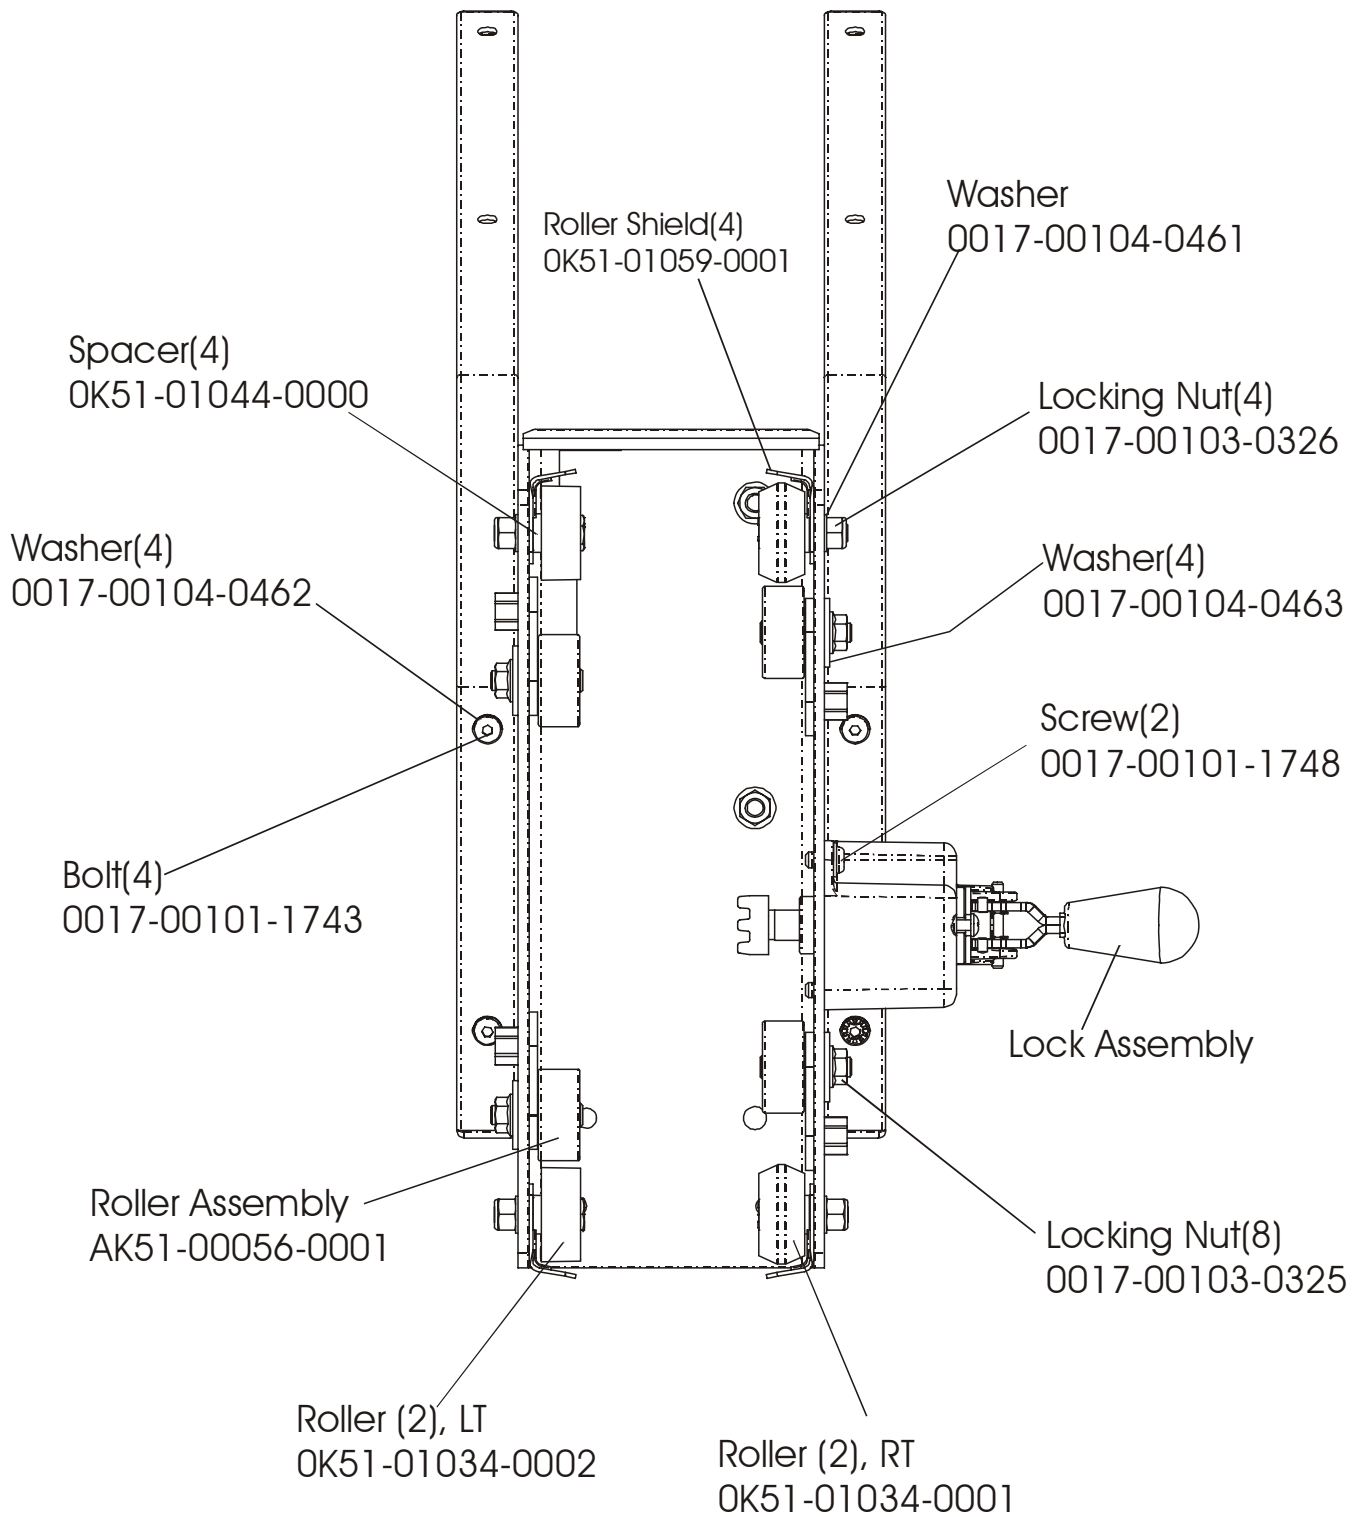


ARCTIC SILVER 93R
Seat Frame Assembly

93R-0XXX-02
S/N CCN100000 and UP

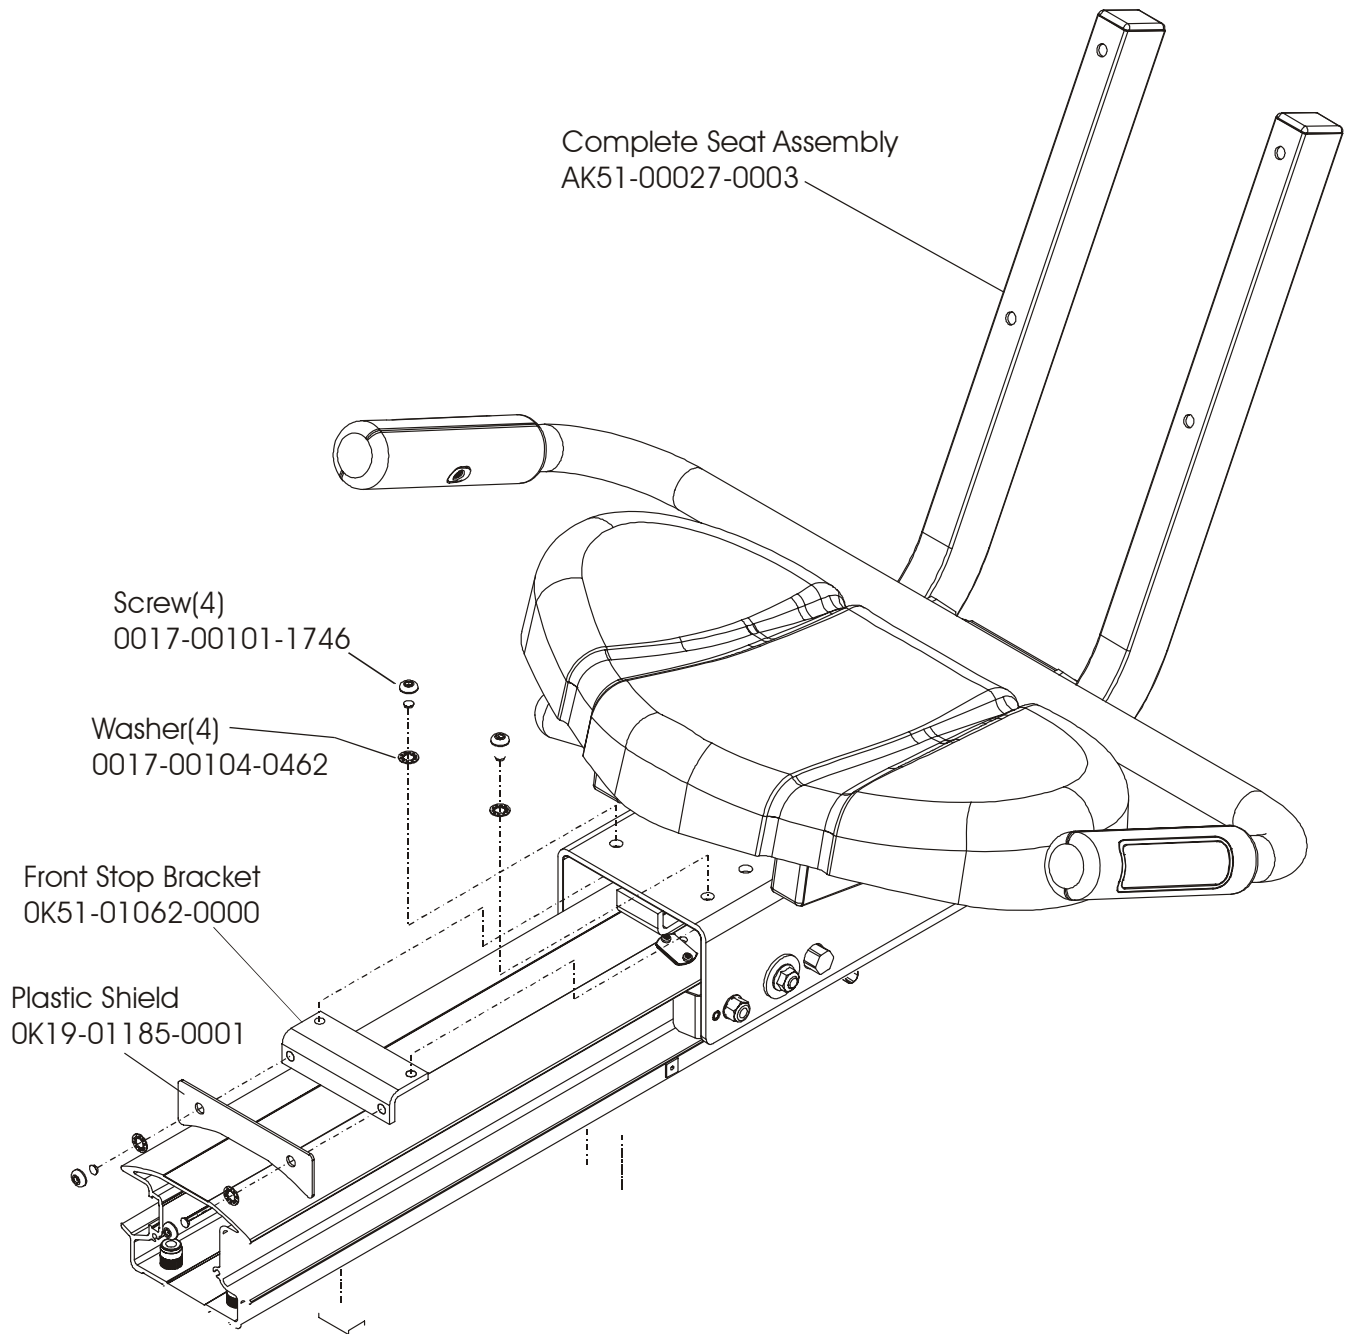

ARCTIC SILVER 93R
Seat Pads and Accessory Tray

93R-0XXX-02
S/N CCN100000 and UP

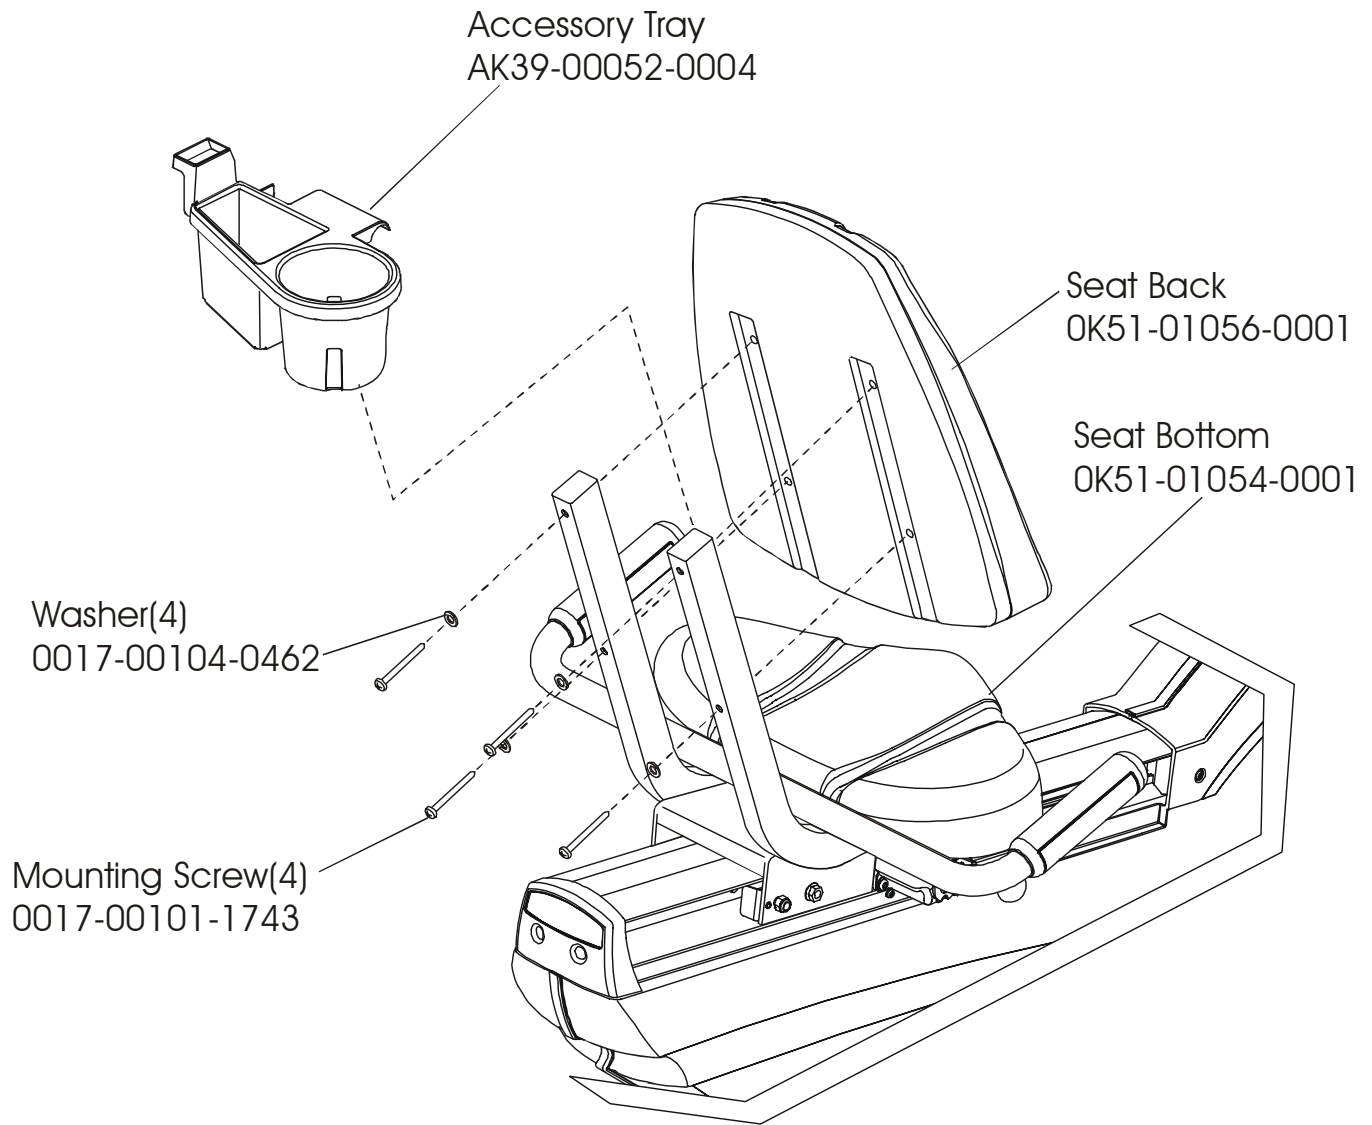


ARCTIC SILVER 93R

Extrusion Assembly – AK39-00027-0006

93R-0XXX-02

S/N CCN100000 and UP

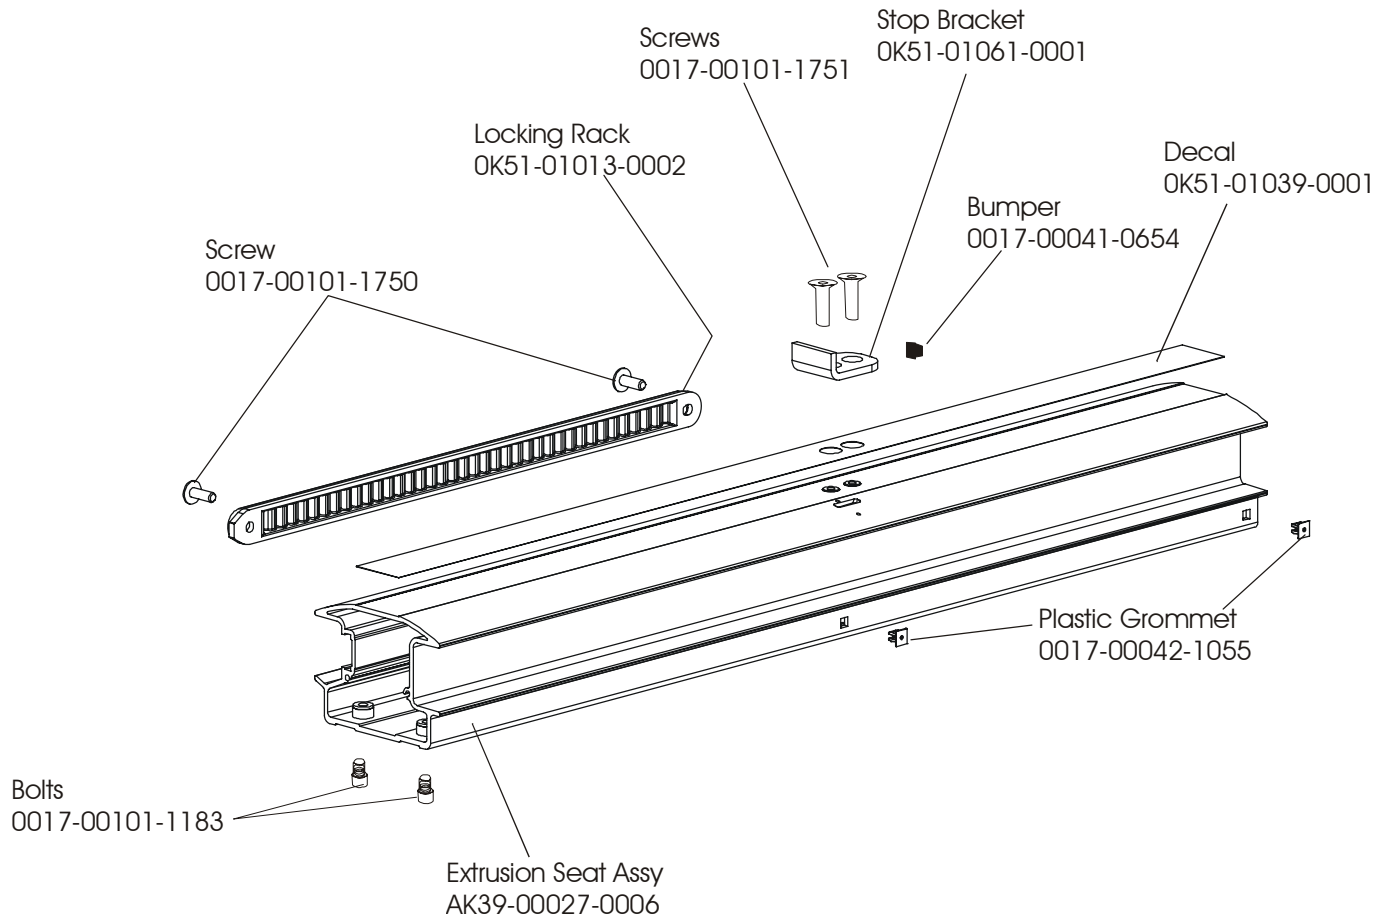


ARCTIC SILVER 93R

Locking Assembly – AK51-00053-0001


93R-0XXX-02

S/N CCN100000 and UP

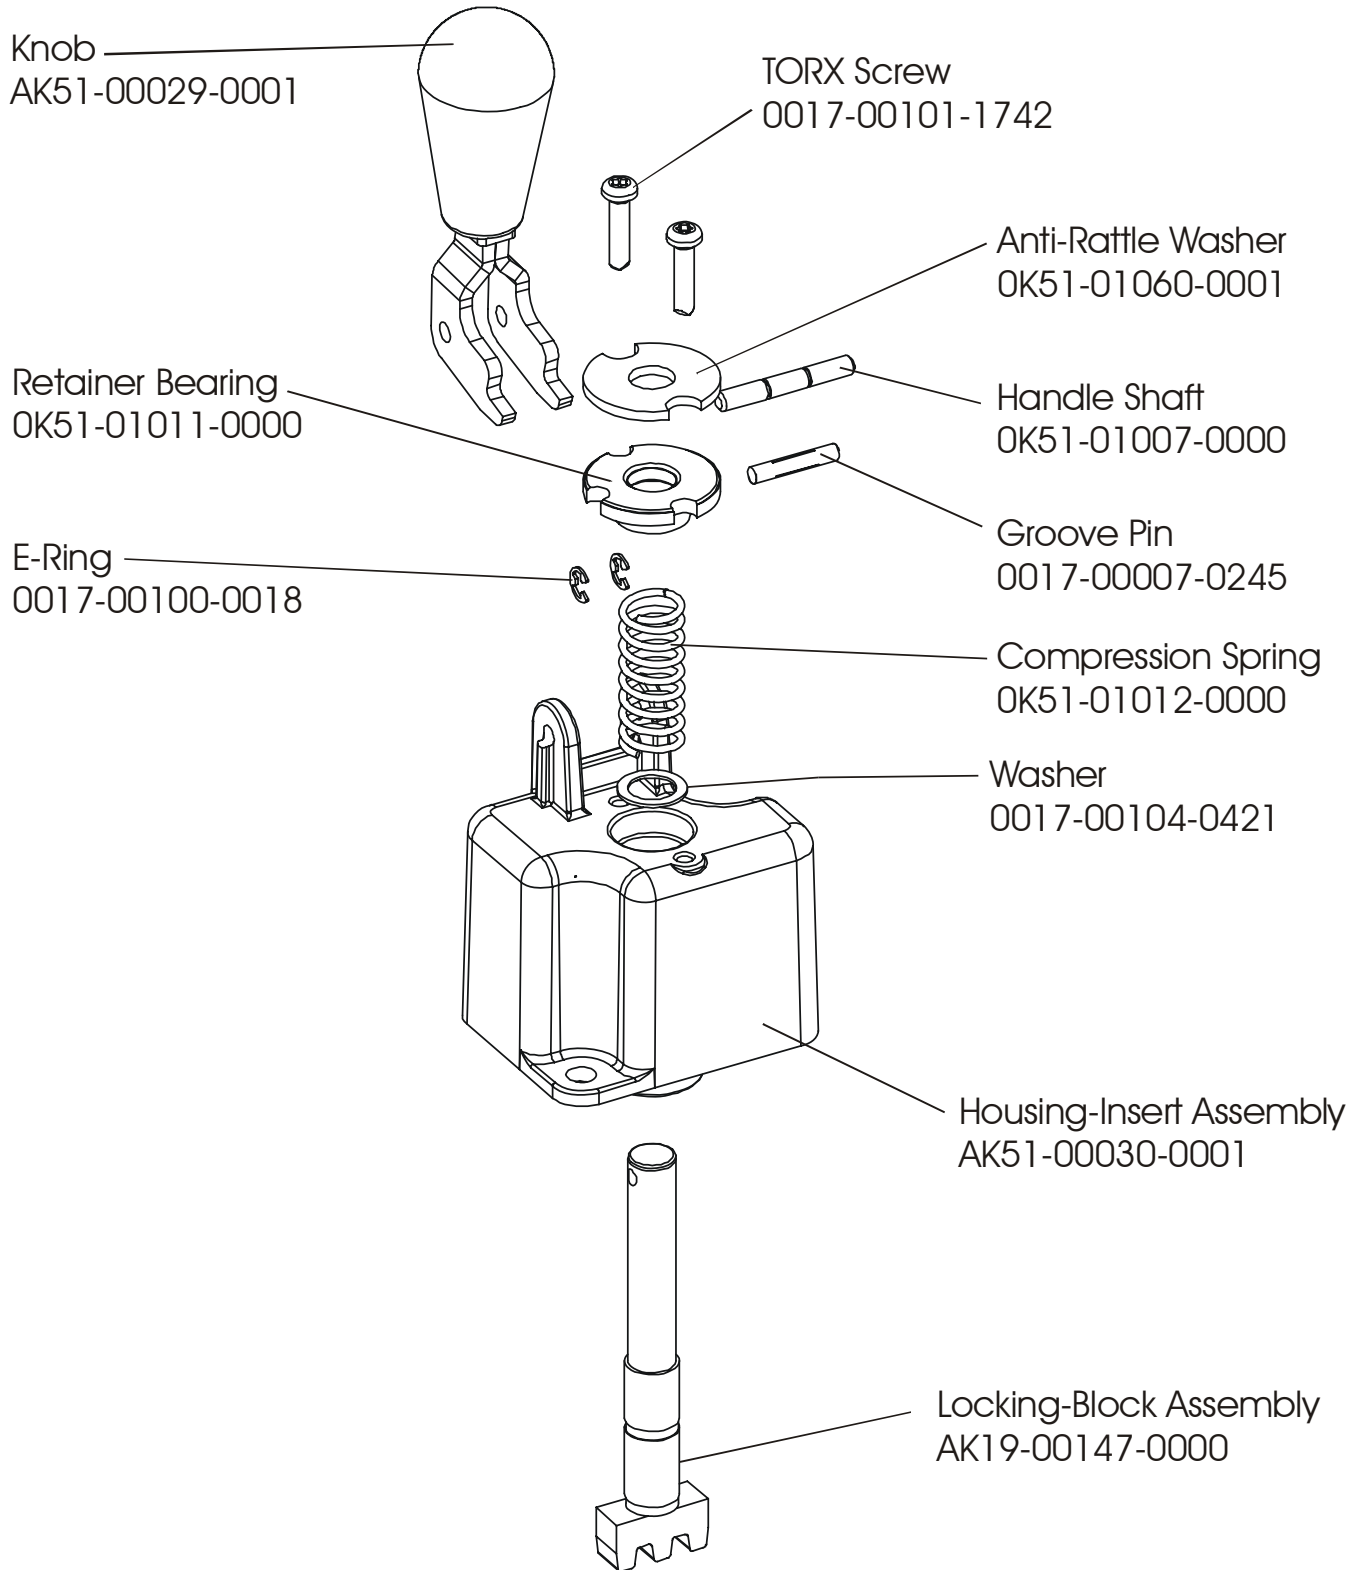

ARCTIC SILVER 93R
Wheel and Leveler

93R-0XXX-02
S/N CCN100000 and UP

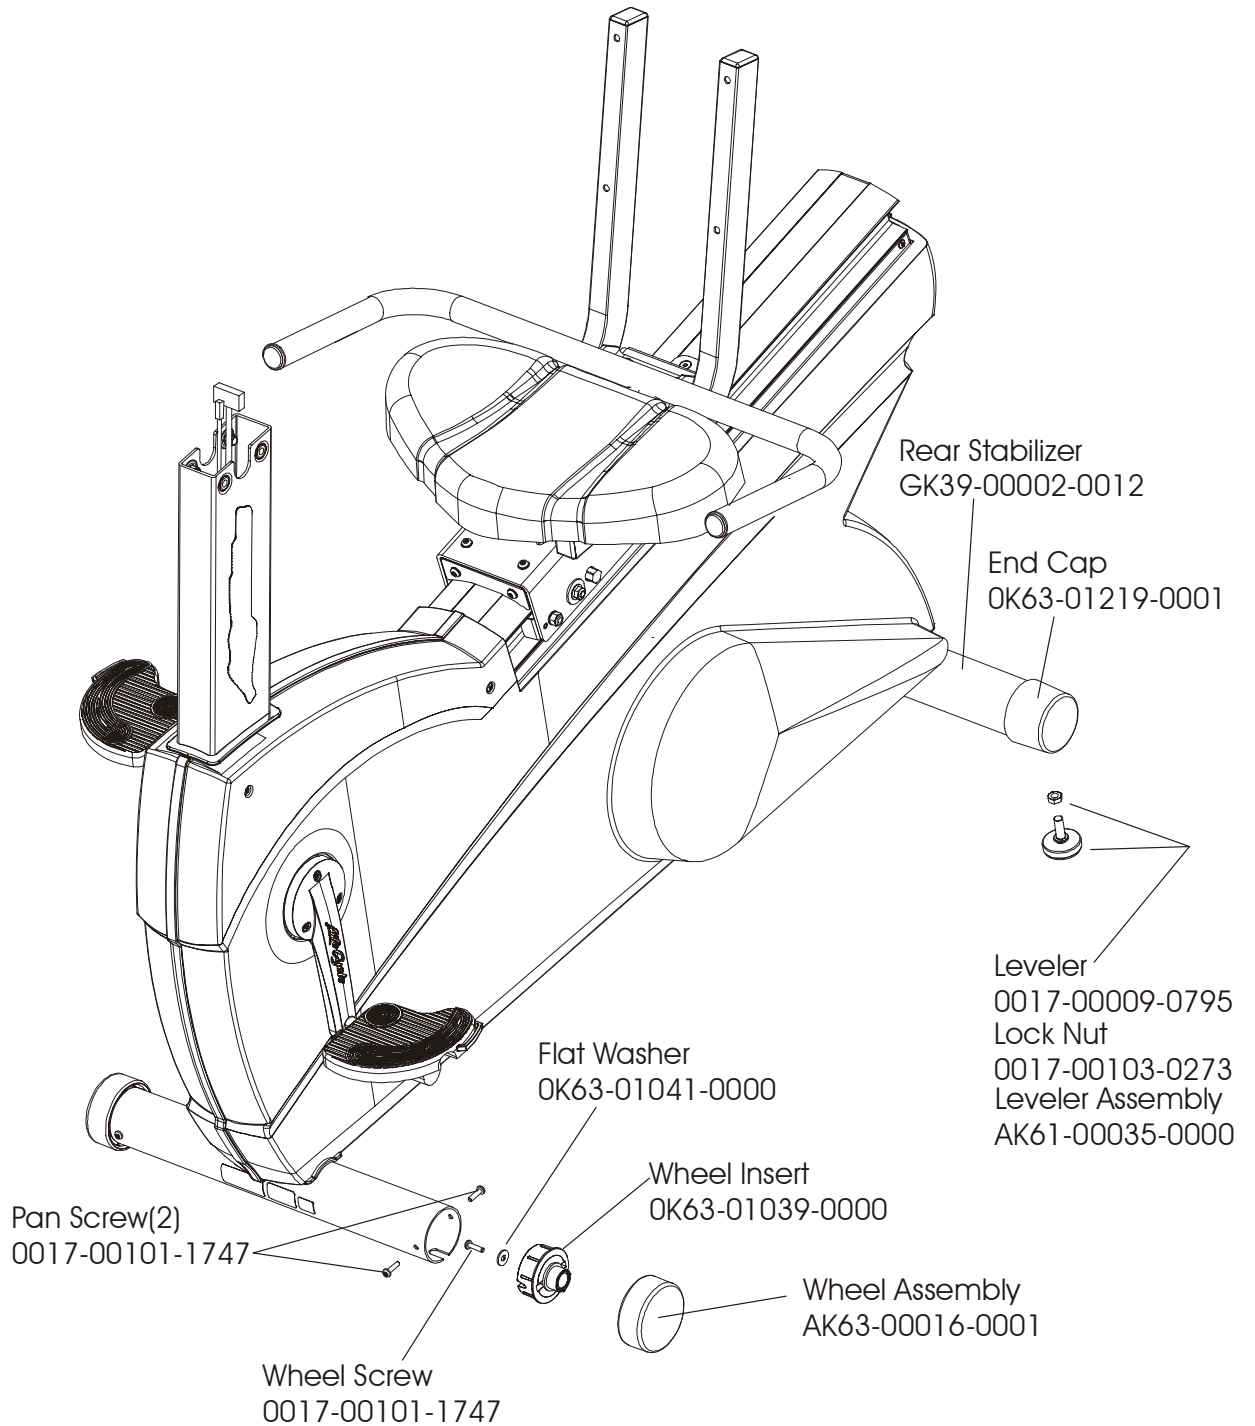

ARCTIC SILVER 93R
Cables

93R-0XXX-02
S/N CCN100000 and UP

