


LifeFitness

Arctic Silver 93RW Recumbent Bike

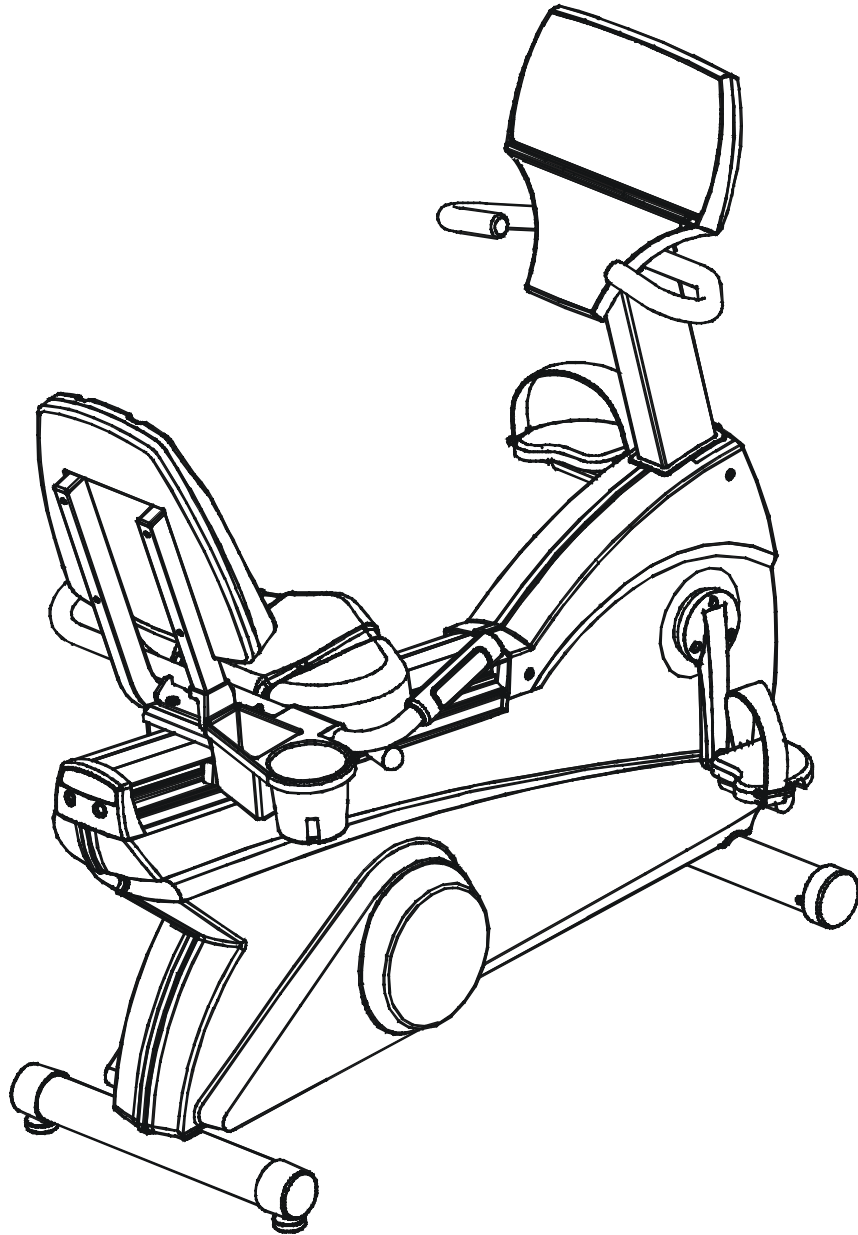

Customer Support Services
PARTS MANUAL revised 16 Jan 2012

ARCTIC SILVER 93RW
REFERENCES

93RW-0XXX-02
S/N CCO100000 and UP

OPERATION MANUAL	M051-00K39-A020
NETWORK C-SAFE KIT	GK63-00002-0003
HARDWARE BAG	GK39-00002-0008
CONNECTION BRACKET ASSEMBLY ASSEMBLY CONSISTS OF: 1) COAX CABLE 2) POWER CABLE 3) POWER/COAX INPUT BRACKET 4) F TYPE CONNECTOR	AK39-00093-0000 AK32-00020-0001 AK32-00078-0001 OK39-01087-0000 0017-00021-2846
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	 0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K39-A012

**NOTE: ADDING THE BOLT ON LCD SCREEN TO THE
93RW-0XXX-02 MAKES THE UNIT 93RER-0XXX-02.**


	Page
CONSOLE COMPONENTS	4
CONSOLE SUPPORT ASSEMBLY	5
SHROUDS, END CAP, CRANKARMS AND PEDALS	6
BELTS AND 6V BATTERY	7
RESISTOR ASSEMBLY	8
POWER CONTROL BOARD	9
ALTERNATOR W/PULLEY	10
CRANKSHAFT AND BEARING ASSEMBLY	11
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	12
IDLER BRACKET ASSEMBLY	13
SEAT ASSEMBLY	14
SEAT BOTTOM ASSEMBLY	15
SEAT FRAME ASSEMBLY	16
SEAT PADS AND ACCESSORY TRAY	17
EXTRUSION ASSEMBLY	18
SEAT LOCKING ASSEMBLY	19
WHEEL AND LEVELER	20
CABLES	21

ARCTIC SILVER 93RW

Console Components

93RW-0XXX-02


S/N CCO100000 and UP

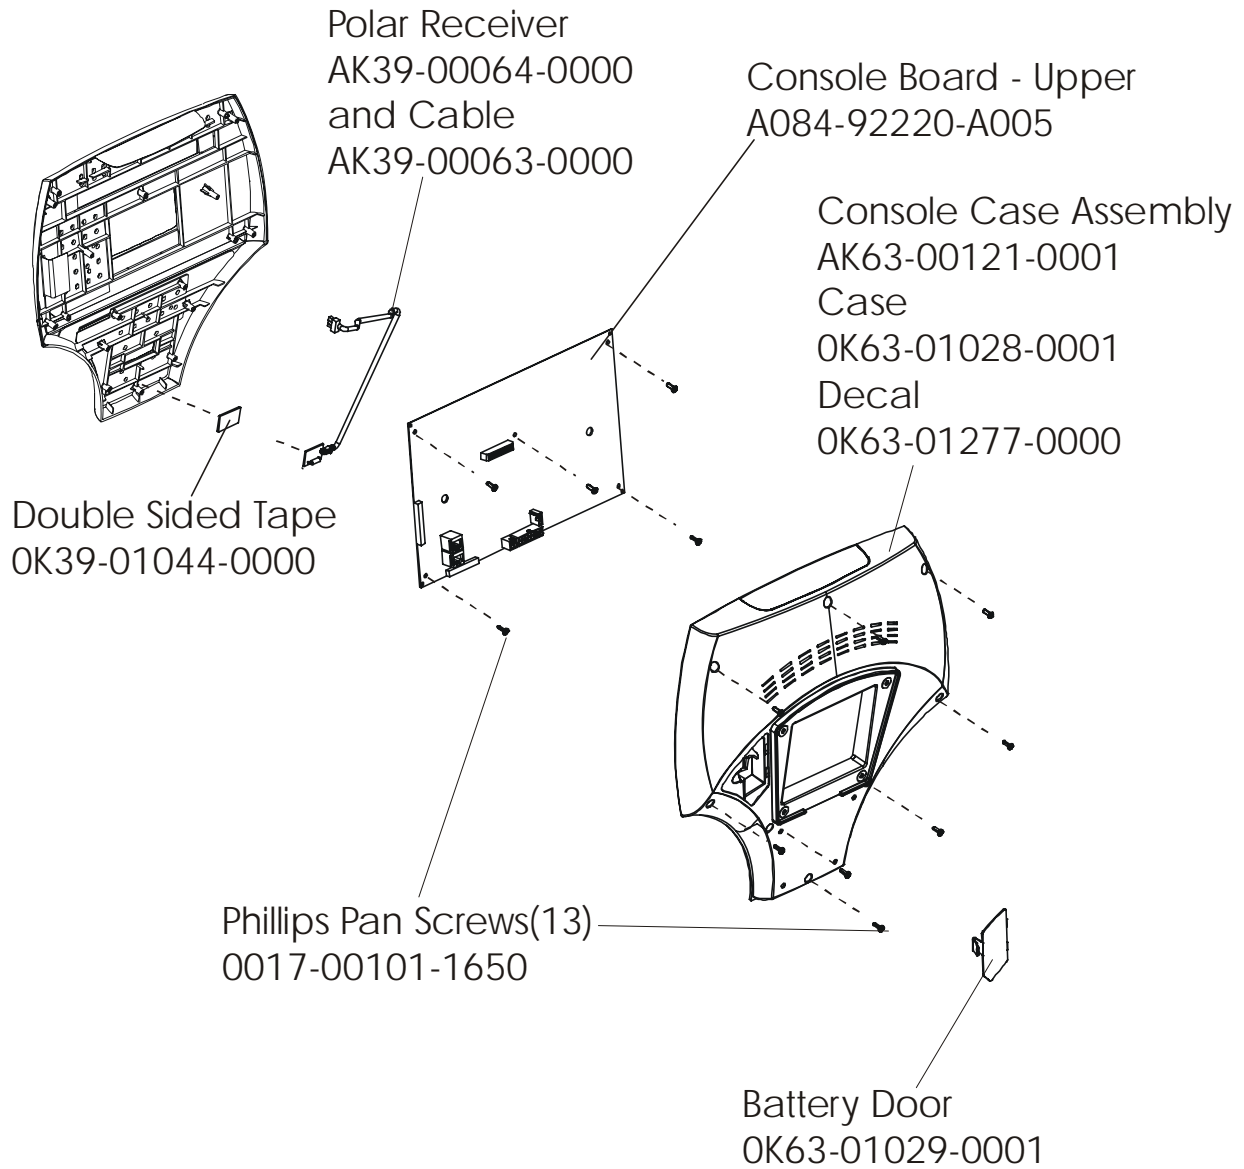

Console Assembly	Overlay/Bezel/Switch Assy.
AK39-00071-0001 Eng Met	AK63-00166-0001 Eng Met
AK39-00071-0003 Ger Met	AK63-00166-0003 Ger Met
AK39-00071-0004 Spn Met	AK63-00166-0004 Spn Met
AK39-00071-0006 Jap Met	AK63-00166-0006 Jap Met
AK39-00071-0007 Frn Met	AK63-00166-0007 Frn Met
AK39-00071-0008 Itl Met	AK63-00166-0008 Itl Met
AK39-00071-0009 Dut Met	AK63-00166-0009 Dut Met
AK39-00071-0010 Por Met	AK63-00166-0010 Por Met


ARCTIC SILVER 93RW
Console Support Assembly

93RW-0XXX-02
S/N CCO100000 and UP

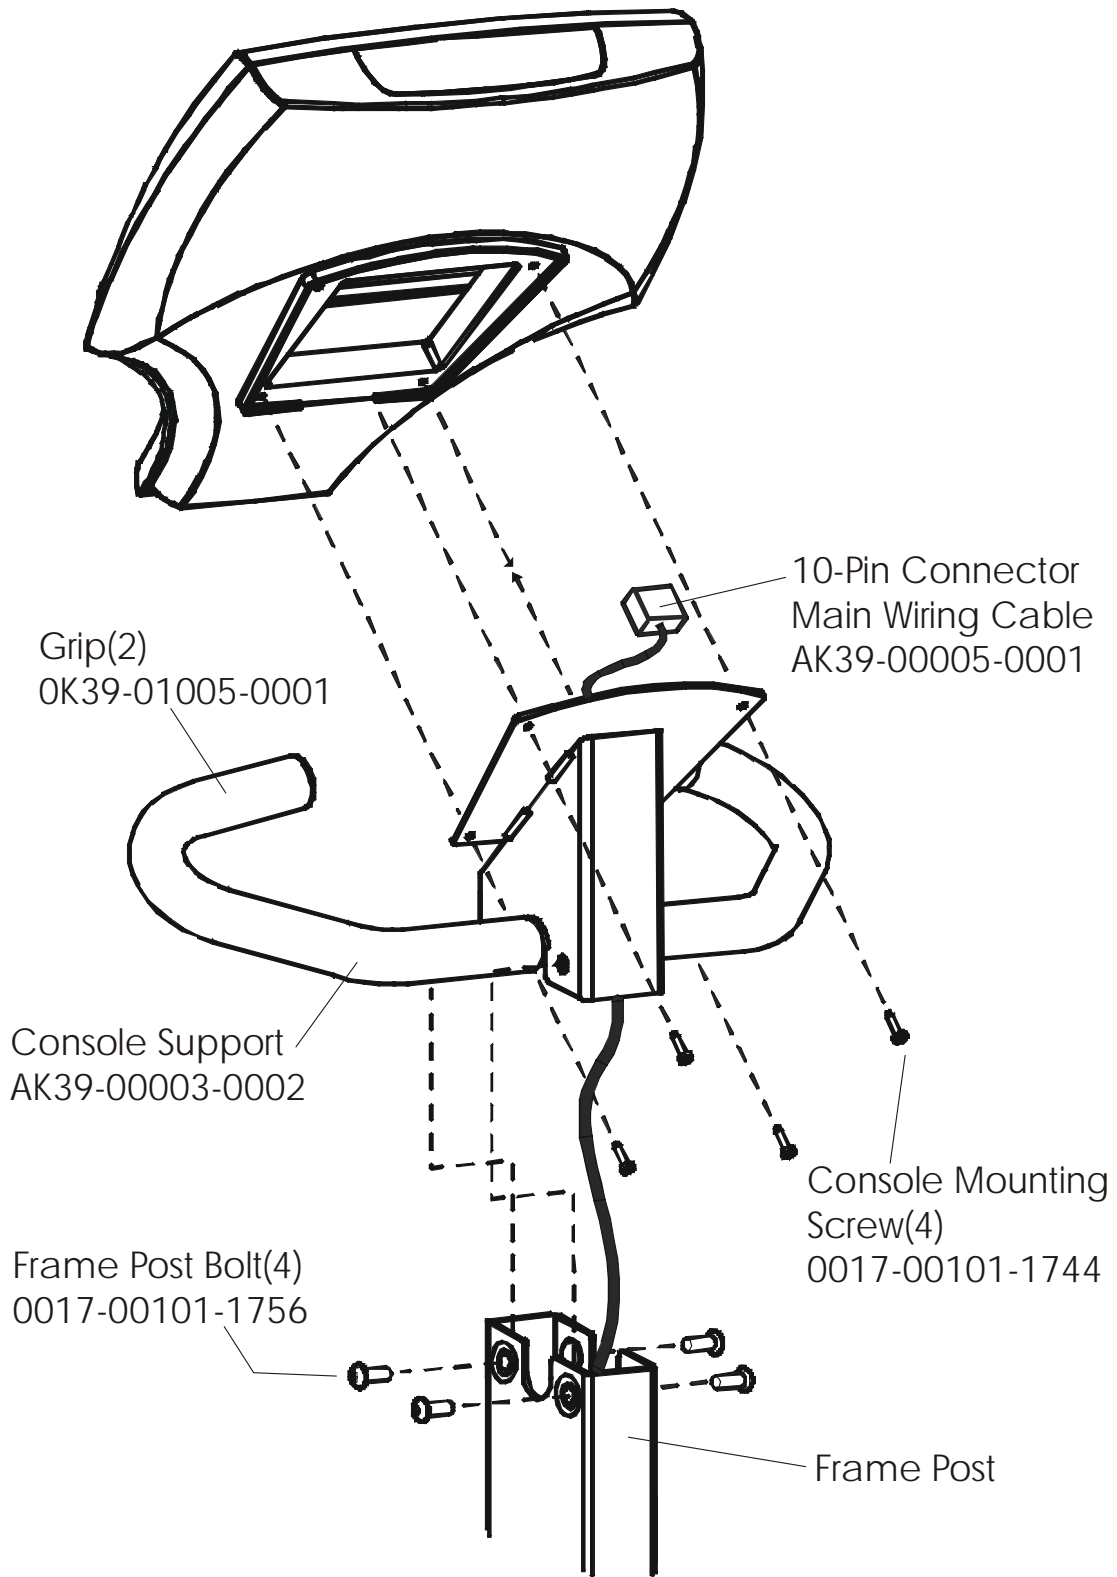

ARCTIC SILVER 93RW
Shrouds, End cap and Pedals

93RW-0XXX-02
S/N CCO100000 and UP

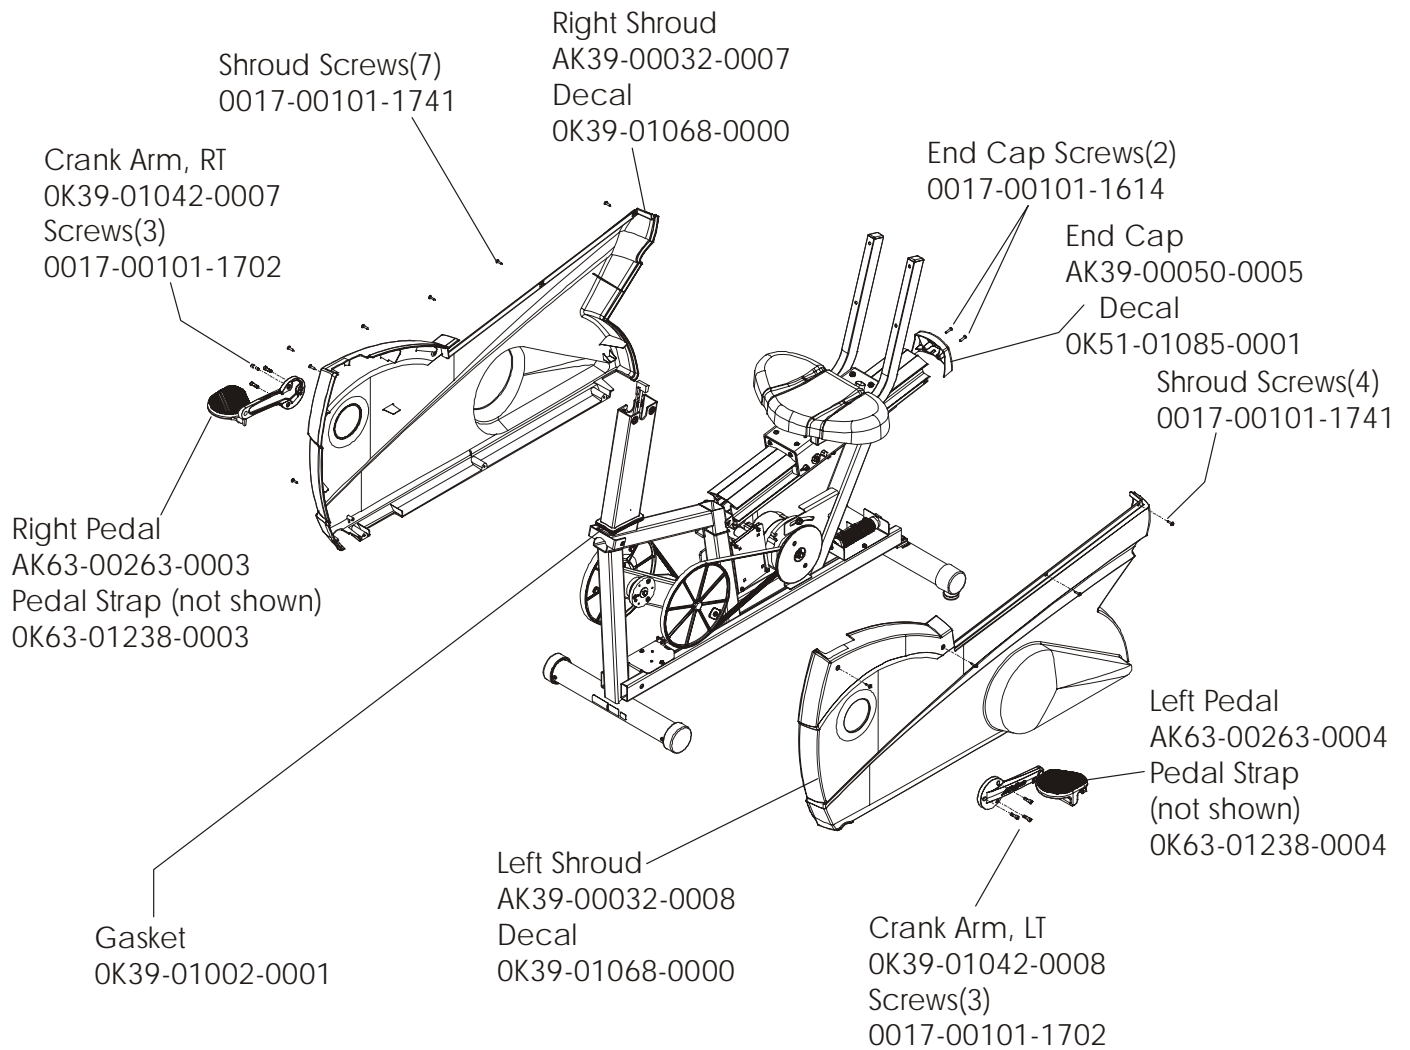


ARCTIC SILVER 93RW

Belts


93RW-0XXX-02

S/N CCO100000 and UP

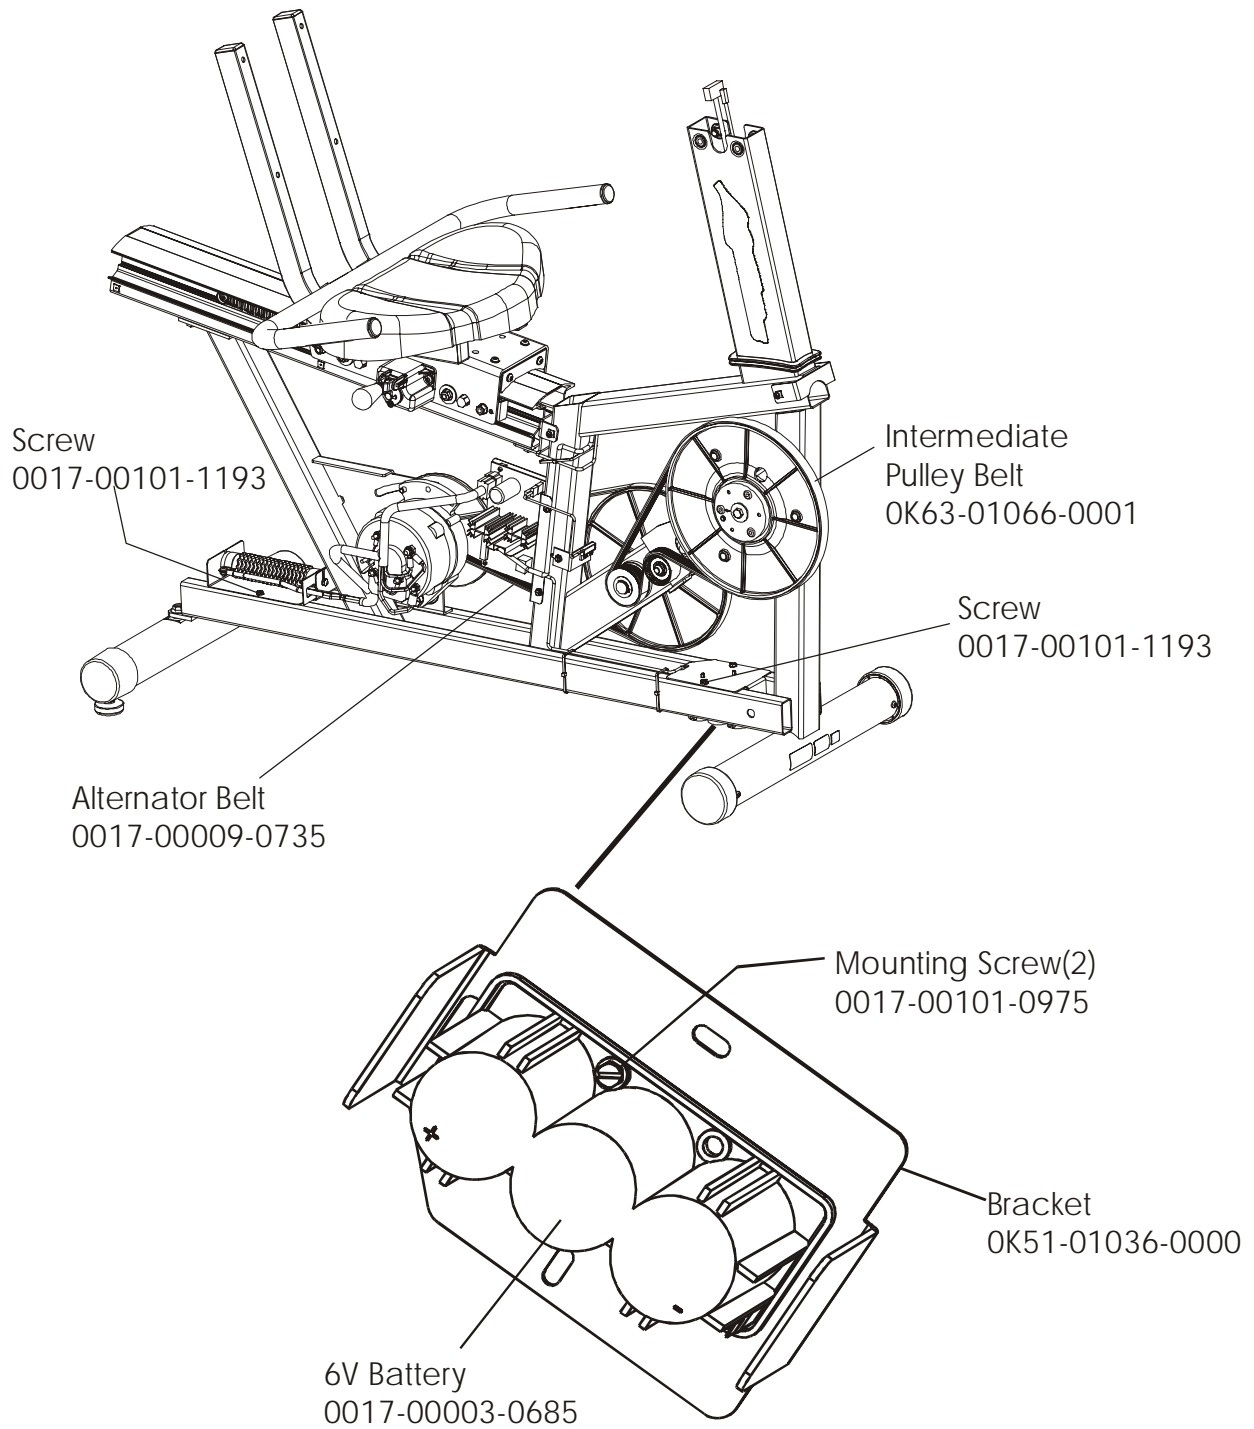

ARCTIC SILVER 93RW
Resistor Assembly


93RW-0XXX-02
S/N CCO100000 and UP

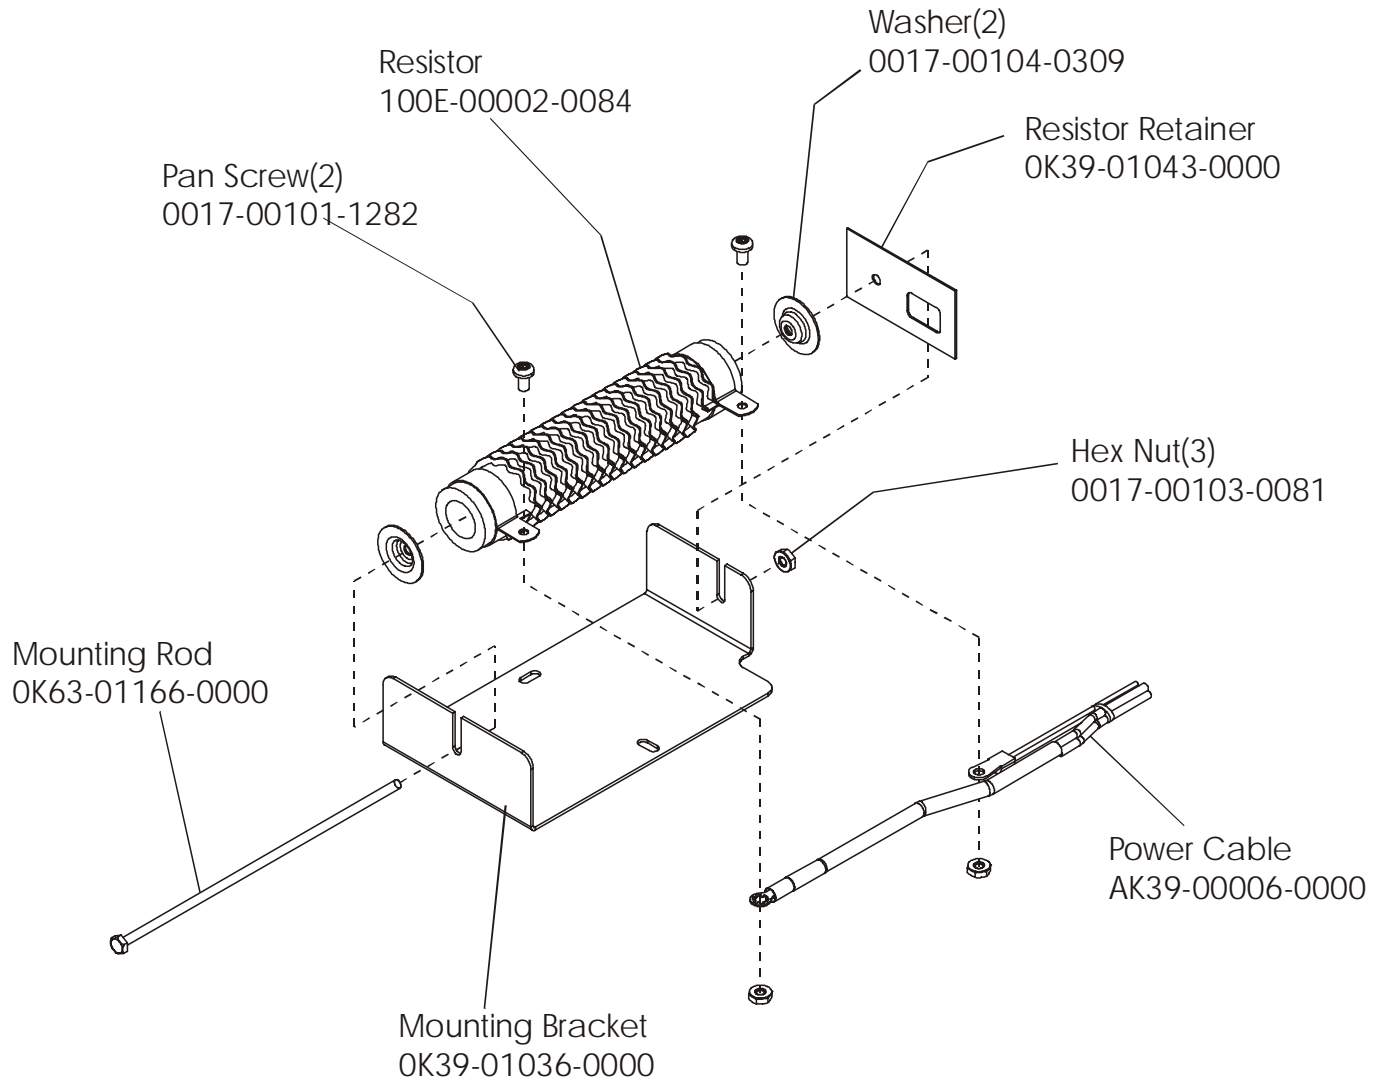

ARCTIC SILVER 93RW
Power Control Board

93RW-0XXX-02
S/N CCO100000 and UP


Assembly Number - AK39-00022-0001

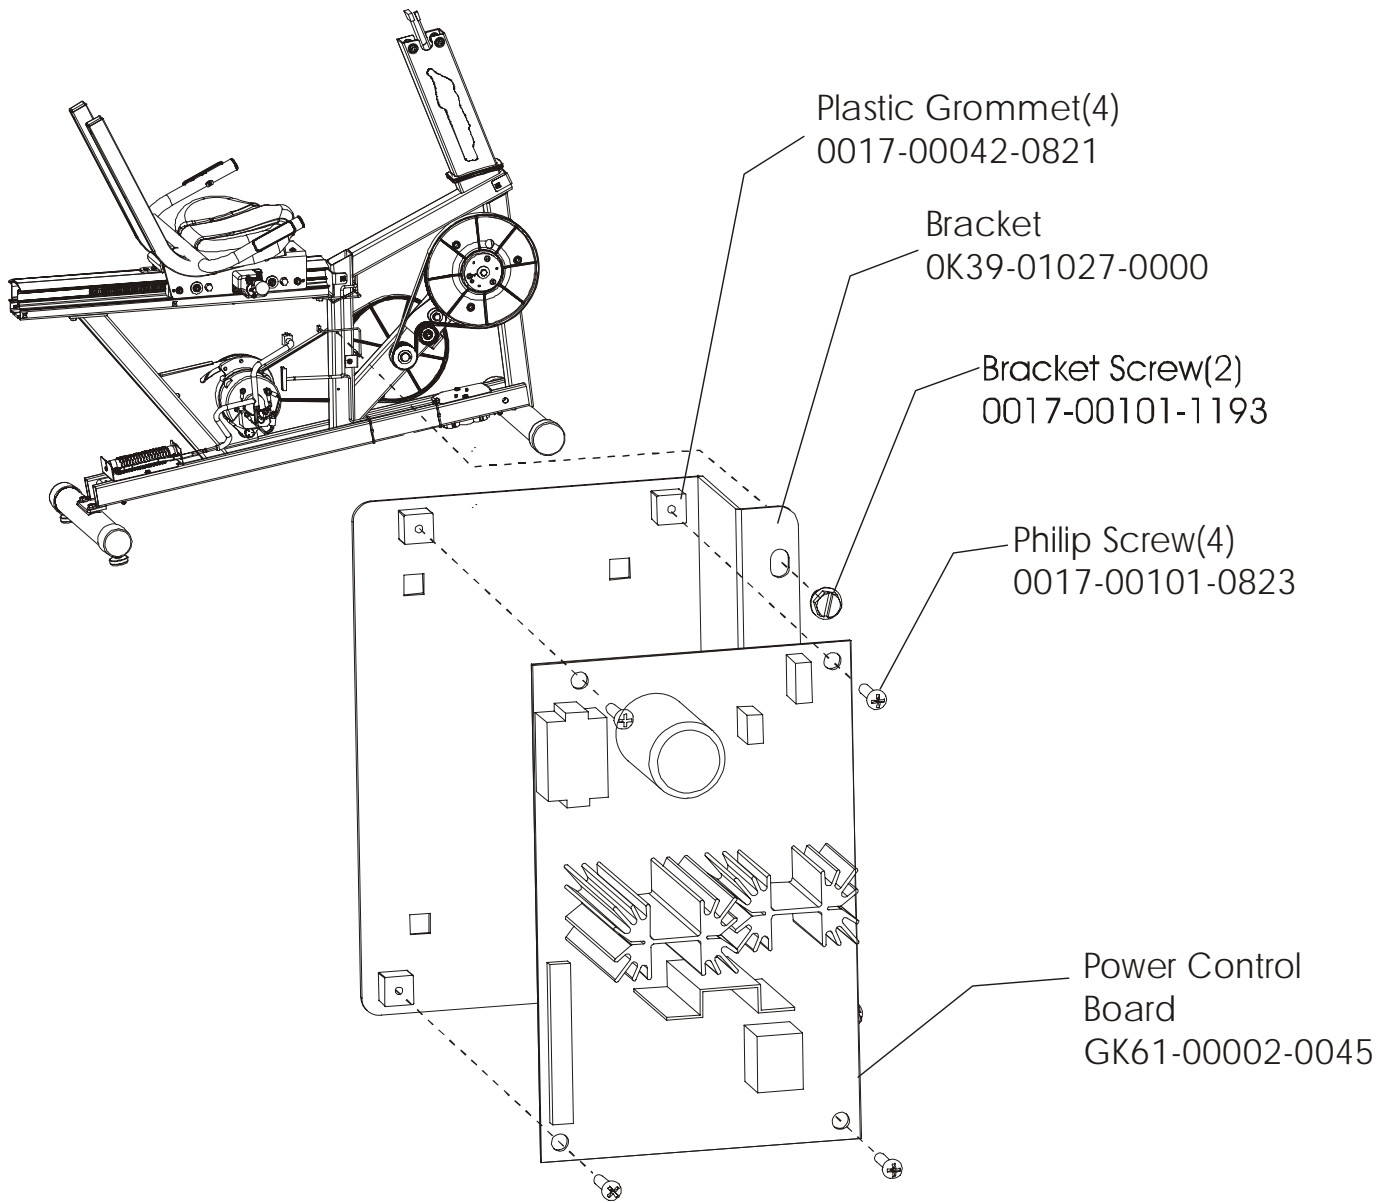

ARCTIC SILVER 93RW
Alternator w/Pulley Assembly

93RW-0XXX-02
S/N CCO100000 and UP


Assembly Number – AK63-00093-0000

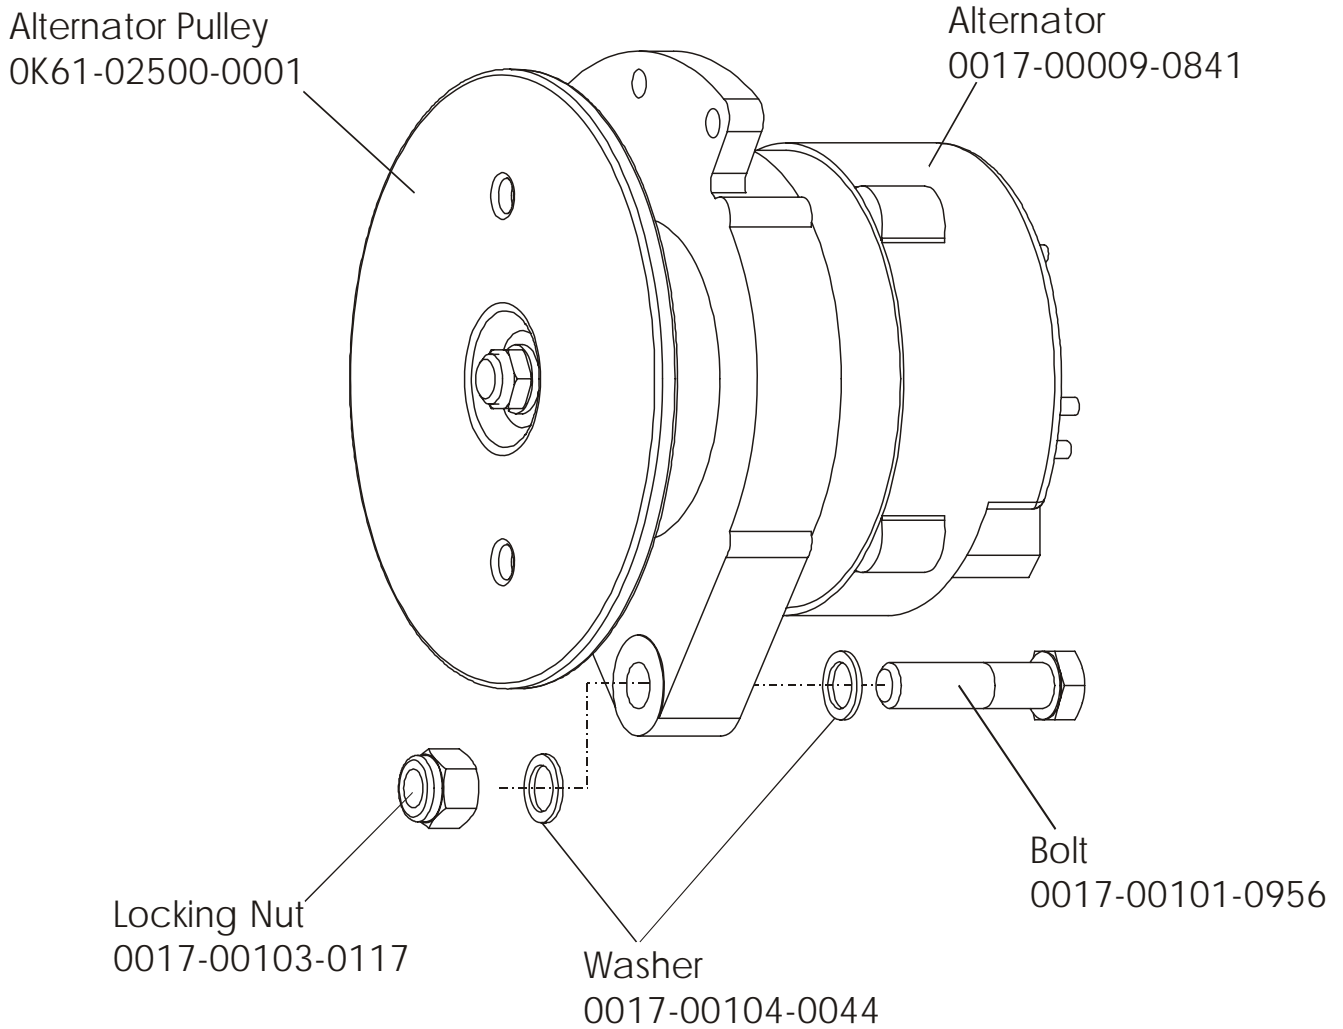

ARCTIC SILVER 93RW

Crank Shaft and Bearing Assembly

93RW-0XXX-02
S/N CCO10000 and UP

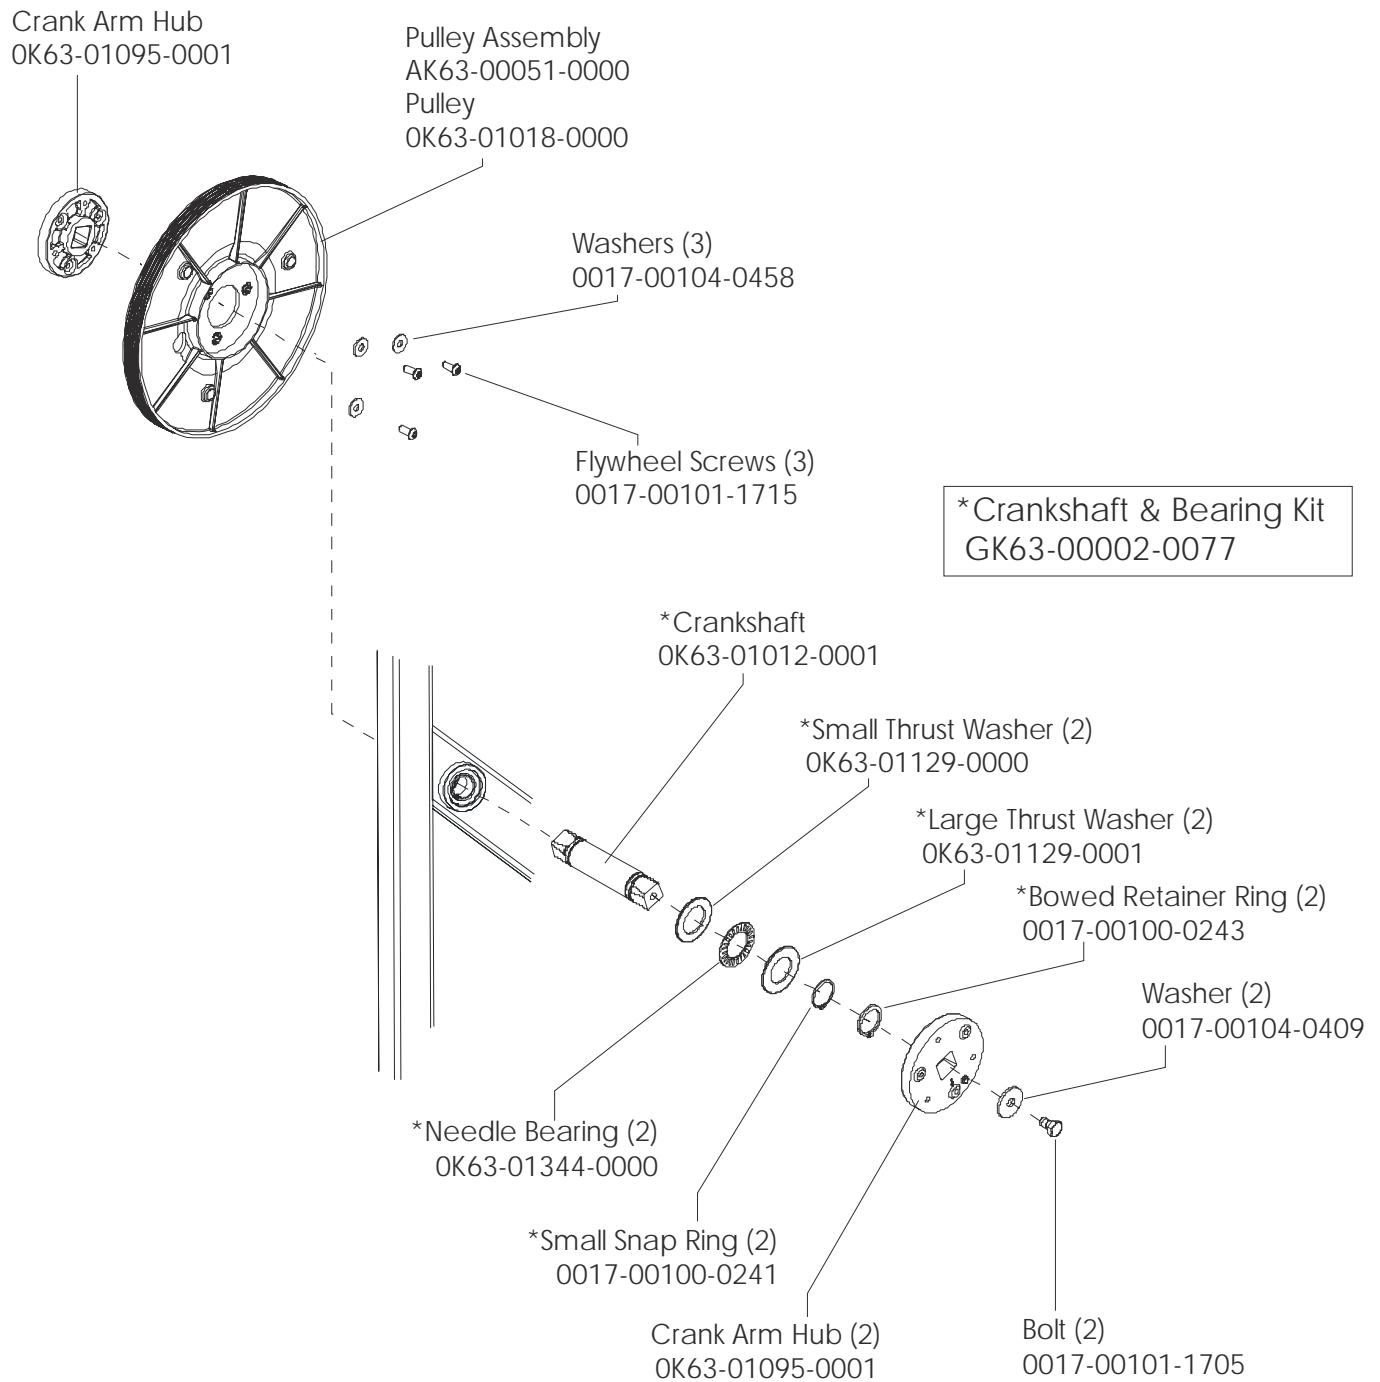

ARCTIC SILVER 93RW


Intermediate Shaft and Bearing Assembly

93RW-0XXX-02


S/N CCO100000 and UP

Clutch Assembly
AK63-00026-0000
(not included in kit)

Magnet
118E-00001-0124
(not included in kit)

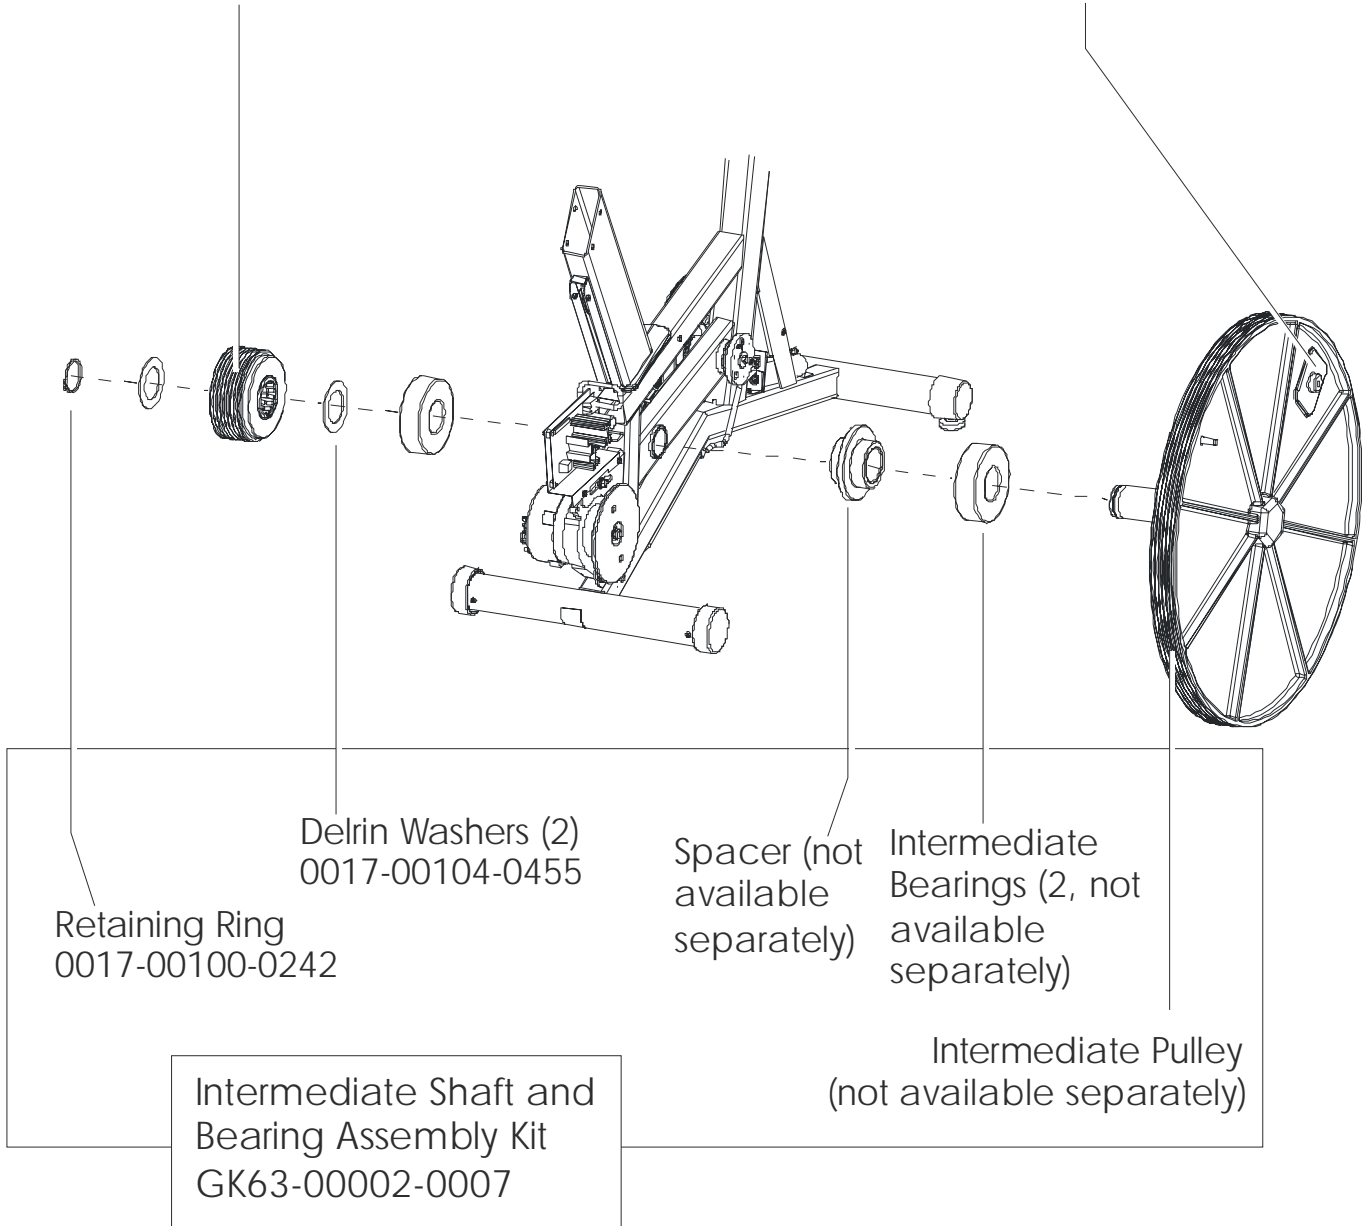


Idler Bracket Assembly – AK63-00021-0000

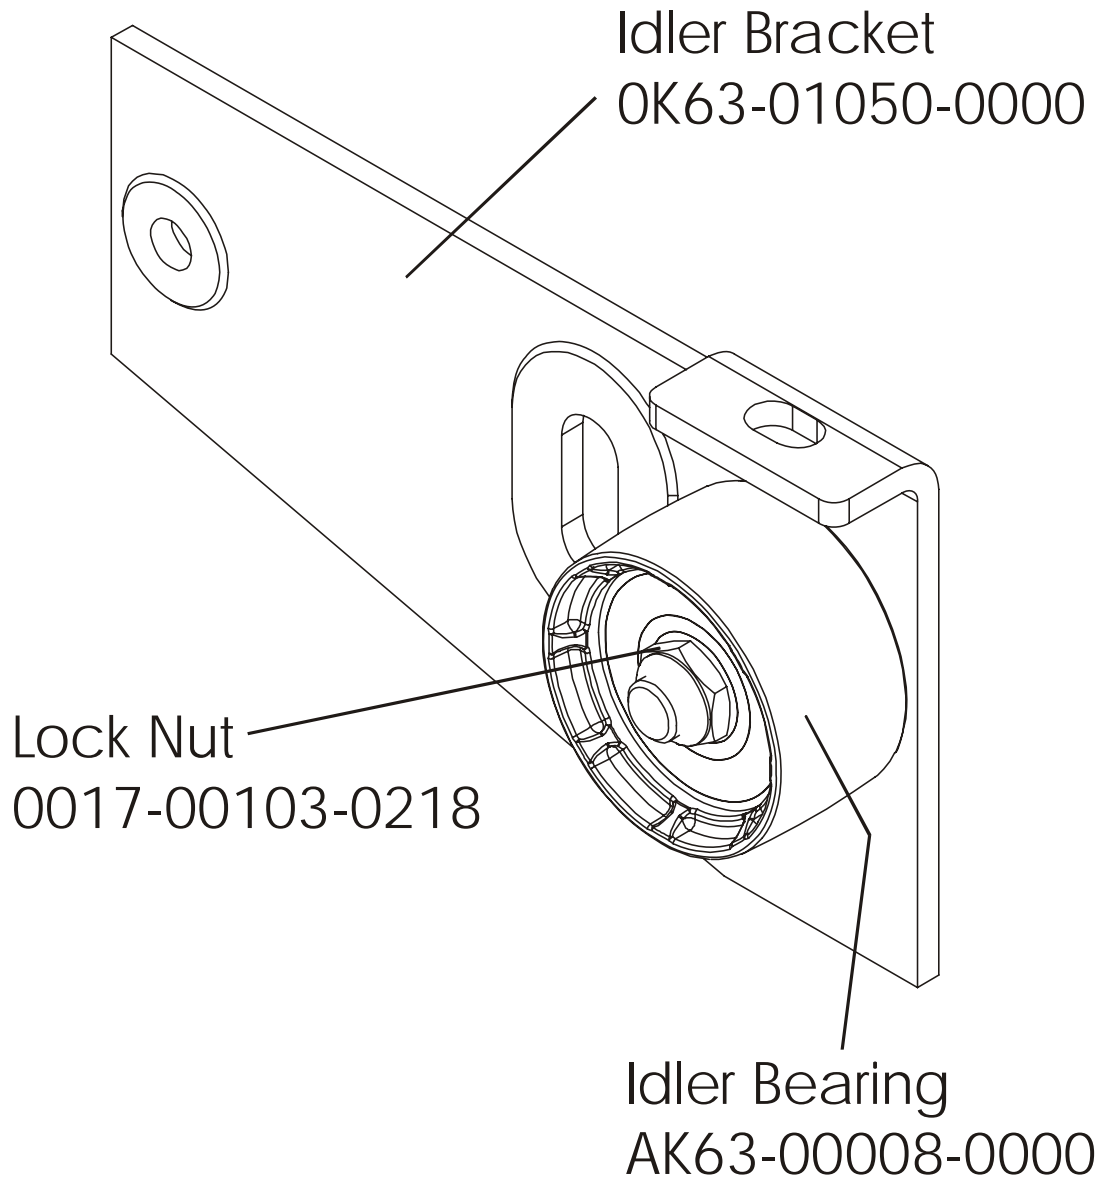

ARCTIC SILVER 93RW
Seat Assembly

93RW-0XXX-02
S/N CCO10000 and UP

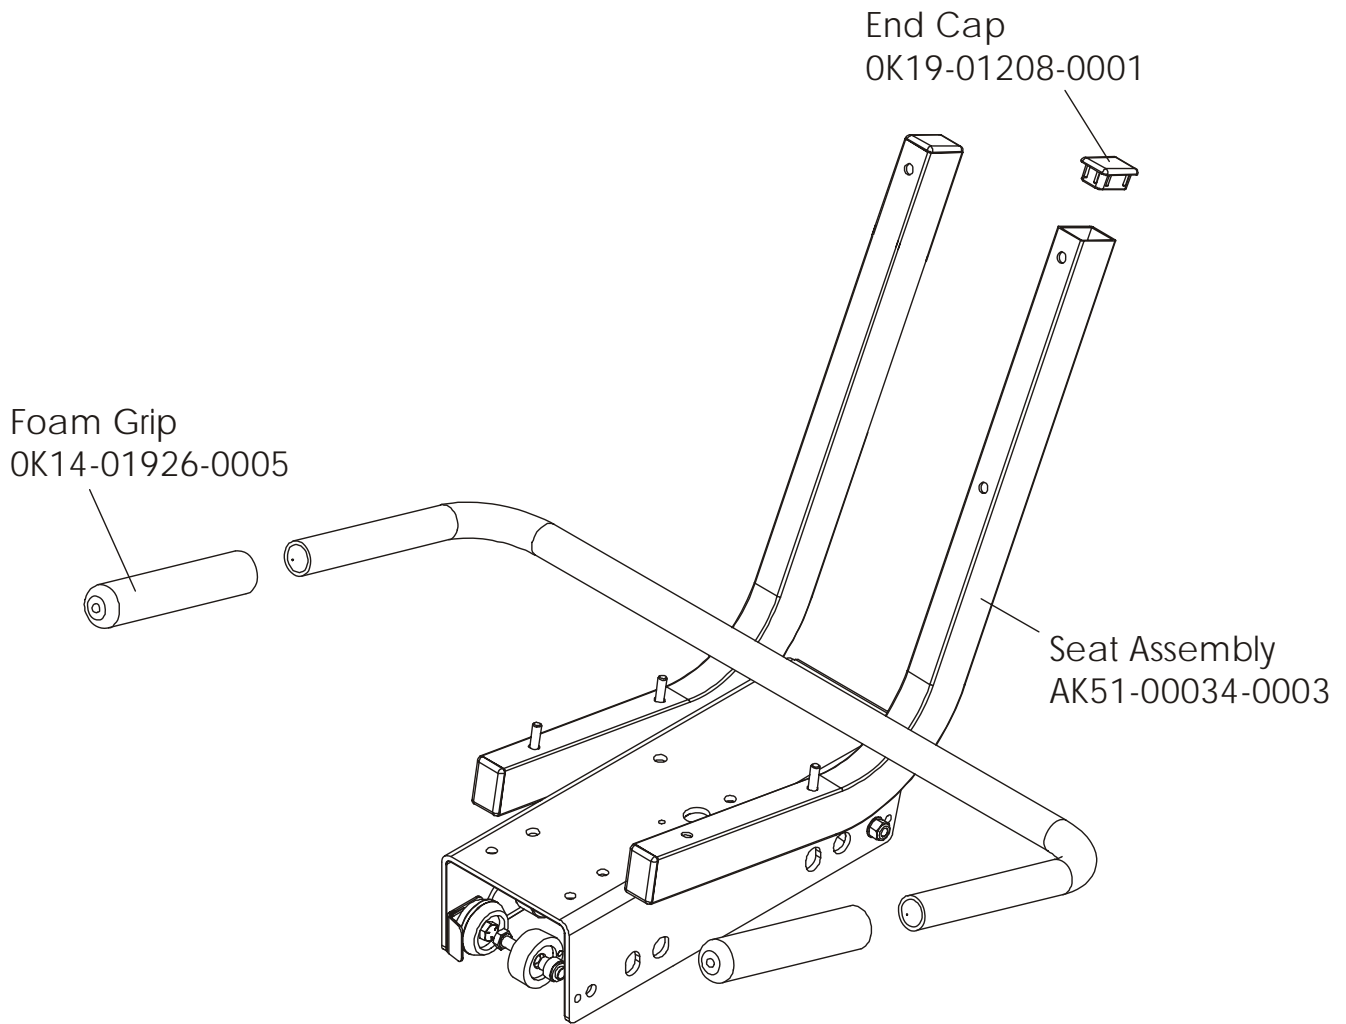


ARCTIC SILVER 93RW

Seat Assembly - Bottom


93RW-0XXX-02

S/N CCO100000 and UP

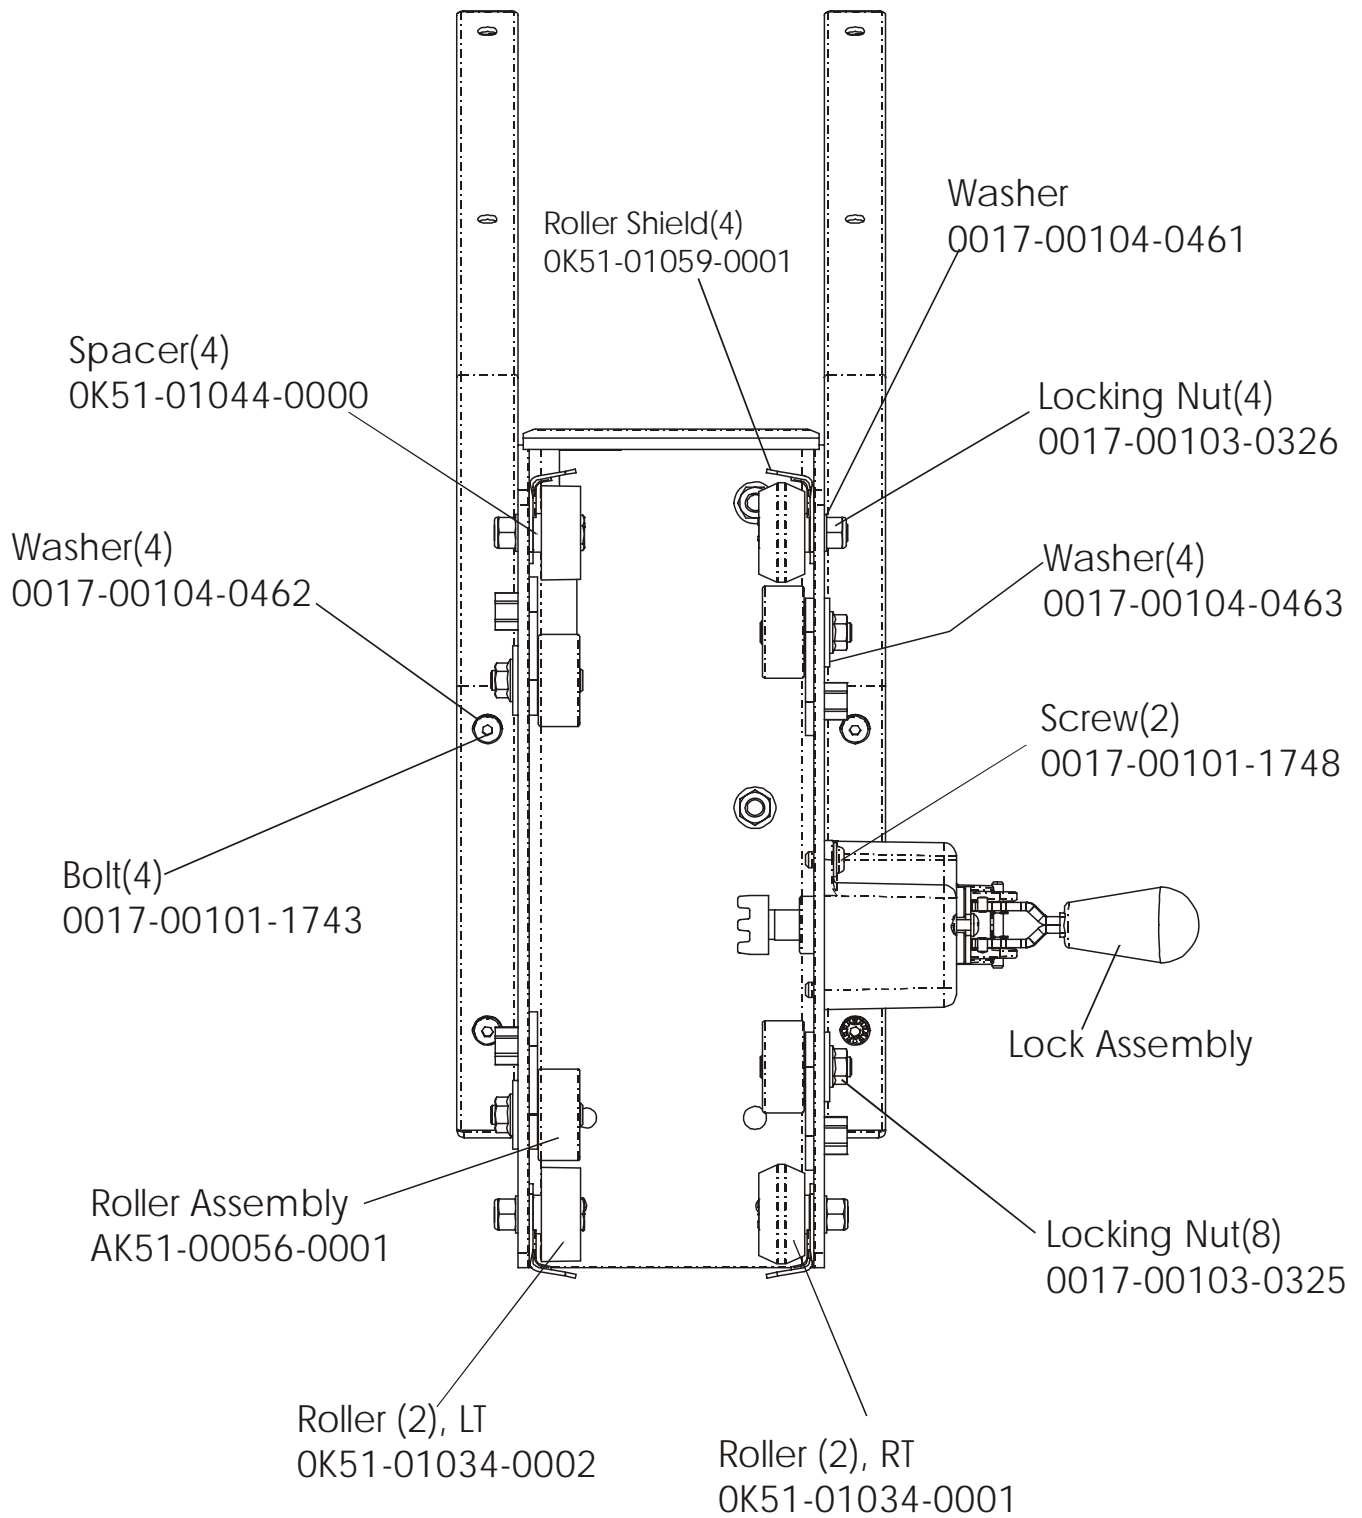


ARCTIC SILVER 93RW
Seat Frame Assembly

93RW-0XXX-02
S/N CCO100000 and UP

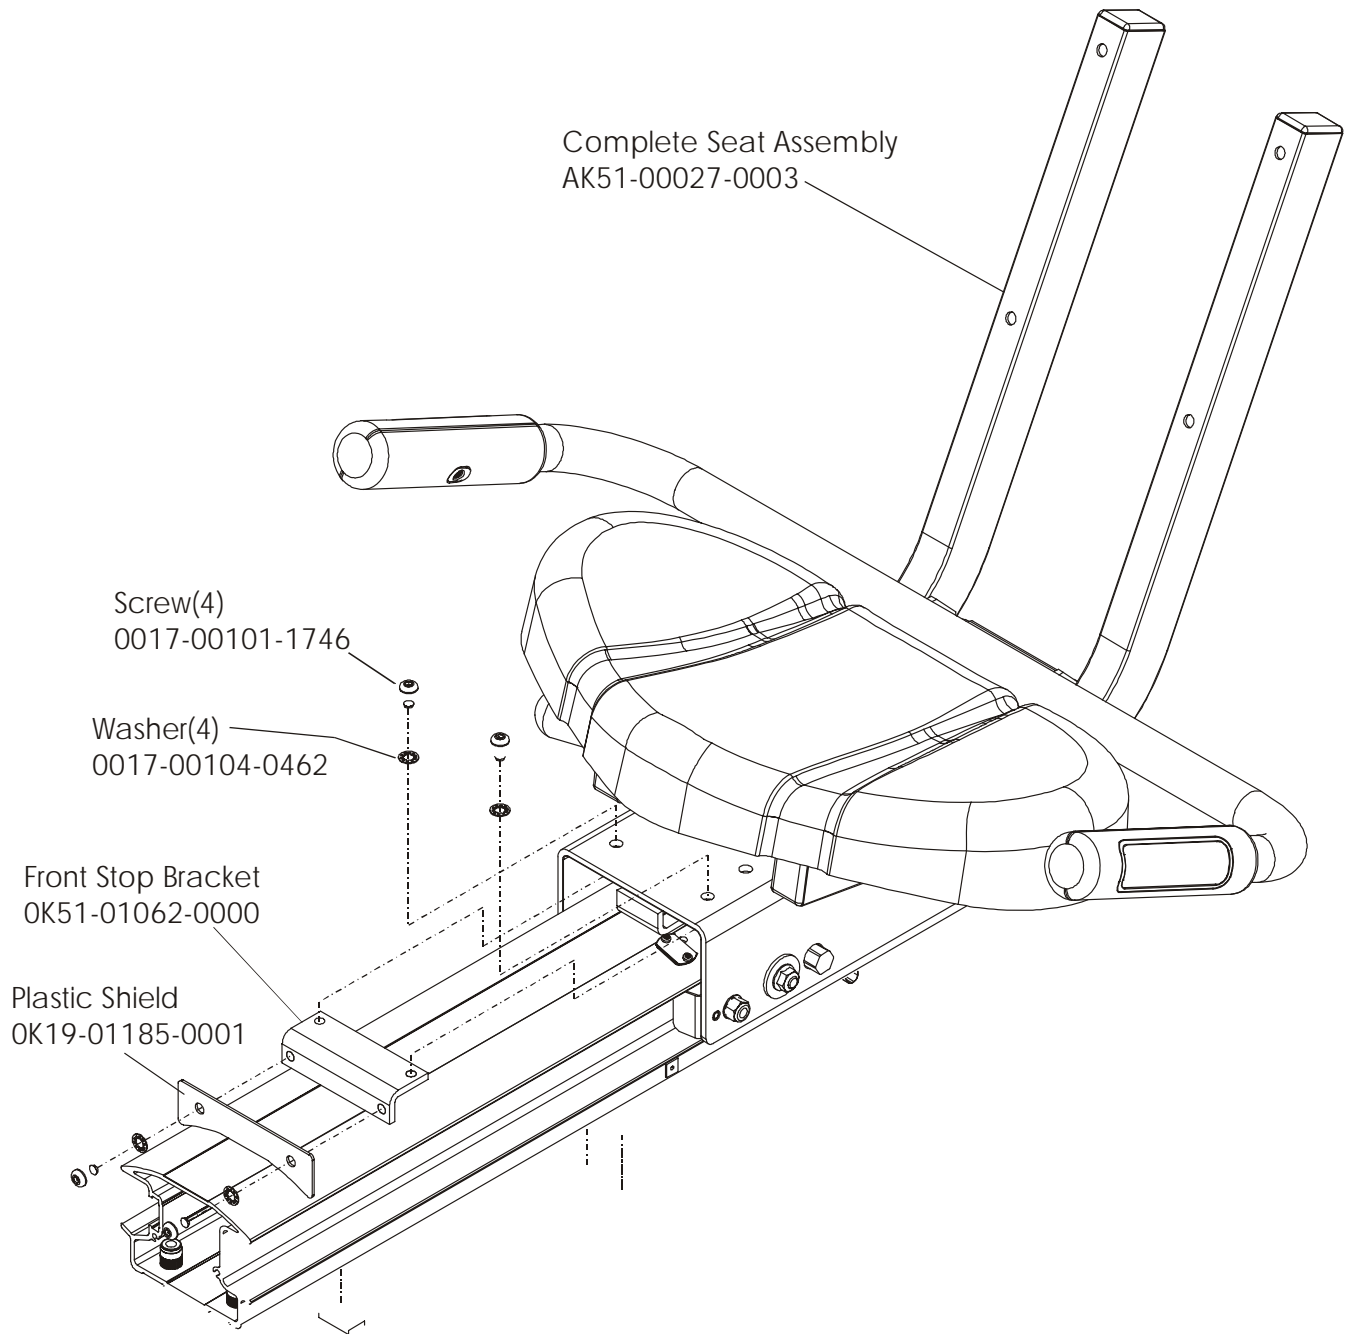


ARCTIC SILVER 93RW
Seat Pads and Accessory Tray

93RW-0XXX-02
S/N CCO100000 and UP

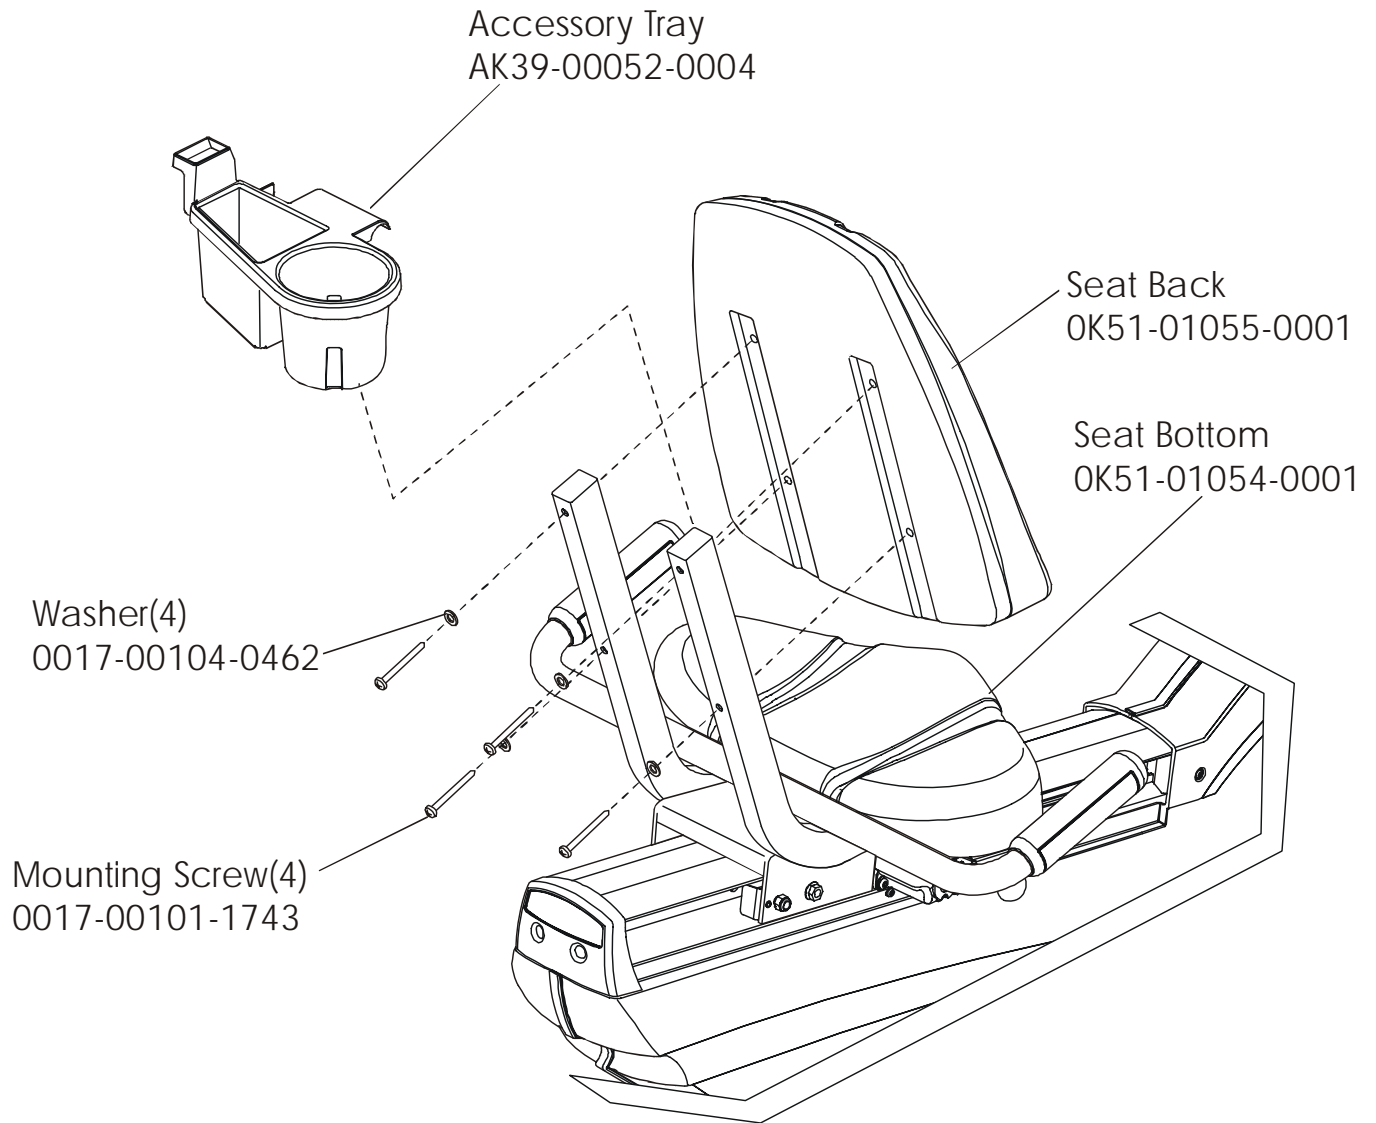

ARCTIC SILVER 93RW
Extrusion Assy. – AK39-00027-0006

93RW-0XXX-02
S/N CCO100000 and UP

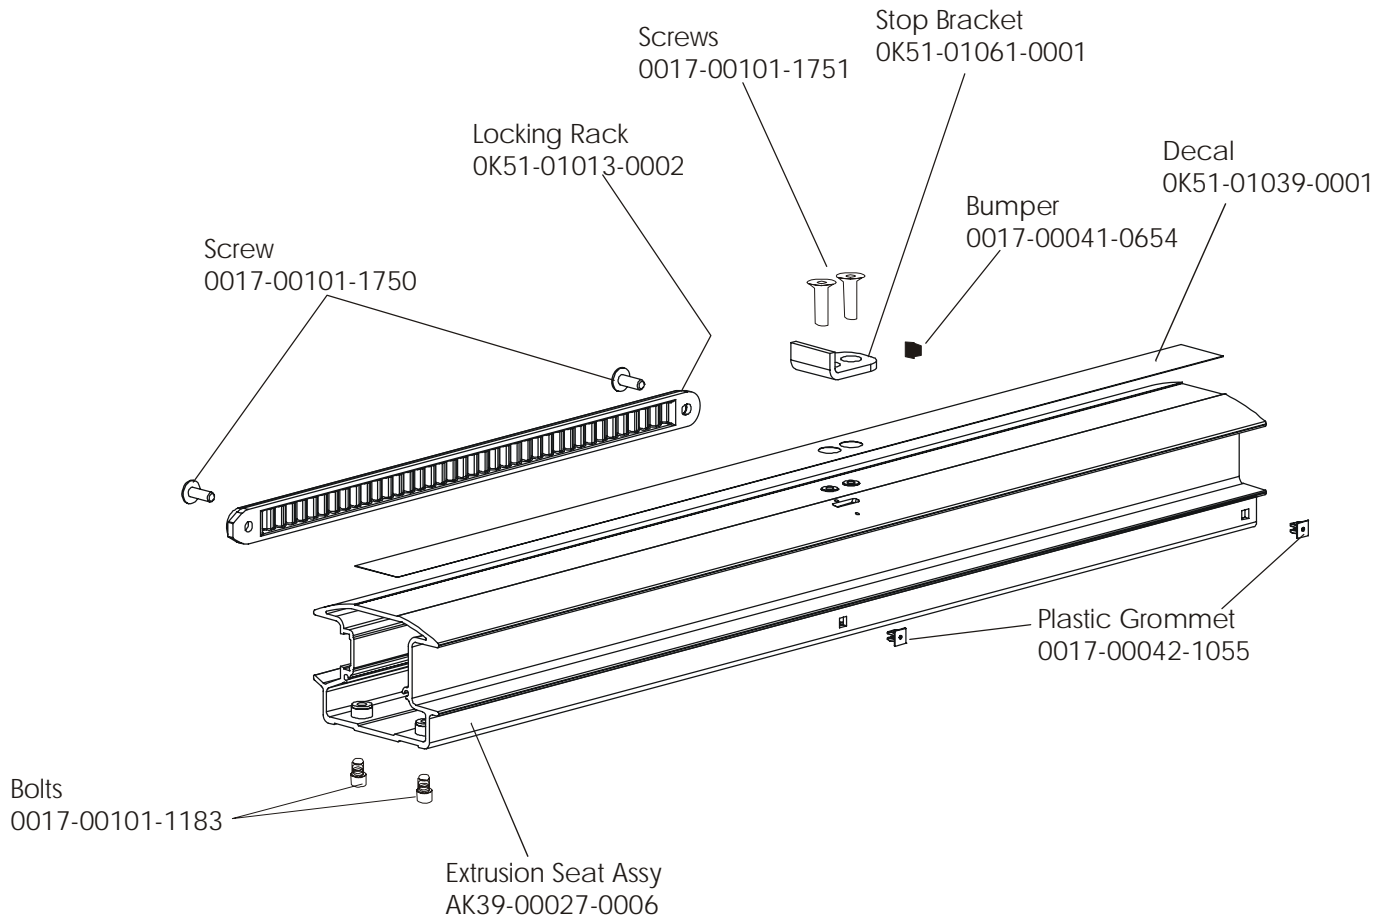


ARCTIC SILVER 93RW

Locking Assembly – AK51-00053-0001


93RW-0XXX-02

S/N CCO100000 and UP

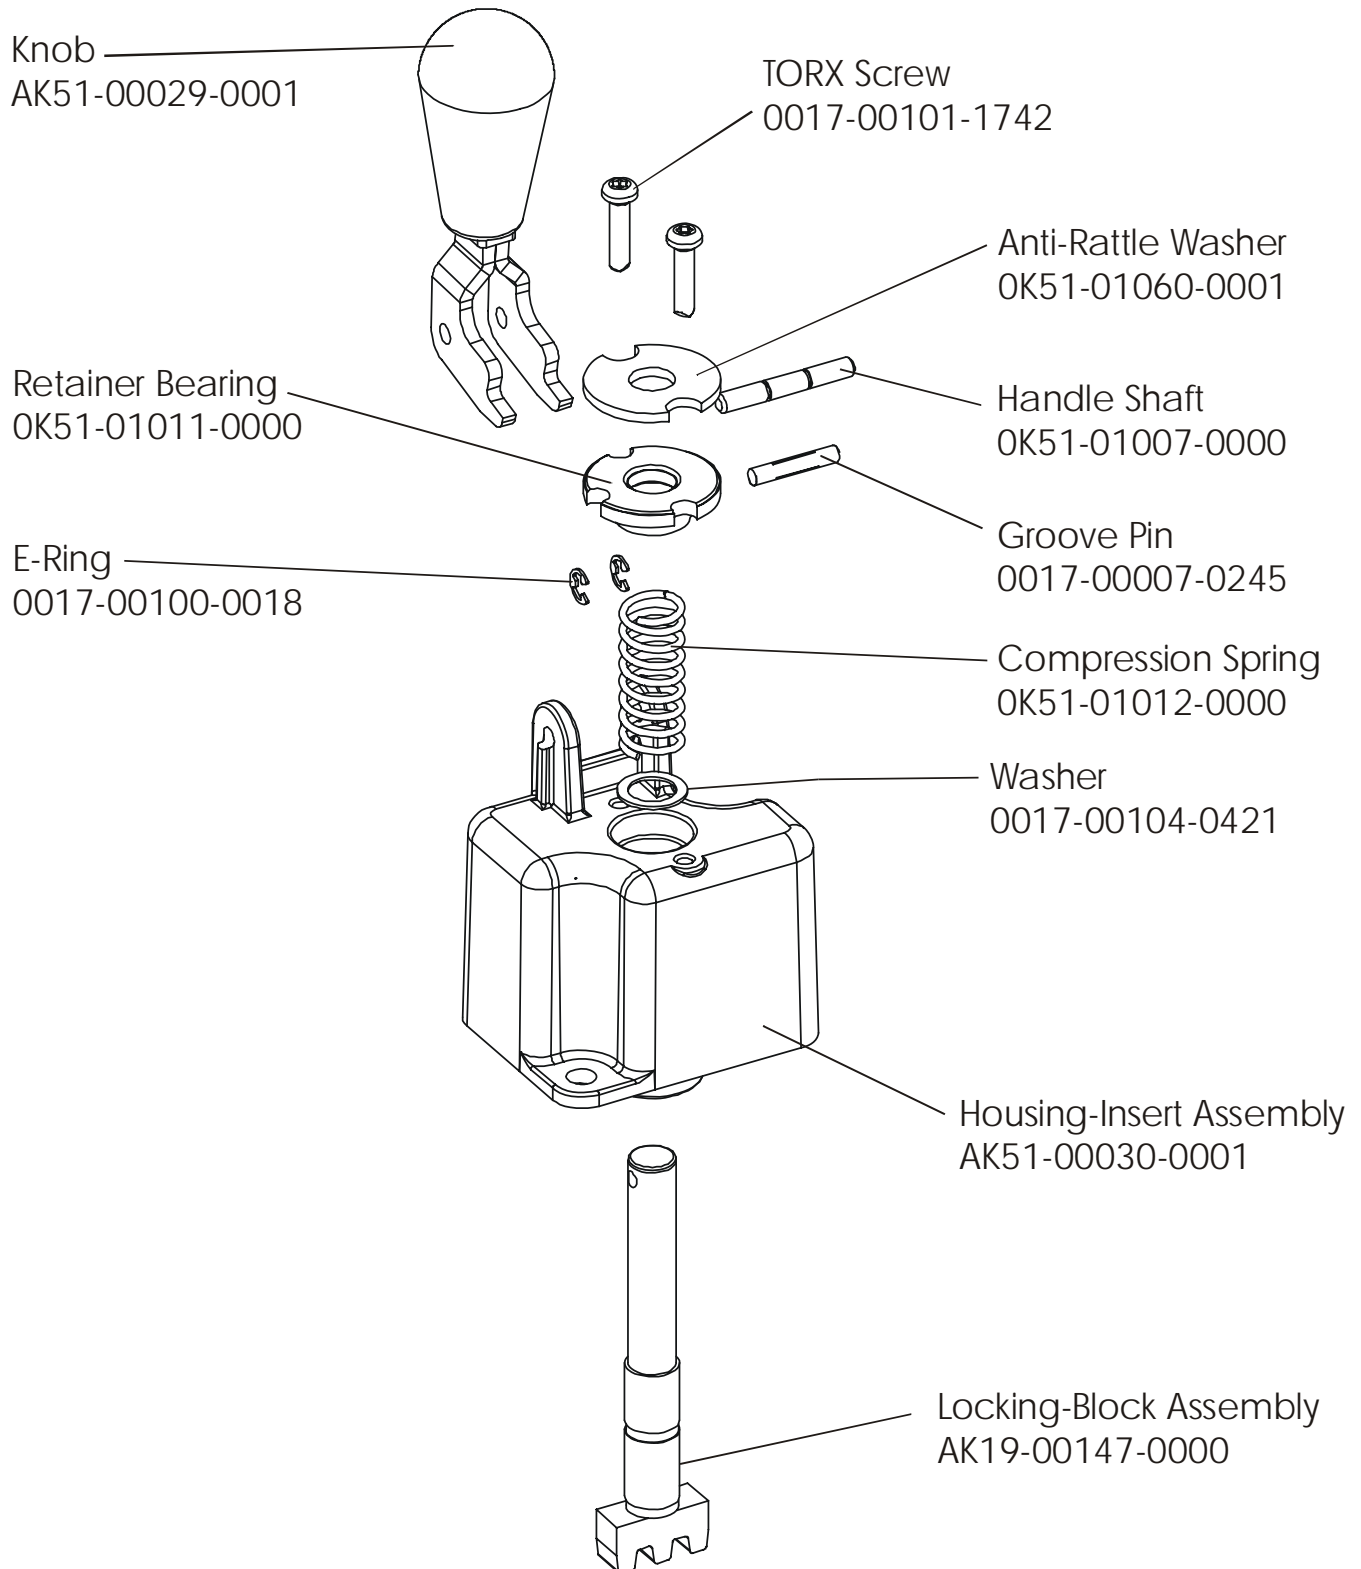

ARCTIC SILVER 93RW
Wheel and Leveler

93RW-0XXX-02
S/N CCO100000 and UP

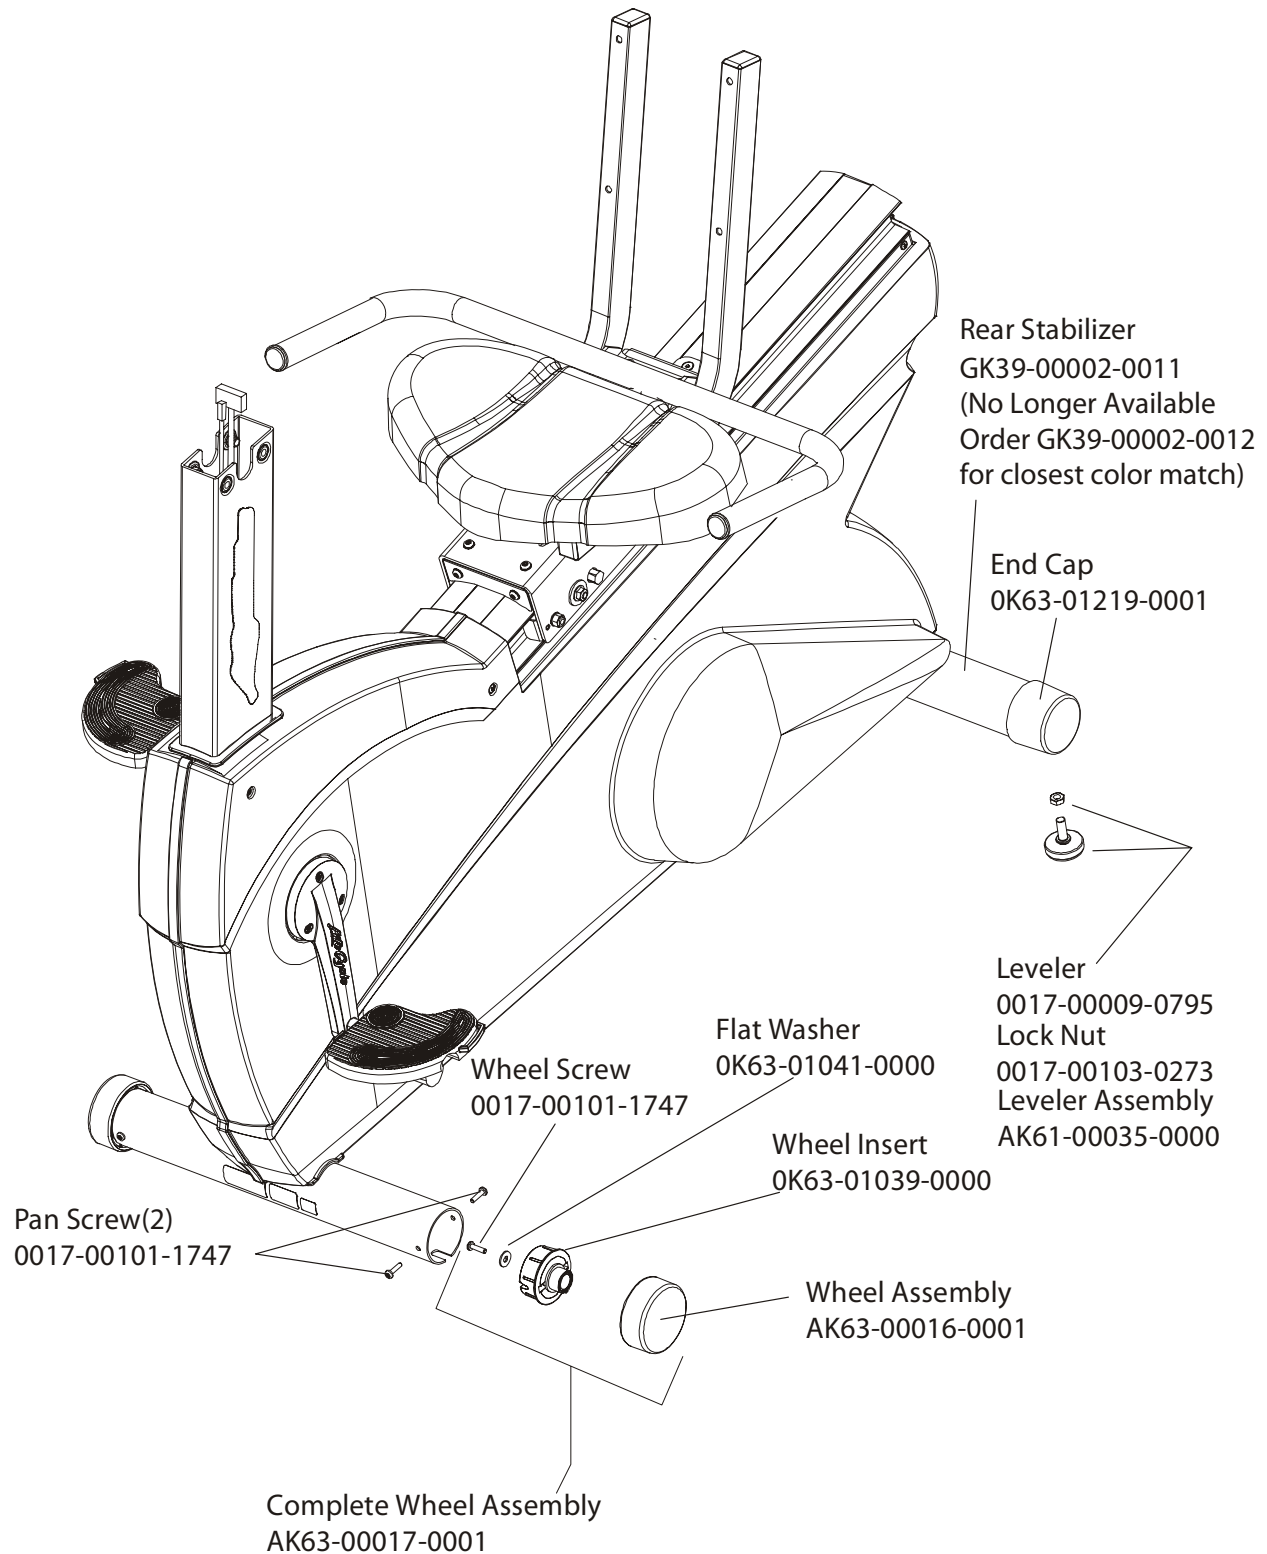

ARCTIC SILVER 93RW

Cables

93RW-0XXX-02

S/N CCO100000 and UP

