 
 


Life Cycle 93Ci
General Assembly


93C-0XXX-01
S/N LCB100001

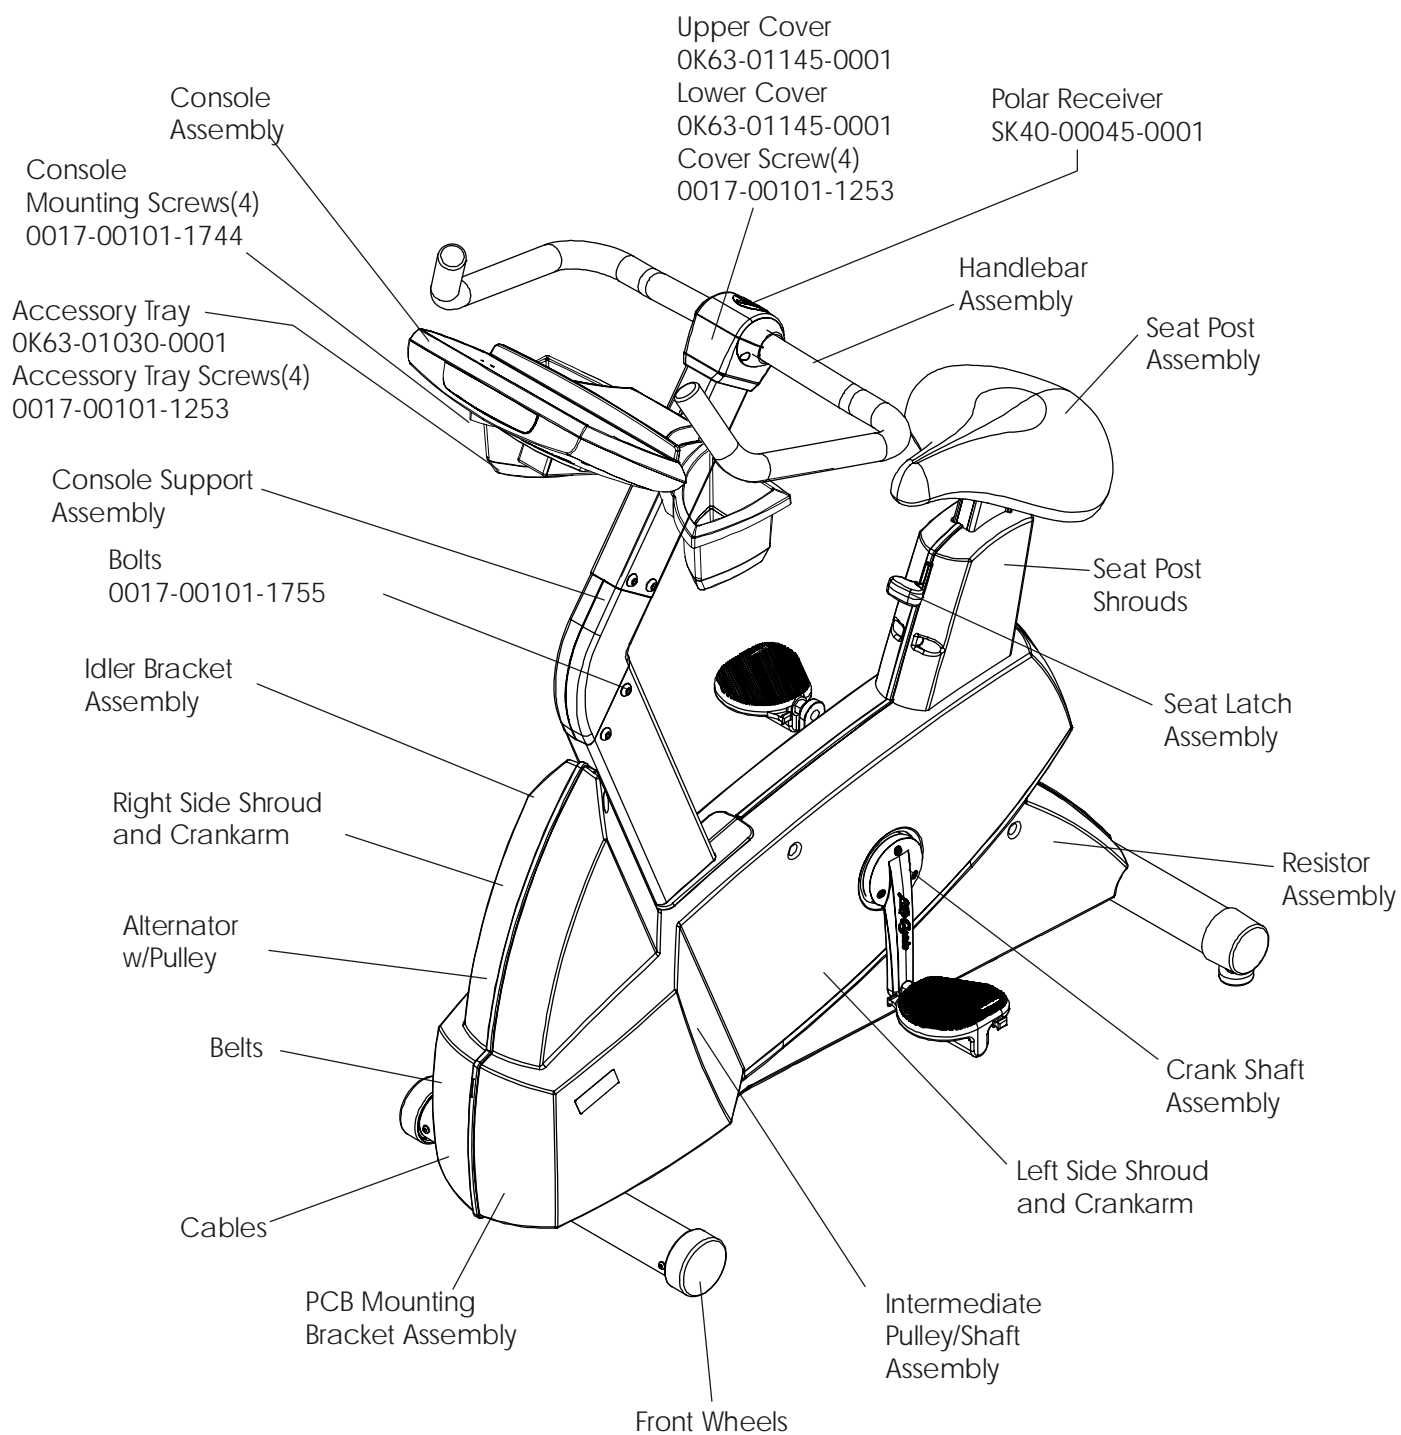

Description	Part Number
Service Manual	M051-00K63-A069
Operators Manual	M051-00K63-A068
Network C-Safe Kit	GK63-00002-0003
Hardware Bag	GK63-00002-0044

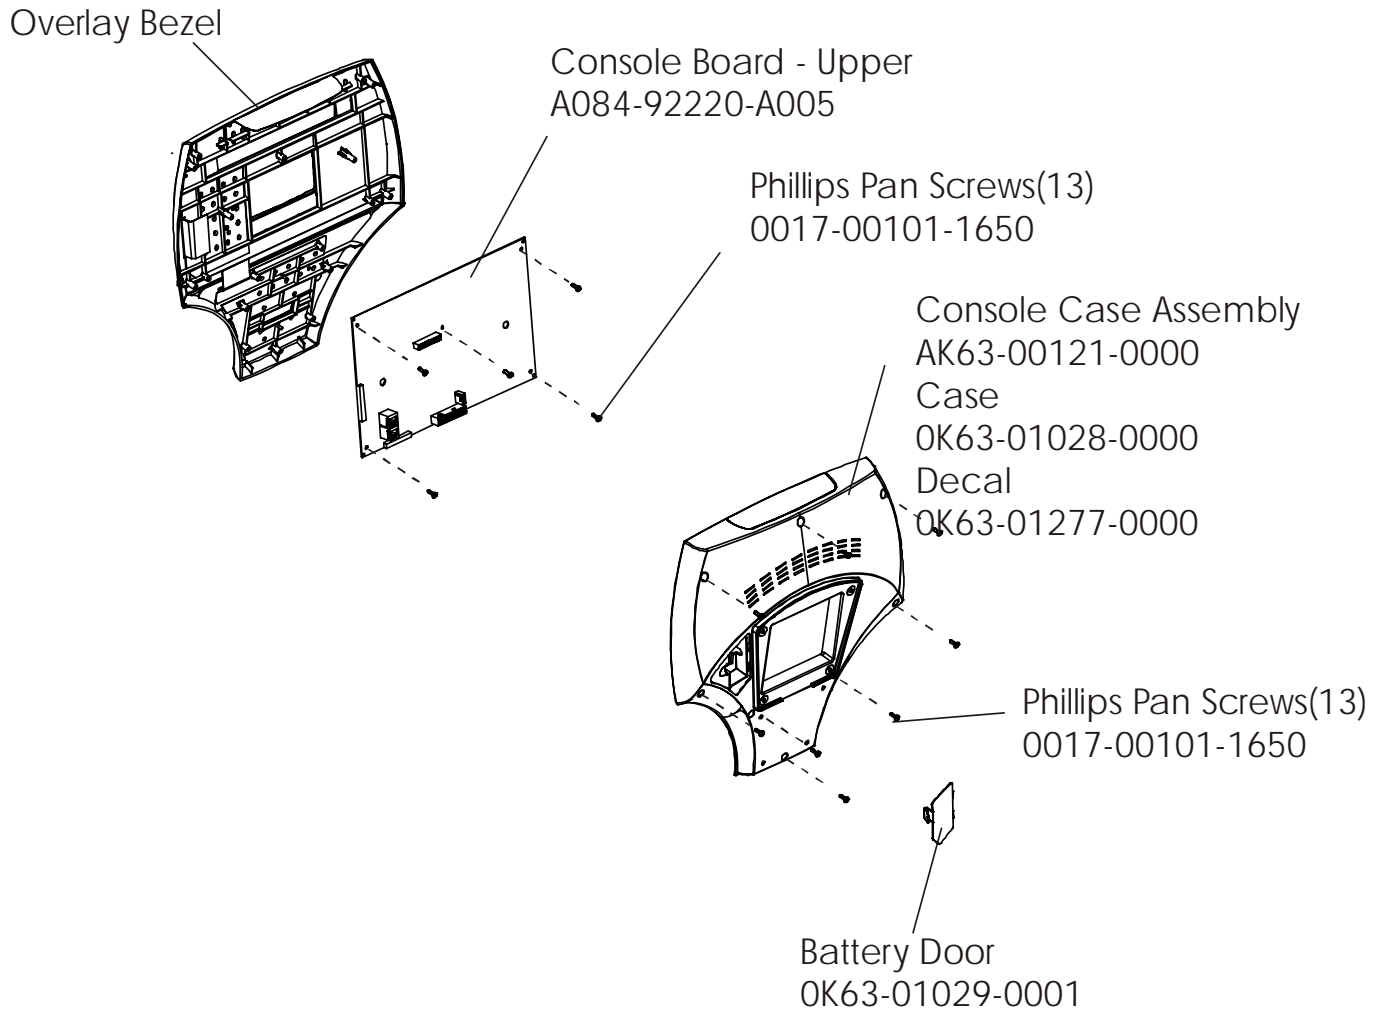



Console Assembly	Overlay Bezel
AK63-00161-0001 Eng Met	AK63-00166-0001 Eng Met
AK63-00161-0003 Ger Met	AK63-00166-0003 Ger Met
AK63-00161-0004 Spn Met	AK63-00166-0004 Spn Met
AK63-00161-0006 Jap Met	AK63-00166-0006 Jap Met
AK63-00161-0007 Frn Met	AK63-00166-0007 Frn Met
AK63-00161-0008 Itl Met	AK63-00166-0008 Itl Met
AK63-00161-0009 Dut Met	AK63-00166-0009 Dut Met
AK63-00161-0010 Por Met	AK63-00166-0010 Por Met

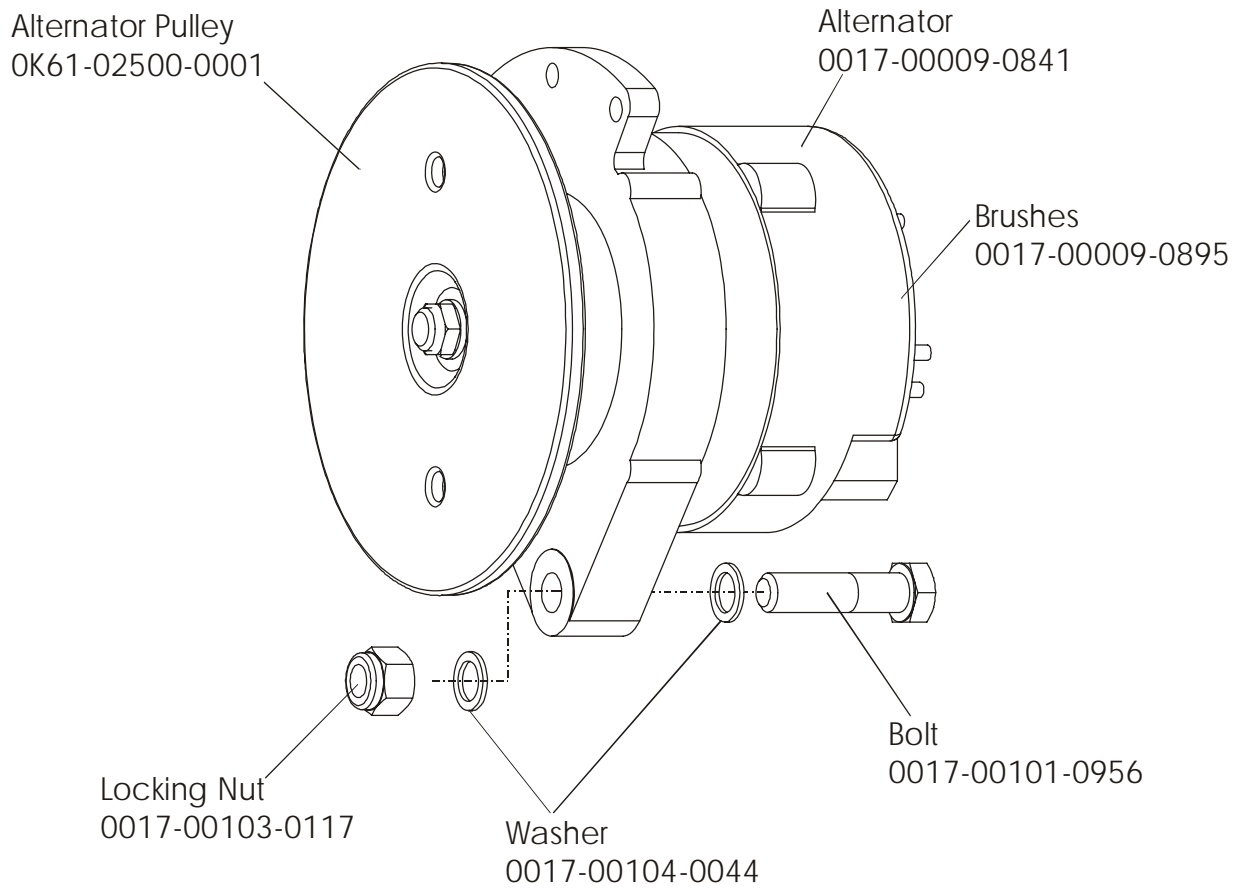 



Life Cycle 93Ci
Crankshaft and Bearing

     
 
93C-0XXX-01
S/N LCB100001

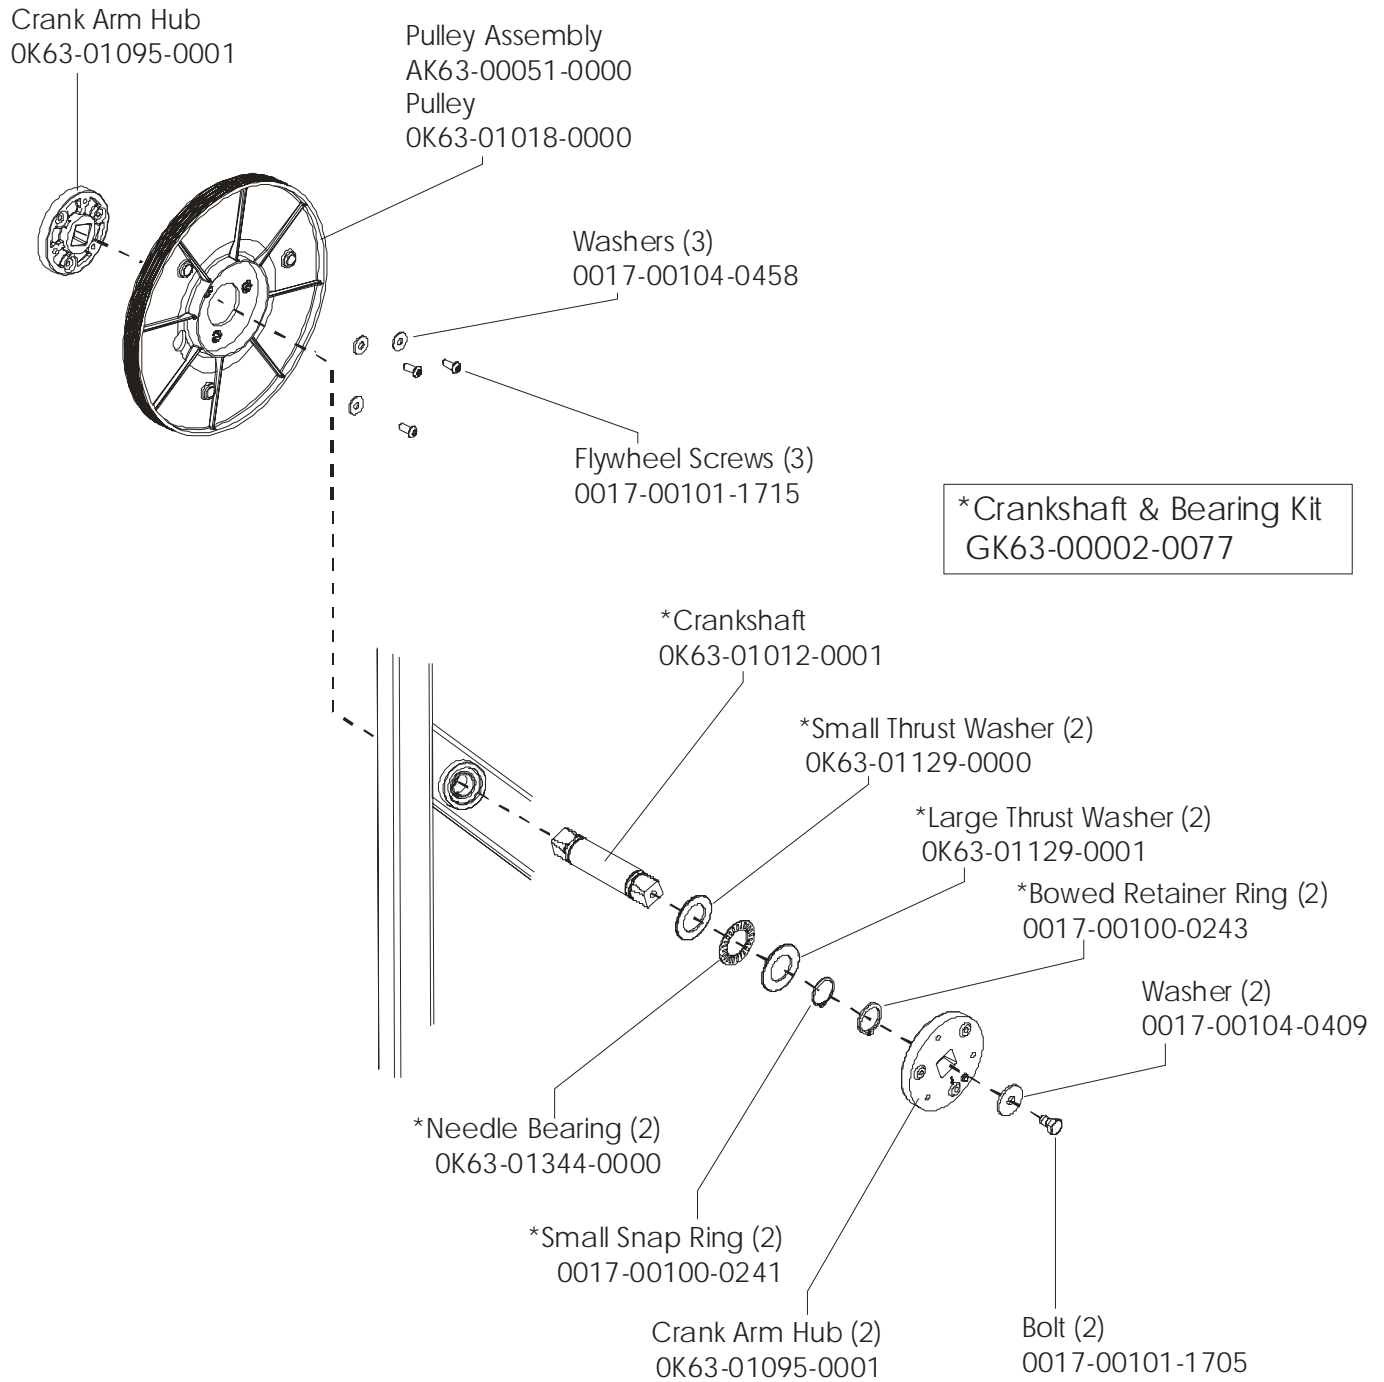 


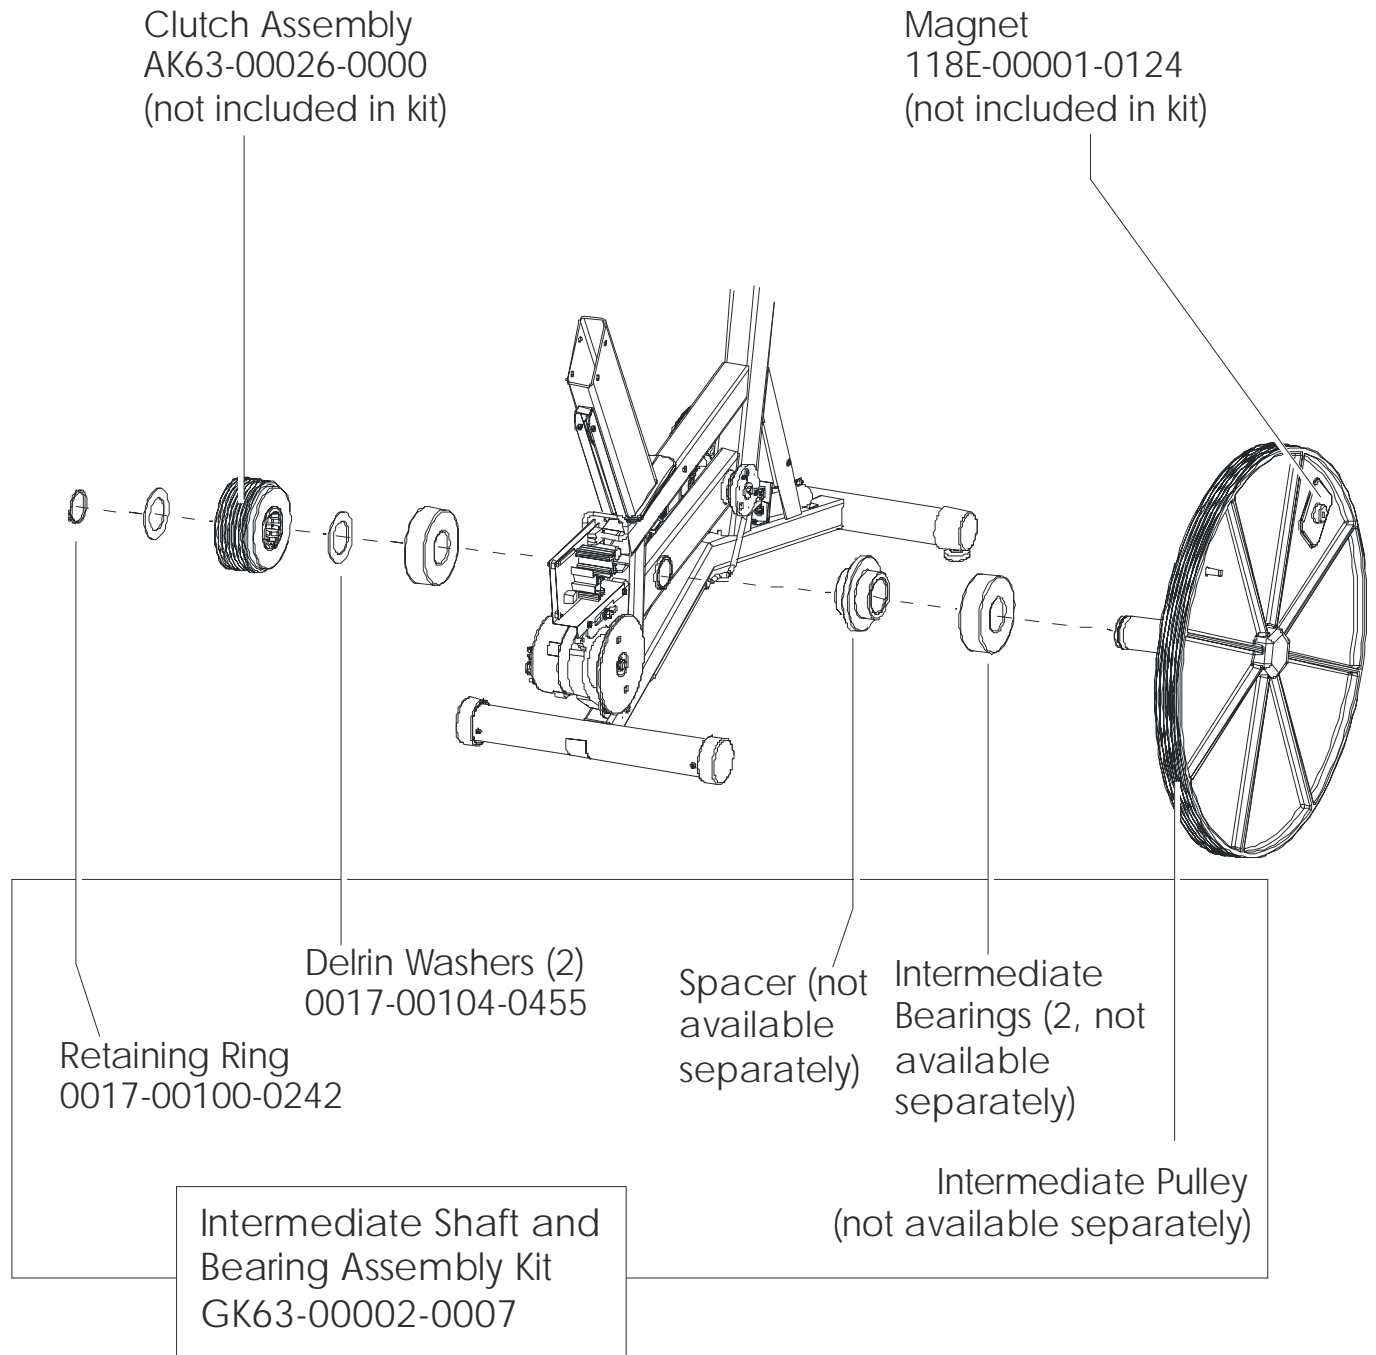

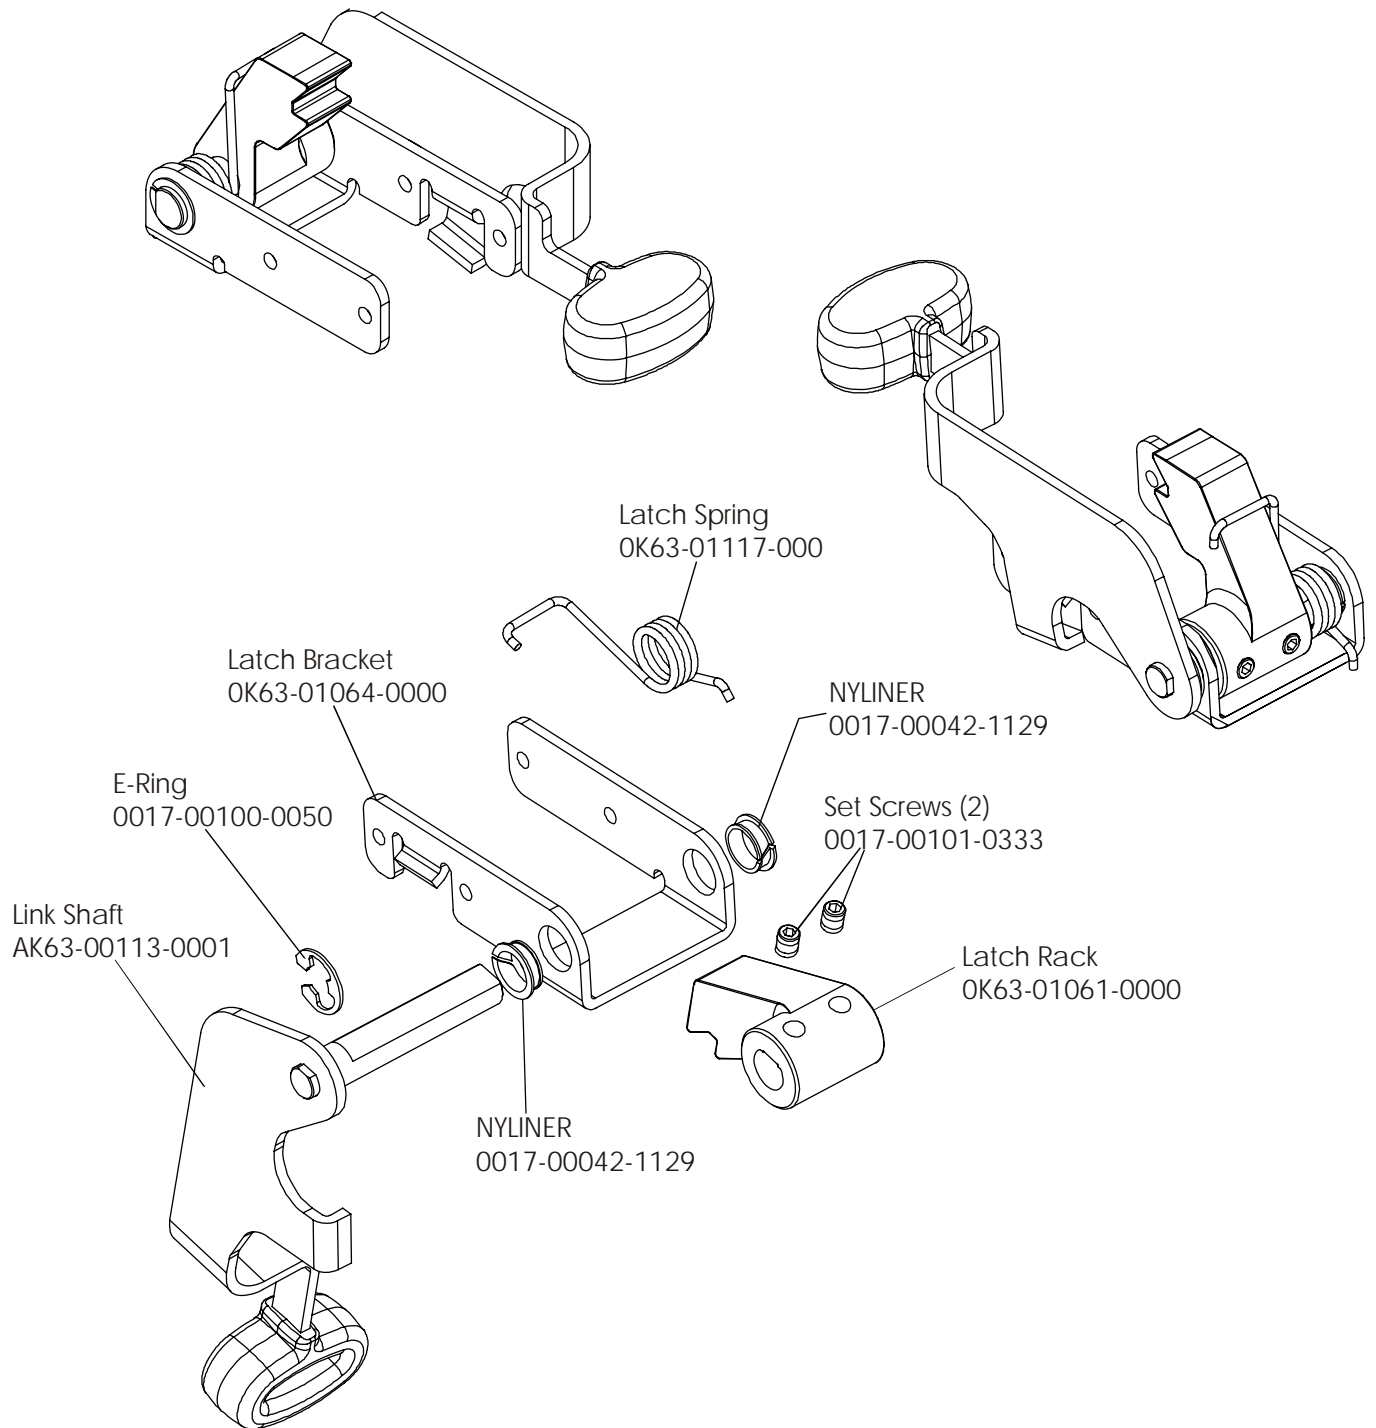

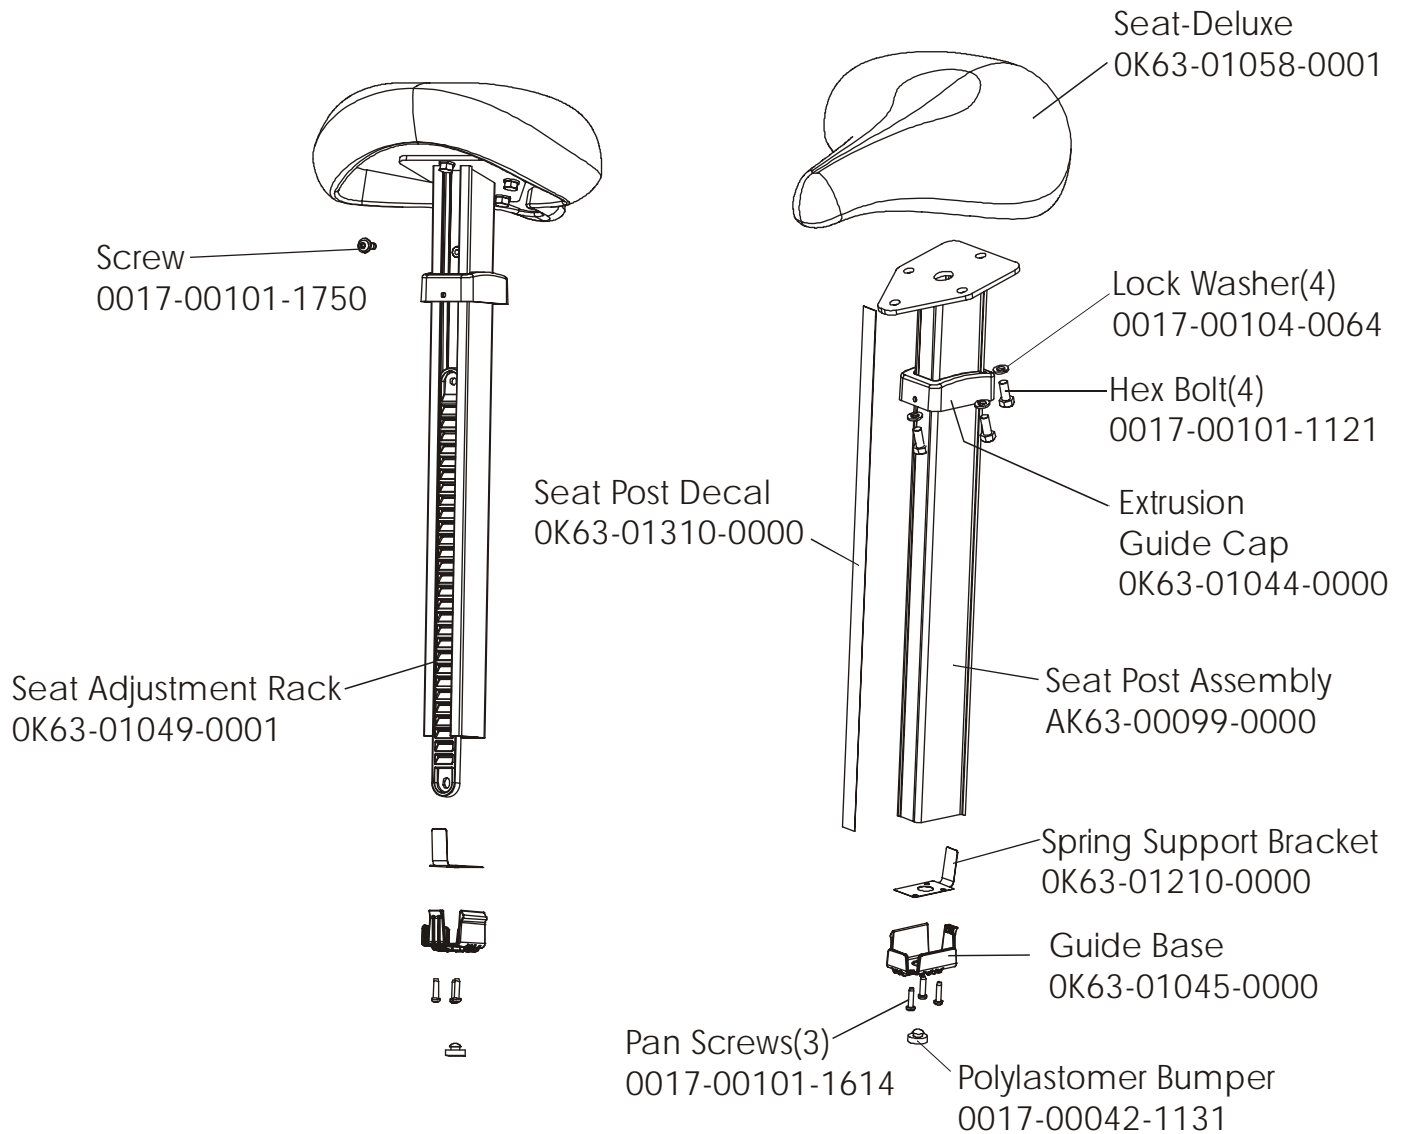


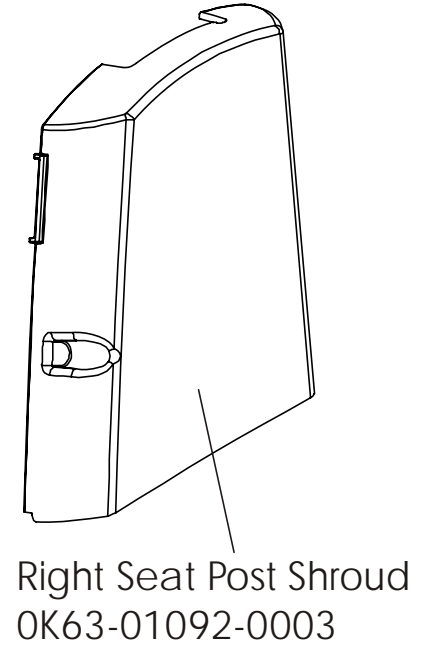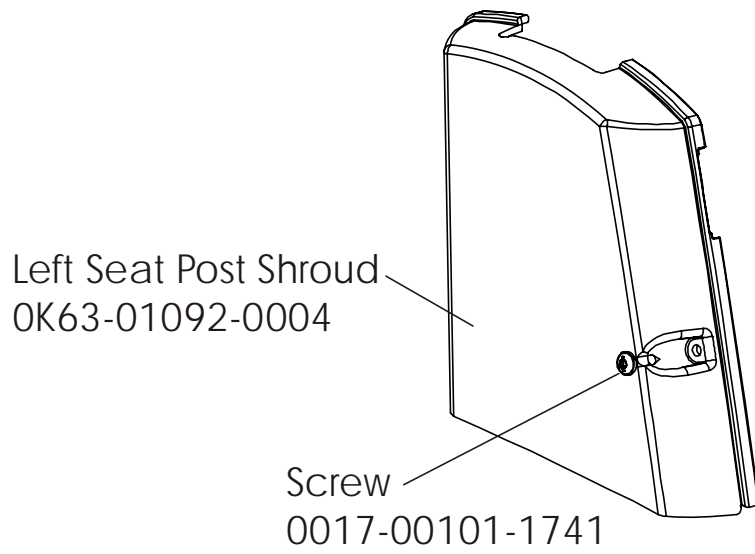


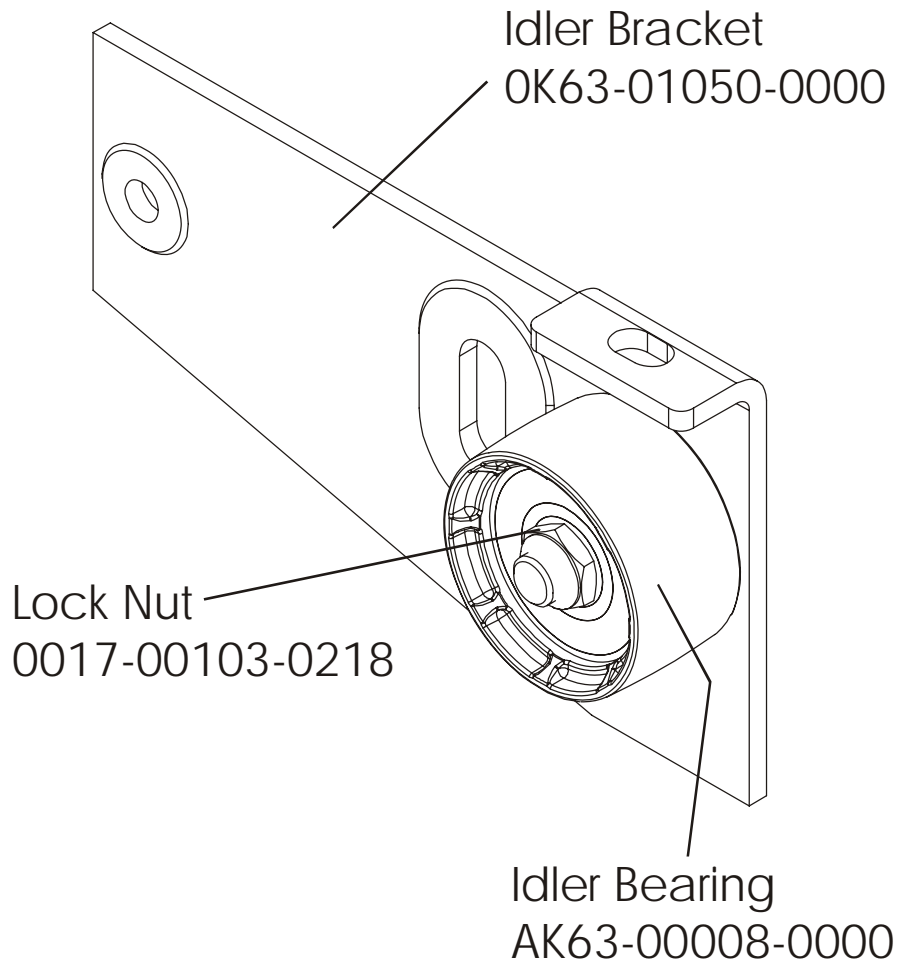

Life Cycle 93Ci
Console Support Assembly
AK63-00066-0001

  
93C-0XXX-01
S/N LCB100001

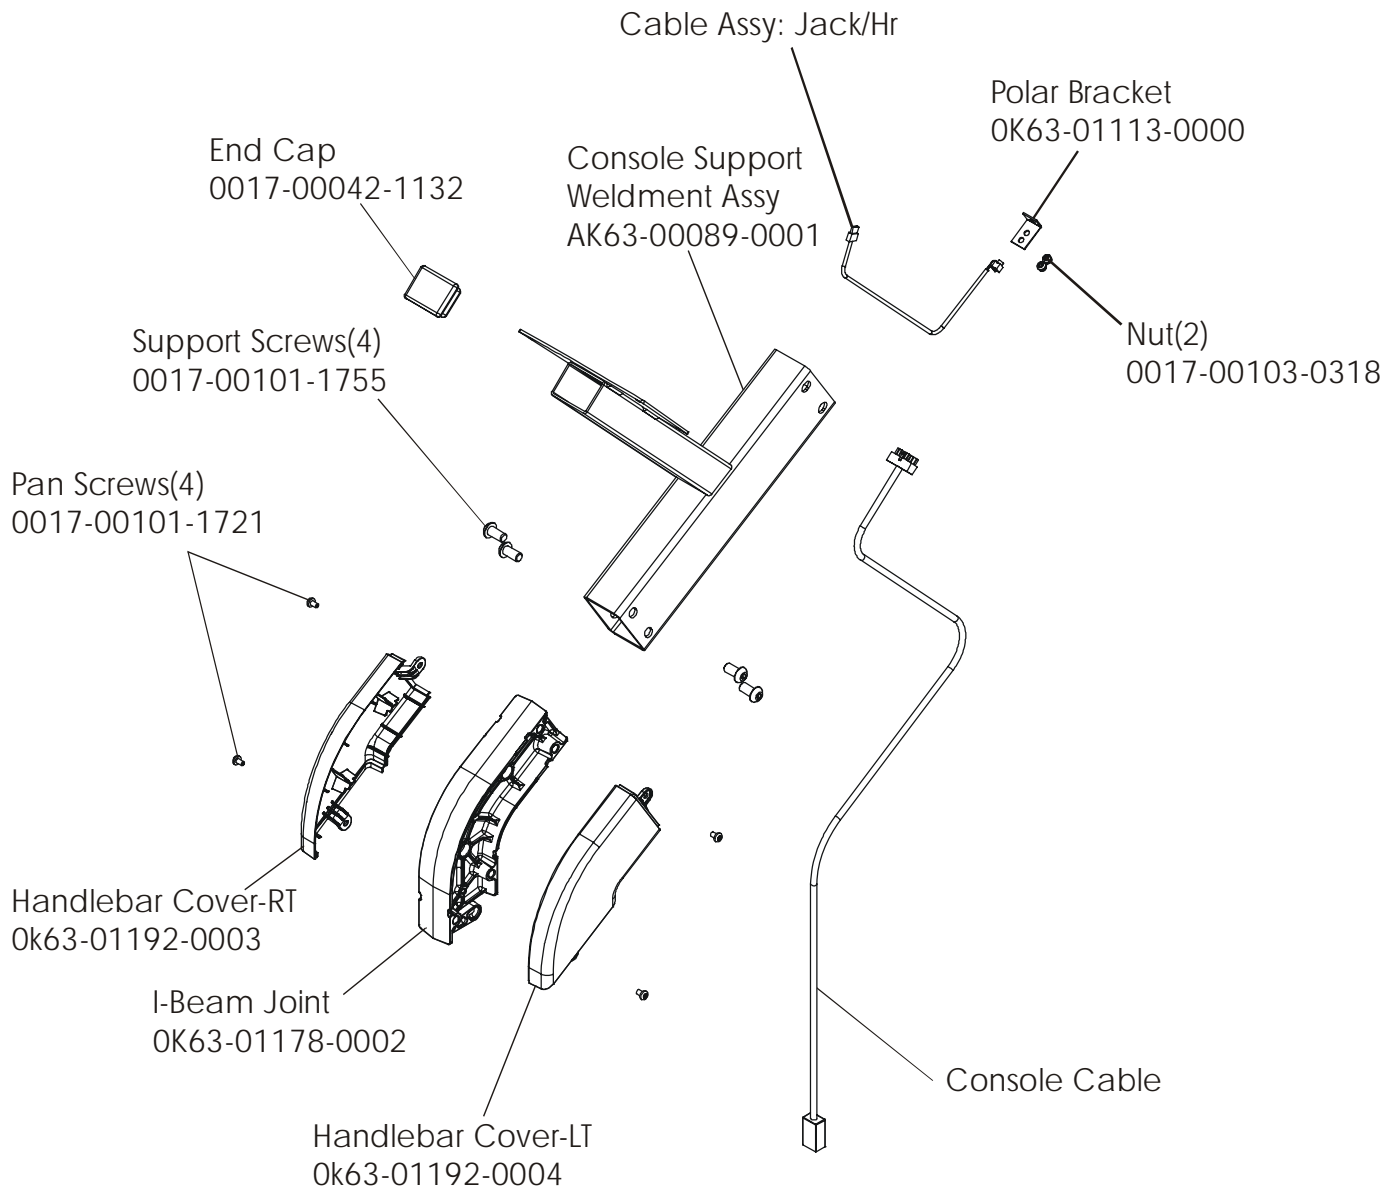

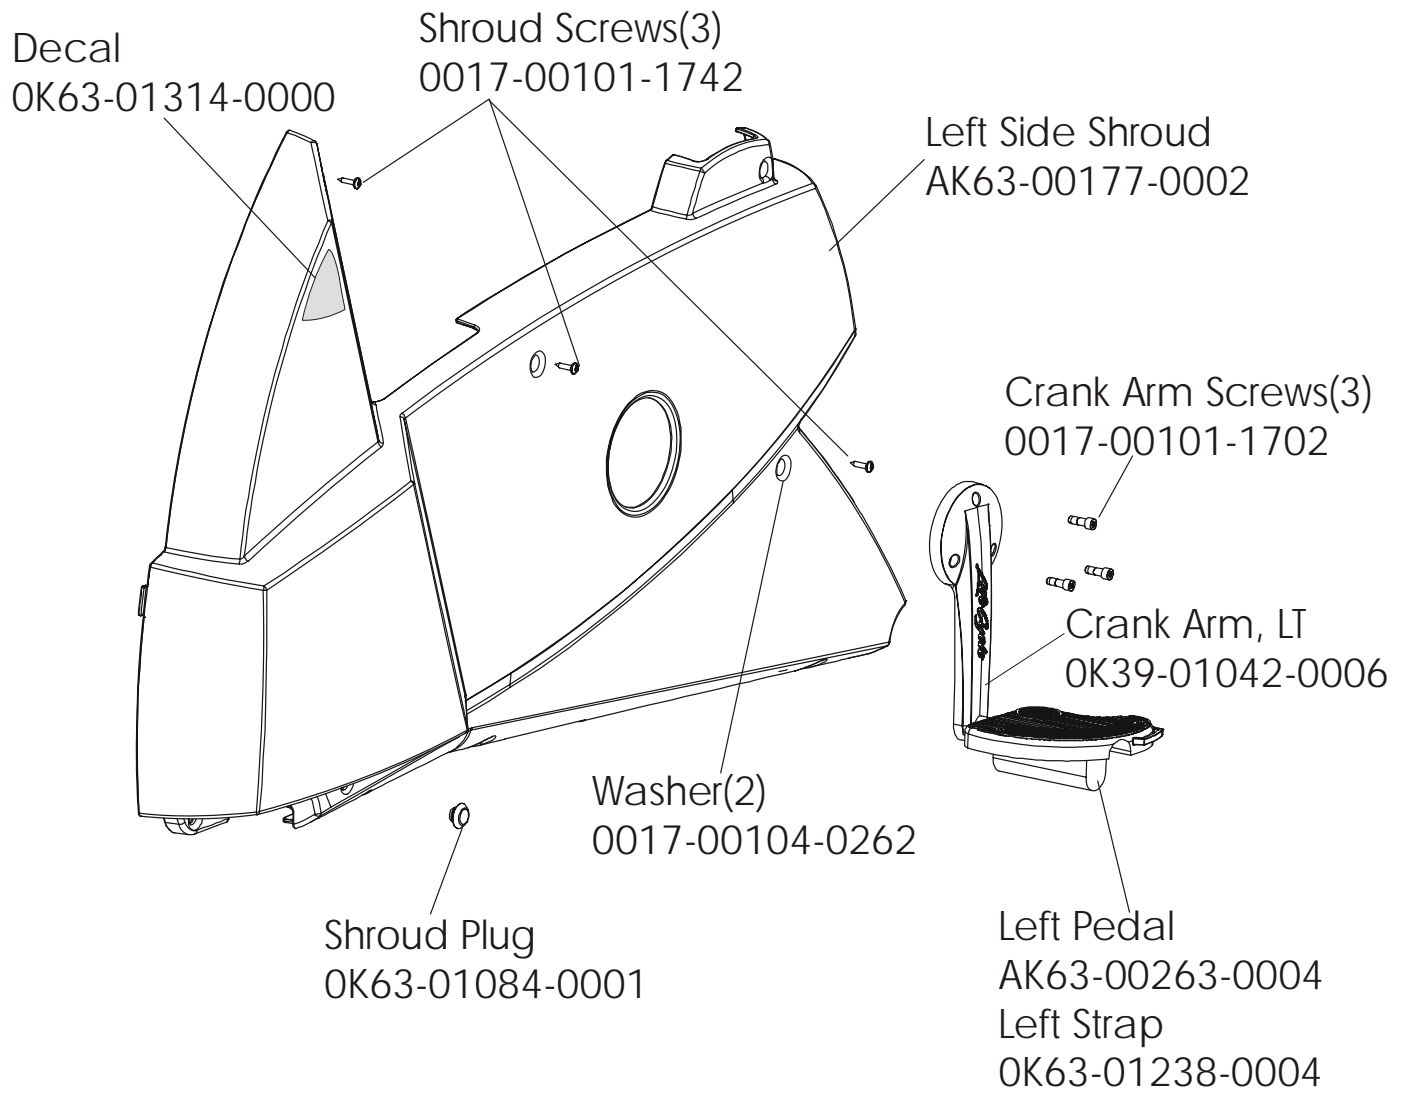


Life Cycle 93Ci
Right Side Shroud & Crankarm

 
93C-0XXX-01
S/N LCB100001

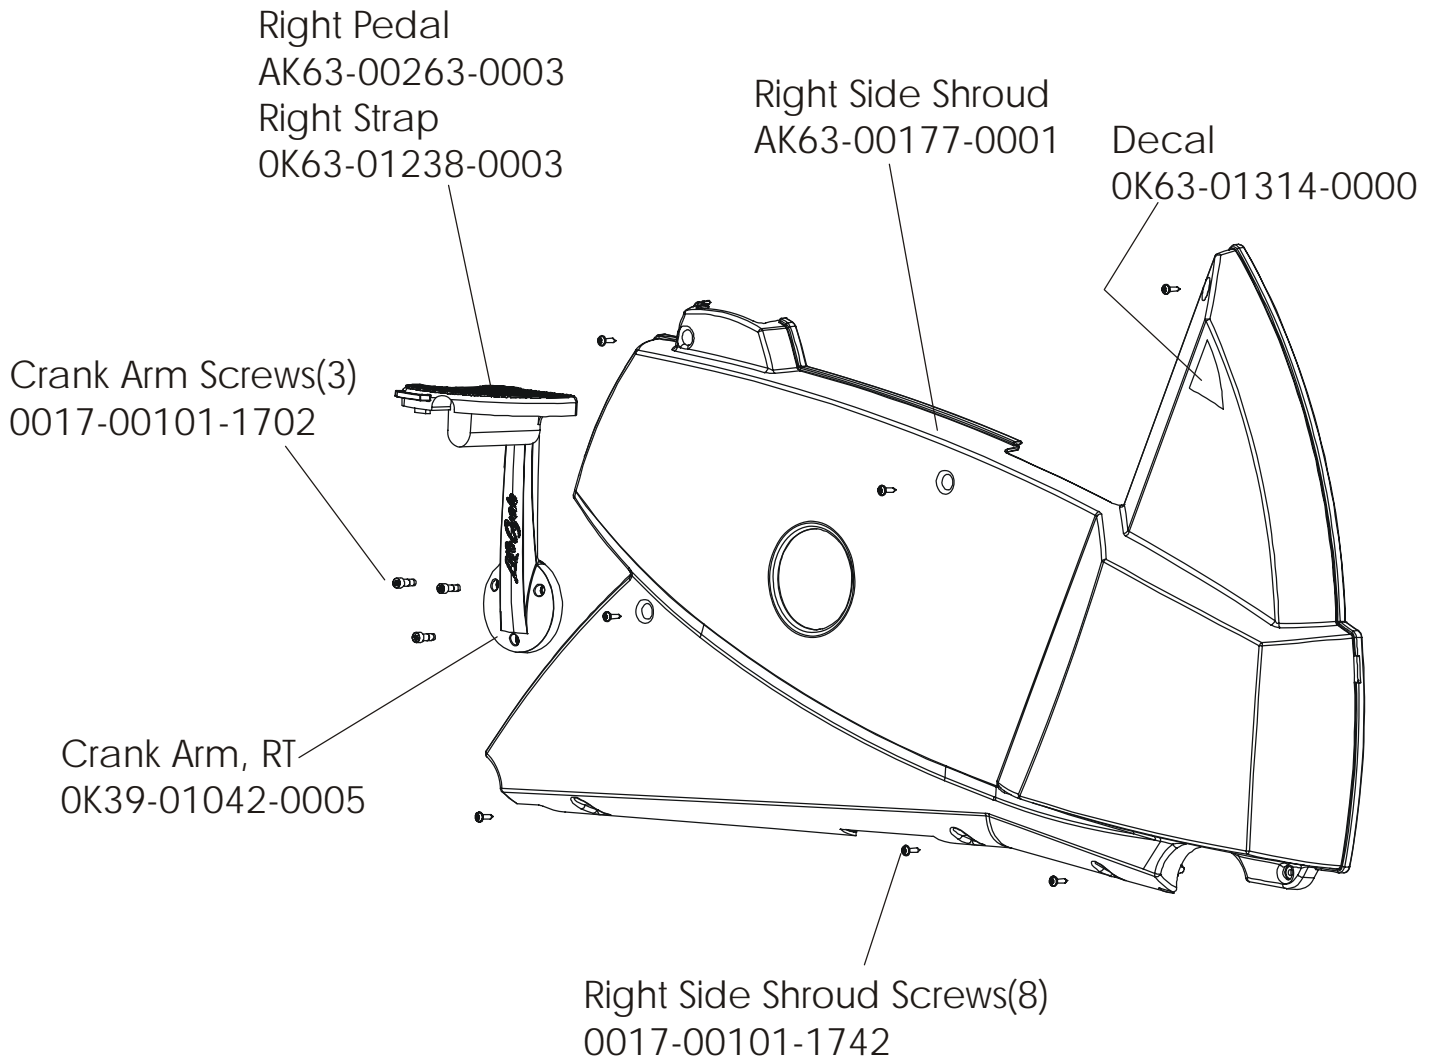


Life Cycle 93Ci
PCB Mounting Bracket

   93C-0XXX-01
S/N LCB100001

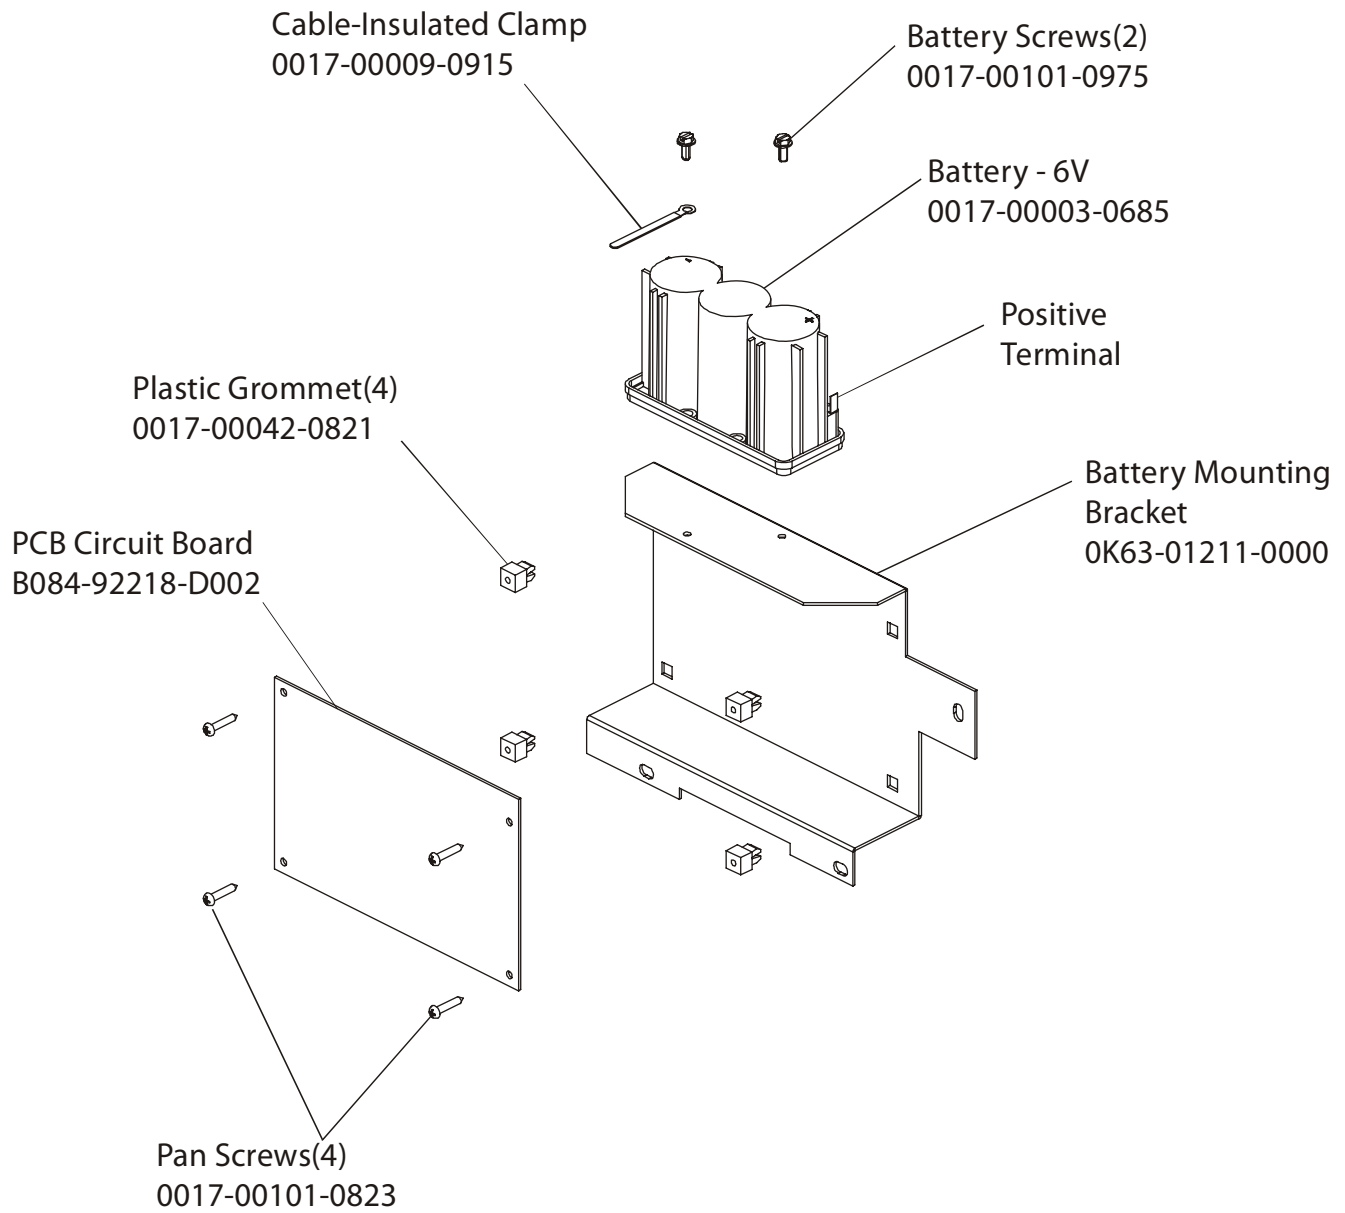

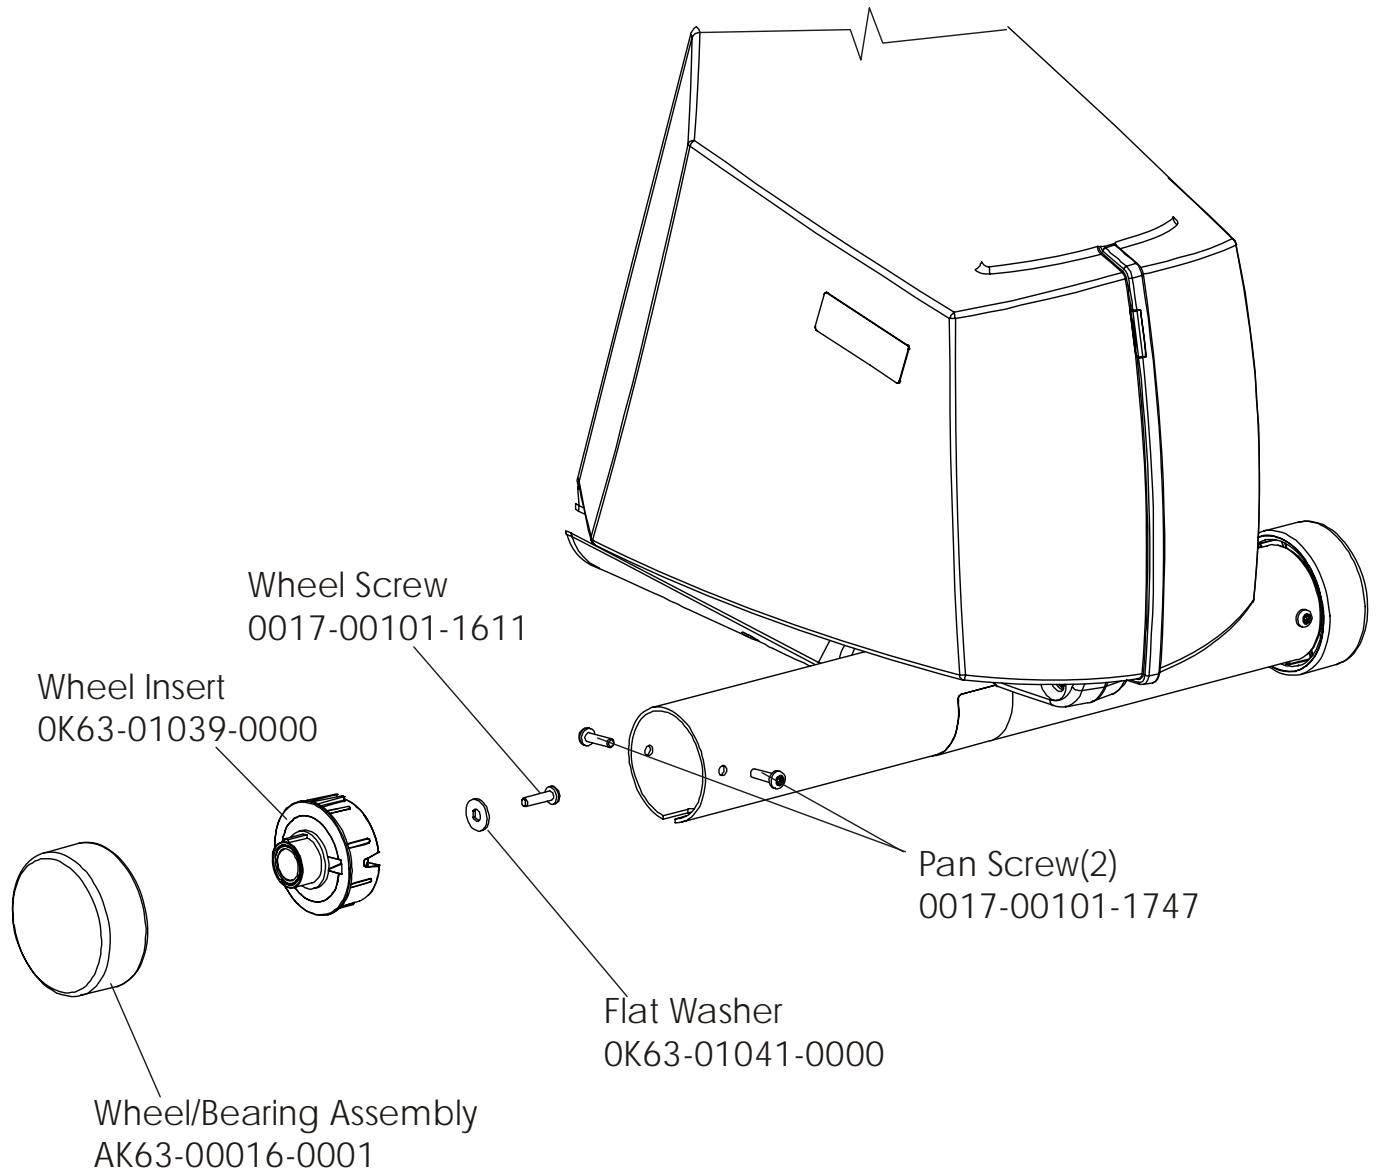

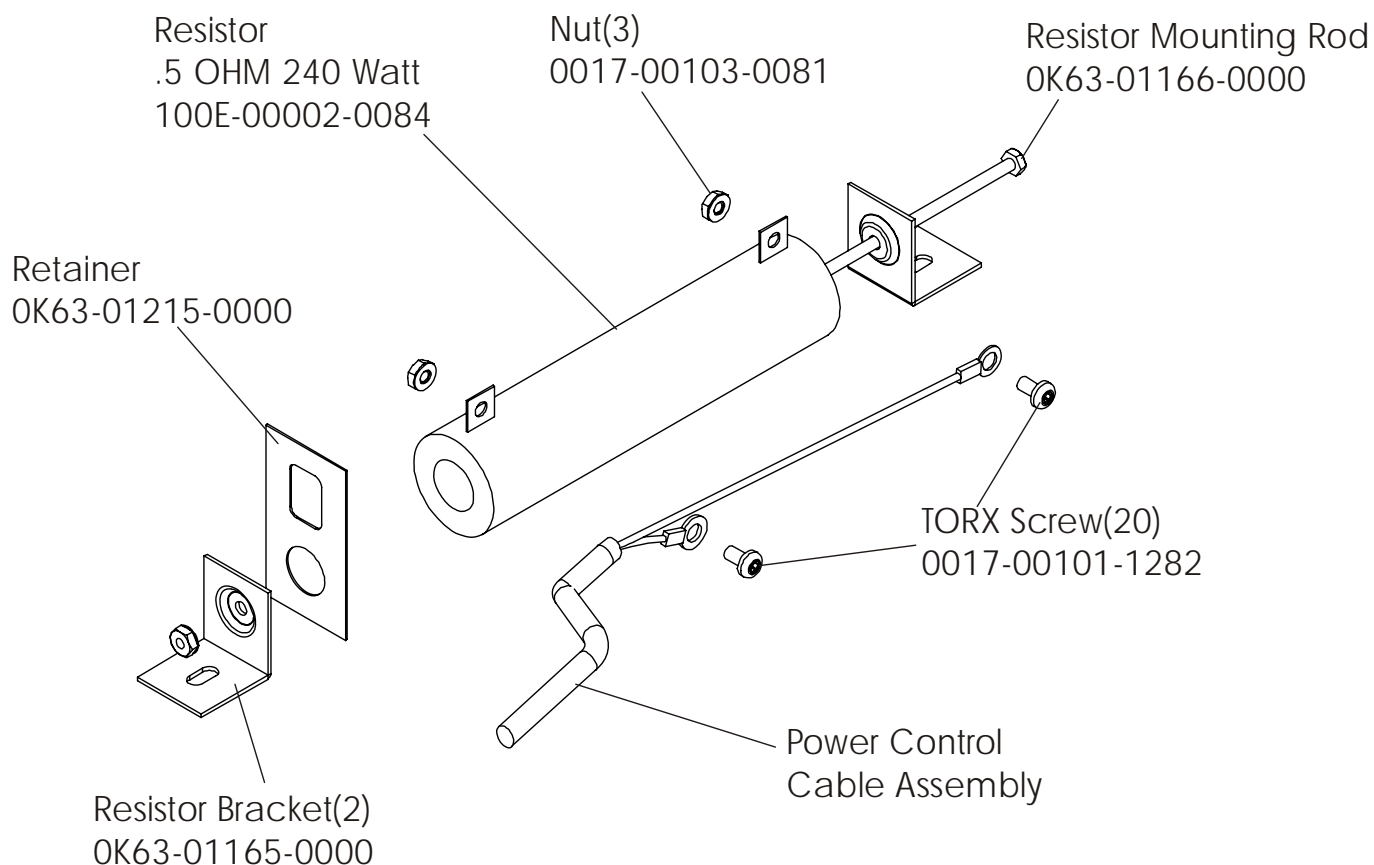

UNLABELED PARTS

DESCRIPTION	PART NO.
NUT 10-24 HEX C ST ZN B	0017-00103-0177
WSH 281-.750-064 FL-D ST BZ B	0017-00104-0458
TRAY: ACCESSORY;STEALTH;S/C-E	OK63-01030-0001
COVER: POLAR; BTM; SILVER BULLET S/C-D	OK63-01146-0001
CBL-ASSY: JACK/HR S/C-C	AK36-00021-0003
CARD: WARRANTY; COMMERCIAL +	M051-00K20-C408
INSTR: UNPACKING +	M051-00K63-A080
INSTR: ASSY; ENG +	M051-00K63-A081
ALTERNATOR-PULLEY ASSY: MFG. B	+AK63-00093-0000
PCB/BATTEY BRKT ASSY: MFG. B	AK63-00049-0000

