

keyscaper[®]
fan gear

Desktop Picture Frame with Clock


Product Manual
Version 1.0

THANK YOU!

Thanks for choosing Keyscaper!

Please read the following manual carefully to ensure you get the most out of your Desktop Picture Frame with Clock.


Product Guide:

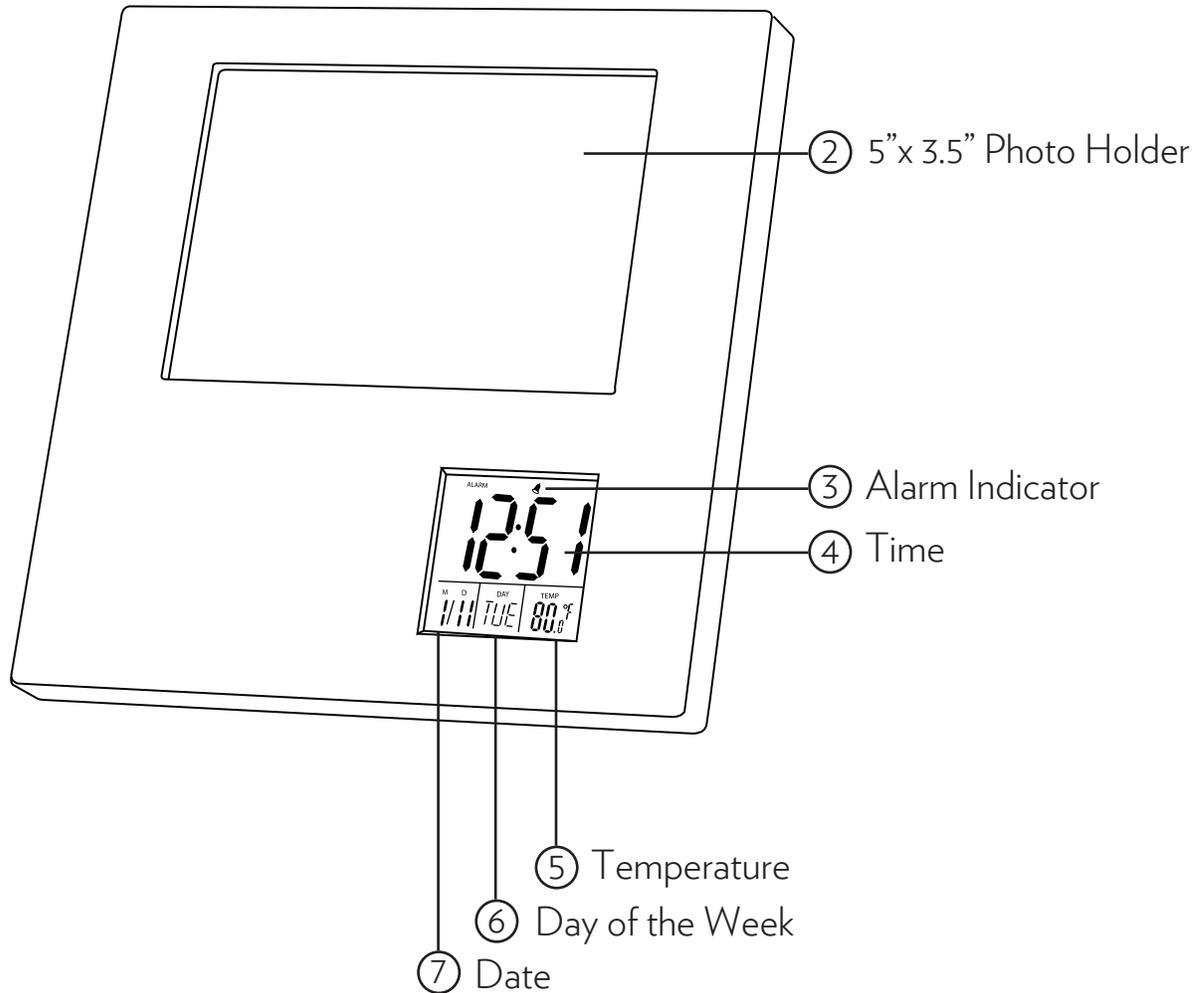

Index:

	Page
① Putting in the Batteries	3
② Inserting a Photo	4
③ Setting the Alarm	5
④ Setting the Time	6
⑤ Choosing °F or °C	7
⑥ & ⑦ Setting the Date/Day	7

① Putting in the Batteries

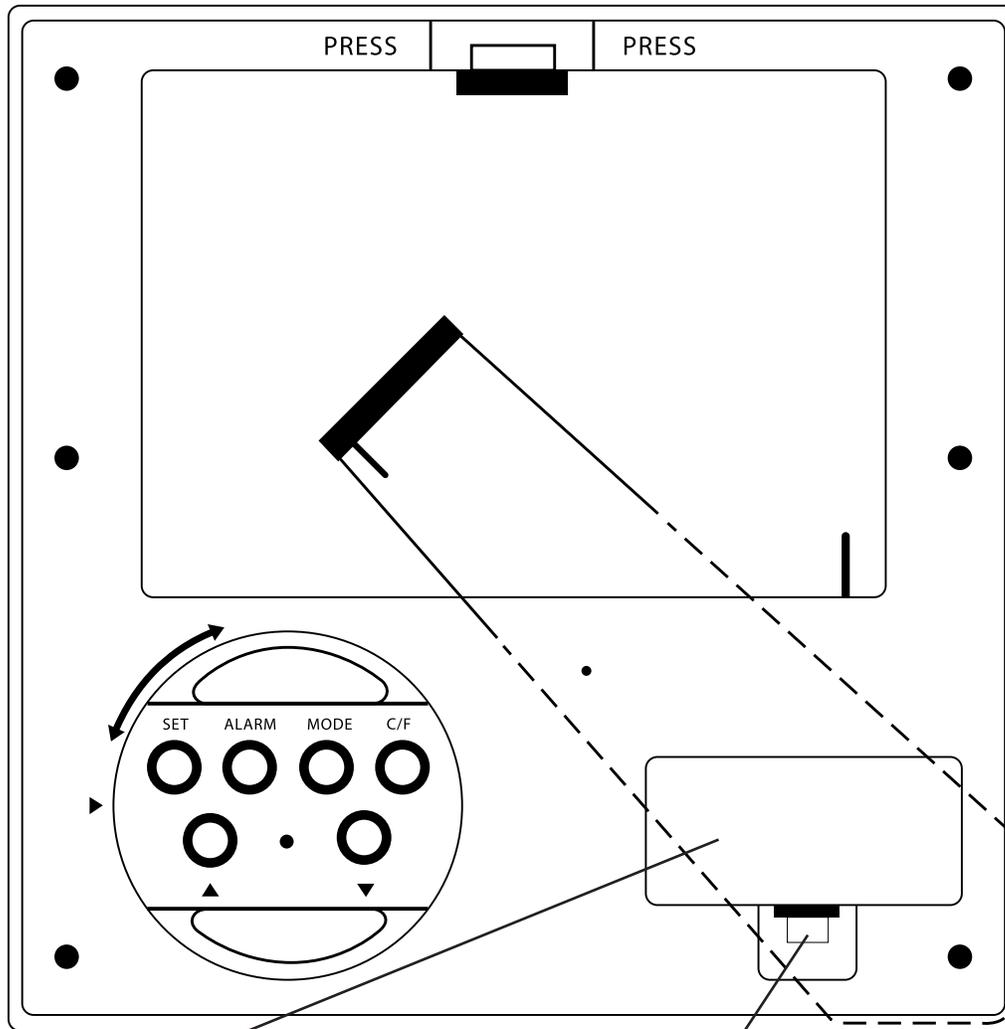

The battery panel is located behind the arm of the frame. the arm can be gently pushed into a locked position.

On the battery door, push the plastic tab towards the top of the frame. This piece is usually fairly stiff because it is new. This will release the door.


This frame uses two AAA batteries. Insert the positive and negative ends of the batteries as they are shown inside the battery compartment. The frame should play a short tune and display a default time when the batteries are inserted correctly.

Next align the plastic fingers of the door with the holes at the top of the compartment. Snap the door into place to secure the batteries.


② Inserting a Photo

Push the plastic tab towards the bottom of the frame. This piece is usually fairly stiff because it is new. This will release the door. The door is on a hinge and will not come off all the way.

Inside the door is a piece of glass and a piece of thin cardboard. You can use the cardboard as a template to trim a copy of your favorite photo down to the 5" x 3.5" size. Once you have trimmed your photo simply place it inside the window, with or without the cardboard.

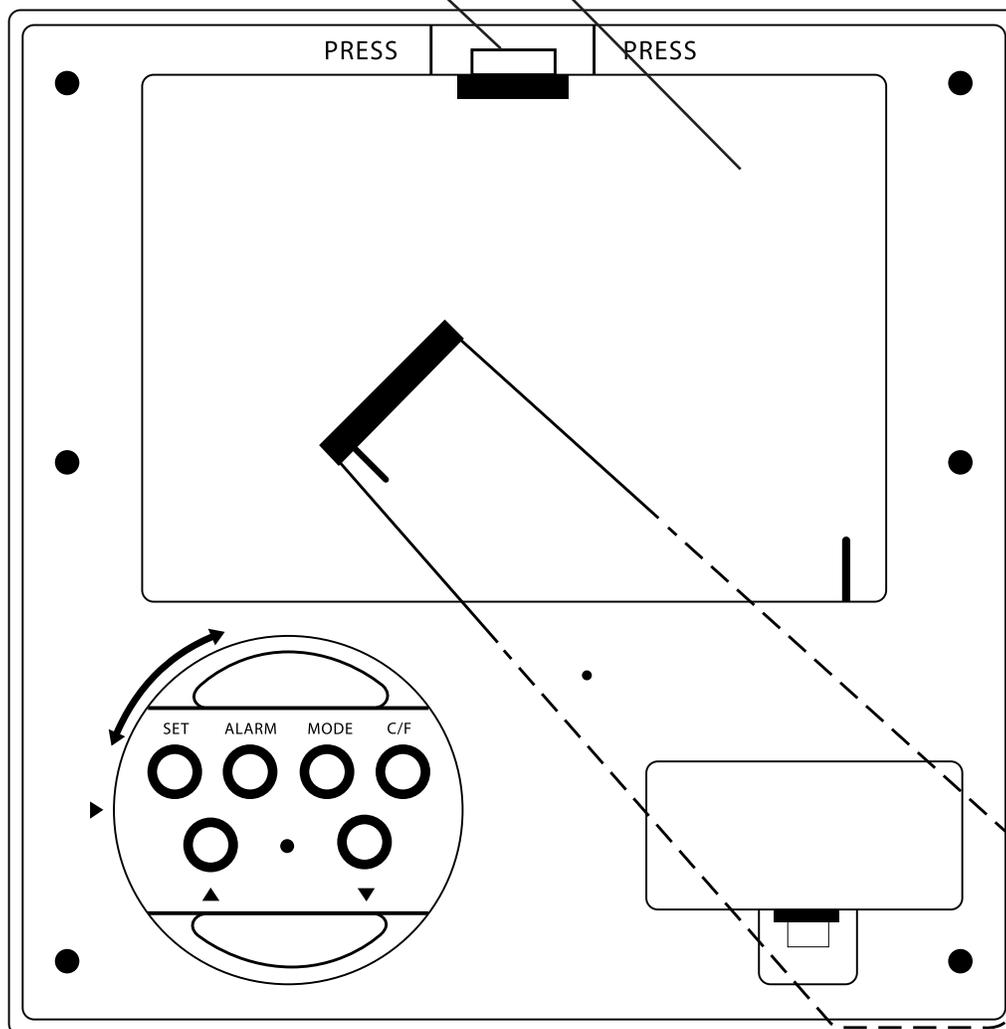

③ Setting the Alarm

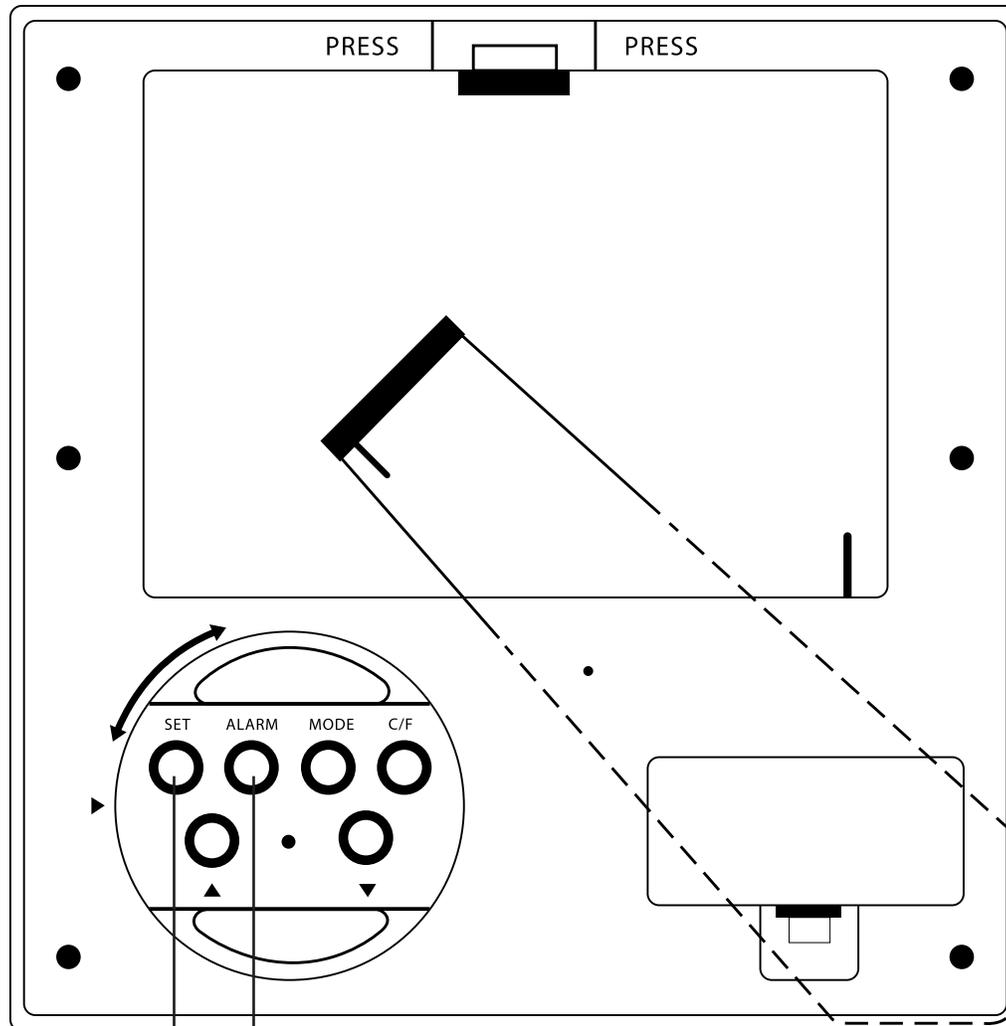

To set the alarm, push the alarm button.
Now push the set button.


The hour should now be flashing on the display.
Use the up ▲ and down ▼ to adjust the time to
the correct hour.

Now push the set button again. The minutes should now
be flashing. Use the up ▲ and down ▼ to adjust the
time to the correct minute(s).

Finally push the set button again. A smaller number in the
lower left corner of the display should be flashing. Use the
up ▲ and down ▼ to change the notification tune/beep.

Once you have selected your notification tune/beep, push the
set button one last time. Your alarm is now set.

④ Setting the Time

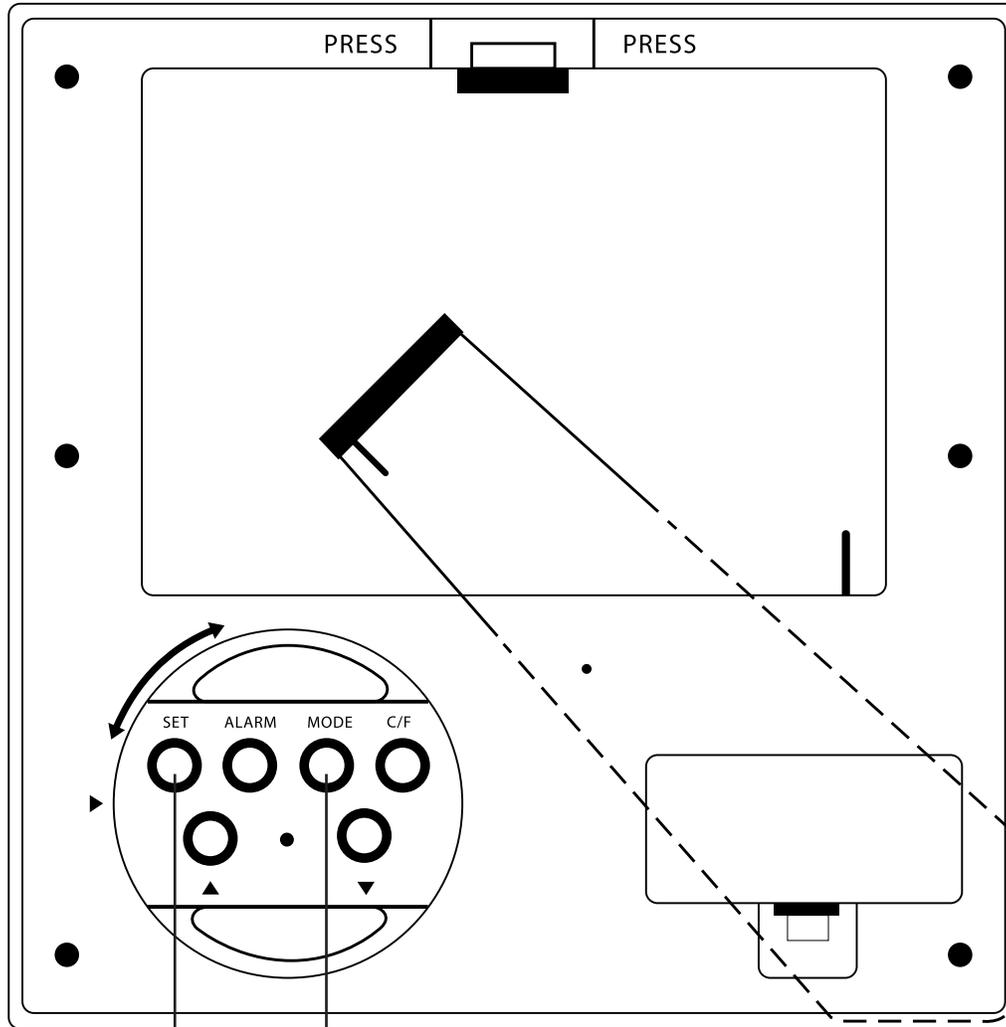

To set the time push the mode button.

Now use the ▲ and down ▼ to choose between Standard (12hr) and Military (24hr) time. Hit the set button once you have the correct one selected

The hour should now be flashing on the display. Use the up ▲ and down ▼ to adjust the time to the correct hour.

Now push the set button again. The minutes should now be flashing. Use the up ▲ and down ▼ to adjust the time to the correct minute(s).

Finally push the set button again. Now the year will be flashing in place of the time. Use the up ▲ and down ▼ to change the year. Hit set once the year is correct.

Continue to next page to set the correct date...

⑥ & ⑦ Setting the Date

Once the year has been corrected and you hit the set button the small number in the lower left corner indicates the month. This month be flashing. Use the up ▲ and down ▼ to make the month correct. Hit the set button once it is correct and this will cause the day to flash.

Use the up ▲ and down ▼ to make the day correct. Hit the set button once it is correct and this will cause the unit of time to flash again. After about a minute the unit will stop flashing and you time and date will be completely set.

⑤ Temperature

When nothing is flashing you can use the set button toggle between °F or °C.