

# keyscaper<sup>®</sup>

## Wall / Desk Clock



Product Manual



**For more information or customer support, please visit:  
[keyscaper.com/pages/product-manuals](https://keyscaper.com/pages/product-manuals)**

**Version 1.0**

## QUICK START

---

To get started, insert 2 AA batteries to power on. Press the MODE key once to select between 12-hour or 24-hour format. Toggle between the options using the "UP, DOWN" keys, then press "SET" to confirm your choice. Afterwards, utilize the MODE button to set time, alarms, birthday reminders, and timers.

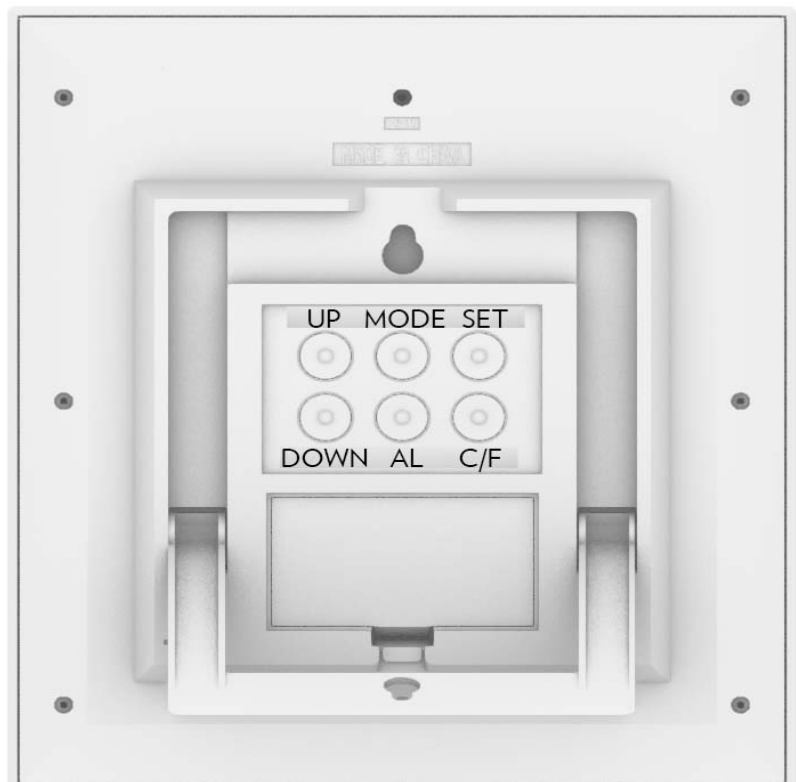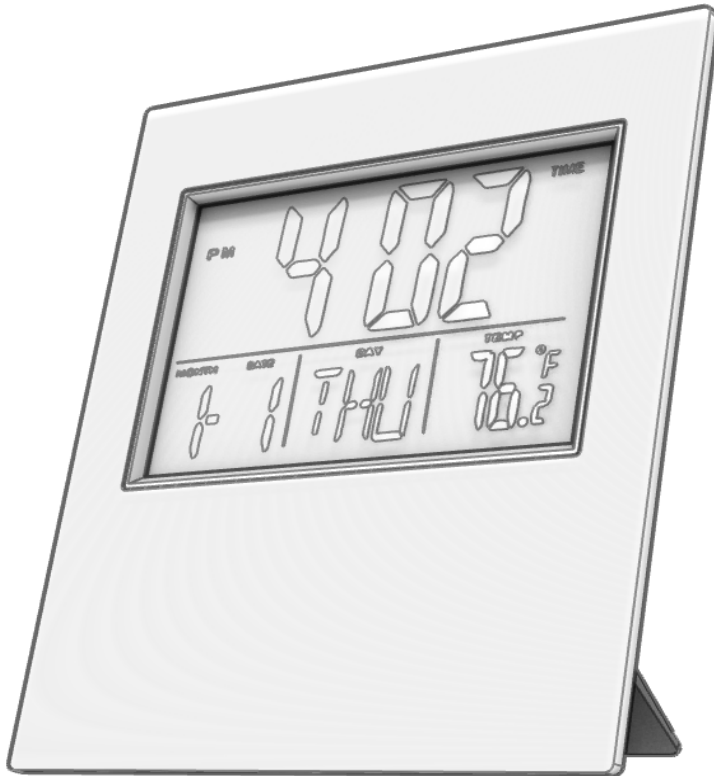

# HOW TO USE

---

## Initial Set Up

- Insert 2 AA batteries to start the unit. Once the batteries are inserted properly, the LCD will display: Time/Date/Day of the week and you will hear music play that indicates it is ready for set up. Please note: If the display isn't visible, the batteries may need to be replaced.
- On the back of the desk clock, press MODE to show the following functions in sequence: 12HR/24HR - Alarm - Birthday Reminder - Timer.

## Set Up

- Press the MODE key one time to enter into 12 hour or a 24-hour setting (Military time). Press the "UP, DOWN" keys to switch between a 12 or a 24-hour setting. Once decided, press the "SET" key. From there, utilize the "UP, DOWN" keys to set time and date. Make sure the year is set correctly before proceeding, as this will automatically update the day of the week for you.
- Press "C/F" key when in normal mode to toggle between a °C /°F format.

## Alarm Set Up

- Press the AL key to start Alarm Mode. Press the "SET" key first and then "UP, DOWN" keys to toggle to set chosen alarm time. Once you've set your alarm, you can select between 9 different alarm sounds which are numbered 1-9 on the display. Use the up down arrows to toggle between them and the "SET" key to select. Press the "SET" key again to close Alarm Function. When the alarm goes off, it will ring for 1 minute continuously. If snooze function is being utilized, the alarm will ring one time every 3 minutes and then repeat for 4 times in sequence.

## Birthday Reminder

- Press the MODE key three times to get into Birthday Reminder Mode. You can set a reminder for one birthday. Use the "SET" key and the "UP" and "DOWN" keys to set the time and date. Press the "SET" key again to close the Birthday Reminder Function. When the preset time arrives, a birthday song will play for five minutes.

## Setting Timers

- Press the "MODE" key four times to enter timer mode. Press the "SET" key and the "UP, DOWN" keys to set the countdown time ranging from 23:59 hours down to 00:00 hours. When the timer goes off at 0:00:00, it will ring for one minute. Press any key on the back of the desk clock to stop timer.
- When there is an alarm set, it will display in the upper right-hand corner of the desk clock.

## PRODUCT FEATURES

---

- Large display with clear and easy-to-read screen showing Time, Day, Date, Weekday, and Temperature.
- Easy-to-use functions for setting the clock, with options for 12- or 24-hour formats and Celsius or Fahrenheit temperature display.
- Can be mounted on a wall or placed on a desk.
- Battery Powered: Runs on 2 AA batteries (included), providing hassle-free operation without needing to plug into a power source.
- Compact alarm clock with a snooze feature to help you wake up refreshed in the morning.

## PRODUCT SPECIFICATIONS

---

- Name: Wall/Desk Clock (GP3980)
- Color: Black
- Power Source: Battery Powered
- Display Type: Digital
- Style: Compact
- Product Dims: 7.0"W x 7.88"H

## PRECAUTIONS

---

- Do not immerse the device in water to prevent the risk of a short circuit in the internal circuit.
- Do not disassemble or subject the device to impacts, as this may cause damage to the internal components and compromise functionality.
- Place the device away from flammable and explosive liquids, gases, or explosives to ensure the safety of the product and its surroundings.
- Do not place magnetic cards, magnetic stripe media, or precision machinery too close to the device.

## WARRANTY

---

We focus on our product quality and our entire team is committed to providing products that satisfy our customers. That's why this product includes a one-year warranty from date of purchase. If you've got any questions, comments, or concerns about your purchase, feel free to email us at [support@keyscaper.com](mailto:support@keyscaper.com) or contact us at [keyscaper.com](http://keyscaper.com).