

keyscaper[®]

True Wireless Earbuds




Product Manual

**For more information or customer support, please visit:
keyscaper.com/pages/product-manuals**

Version 1.0

QUICK START

Before use, fully charge the earbuds and case using the included Micro USB cable. Once charged, remove the earbuds from the case—they'll power on automatically. Pair with your device by selecting 'TWS' in your Bluetooth settings. Once connected, enjoy wireless audio and manage calls with ease

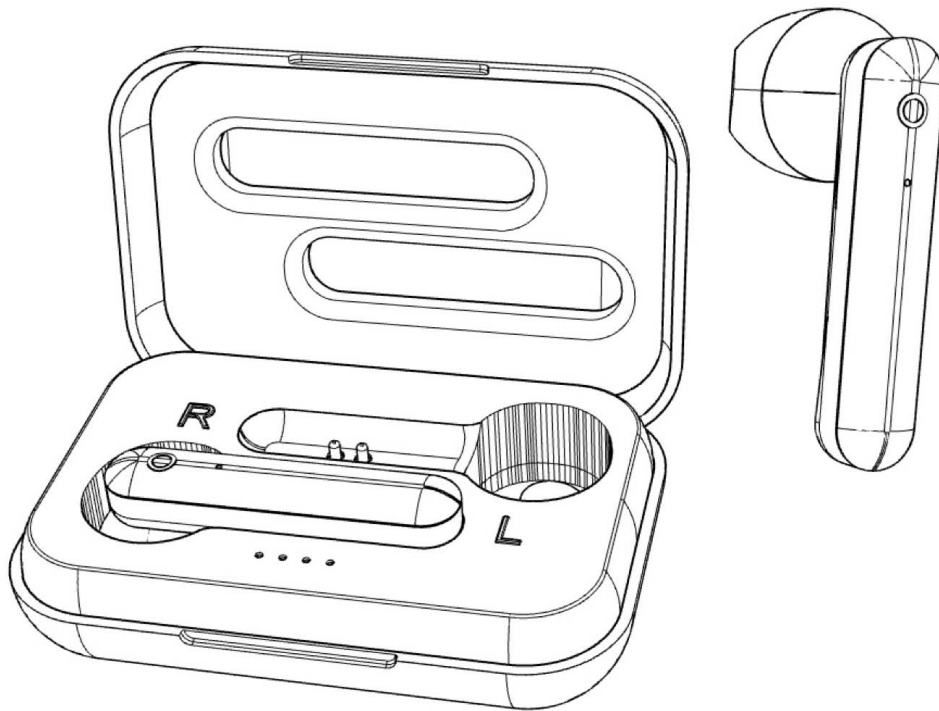

HOW TO USE

Charging

- Before you use your earbuds for the first time, you should charge them fully.
- Remove both earbuds from the case and remove the protective film on each one.
- To charge your earbuds, you need to use a Micro USB cable (included) to plug the case into a standard USB port on a computer or wall charger. The blue lights on the case will flash to indicate that charging is in progress. The red lights on the earbuds indicate they are charging.
- Fully charging the earbuds and case will take about 70 minutes. The blue lights on the case will become solid when charging is complete. It's tough to wait that long before you start rocking out, but it is the best thing to do for the batteries in the long run.

Connecting

Now that charging is out of the way, connecting your earbuds to your device is easy. However, you may need your source device's Bluetooth syncing instructions in addition to this manual in case you get stuck.

- Lift your earbuds from the case to automatically turn them on.
- Put your source device in Bluetooth pairing mode. This is typically done from the settings menu or Bluetooth device manager. You may need your source device's manual for further help.
- You should now see a listing for "TWS" in the device's Bluetooth device manager. Follow your source device's instructions to pair the earbuds. Usually you only need to click or tap on the newly listed earbuds.
- Once pairing is complete earbuds will confirm by saying "connected"
- After initial pairing, earbuds will automatically connect to device after turning on.


Power

- Earbuds automatically power on when removed from the charging case.
- Earbuds automatically power off when placed back in the charging case
- Earbuds automatically power off if not connected to a Bluetooth device for 5 minutes.
- When your earbuds runs low on power, they will alert you first by beeping, then by shutting down automatically.

Listening

Now that you're set up, it's time to play some tunes. Any audio you play on your source device should now play on your earbuds! This includes music and phone calls. You can also use the earbuds to control your source device as described below:

- | | |
|------------|---|
| Pause/Play | Pause your music by quickly pressing either earbud
Resume playback by quickly pressing either earbud |
| Volume +/- | Raise the volume by quickly pressing the right earbud twice
Lower the volume by quickly pressing the left earbud twice |
| Skip | Skip forward by quickly pressing the right earbud three times
Skip backwards by quickly pressing the left earbud three times |

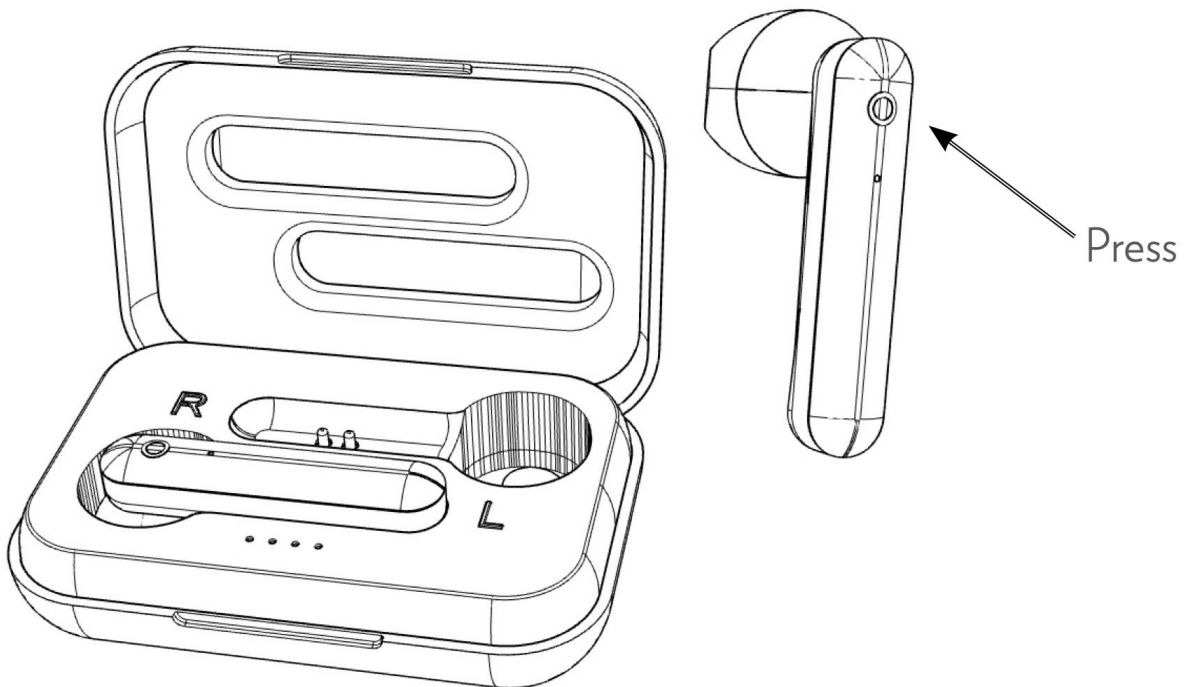

Phone Features:

Your earbuds are equipped with a microphone and can be used for calls if you have them connected to a smartphone. Once paired, you can tap either earbud once to answer an incoming call. To make outgoing calls, dial from your smartphone.

- | | |
|----------|---|
| Answer | Press either earbud once to answer an incoming call. |
| End Call | Press and hold the earbud to end the active call. |
| Redial | Press and hold the earbud for 3 seconds to redial the last number called. |
| Voice | Press and hold the earbud for 2 seconds to use your phone's assistant. |

PRODUCT SPECIFICATIONS

- Compact and lightweight design makes it easy to carry your earbuds and charging case wherever you go.
- Automatic pairing and reconnecting with your device upon removal from the case for hassle-free use.
- Rapidly recharge your earbuds in just 70 minutes with the included Micro USB cable, keeping you powered up on the move.
- Effortlessly manage calls and music playback with touch controls directly on the earbuds, providing a seamless user experience.

PRODUCT SPECIFICATIONS

- Name: True Wireless Earbuds
- Color: White
- Bluetooth Version: V5.1 + EDR, ultra low-consumption
- Bluetooth Mode: A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6/D11.3 2.4 GHz
- Bluetooth Frequency: 2.4 GHz
- Bluetooth Range: 10-15 meters
- Charging Time: 70 minutes
- Talk Time: 4 Hours
- Playback Time: 3-4 hours; up to 16 more hours of talk/play with charging case.
- Standby Time: 12 hours

PRECAUTIONS

- Do not immerse the device in water to prevent the risk of a short circuit in the internal circuit.
- Do not disassemble or subject the device to impacts, as this may cause damage to the internal components and compromise functionality.
- Place the device away from flammable and explosive liquids, gases, or explosives to ensure the safety of the product and its surroundings.
- Do not place magnetic cards, magnetic stripe media, or precision machinery too close to the device.

WARRANTY

We focus on our product quality and our entire team is committed to providing products that satisfy our customers. That's why this product includes a one-year warranty from date of purchase. If you've got any questions, comments, or concerns about your purchase, feel free to email us at support@keyscaper.com or contact us at keyscaper.com.