



EZ 4300

OPERATORS MANUAL



Fort Atkinson, Wisconsin USA



Helden-Beringe, The Netherlands

www.digi-star.com

This page intentionally left blank

Table of Contents

<i>About the Product</i>	<i>1</i>
Features of Model EZ4300 and EZ4300 RC	1
Specifications	1
<i>Installation</i>	<i>1</i>
Indicator Mounting	1
Power Connection	2
Bottom Panel Cable Connections	3
<i>Operation</i>	<i>4</i>
Turning on the scale	4
Zero Balance the Scale	4
Transfer Data to the 4300	4
Data Formats for the EZ4300	5
Receiving Data from the EZ4300	5
Send Undone Data Back to PC (RF Datalink)	5
Starting a Recipe	6
Recipe Direct Access	7
Ingredient Loading	7
Pen Unloading	8
Pen Direct Access	11
Go Back to a Skipped Ingredient	12
Change Feeding Number	12
Use the Arrow Keys	12
Clear the EZ4300 Memory	12
Re-use Recipe and Pen Data	13
Add a Pen or Pen List	13
Pre-Alarm	14
Auto-Advance	14
Delay Time	15
Auto Ingredient / Manual Pen Advance	15
Mix Timer	15
Rotation Counter	16
Scale ID or Truck ID	16
Radio Number	16
Re-Size	17
Data Storing Options	17
Hold	17
Bunk Read	18
Time and Date	18

This page intentionally left blank.

About the Product

Features of Model EZ4300 and EZ4300 RC

- 84 character alpha-numeric backlit LCD
- Easy-to-read action line with additional three lines of data
- Navigational pad for quick selecting from recipe, ingredient or pen list
- Live gross weight and rotation counter
- Scrolling help messages in multi-language formats
- Interfaces with feeding software and bunk reading programs
- Supports Datakey data transfer
- Supports Datalink wireless data transfer
- Supports Cab Control wireless display
- Front panel calibration without simulator or weights
- Powerful microprocessor and expanded memory

Specifications

- Temperature range: 25°F to 140°F (-4 °C to 60 °C)
- Power requirements: 10.2 VDC – 16VDC
- Power consumption on: 160mA, 4L.C. 350Ω
- Power consumption off: 1mA
- Enclosure rating: IP65, IEC529
- Size (l x h x w): 10.3" x 7.2" x 5.0" (262 x 183 x 127 mm)
- Weight (unpacked): 4.5 Lbs (2.04 kg)
- Upper display: 1.0" (25.4mm)
- Lower display: 0.30" (7.75mm)
- Power & Load Cell: gold plated contacts
- Remote and Printer: gold plated contacts
- Datakey: palladium alloy-plated contacts


Installation

Indicator Mounting

The indicator is easily attached to the indicator-mounting bracket by hooking the top over the plate and securing the bottom with two screws and nuts (size# 10 – 24 x 5/8" or M5 x 16mm).

Power Connection

Warning! **Disconnect the indicator power cord before jump-starting or fast charging a battery.**

 **Disconnect all indicator leads before welding on equipment. Damage may occur to the indicator and load cells.**

Connect the power cable directly to a 12 Volt vehicle battery or to a 12 volt regulated power supply.

Connect the RED wire from the power cable to +12 VDC and the BLACK wire to GROUND. The indicator is fused internally at 4 amps.

Attach the scale end of the power cable to the J901 connector located on the bottom panel of the scale.

Power Cable

Wire Color	Wire Function
RED	Battery(+12VDC)
BLACK	GROUND
ORANGE	Remote Alarm Out+
BLUE	Remote Input (Rotation Counter)

Remote Alarm Connections


If a remote 12 VDC alarm is to be used, connect the +12VDC side of the alarm to the power cable ORANGE wire and the GROUND side of the alarm to the frame (=ground).

Note: The alarm output is fused for a maximum drain of 10 amps. The remote alarm connections may also be used for motor control purposes when used with a relay.

Remote Input Connections


If the remote input is to be used, connect on the side of the normally open momentary switch or relay contact to the power cable BLUE wire, and the other side to the frame or other GROUND connection. If your power cable does not contain a blue wire and you desire to use this feature, contact your dealer for a special cable. A process control box is available for motor control and remote enter preset capability.

Bottom Panel Cable Connections

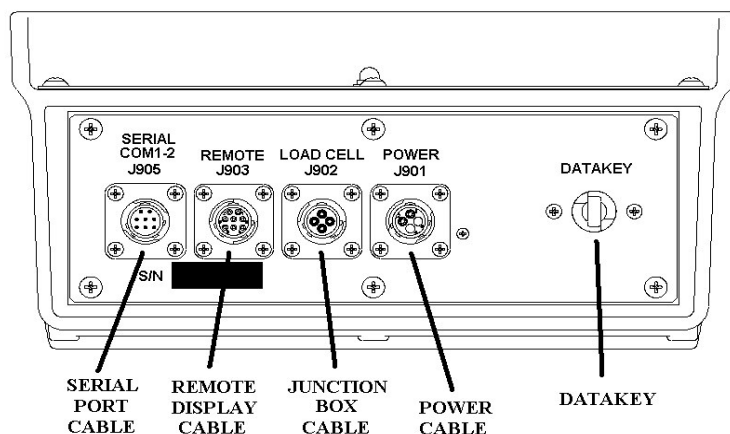

Load Cell Connection

The indicator operates with strain gage load cells. The system is normally supplied with a J-BOX cable going between the scale indicator and the load cell junction box. Extension kits are available from your dealer in various lengths.

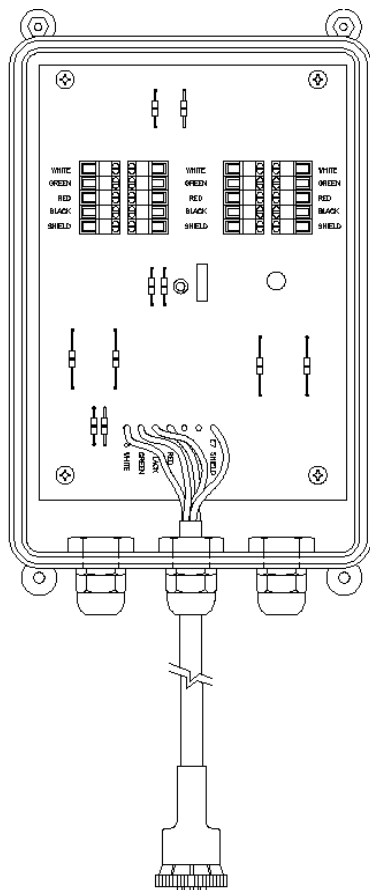

To connect the load cells, attach the junction box cable to the J902 connector on the bottom panel of the scale. Connect the load cell cables to the junction box as shown left.

Terminal Color	Description
WHITE	SIGNAL +
GREEN	SIGNAL -
RED	EXCITATION +
BLACK	EXCITATION -
SHIELD	SHIELD

Notes:

Follow color key on circuit board to insure proper connection of load cell wires.

For stationary scales, a lightning protected J-Box should be installed to prevent or lessen damage to the scale when lightning strikes nearby. Lightning protection is not required for mobile applications. For lightning protection installation instructions, refer to Digi-Star form F3050.

Serial Port

The serial port if installed can be used to communicate with computers and other digital input/output devices.

Remote Display

The remote port outputs data to an optional remote display models RD2000, RD2000V and RD400. Connect cable from remote display directly to this port.

DataKey

The DataKey port accepts the DataKey memory device. Information can easily be transmitted between a PC and the EZ4300 using the DataKey.

Operation

Turning on the scale

- ❑ Press [ON].

After the “HELLO” message is displayed:

- ❑ Enter a user ID, and then press the [ID] key.
- ❑ Enter a feeding number, and then press the [ID] key.

The scale enters the gross weighing mode. Gross mode displays the weight change since the unit was last zero/balanced.

Zero Balance the Scale

- ❑ Press [Net/Gross] and within three seconds, press the [Zero] key.

“0” is displayed to show completion of the step and the scale is put in the gross mode.

Transfer Data to the 4300

Datakey Mode

While the scale is in the gross weighing mode, install the Datakey.

- ❑ Press [ON] to upload the data from the Datakey.

The scale will display the number of records to be transferred.

Note: If the scale displays that there is un-used data in the memory, press [On] to overwrite the un-used data in the EZ4300.

- ❑ Remove the Datakey when the data transfer is complete.

RF Datalink Mode

When RF Datalink connects with the EZ4300 the display shows $\leftarrow PC \rightarrow$.

When RF Datalink is sending data to the EZ4300 the display shows $IL \leftarrow IN$.

Once the EZ4300 has received all of the data, the scale will display *ALL FEED LINES RECEIVED - PRESS RECIPE KEY TO CONTINUE*

Data Formats for the EZ4300

Data sent to the EZ4300 can be sent in two formats:

Complete Loads Mode: Each load is built by the PC software. It assigns pens to a recipe and builds an exact load for the pens.

- ❑ Press [Recipe] to locate desired load.
- ❑ Press [Load] to select load.

Recipe and Pen List Mode: The PC software sends the recipe data and the pen data in two different fields. The operator selects the recipe to build and which pens will be delivered.

- ❑ Press [Recipe] to view a recipe list or press [Pens] to view the pens list.

Note: Recipe and Pen List format is also used for recipes only and pens only.

Receiving Data from the EZ4300

Datakey Mode

- ❑ Insert the Datakey, the scale will automatically send the completed data to the Datakey.
- ❑ Remove the Datakey when done.

Send Undone Data Back to PC (RF Datalink)

This option is used when the operator does not complete all the feeding data at the end of the feeding schedule.

- ❑ Press the [Select] key until the display shows: $EZ \rightarrow PC$
- ❑ Press the [Function] key to select this option

The EZ4300 will now mark the undone information as completed and send the feeding data back to RF Datalink.

Note: After sending, undone information left in the EZ4300 memory will be erased.

RF Datalink Mode


When the EZ4300 is ready to send completed data, RF Datalink will link with the EZ4300. The display will show:←PC→

When the EZ4300 is sending completed data to RF Datalink, the display shows:
IL→OUT

Starting a Recipe


- Press [Recipe].

The scale will show the first recipe on the large display and line 1 on the lower display. Lines 2 and 3 will display the next recipes in the list. As shown below

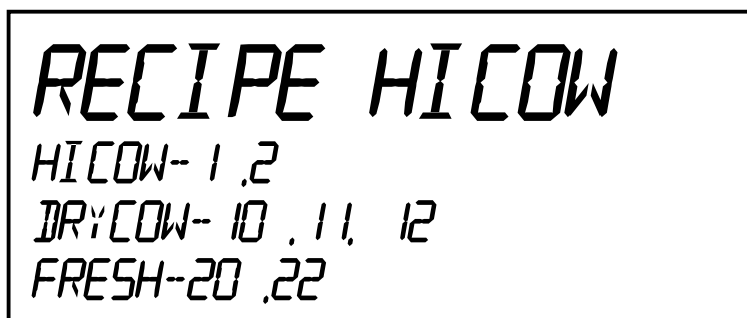Complete Loads Mode

RECIPE HICOW
HICOW-- 1.2
DRY COW-- 10.11.12
FRESH--20.22

This example shows each load with recipe name and pens to unload.

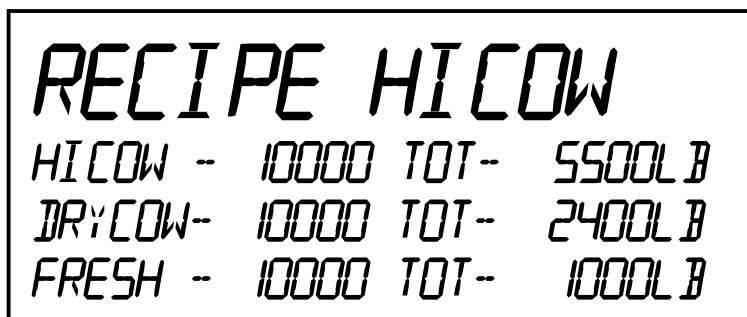Recipe and Pen List Mode

RECIPE HICOW
HICOW -- 10000 TOT-- 5500LB
DRY COW-- 10000 TOT-- 2400LB
FRESH -- 10000 TOT-- 1000LB

This example shows recipes with totals of how much is left to unload to pens.

This example will be the same for recipes only, with no total to unload to pens

- Press [✓] or [Recipe] to select the next recipe list.
- Press [Load/Unload] or [Enter] to start the recipe.

Complete Loads Mode

The scale will now give you the option to resize the pen call weight or press [Select] to change by number of head in the pen.

Recipe and Pen List Mode

The scale will now give you the option to resize the recipe load weight.

- ❑ Enter a new call weight or keep the original weight.
- ❑ Press [Load/Unload] or [Enter].

The first ingredient and call weight will be displayed to load.

Note: If the scale gives you a warning that the resized amount is over capacity, press the [Recipe] key to over ride the over capacity warning.

Recipe Direct Access

Recipes can be selected in three different ways:

- ❑ Press [Recipe].

or

- ❑ Press [Recipe] and Press [^] or [v] to find the desired recipe.

or

- ❑ Enter the recipe name (or number) and press [Recipe].

To move to a section in the list of recipes, enter the first few digits of the recipe name or number and press [Recipe]. This will move you to the recipes in the list starting with those digits.

Note: To enter a letter on the keypad, press and hold the key with the letter required. The display will then change to display the letters on that key.

Ingredient Loading

During in the ingredient loading sequence, the scale will display the following example:

DRY HAY ↔ 5500
FD-1 CTR-000 ING--DRY HAY
ZN-2 REC--DRY COW PRE-- 5500
G-- O USE ADVNCE TO LOG

The upper display will flash between the ingredient name and the call weight:
DRY HAY ↔ 5500

Line 1

The feeding number: *FJ- 1*

The number of rotations during this ingredient: *CTR-000* (RC option only)

The ingredient name: *ING-DRYHA*

Line 2

The zone number: *ZN-2*

The name of the recipe: *REC-DRYLOW*

The call weight of this ingredient: *PRE- 5500*

Line 3

The gross weight: *G- 0*

Instruction data: *USE ADVANCE TO LOG*

When the ingredient and call weight is being displayed, start loading the ingredient.

The ingredient call weight will begin counting down towards zero.

As the weight approaches zero, the alarm light and buzzer will begin to sound.

Once you have reached the preset weight, you have two options to advance the ingredient:

- ❑ Manual Advance: Press [Advance] or [Enter] to advance to next ingredient.
- ❑ Automatic Advance: Weight reaches the tolerance percentage and the timer runs out.

Note: For more information on how to setup the automatic mode refer to page:14

If the format is in “Complete Loads Mode” the pen unloading sequence will follow the recipe loading. Do not press the [Pens] key to start pen unloading.

Pen Unloading

There are two modes for pen unloading “Complete Loads Mode” and “Recipe and Pens List Mode”.

Complete Loads Mode

Once the ingredients have been loaded, the scale will display: START
DELIVERIES - 15000 LOADED

When the message is done displaying the scale will display the first pen to unload.

PEN 1		
P-1	PRE--	1200L B
P-2	PRE--	900L B
P-3	PRE--	2900L B

- Press [Pens] or [✓] to select a different pen.
- Press [Load/Unload] or [Enter] to start pen delivery.

The scale will display the following:

PEN 1 ↔ 1200
FJ-2 CTR-000 PEN- 1
ZN- 1 REC-PREFRE PRE-- 1200
G-- 10000 USE ADVANCE TO LOG

The upper display will flash between the pen and the call weight.

Line 1

The feeding number: *FJ-2*

The number of rotations during this pen delivery: *CTR-000* (RC option only)

The pen name: *PEN- 1*

Line 2

The zone number: *ZN- 1*

The name of the recipe: *REC-PREFRE*

The call weight of this pen: *PRE-- 1200*

Line 3

The gross weight: *G-- 10000*

Instruction data: *USE ADVANCE TO LOG*

When the pen and the call weight are being displayed, begin unloading to the pen.

The pen call weight will begin counting down towards zero.

As the weight approaches zero, the alarm light and buzzer will begin to sound.

Once you have reached the preset weight you have two options to advance to the next pen:

- ❑ Manual Advance: Press [Advance] or [Enter] to advance to next ingredient.
- ❑ Automatic Advance: Weight reaches the tolerance percentage and the timer runs out.

Note: For more information on how to setup the automatic mode refer to page:14

Recipe and Pen List Mode

- ❑ Press [Pens] to access the “Pens List”.

The scale will display the following:

PEN 1		
P-1	PRE--	1200LB
P-2	PRE--	900LB
P-3	PRE--	2900LB

- ❑ Press [Pens] or [✓] to change pen.
- ❑ Press [Load/Unload] or [Enter] to start pen delivery.

The scale will display the following:

PEN 1 ↔ 1200		
FJ-2	CTR-000	PEN- 1
ZN- 1	REC-PREFRE	PRE-- 1200
G-- 10000	USE ADVANCE TO LOG	

The upper display will flash between the pen and the call weight.

Line 1

The feeding number: FJ-2

The number of rotations during this pen delivery: CTR-000 (RC option only)

The pen name: PEN- 1

Line 2

The zone number: *ZN- 1*

The name of the recipe: *REC-PREFRE*

The call weight of this pen: *PRE- 1200*

Line 3

The gross weight: *G- 10000*

Instruction data: *USE ADVANCE TO LOG*

When the pen and the call weight is being displayed, begin unloading to the pen.

The pen call weight will begin counting down towards zero.

As the weight approaches zero, the alarm light and buzzer will begin to sound.

Once you have reached the preset weight you have two options to advance to the next pen:

- ❑ Manual Advance: Press [Advance] or [Print].
- ❑ Automatic Advance: Weight reaches the tolerance percentage and the timer runs out.

Note: For more information on how to setup the automatic mode refer to page:14

Pen Direct Access

Pens can be selected in three different ways:

- ❑ Press [Pens], keep pressing [Pens] to locate desired pen.
- ❑ Press [Pens] and then the arrow keys to locate the desired pen.
- ❑ Enter a pen name or number and then press the [Pens] key.

By entering the pen name or number and pressing the [Pens] key, the pen will be automatically started. To move to a section in the list of pens, enter the first few digits of the pen name or number and press the [Pens] key. This will move you to the pens in the list starting with those digits.

Note: To enter a letter on the keypad, press and hold the key with the letter required. The display will then change to display the letters on that key.

Go Back to a Skipped Ingredient

If the indicator accidentally skips an ingredient:

- ❑ Press the [↶] arrow key to move back to the ingredient.
- ❑ Press [Enter].

Note: If the ingredient weight changed more than 40 lbs. you cannot restart that ingredient.

Change Feeding Number

To change feeding number:

- ❑ Press the [ID] key.
- ❑ Enter your user ID number.
- ❑ Press the [ID] key.
- ❑ Enter the feeding number (0-9).
- ❑ Press the [ID] key.
- ❑ The scale will return to normal weighing mode.

Use the Arrow Keys

Use the Arrow Keys in Recipe or Pens List

- ❑ The up [↶] and down [↷] arrows will move the list one line of information at a time.
- ❑ Using the right [↷] and left [↶] arrows will move the list three lines of information at a time.

Use the Arrow Keys to Select Ingredients or Pens

While you are in a loading or unloading sequence:

- ❑ Press [↷] to locate the ingredient or pen required
- ❑ Press [Enter] to start.

Clear the EZ4300 Memory

To clear the EZ4300 memory:

- ❑ The unit must be powered off,
- ❑ Press and hold [Clear]. Press [On], and continue holding the clear key until the E4300 displays: "MEMORY". Then release the clear key
- ❑ Press [On] to erase the feeding memory. The scale will then continue to power up as normal.

Re-use Recipe and Pen Data

To re-use the recipe and pen data in the EZ4300:

- ❑ Press [Off] to turn power off,
- ❑ Press and hold [Clear].
- ❑ Press [On], and continue holding [Clear] until the EZ4300 displays: "MEMORY".
- ❑ Release [Clear] and press [Clear] again to re-use the recipe and pen data.

The scale will then continue to power up as normal.

Note: When you re-use the data stored in the EZ4300, it will take the recipe and pen information and remove the completed weights loaded or unloaded and mark them as undone.

It will not accumulate the data from day to day. Download the data on to the Datakey before re-using the recipe and pen data stored in the EZ4300.

Add a Pen or Pen List

This option is used when a pen is not in the current pen list in the EZ4300.

- ❑ Enter the pen name or number on the keypad and press [Pens].
- ❑ Press [On] or [Enter] to add this pen.

The display will then show:



The upper display and "line 1" will show the selected recipe for the pen. Line 2 and 3 are the next recipes in the recipe list.

- ❑ Press [Enter] to select the desired recipe.
- ❑ Enter the amount to be unloaded to the pen using the keypad.
- ❑ Press [Enter].
- ❑ Enter the number of animals in the pen using the keypad.
- ❑ Press [Enter].

The EZ4300 will enter the pen-unloading mode.

Pre-Alarm

The Pre-Alarm feature is an “early warning” for the preset weight. For example, if the Pre-Alarm is set for a value of 100 lbs. and the preset weight is 1000 lbs. the preset alarm will flash during the last 100 lbs. of the preset.

The Pre-Alarm provides an early warning before reaching the preset which allows the operator to be more accurate.

To change the Pre-Alarm:

- ❑ Enter short cut number: “401” and then press [Select].
- ❑ Press [Select] to change between *WEIGHT* or *PERCENT*.
- ❑ Press [On] to store the setting. The Pre-Alarm feature is displayed next.
- ❑ Press [Clear] to erase the current value, and then use the keypad to enter the Pre-Alarm value.
- ❑ Then press [On] to store the setting.

Auto-Advance

The auto advance feature allows for hands free operation of programmed recipes and pens. When the auto advance feature is activated, the indicator automatically prints and advances to the next ingredient or pen once the tolerance and delay time requirements have been met. Tolerance and delay time requirements are explained below.

The Tolerance feature is a “tolerance window” for the preset ingredient or pen during batching. For example, if the tolerance is set to 5% and the preset is 1000 lbs., the “tolerance window” is 50lbs. The scale is in the “tolerance window” when the display is between 50 and –50 lbs.

The auto-advance function activates the Delay Time while the weight is in the tolerance window. The Delay Time allows the operator to slightly “under or over shoot” and ingredient or pen amount and still automatically advance to the next ingredient or pen. The auto-advance Delay Timer resets every time the weight moves out of the tolerance window.

To Change the Tolerance

- ❑ Enter short cut number: “442” and press [Select].
- ❑ Press [Select] to choose desired percentage.
- ❑ Press [On] to store the setting.
 - Tolerance Percentage settings: OFF, 0.5, 1, 2, 3, 4, 5, 7, or 10.

Delay Time

The delay time feature allows an operator to select the amount of time the scale should wait before automatically advancing to the next ingredient or pen. This helps insure accuracy for the ingredient or pen amount. For example, if the delay time is set to 10 seconds and the preset alarms are activated continuously, the auto-advance starts the Delay timer. If the preset de-activates, the delay timer is reset, therefore assuring that the preset weight amount has to be met for the total delay time amount.

Setting the Delay Time to manual prevents the scale from ever auto-advancing, regardless of the weight.

To Change the Delay Time

- ❑ Enter short cut number: 443 and press [Select].
- ❑ Press [Select] to select the delay time (In seconds).
- ❑ Press [On] to store the setting.

Delay Time Selections in Seconds: Manual, 1, 2, 3, 5, 7, 10, 20, 30, or 60.

Note: Set to Manual to prevent automatic advance after the ingredient or pen amount has been reached.

Auto Ingredient / Manual Pen Advance

Use this option when you require that the ingredients automatically advance and manually advance between pens.

- ❑ To change this option, enter short cut number “461” and then press [Select].
- ❑ Press [Select] to toggle between on/off.
- ❑ Press [On] to store the setting.

Mix Timer

- ❑ Press [Timer/Counter].
- ❑ Use the numeric keypad to enter the amount of time.
- ❑ Press [Timer/Counter].

The timer will begin to count down, when the timer has reached zero, the alarm light and buzzer will turn on

- ❑ Press [Clear] to enter the weighing mode.
- ❑ Press the [Recipe] or [Pens] key to re-enter the batching mode.

Rotation Counter

- ❑ Press [Timer/Counter].
- ❑ Use the numeric keypad to enter the number of rotations.
- ❑ Press [Timer/Counter].

The Rotation Counter will begin to count down, when the counter has reached zero, the alarm light and buzzer will turn on.

- ❑ Press [Clear] to turn off the alarm and enter the weighing mode.
- ❑ Press [Recipe] or [Pens] to re-enter the batching mode.

Drive Ratio

The drive ratio is the ratio of the number of turns seen by the sensor divided by the number of mixer rotations.

Example: The sensor for the rotation counter is on a PTO. Every 30 rotations of the PTO the counter will count 1 rotation. Enter a value of 30.00.

Example: The sensor for the rotation counter is on a bearing end. The shaft makes 2-1/2 rotations for each rotation of the mixer. Enter a value of 2.50.

- ❑ Enter short cut number “422” and press [Select].
- ❑ Use the numeric keypad to enter the value.
- ❑ Press [On] to store the setting.

Scale ID or Truck ID

Each EZ4300 has a scale ID name. To change the scale ID name or number:

- ❑ Enter short cut number 108 and press [Select].
- ❑ Press [Clear] to erase the old ID name or number.
- ❑ Use the alphanumeric keypad to enter the new ID name or number.
- ❑ Press [On] to store the setting.

Note: If you are using the scale with a software program, i.e. TMR Tracker or Diet Manager, make sure the ID matches what is entered in the software program.

Radio Number

- ❑ Enter short cut number “231” and press [Select].
- ❑ Press [Select] to change the radio number.
- ❑ Press [On] to store the setting.

Note: Do not use the same number for two different scales.

Re-Size

The resize option allows the EZ4300 operator to make weight changes to the pens unload weight or the recipe load size.

To turn this feature on or off:

- ❑ Enter short cut number “448” and press [Select].
- ❑ Press [Select] to toggle between On/Off.
- ❑ Press [On] to store the setting.

Data Storing Options

There are three ways data is stored using the Datakey.

Quick Start: Automatic data transfer. The key uploads and downloads when installed into the EZ4300.

Auto: The Datakey stays installed into the EZ4300 and data is stored after each ingredient or pen is completed.

Manual: The Datakey does not need to stay installed in the EZ4300. Data is stored when pressing [Select] to change the option to (*JK*→*EZ*) upload data or (*EZ*→*JK*) to download data. Then press [Function] then [On] to activate the option.

To turn this feature on or off:

- ❑ Enter short cut number: 447 and press [Select].
- ❑ Press [Select] to change the option.
- ❑ Press [On] to store.

Hold

The Hold mode prevents the displayed weight from changing due to “Zero Shift” while moving the mixer.

- ❑ Press [Hold] to “hold” the displayed weight.

The EZ4300 will display the weight and the word “*HOLD*”

The EZ4300 reactivates and adjusts the Zero/Balance to maintain the gross weight. Small changes in weight can occur while moving the mixer to new locations for loading or unloading. This change is called “Zero Shift” and is due to several factors including terrain changes and mechanical stresses.

- ❑ Press [Hold] To return the EZ4300 back to normal.

If weight is accidentally added while in the hold mode, press [On] to cancel the Holding action.

Bunk Read

While in the unload sequence for a pen:

- ❑ Enter the amount you want to change the “Call Weight” by using the keypad.
- ❑ To toggle the amount between + and -, press [Bunk Read] while the weight entered is displayed.

Example: To change a “Call Weight” from 8000 to 8500:

- ❑ Enter “500” and press [Bunk Read].

The scale will display "BUNK READ", the weight entered and return to the unload sequence for the pen.

To change the “Call Weight” from 8000 to 7500:

- ❑ Enter “500” and press [Bunk Read].
- ❑ Press [Bunk Read] again (while weight is displayed).

The scale will display "BUNK READ", the weight entered and return to the unload sequence for the pen.

Time and Date

The time and date is set for Central time in the AP/PM format. The time may not be correct due to a difference in time zones and daylight savings time.

Entering The Time:

- ❑ Enter short cut number “202” and press [Select].
- ❑ Press [Function], [◀] or [▶] to move cursor,
- ❑ Press [Select] to increment the number until the proper time is set.
- ❑ Press [On] to store the time.
- ❑ Press [Select] to change between AM/PM.
- ❑ Press [On] to save and return to gross weighing mode.

Entering The Date:

- ❑ Enter shortcut number “204” and press [Select].
- ❑ Press [Function], [◀] or [▶] to move cursor,
- ❑ Press [Select] to increase the number until the proper date is set.
- ❑ Press [On] to save and return to gross weighing mode.