

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

## CONTENTS

<b>WELCOME</b>	<b>4</b>
<i>Who Is Mr OM?</i>	4
<b>INTENDED USE</b>	<b>5</b>
<b>THE NATURE OF CANVAS</b>	<b>5</b>
<b>TRIAL PITCHING OF THE TENT</b>	<b>5</b>
<b>CHOICE OF THE SITE</b>	<b>5</b>
<b>ITEMS INCLUDED</b>	<b>6</b>
<b>GETTING STARTED</b>	<b>6</b>
<b>HOW TO ERECT YOUR SOULPAD TENT</b>	<b>7</b>
<i>Groundsheet</i>	7
<i>Flysheet</i>	7
<i>Guy Line Preparation</i>	7
<i>Poles</i>	8
<i>Guy Line Positioning</i>	8
<b>HOW TO ROLL THE WALLS UP AND DOWN.</b>	<b>10</b>
<i>To roll up</i>	10
<i>To roll down</i>	10
<b>PACKING YOUR SOULPAD TENT AWAY</b>	<b>10</b>
<b>STORING YOUR SOULPAD TENT</b>	<b>11</b>
<b>IN THE EVENT OF A FIRE</b>	<b>12</b>
<i>Use a Smoke Alarm</i>	12
<b>VENTILATION</b>	<b>13</b>
<b>CARBON MONOXIDE RISK</b>	<b>13</b>
<i>Use a Carbon Monoxide Alarm</i>	13
<b>PARTICULAR PROBLEMS THAT MAY ARISE</b>	<b>13</b>

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

<i>Weathering</i>	14
<i>Loose Pegs</i>	14
<i>Loose Poles</i>	14
<i>Migrating Slides</i>	14
<i>Correct Placing of Items Inside The SoulPad Tent</i>	14
<i>UV Degradation</i>	15
<i>Snow</i>	15
<i>Zips</i>	15
<i>Re-proofing</i>	15
<i>Fungus &amp; Mildew</i>	16
<b>CLEANING YOUR SOULPAD</b>	<b>16</b>
<b>REPAIRS</b>	<b>17</b>
<b>FLOOR PLAN &amp; DIMENSIONS</b>	<b>18</b>

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

## WELCOME

Dear SoulPadder,

Thank you for choosing a SoulPad tent. I welcome you whole-heartedly to the SoulPad community. If you didn't already have it, you now have soul.

Please keep this instruction manual in a safe place and remember to take it with you each time you use your SoulPad equipment. These instructions are also available on our website.

If this is your first erection, please don't be nervous. We've all been there and we're keen to help show you the way. Very few of us achieve a perfect erection first time, but before long yours is sure to stand as proudly as any other good, strong erection that has stood before it.

It's generally easier for two people to get an erection, but if you follow our guidelines one person can do it alone. So relax, take it slowly and let us know how you get on!

If you ever have any questions not covered in this manual, please contact SoulPad Ltd. direct. We will endeavor to assist you.

We hope that you will connect with us on a deeper level and join us on the various social networking websites on the web today. It is here that we SoulPadders tend to share pictures, tips and advice and we hope you will too.

With soul,  
Mr OM

Head Office  
SoulPad Ltd, Thetford Forest, Norfolk, UK

T: +44 (0)1953 688595

## *Who Is Mr OM?*



Mr OM is the most loveliest, cuddliest, kindest, sweetest, soufulest guy you'll ever have the pleasure of meeting. He likes nothing better than to hang out with friends in his SoulPad, chewing the fat whilst listening

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

to some cool tunes. He has a twinkle in his eye and a lot of love to give. His friends and his SoulPad are the most important things to him in the whole world. He needs both to remain strong and positive. Both offer him unconditional support and both are always there when he needs them.

Why is he called Mr OM? Do you see how his head doesn't quite join together? Well, that's not because he's a few slices short of a loaf. Absolutely not! Quite the opposite is true. No, in fact, his head is that way because he has an Open Mind (OM). He is a good listener and he will not judge you. Mr OM embraces life with all 5 of his heightened senses.

## **INTENDED USE**

The SoulPads are intended for regular, light, leisure use.

It is our opinion that SoulPad tents do not make for a suitable permanent shelter. They are primarily a temporary structure. They are classed as a Touring Tent (type T) in accordance with ISO 5912.

The average touring tent user will use their tent for up to two week long bursts, up to three times a year. They will pack and store their tent away dry in-between uses.

We are aware that some SoulPad customers do choose to use their SoulPad for long periods at a time, and in some instances as a permanent shelter (some with far more success than others). This is done so against our recommendation.

Specifically, the SoulPads are designed for use in temperate climates during Spring & Summer. Using SoulPad tents outside of this scope will likely affect their longevity.

## **THE NATURE OF CANVAS**

The SoulPads are made from cotton canvas. Cotton canvas is a natural material. As such colour variances and minor imperfections in the canvas can be expected. These variances and imperfections should not detract from the overall performance of the product.

## **TRIAL PITCHING OF THE TENT**

It is recommended that all SoulPad users conduct a trial pitching of their SoulPad tent to become familiar with the equipment ahead of when it may be needed most.

Erect the SoulPad according to the instructions. Never assume you will remember the order in which to erect your SoulPad. Bad habits are easy to fall in to and can have a negative impact on the longevity of your SoulPad.

## **CHOICE OF THE SITE**

Check with the land owner on the best places to pitch. They will understand best how their land fairs during

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

different types of weather. The ideal site is flat and well-drained with short grass on a sound soil structure. Avoid areas which are prone to flooding.

Avoid pitching under trees. Pitching under a tree and in woodlands can present problems: -

Falling leaves - left on the canvas to get wet can cause discoloration and degradation of the canvas beneath.

Bird droppings - birds like to rest in trees and leave deposits on your SoulPad.

Falling debris from the tree - can penetrate the canvas.

Mould and mildew formation - can be accelerated in woodland conditions, as it is here (damp, moist conditions) that mould and fungus can thrive.

The direction of the prevailing wind should also be taken into consideration. Try to pitch with the back of your SoulPad facing the prevailing wind. This will help to conduct the wind over the SoulPad rather than up against it.

An uneven pitch will place uneven tension on the canvas, poles and other components, as will an overly exposed pitch.

Once you have selected a good spot, before pitching remove any stones and loose debris that may cause damage to the groundsheet or discomfort underfoot.

## ITEMS INCLUDED

- X45 pin pegs
- x14 stake pegs
- x1 a-frame cap
- x1 peg bag
- x1 canvas fly sheet
- x1 canvas bag
- x1 groundsheet
- x1 groundsheet bag
- x1 central pole
- x1 a-frame
- x1 pole bag
- x14 guy lines with slides

## GETTING STARTED

Here follows a quick guide to pitching your SoulPad tent. More detailed instructions can be found in the pages that follow.

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

1. Peg out the groundsheet so it is taught.
2. Peg out the canvas loops lightly.
3. Position the central pole.
4. Position the A frame.
5. Fit the A frame cap.
6. Close entrances and windows and peg out the guy lines evenly.
7. Apply tension to the guy lines evenly.
8. Tap in the canvas peg loops.
9. Tuck the mudguard under the groundsheet inside.
10. Drive a pin peg through the mudguard and groundsheets corresponding eyelets.

## HOW TO ERECT YOUR SOULPAD TENT

The order in which your SoulPad is erected is very important. Never assume that you will remember the order, and always make sure you have a set of instructions with you each time you pitch your SoulPad tent. SoulPad users can fall into bad habits and receive bad erection advice from other campers. This can have a negative impact on the longevity of your SoulPad and its overall performance. In case you lose them, these instructions are also available on our website.

### *Groundsheet*

You will notice one of the edges on the groundsheet is longer than the others. This marks the entrance. Make sure you have the entrance facing the correct and desired direction.

1. Lay out the groundsheet as flat as possible. Using the smallest pegs (the pin pegs) lightly peg out the groundsheet keeping it as taught as possible. You will be adjusting these pegs again later so there is no need to drive them all the way into the ground.

### *Flysheet*

2. Unfold the canvas flysheet and lay it on top of the groundsheet. Find the entrance and marry it with the entrance on the groundsheet. Make sure the entrance is zipped closed.
3. Using the pin pegs lightly peg out the peg loops at either side of the entrance (i.e. not flat to the ground). All of the peg loops should be positioned around 4-5" out from the groundsheet's edge.
4. Find the centre of the entrance and peg in lightly also.
5. Continue to lightly peg out the remaining peg loops around the entire circumference, working methodically in either a clockwise or anti-clockwise direction, being sure not to miss any.

### *Guy Line Preparation*

6. Now it's time to get the guy lines ready. The first time you erect your SoulPad you will need to unravel all of the guy lines. Do not peg out the guy lines at this stage, we're just getting them ready for later steps.
7. The plastic on the guy line (the black nylon 'slides' that create the peg loop and allow us to adjust the tension) should rest about 50-70cm from the point they are connected to your SoulPad's walls to begin with.

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

This allows you room to adjust the tension in later steps. You will use the loop created by the guy line to fasten the larger stake pegs through later.

### ***Poles***

8. Partially extend the poles. Some prefer to fully extend the central pole before going into the tent, this can work equally as well. Unzip the entrance and take the central pole (with rubber stoppers) inside.

There is a metal loop part way along the top most section of the central pole. Be sure to position this at the top of the tent with the loop pointing towards the back of the tent (this is a fixing to attach the inner tent to). Find the inside of the top of your SoulPad and marry it with the rubber stopper.

9. Standing roughly in the middle of the groundsheet, pull the pole up so that the roof of your SoulPad rises, clicking the pole into full length as you do so. This should be reassuringly quite challenging to get into place due to the tension created by the pegged out canvas fly. It is this tension that keeps your SoulPad in place.

10. Make the central pole stand as vertical as possible, in the centre of the groundsheet. The pole should hold upright by itself. The canvas will droop but the pole shouldn't slip out of position. Go back outside.

11. Get the A frame and re-enter your SoulPad. This is much easier if you unlock one section next to the top.

12. Once inside your SoulPad click the sections back into place and put the metal spike on the top of the A frame through the eyelet in the canvas above the entrance, at the apex.

13. Now edge the A frame's feet forward into the entrance space until it is almost vertical.

14. Position the A frames feet near to the ties on the flysheet. Depending on the terrain you can loosely fasten the ties around the legs of the A frame if desired.

During adverse, windy weather it is advisable to pull back the mudguard at the base of the wall and position the A frame's feet directly in contact with the ground beneath. This insures a superior purchase and reduces any sliding effects on the A frame.

Remember, the A frame serves only to create the porch shape, it is not as structural as the central pole. Do not try to force it into a vertical position. Go back outside.

15. Attach the A frame cap (to stop water getting in) onto the A frame spike now visible on the outside of your SoulPad (top of the a-frame). Zip the entrance closed.

### ***Guy Line Positioning***

In the first instance the guy lines should be pegged out with plenty of slack. In the first steps of pegging out the guy lines our aim is simply to get the positioning right by following the lines of the seams in the canvas.

It is very important that the guy lines are not pegged out with too much tension at this point, because we will apply tension evenly in later steps.

16. Use one of the larger stake pegs to attach the first guy line from above the entrance (remember, with plenty of slack) then secure the guy lines either side of the entrance too. Don't push the stake pegs all the way into the ground or else you won't be able to adjust the tension on the guy lines later.



# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

17. Once the first three guy lines are in place at the front, go to the back of your SoulPad and repeat with the opposite three guy lines at the back (remember, with plenty of slack).

18. Return to the front of your SoulPad and position the next two guy lines along from where you left off and on both sides (working methodically in either a clockwise or anti-clockwise position).

19. Return to the back of your SoulPad and peg out the two guy lines opposite to those in the step above. Repeat this process until all of the remaining guy lines are in position, always following the line of the seams at all times.

20. Now in the same order that you pegged out the guy lines, adjust the slides on the guy lines to take up the slack with even tension. Get the canvas nice and taught without stressing any of the components. The best way to do this is to hold and pull the canvas loop where the guy line is attached to the SoulPad (noting its affect on the SoulPad's walls), and take up the slack by re-positioning the slide. You will see the walls begin to relocate more vertically and neatly at this stage.

NB: Too much tension or the incorrect positioning of the wall loops may cause the wall to crease.

### Return To The Peg Loops

21. Now you can push in the pegs at the base of the walls (don't worry if they don't go all the way into the ground) In doing this you will notice any remaining slack in the canvas will disperse, giving the SoulPad a good shape. Some of the peg loops may need to be repositioned slightly so that the peg loop isn't at an odd angle.

22. Now go back inside the tent and tuck the mudguard under the groundsheet around the entire circumference. This is to ensure zero penetration of water when it rains.

To do this you will need to remove each of the lightly pegged in pin pegs from the groundsheet (in turn), push the mudguard underneath, \*then drive the pin peg back into the ground through the corresponding eyelets on the mudguard and groundsheet. There is no need to drive the pin peg all the way into the ground. It is better to leave some of it exposed for ease of de-camping later.

Well done, Job done! Cup of tea anyone?

\*If you are struggling to line up the corresponding eyelets in a satisfactory manner you may need to adjust the position of the canvas loops at the base of the walls on the outside of your SoulPad. If after further adjustment you are still struggling to achieve a satisfactory finish, you may wish to consider an alternative method next time you pitch the tent, as follows: -

Please note, this method should not be selected during adverse, windy weather conditions due to some risk of the mudguard eyelets being over-stressed and likely to fail when the central pole is inserted.

- a) Follow the instructions above 1- 2.
- b) Then, find either side of the entrance and using the pin pegs, find the eyelet on the groundsheet and push a peg through it and the eyelet on the mudguard. Be sure to have it positioned so that the groundsheet is on top of the mudguard. Carefully tap the pin peg into the ground. Complete this process around the entire circumference working methodically in either a clockwise or anti-clockwise direction, being sure not to miss any.
- c) Now lightly peg out the canvas peg loops at the base of the walls and return to instruction 6 above until the end.

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

## HOW TO ROLL THE WALLS UP AND DOWN.

### *To roll up*

- 1) Un-peg the canvas loops on the outside of the SoulPad tent, at the base of the walls but leave them in position in the ground.
- 2) Un-peg the mudguard from the groundsheet.
- 3) Roll up and tie back the entrances completely.
- 4) Roll up the canvas walls and fix up into position using the tie backs and peg loops spaced at intervals around the circumference.

### *To roll down*

Simply reverse the above steps. Remember to tuck the mudguard back under the groundsheet and re-peg.

## PACKING YOUR SOULPAD TENT AWAY

Make sure your SoulPad tent is completely dry before packing. Your SoulPad needs to dry out while pitched, any other way and the air may not circulate satisfactorily. This can be difficult during the colder months but is an absolute must. If it is wet moulds will appear, these are often extremely difficult to remove. If you must pack it away wet, you must pitch it again within 24 hours. Even if you have to pitch it in wet conditions, this will prevent the problems that occur when leaving a wet SoulPad tent in its bag. A SoulPad tent is better off wet but pitched than it is wet and packed in a bag without air circulating around it.

The canvas bag is large enough to contain your SoulPad in its entirety. However, it is advisable to pack the poles and pegs separately from the canvas in order to protect the canvas from damage.

1. Remove all of your belongings from the SoulPad tent.
2. Close all of the windows.
3. Remove the A frame cap and place it in the peg bag ready for next time.
4. Go inside the SoulPad tent, untie the A frame straps (if you used them). Take it outside of the SoulPad tent and place it inside the pole bag ready for next time. Repeat this process for the central pole.
5. Zip the entrance closed.
6. Outside the SoulPad tent reposition all of the slides so that they rest approximately 50-70cm from the point they are connected to your SoulPad's walls, ready for next time.
7. Remove all of the stake pegs from the ground, remove any loose dirt and place inside the peg bag. As you do this throw the guy line onto the canvas fly sheet out of the way for later. Be careful not to throw dirt onto the canvas in doing so.
8. Remove all pin pegs from the ground at the base of the walls. Remove any loose dirt and place inside the peg bag.
9. Leave the groundsheet in place as a good surface on which to fold and pack away the canvas flysheet.
10. Fold the circular canvas flysheet in half to form an approximate semi-circle.
11. Fold in half again.
12. Take the 'peak' of the tent and fold it in so that the flat edge is roughly the same length as the canvas bag.
13. Using the poles as a rule (in their bag), place the poles mid-way along the straightest edge.
14. Fold the canvas over the poles from each side and remove the poles.

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

15. Now you can choose to either place the poles at the top of this shape and roll them into the canvas. Or to protect the canvas from the poles you can roll this shape without them. Remove any debris as you roll.
16. Fasten the canvas with the ties it came with. Helping it to hold its shape whilst in the main canvas bag.
17. Place the rolled canvas into the main canvas bag.
18. Now to the groundsheet.

If the groundsheet is particularly dirty it may be a good idea to remove it and pack it away separately to be cleaned and re-packed later.

It is likely that your groundsheet will be wet on the side in contact with the ground. Simply turn it over to expose it to the air. If the weather is fair, leave like this for 5-10 minutes to allow it to dry before packing it away into its bag.

19. Some will prefer to fold the groundsheet following the original fold lines, others will prefer to fold and then roll the groundsheet before returning it to its bag. You can even follow the same folding guidelines as the canvas flysheet in order to get the right shape to return the groundsheet to its bag. All of these methods will work.

It is good practice to store the poles, pegs and canvas in their separate bags in order to protect the canvas from the other components.

## STORING YOUR SOULPAD TENT

1. Only store your SoulPad tent if it is dry.

Never store it if the canvas fly sheet or the groundsheet is damp or wet. Both the groundsheet and the canvas must be completely dry before storing. Otherwise there is a very high risk of mildew forming on the canvas. Mildew is often irremovable, and so its prevention is of very high importance.

If you are forced to pack your SoulPad tent away when it is damp or wet then it must be erected again within 24 hours, even in adverse weather.

2. Store in a dry place.

Moderate, temperate conditions are ideal. Extremes of temperature will harm the structure of the canvas. The optimum storage temperature is room temperature.

3. Do not store anything on top of your SoulPad tent as this may distort the canvas or cause harm to the other components.

4. Your SoulPad tent should be taken out of storage at least once a year to allow it to recover from its compacted and stored state.

5. Be aware that rodents and insects can cause damage to stored SoulPad tents.

6. Choose your storage area carefully and remember to check on your SoulPad tent from time-to-time. For example: five minutes spent checking the bag for dampness, or checking for signs of rodent activity could save you time, effort and unwanted repair costs later.


# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

### **IN THE EVENT OF A FIRE**

There is a legible notice permanently attached inside your SoulPad tent, to the left of the entrance as you enter the tent. Do not remove it. These Fire Precautions should be noted and followed each time you use your SoulPad tent. It reads as follows: -

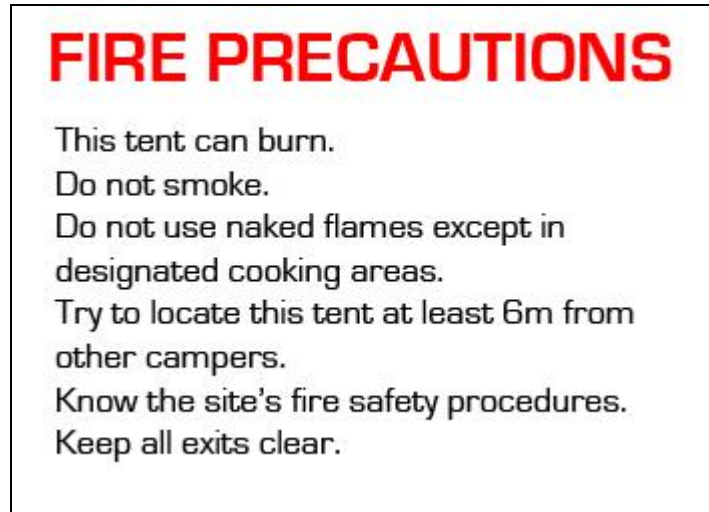

Never block the exit of your SoulPad on the inside or the outside of the tent. In the event of an emergency the exit will need to be clear of obstacles to allow the occupants to vacate the tent as quickly as possible.

### ***Use a Smoke Alarm***

It is advisable to include a small hand held fire extinguisher as part of your camping kit along with a smoke alarm.

The SoulPads do not have a designated cooking area. Cooking equipment should be used outside the SoulPad tent. Please carefully follow the instructions that came with your cooking equipment.

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014



## VENTILATION

The SoulPad 5000-lite has three vents at the peak of the tent. These are lined with a mosquito mesh. The vents must be kept clear at all times. Never block the vents. To do so will compromise the tents performance and the occupant's safety.

## CARBON MONOXIDE RISK

Carbon Monoxide is a colourless, odourless, and tasteless gas that is slightly less dense than air. It is toxic to humans when encountered in concentrations above about 35 ppm. It is the most common type of fatal air poisoning in many countries and too many campers are killed by this gas each year.

The most common symptoms of Carbon Monoxide poisoning may resemble other types of poisonings and infections, including symptoms such as headache, nausea, vomiting, dizziness, fatigue, and a feeling of weakness. Affected people often believe they are victims of food poisoning. Infants may be irritable and feed poorly. Neurological signs include confusion, disorientation, visual disturbance, syncope and seizures.

### *Use a Carbon Monoxide Alarm*

For your safety we recommend the use of a Carbon Monoxide alarm inside your tent.

## PARTICULAR PROBLEMS THAT MAY ARISE

The lifespan of your SoulPad is very much dependent upon the camping conditions and the way in which

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

you care for and maintain your SoulPad. Air pollution, ultraviolet radiation, natural dirt (bird droppings, sand, salt and water) and domestic dirt (cooking stains, wine and sun cream) all limit the lifespan of your cotton canvas SoulPad tent, as will the level of care and maintenance that you choose to apply. Any problem areas should be dealt with immediately.

### ***Weathering***

Brand new cotton canvas tents can often leak on their first few wets, with the leaks becoming less and less with each wetting and drying process. This doesn't always happen, but some new cotton canvas tents may need to go through a process called weathering. Weathering is the wetting and drying of a canvas tent.

Some water droplets may penetrate the canvas to begin with, but the cotton fibres in the weave will eventually swell and nestle into each other. The result is a perfectly water resistant tent and one that will give years and years of good service if it is looked after properly. Some SoulPad tents will need weathering two, three or even more times before every last water inlet is eliminated. With patience, those last few drips will eventually cease. This process can be accelerated artificially using a fine spray on a hose pipe if preferred. For the weathering process to be completed (either artificially or naturally), it is important that the tent dries thoroughly in-between wets.

Commonly water will accumulate on the labels inside the SoulPad tent during the weathering process, or where the vertical walls are attached to the sloping roof. This falsely gives the impression that these are problem areas. This is not the case. Again, this will eventually cease.

### ***Loose Pegs***

If the ground is too wet or soft (such as with sandy soil), pegs may become loose and pop out of the ground more easily in a small breeze. In this instance it is advisable to switch to wooden pegs as these purchase the ground better in such conditions.

### ***Loose Poles***

If there is not enough tension on the poles they will move. Please check the pitching instructions and follow them carefully.

### ***Migrating Slides***

The slides on your SoulPad tent will need to have tension re-applied to them following heavy rain, or wind. Check them over periodically. If you plan to use your SoulPad tent in particularly adverse weather conditions (especially windy conditions) it is advisable to switch the standard slides to locking slides. Always close all windows and entrances before adjusting the slides.

### ***Correct Placing of Items Inside The SoulPad Tent***

Do not place items too close to the canvas. During windy and/or wet conditions these may harm the canvas or cause it to let in water.

Do not hang objects from any of the fixings inside the tent intended for the inners. This will cause undue stress on the canvas and may cause distortion. The objects you hang may also cause damage to the canvas during windy conditions.

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

### ***UV Degradation***

Ultraviolet radiation can affect the SoulPad tent's canvas performance and its water resistant capabilities. When re-waterproofing your SoulPad tent, look for products that also include UV protection.

Immediate effects of UV can be 'bleaching' - a change in colour of the canvas to lighter shades. Compare your SoulPad canvas fly sheet with the canvas bag it came in. They are made of the same material but it is likely that the canvas bag has been less exposed to UV. Is there a marked difference in colour? If so, it may be time to treat your canvas fly sheet. UV can also lead to a reduction in the effectiveness of the waterproofing and anti-fungal treatments.

All of the components used to produce SoulPads tents have anti-UV treatments and properties but will need to be monitored carefully and replaced at the first sign of degradation. All the canvas used to produce SoulPad tents is treated to be water, UV and mould resistant to protect it from dirt, ultraviolet radiation and fungus. SoulPads can be used straight out of the bag, without any need for treatments prior to use. However, the treatments will not last forever. Your SoulPads lifespan will depend largely on how well you replenish these treatments.

Guy lines and slides will eventually need replacing and a common cause for accelerated wear can be due to UV exposure.

### ***Snow***

SoulPads are not winterised tents and as such they are not intended for use in snowy conditions. If for any reason your SoulPad does find itself in these conditions you must regularly remove the snow from the canvas surface so that it will not stretch or indeed fail completely by tearing. The SoulPad tents are not designed to withstand heavy payloads of snow. If left unattended it is likely that the central pole will either fail completely, or the weight of the snow on the canvas will cause the canvas to fail where it is in contact with the central pole, causing the central pole to rip through the peak of the roof.

### ***Zips***

Zips sometimes endure extreme tensions. These can be caused by wind gusts, improper erections and adverse pressures caused by people or objects leaning against your SoulPad. Close all zips before erecting, adjusting or taking down your SoulPad. Handle the zips with care. To protect the zips treat them with silicones once in a while. If a zip on your erected SoulPad seems strained, play with the tension on the guy lines or adjust the positioning of the wall loops to find out which adjustment helps the zip to function better. When a SoulPad is erected incorrectly it can cause the zips to fail.

### ***Re-proofing***

This is the process of replenishing the treatments already applied at the point of manufacture. Spotting when it is time to re-proof can be difficult. A SoulPad tent that has enough proofing agents present will cause the water on the surface to 'bead' after a downpour.

The tent will dry quickly in a breeze or sunlight and it will not fade when exposed to UV. You will literally see beads of water forming on the outer surface of the canvas. When it is time to re-proof your SoulPad, you will notice that the water no longer beads, and that the SoulPad retains the moisture in the canvas for longer, taking longer to dry than before. The colour of the canvas may also have faded. In the worst cases mildew will start to appear in the form of small irremovable specs.

Reproofing is simple. SoulPad recommends the use of Granger's Fabsil with UV. A 5 litre container of this is enough to treat even the largest of SoulPads. Please follow the manufacturer's guidelines when using this

# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

product. In simple terms: add the liquid to a pressurised container and spray onto the outer surface of the dry SoulPad tent (in fine weather) and allow it to dry. A fine coating is sufficient.

### ***Fungus & Mildew***

One of the most common problems to occur in canvas is mildew. This is easily preventable.

The onset of fungus or mildew is a sure sign that your SoulPad is past needing a treatment with a cleaner and waterproofing agent, or that it has been stored incorrectly.

There are a number of reasons why mildew develops in canvas (exposure to dust and/or bacteria for example). It is most commonly formed when exposed to certain conditions of humidity and temperature.

Even if the canvas is mildew resistant, mildew will form if left damp. The best way to dry your SoulPad tent is for it to be fully pitched and allowed to dry naturally in fair weather. It should not be hung to dry as fungus and mildew could form in the folds and creases of a hung SoulPad tent.

Mildew is very destructive to cotton fabrics as well as other materials. Mildew most commonly forms when tents are stored damp. However, depending on the environment mildew can start while the tent is set up also. Under certain conditions of humidity and temperature its on-set can be very fast indeed. If mildew has started to grow, it can be stopped from spreading by thoroughly drying the tent (preferably in the hot sun) and applying a cleaner, followed by the re-waterproofing of any areas cleaned.

When dealing with fungus use a soft brush or sponge and a lot of fresh water to remove as much as you can and to stop the fungus from spreading. Only use specialised canvas tent cleaning products for this purpose. Other domestic, chemical products can be too harsh and cause the canvas structure to breakdown and leak.

Be sure to air your tent from time-to-time. Condensation levels should be kept to a minimum by regular airing. Open the windows and entrances regularly to allow air to circulate inside the tent too.

Keeping grass and weeds trimmed around the bottom of the tent is also important since dampness clings to foliage and does not allow air to get to the fabric.

## **CLEANING YOUR SOULPAD**

If using your SoulPad frequently or for long periods of time, a cleaning and re-proofing treatment should be applied more frequently.

It is easy to spot when a SoulPad needs to be cleaned. However, we all have different standards and a sloppy cleaning and maintenance regime will cause the SoulPad tent to deteriorate more quickly. The sooner a dirty or stained spot is dealt with, the better. Left for too long and the problem may spread and lead to other problems such as canvas disintegration whereby the material begins to 'dissolve' and disappear completely.

It is advisable to first use a specialised cleaning agent on your SoulPad tent, then a specialised waterproofing agent. The other way around will cause the waterproofing agent to be washed away. If you ever spot clean an area of your SoulPad, always re-waterproof that area too. Whether it is a small area that is being treated, or the entire SoulPad, this is an important rule to follow as failure to do so will lead to leaks.

It is in your interests to keep the canvas as clean as possible and remove stains when they first appear.



# SoulPad 5000-lite™

## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014

---

Dust and dried mud is better wiped away with a soft brush before a cleaning agent (and then re-waterproofing agent) is applied.

If you feel the cleaning and treatment is beyond your capabilities then your SoulPad tent can be taken to a professional canvas cleaning specialist to be cleaned and re-treated. Feel free to contact SoulPad for details of third parties offering this service in your area.

Never try to clean your SoulPad in a washing machine. This will cause too much damage to the canvas fibres and it may also damage your washing machine.

## REPAIRS

Inevitably accidents do happen and SoulPads get wounded in the process. The components used on SoulPad tents have been selected for their durability and ease of maintenance. You might be surprised by the level of repair you can achieve yourself.

**Canvas;** Always apply any repair work on the outside of your SoulPad tent. Small rips in the canvas can literally be stitched closed using a common needle and thread (use as fine a needle as you can bare, and try to match the cotton colour to the canvas). Larger rips and tears will need to be patched, but again use a needle and thread to do so. Try to use the same canvas colour and type as the original SoulPad. If applying a patch, try to use a diamond shape with the peak of the diamond being upmost. This will enable any rain run-off to disperse more quickly than a patch applied squarely.

When stitching, always try to keep the stitching runs tight and close together. It might pay to go over the same area a few times, just to be sure you have achieved a good seal.

It is a good idea to include a basic sewing kit with your camping equipment. Having access to common needle and cotton thread can make or break a trip away. Other campers may have to end their trip due to a rip or a tear, but as a canvas tent user, more often than not you will be able to repair your SoulPad tent yourself and continue with your trip. Remember, canvas is very forgiving! Any holes left by your needle will soon be filled with the expanding fibres of the canvas when it becomes wet. Have confidence in your repairs!


**Groundsheets;** Circular repairs are advisable on groundsheets in order to reduce the likelihood of the patch becoming loose through footfall and contact. In most instances, the groundsheet can be repaired using a patch of the same material and a good, strong contact adhesive. It is more effective to apply a patch on both sides of the groundsheet.

# SoulPad 5000-lite™


## Instruction Manual.

Version 3, Published Dec 2014. © SoulPad Ltd. 2014


### FLOOR PLAN & DIMENSIONS

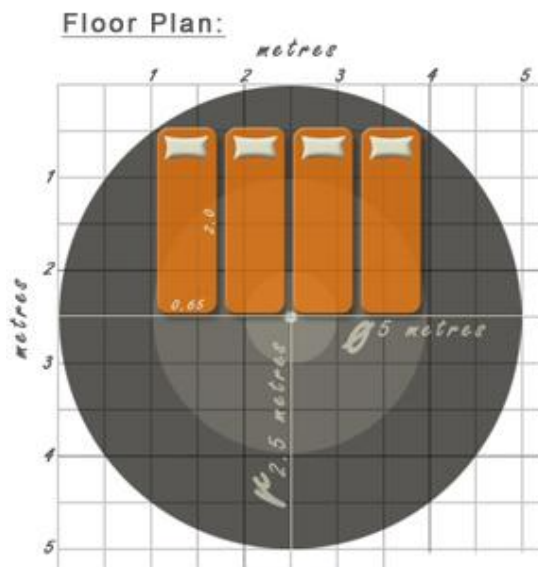

In accordance with ISO 5912  
For touring tent (type T)

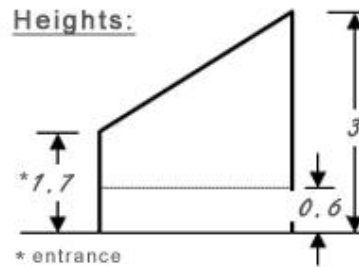

#### Packing Dimensions & Weight:

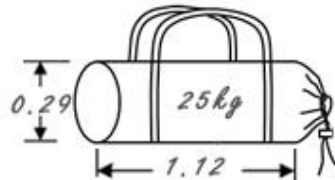

#### Outer Tent Material:

Cotton Canvas 100%

# SoulPad 5000-lite™