



 **WARNING**

This symbol means important instructions. Failure to heed them can result in serious injury or death. **DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.**

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

**DO NOT OPEN, DISASSEMBLE OR ALTER THE UNIT IN ANY WAY.**

Doing so may result in fire, electric shock or product damage.

**DO NOT INSERT ANY OBJECTS INTO THE UNIT.** Doing so may result in fire, electric shock or product damage.

**USE THE CORRECT AMPERE RATING WHEN REPLACING FUSE.**

Failure to do so may result in fire, electric shock or product damage.

**MAKE THE CORRECT CONNECTIONS.** Failure to make proper connections may result in fire or product damage.

**DO NOT SPLICE INTO A ELECTRICAL CABLES.** Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

**DO NOT INSTALL IN LOCATIONS THAT MIGHT HINDER VEHICLE OPERATION.** Doing so may obstruct vision or hamper movement which can result in a serious accident.

**DO NOT INSTALL THE UNIT TO HIGH LEVELS OF HUMIDITY, MOISTURE OR DUST.** Doing so can result in electric shock or product failure.

**FCC Warning:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in this User Guide. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**Note:** This equipment has been tested and found to comply with Part 15 of the FCC Rules. These rules are designed to provide reasonable protection against harmful interference. This equipment may cause harmful interference to radio communications if it is not installed and used in accordance with these instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Relocate the receiving antenna.
- Consult the dealer or an experienced technician for help.

## CAUTION

**This symbol means important instructions. Failure to heed them can result in injury or material property damage.**

HALT USE IMMEDIATELY IF A PROBLEM APPEARS. Failure to do so may cause personal injury or damage to the product. Return the unit to your authorized retailer or nearest service center for repairing.

INSTALL THE WIRING SO THAT IT IS NOT CRIMPED OR PINCHED BY SCREWS OR SHARP METAL EDGES. Route the cables away from moving parts or sharp pointed edges. This will prevent crimping and damage to the wiring. If the wiring must pass through a metal hole, be sure to use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.


### Caution:

Changes or modifications not approved by JVC could void the user's authority to operate the equipment.

USE THE SPECIFIED ACCESSORY PARTS AND INSTALL THE PRODUCT SECURELY. Be sure to use only the specified accessory parts. Use of non-specified parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose, resulting in hazards or product failure.

USE CAUTION IF YOU NEED TO DISCONNECT THE BATTERY TERMINAL. Please consult the vehicle's owner's manual or a service technician prior to removing the battery positive or ground connection, as it may cause damage to the vehicle's electrical system or require reprogramming of the vehicle's computer-controlled devices.



 
 [European Union only]

# Table of Contents


Package Contents .....3  
 Wiring and Cable Connections .....4  
 System Connection Examples.....5  
 Specifications.....6

## Package Contents


### SIRIUS SATELLITE RADIO INTERFACE

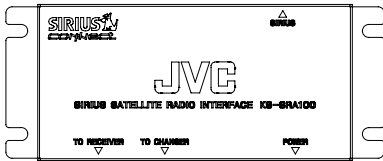


### 2.5-Meter Bus Cable

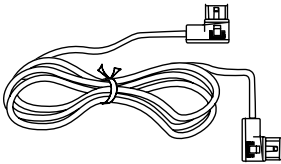 

### Power Cord

 


# Wiring and Cable Connections

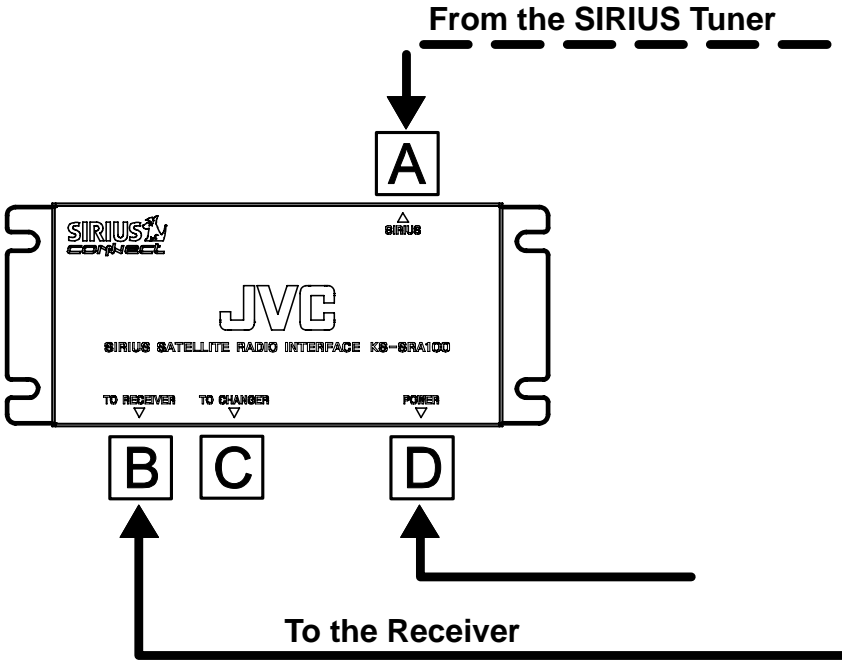 


- A** Tuner Input(SIRIUS)
- B** J-BUS Output Connector(TO RECEIVER)
- C** J-BUS Input Connector(TO CHANGER)
- D** Power Connector(POWER)

# System Connection Examples

 **System1: JVC J-BUS Headunit, KS-SRA100 and SIRIUSConnect Vehicle Tuner**

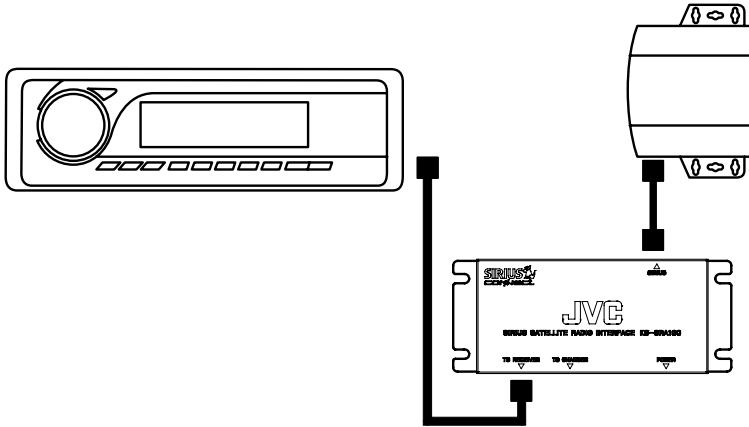

**System2: JVC J-BUS Headunit, KS-SRA100 and SIRIUSConnect Vehicle Dock & Portable Tuner**

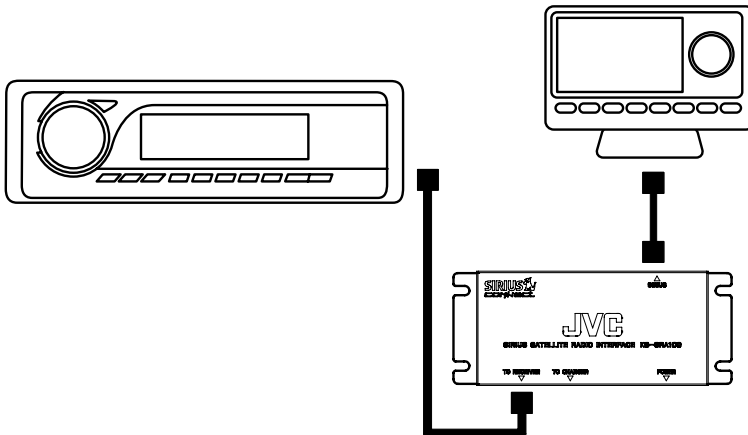 

## Specifications

Power Requirements.....	14Volt DC (11-16 Volts DC)
Chassis Size.....	126.7mm x 51.9mm x 34.9mm (W x H x D) (5" x 2-1/16" x 1-7/16" (W x H x D))
Audio Interface.....	2 J-Bus Connectors (Input/Output)
Audio Output.....	1.4V rms (Fixed)
Included Cable.....	2.5 Meter (8.2ft) Bus (Male/Male)
Weight.....	174 g (0.39lbs)

“SIRIUS®”, “SiriusConnect”, the SIRIUS dog logo and related marks are trademarks of SIRIUS Satellite Radio Inc. All rights reserved.



















 










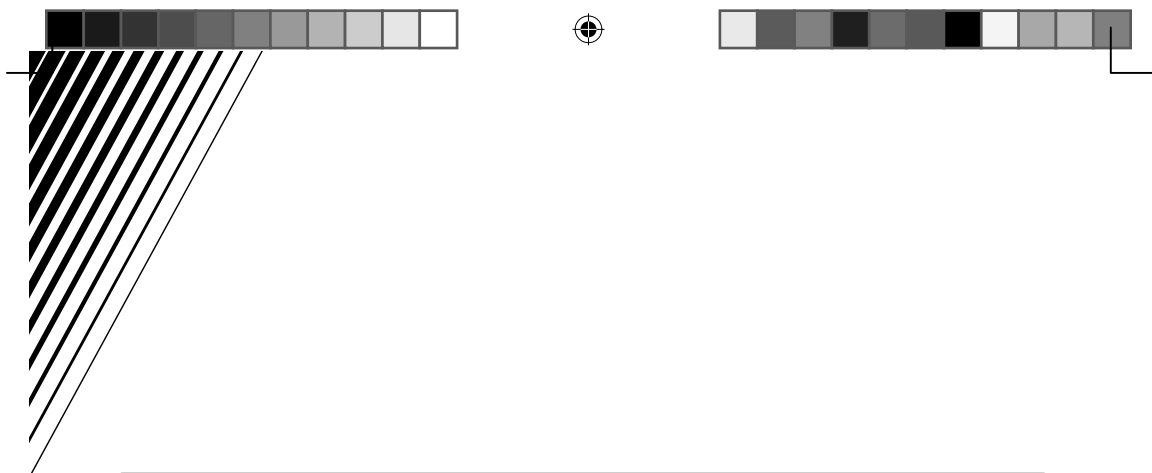

**Having TROUBLE with operation?**


**USA ONLY**

**Call 1-800-252-5722**

<http://www.jvc.com>

**We can help you!**

**JVC**

 EN, SP, FR

© 2007 Victor Company of Japan, Limited