

UQIQUE™

Digital Voice Recorder
UQ-VR898

Uqique Co., LLC

340 S Lemon Ave #8106
Walnut, CA 91789
United States

This package contains:

- Main Product
- User Manual
- USB Cable Adapter
- Earphones

⚠ Attention

Don't disassemble

Don't expose to liquids

Avoid extreme temperatures

Avoid direct sunlight or dust, moisture, steam, soot, etc

Customer Service

 
For inquiries regarding this product, please contact the authorized reseller or our support team at **support@uqique.com**

Our Guarantee to You


- 12-month limited warranty
- Lifetime technical support

For FAQs and more information on the product, please visit:
uqique.com/product-support


Controls

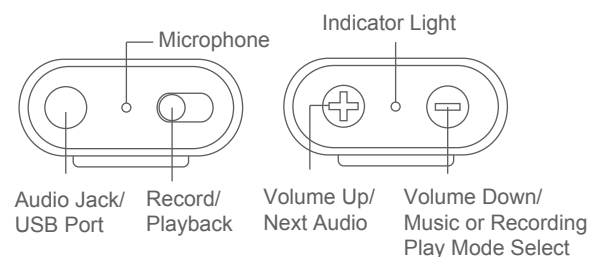

Power On/Off

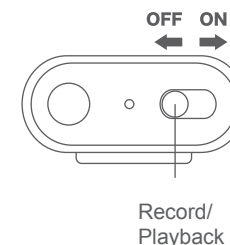 

Recording

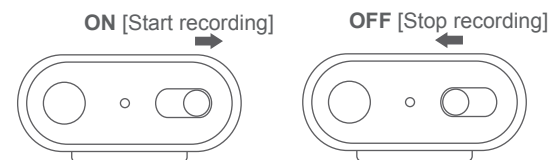 


Toggle the power switch to [ON] and the indicator light glows and blinks in red few times before going off, the device is now in Recording Mode. With its intelligent auto-save feature, all recordings are saved instantly. With its optional voice activated feature, the device will only records when there is any voice or sound available. Toggle the power switch to [OFF] to stop recording.

Note:

- Upon toggling the power switch to [ON], it takes approximately 8~10 seconds before recording begins.
- Upon toggling the power switch to [OFF] after recording, please wait for 3~5 seconds for the indicator light to go off before you turn on the device again.
- To turn on the voice activated feature for recording, press and hold [-] button while you toggle the power switch to [ON], wait for the indicator light to go off before you release the button.
- To check if the status is in Recording Mode, press and hold [+] [-] buttons together; if the indicator light glows and blinks in red one time, this indicates that recording is in progress.
- The device will not record if earphones are plugged into the Audio Jack/USB Port.
- If memory capacity is full, no further recordings can be made.
- If battery died while recording, all audio until the time of power loss will be saved.
- Due to the sensitivity of the device, hitting or rubbing on it while recording may cause interference and result in unwanted noise to be recorded.

Playing Back

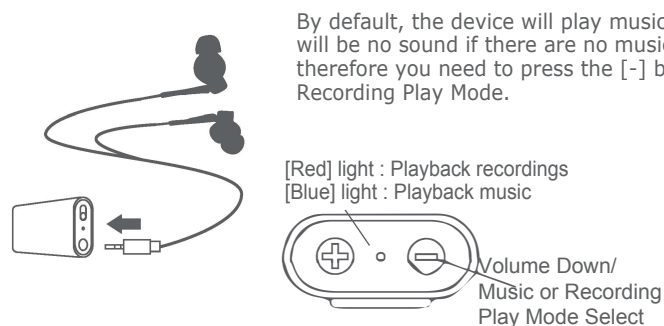

With the earphones plugged in, toggle the power switch to [ON] and the device will playback audio files. The indicator light glows and flashes continuously : (in Blue when playback music; in Red when playback recordings), the device is now in Playback Mode. To stop playback, toggle the power switch to [OFF] and the device will be turned off.

Note:

- Press the [+] button to skip to the next audio file.
- Press the [-] button to switch between Music or Recording Play Mode.
- Press and hold the [+] button to increase the volume.
- Press and hold the [-] button to decrease the volume.

Deleting an audio file


- To delete an audio file while playing back, press and hold [+] [-] buttons together and the indicator light flashes in purple continuously; then press and hold either [+] or [-] button and the indicator light blinks in blue before going off. The current file is being deleted.
- To delete all audio files while playing back, press and hold [+] [-] buttons together and the indicator light flashes in purple continuously; then press and hold [+] [-] buttons together and the indicator light blinks in red before going off. All files are being deleted.

Fast forwarding or rewinding an audio file

- To activate the Fast Forward/Rewind Mode, plugged in the earphones and toggle the power switch to [ON]; while the indicator light glows in red, press and hold [+] [-] buttons together and the indicator light will glow and flash in purple. The Fast Forward/Rewind Mode is now being activated. Press and hold the [+] button to fast forward; press and hold the [-] button to rewind. **Note:** You will not be able to adjust the volume while in Fast Forward/Rewind Mode.

Charging

When using the device for the first time or after a long period of non-usage, please charge it fully before use.

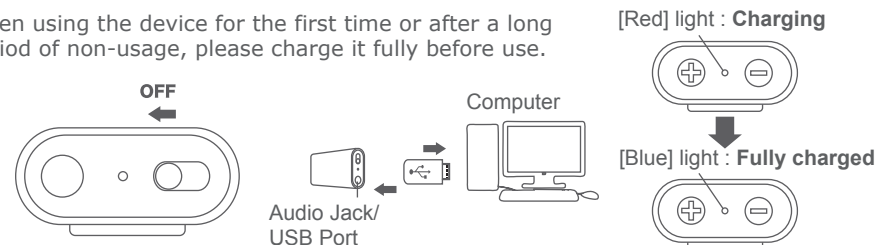

Connect the device to your computer with the USB cable adapter, the device is now being charged. The indicator light glows and flashes in red continuously while charging. Upon fully charged, the indicator light will stop flashing and turns into solid blue color. Please keep the device turn off while charging. A quick 60 minutes is enough to fully charge the device.

Important: Do not overcharge the device due to its compact size. Please do not leave the device in charging mode for a prolonged period of time.

Tip: To charge the device while recording, toggle the power switch to [ON] and connect to the computer with the USB cable adapter; press and hold [+] [-] buttons together until the indicator light goes off. The device is now in Recording Mode while charging.

Accessing Files

Connect the device to your computer with the USB cable provided and you'll be able to access the files in the device on your computer. You can then easily delete, add, copy or transfer any files just like any other USB device. The device will show up as a "Removable Disk" on the computer, whereby you would be able to access the recordings inside the "VOICE" folder, under the "RECORD" root folder.

Note: Please ensure that the 3.5 mm plug is pushed in all the way to the jack socket on the recording device. Push firmly to make sure it is actually all the way in, neatly and fully plugged into the jack socket until you hear a click sound. Plug the USB end into your computer. The indicator light glows and flashes in red continuously, and it should be detected as an external drive in about a few seconds. Once plugged in, the device wakes up and is configured as a USB mass storage device.

Specifications

- Model Number: UQ-VR898
- Dimensions: 52*20*9 mm
- Weight: approx. 12.5 gram
- Built-in Memory: 8GB
- Battery Capacity: 5V/500mAh
- Power Consumption: 8mA
- Charge Time: approx. 1 hr
- Battery Life: approx. 20~24 hrs
- Compatible Operating Systems: Windows Vista/7/8/8.1/10 and Mac OS X 10.0 or later
- Operating Temperature Range: -5 degrees Celsius to 40 degrees Celsius
- Recording Time: approx. 96 hrs
- Recording File Format: .wav
- Playback File Format: .mp3/.wma/.wav
- Recording Bit Rate: 192 kbps
- Sampling Frequency: 48kHz
- PC-interface: USB 2.0