

CASABLANCA ADVAN-TOUCH RE-SET PROCEDURE (HANDHELD REMOTE W-62/ W-63)

APPLIES to Casablanca fans that have a number ending in the letter "Z" and one of the following:

- The handheld remote no longer operates neither the fan nor light.
- Your handheld remote is accidentally controlling two or more fans.
- You recently changed the batteries in your remote.

Note: All fans leave the factory set to '10000'.

If you have not recently done so, replace the battery before re-set!

To re-set:

1. At the circuit breaker, fuse box, or wall switch, turn the power off for the fan you want to change.
2. Open the battery door of the Advan•Touch control and remove the first battery on the left to gain access to the dip switches.
3. Change the dip switch settings, assuring that they are different from the previously installed Advan-Touch fan(s).
4. Re-install the battery in the proper polarity and the battery door on the control.
5. At the circuit breaker or fuse box, turn the power back on for the fan whose frequency you are changing.
6. Within 20 seconds of restoring power, push the  up and  down buttons at the same time. Hold for a few seconds. You will see the LCD Screen flash all of the graphics. Your handheld remote should now have control of the fan.

